

## Simple to Use:



I. Remove your current strainer or basket. Place your Kitchen SinkShroom® onto your drain prior to washing dishes.



ECHNUI UG/

Water keeps flowing even when basket is full



Stainless steel construction for extra durability



Pots and plates won't block the drain anymore



Easy-to-clean and even easier to handle



II. When basket is full or any time after dishes are washed, pick up unit from center cylinder and tap upside down against garbage bin to dispose of waste.