

# HOUSEHOLD REFRIGERATOR

## Instruction Manual

SKU: RSD-44H





# Congratulations

Dear Customer:

Welcome to the Euhomy family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our ice maker, PLEASE contact us.

Email: [support@euhomy.com](mailto:support@euhomy.com)

Facebook: [@Euhomy.Official](https://www.facebook.com/Euhomy.Official)

The Euhomy team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers on Amazon.

If you experience any problems, please send an email to [support@euhomy.com](mailto:support@euhomy.com).

Our mission:

- \* To be the most trusted appliance brand.
- \* To create practical, compact appliances that better your life.

*Be sure to register at*  
**[www.euhomy.com/register](http://www.euhomy.com/register)**  
*for updates, warranty, and other relevant information.*







# Contents

Safety	02
Safe Disposal	02
Technical Specifications	03
Installation	03
Door Reversal Instructions	04
Operation	04
Maintenance	05
Troubleshooting	06



## I Safety

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Refrigerant and foaming material is flammable. Take precautions during handling, installation and maintenance.

Ensure that the refrigerant circuit is not damaged

Keep ventilation openings clear of obstructions

When positioning the appliance, ensure the electrical cord is not trapped or damaged

Do not place multiple portable socket-outlets at the rear of the appliance.

Never unplug the appliance by pulling on the power cord. Grip the plug firmly and pull straight out to remove from wall socket.

Do not place the power cord near water or where it could be a tripping hazard and do not use a damaged power cord.

Ensure that the power cord is not near the compressor of the Refrigerator.

Do not use an extension cord.

Do not defrost with electrical devices or scrape the ice with sharp tools.

Children should be supervised to ensure that they do not climb on or play with the appliance.

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

## I Safe Disposal

- **Danger:** Prevent risk of child entrapment. Before discarding the Refrigerator, remove the door but leave shelves in place so that children may not easily climb inside.
- Please dispose of this appliance in accordance with local regulations.

# Technical Specifications


<b>SKU</b>	<b>RSD-44H</b>
<b>Capacity</b>	<b>4.4 cu ft</b>
<b>Voltage</b>	<b>115V 60Hz</b>
<b>Current</b>	<b>0.8A</b>
<b>Refrigerant</b>	<b>R600a, 0.8 oz</b>
<b>Net Weight</b>	<b>50.9 lbs</b>
<b>Product Dimensions (HxWxD)</b>	<b>32.1x20.3 x22.2 (inch)</b>

# Installation

- When transporting the refrigerator, keep it in an upright position. Do not tilt the Refrigerator at an angle of more than 45°
- Place the appliance away from extreme heat and cold. It is not designed to be in direct sunlight or outside.
- Before connecting the refrigerator to power, let it stand upright for at least 4 hours.
- Check the plug and cord before you connect the power and make sure it is a properly grounded 115/60 Hz outlet.
- The Refrigerator is designed for recessed installation.
- Place the Refrigerator on a flat level surface, leaving 2 inches (5 cm) on either side and at least 3 inches (8 cm) between back of appliance and the wall. Allow sufficient clearance (160°) for the door to open completely.
- The feet of the appliance can be adjusted to make it level. Turn counterclockwise to raise and clockwise to lower.

# Door Reversal Instructions

The Refrigerator is built with a reversible door which lets you open it from either the left or rightside. In order to reverse the opening of the door, transfer the hinges and screws indicated in the figure below from one side to the other.

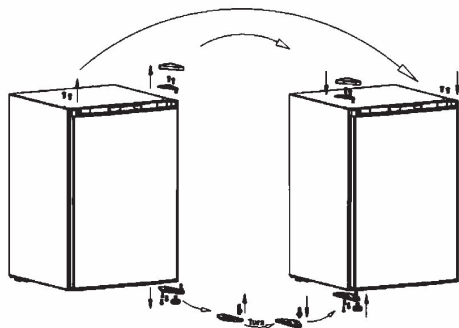

## Operation

Clean the outside and inside of the Refrigerator with a soft cloth.

Insert the power cord into the outlet.

The temperature control dial is located at the top right corner inside the Refrigerator.


Turn the temperature control dial to 7, the coldest setting.

After 2 hours, change the dial setting to 4, which is the normal position to keep food cold.

Wait to put food inside the Refrigerator until it is adequately cold.

If a slightly higher or lower temperature is preferred, the dial can be changed with 1 being least cold and 7 being the coldest.

To turn the Refrigerator off, turn the dial setting to 0.

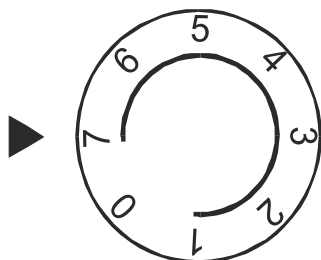

# I Maintenance

Make sure the power cord is unplugged before moving or cleaning the back of the appliance.

Clean the outside and inside of the appliance regularly, using water and mild detergent.

Do not touch cold surfaces with wet hands, because the skin may stick to the surface.

When the Refrigerator is not going to be used for an extended period of time:

- Remove the power cord plug from the outlet.
- Remove all contents.
- Dry the interior and leave the door open.

The following phenomenon is normal:

- Moisture on the door- wipe with dry cloth
- Sound of fluid in the compressor when it is starting or stopping
- Flowing sound of refrigerant in the refrigeration system
- Condensation forming inside the cabinet- wipe with dry cloth
- Warm Refrigerator front (anti-condensation pipe heats up the front)

# Troubleshooting

Problem	Possible Cause and Solution
Not Working	<ul style="list-style-type: none"> <li>• Check the fuse has not blown.</li> <li>• Check if it is plugged in correctly to the power source.</li> </ul>
Not Cooling	<ul style="list-style-type: none"> <li>• Temperature is set too high. Lower the temperature.</li> <li>• Move it if near a heat source or in direct sunlight.</li> <li>• Check for proper ventilation and that air inlet or outlet is not blocked.</li> <li>• Door opened frequently or not closed properly.</li> <li>• Check to see if door seal is damaged.</li> <li>• Too many items stored that are blocking internal circulation.</li> </ul>
Too much cooling	<ul style="list-style-type: none"> <li>• Temperature is set too low. increase the temperature.</li> <li>• Food is placed directly under the cool air outlets. Move the food away from the affected area of the Refrigerator.</li> </ul>
Too much noise	<ul style="list-style-type: none"> <li>• Appliance is not placed on flat surface or not level. Adjust the feet to level it.</li> <li>• Check if some items inside the Refrigerator are causing rattling.</li> <li>• Check if something has fallen behind the Refrigerator.</li> </ul>
Door does not close properly	<ul style="list-style-type: none"> <li>• Check the door seal.</li> <li>• Shelves are not positioned properly. Adjust the shelves.</li> <li>• Items in the Refrigerator are causing an obstruction.</li> </ul>
Defrost water overflows	<ul style="list-style-type: none"> <li>• Check that the drain pipe and drain hose are not clogged.</li> <li>• Check that the drain pan behind the Refrigerator is placed properly.</li> </ul>

## California Proposition 65:

WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

# EÜHOMY

# Live the *cool life*



Email: [support@euhomy.com](mailto:support@euhomy.com)



Facebook: [@Euhomy.Official](https://www.facebook.com/Euhomy.Official)