

7.1inch/180mm

10.6inch / 270mm

16.1inch / 410mm



When using hoses for washing protection, you should do:  
1. it must wait for the Sauna heater to cool naturally.  
2. then open the black cover, press down the raised trip, press the Reset button.  
Do not operate without rocks. Covering causes fire. Fire Please read the manual carefully. Danger of fire in case stone tray is not fully covered with stones.

**WARNING**  
DO NOT OPERATE WITHOUT ROCKS COVERING CAUSED RISK OF FIRE  
Only operate under Guards' supervision



Power supply connection for AC only!  
Choose copper cable suitable over 110°C (230V) and above the current required. Before the signal for correct wire connection.

MODEL NO.	
DATE	
POWER	
MAX CURRENT	

CE PX4

