

SAUCER SWINGSET With Mini Slide

FOR AGES:

3-7

WEIGHT LIMIT:

 **35KG
MAX**

TO BUILD:

 


TIME:

2-3H



HOW-TO
Paper
instructions

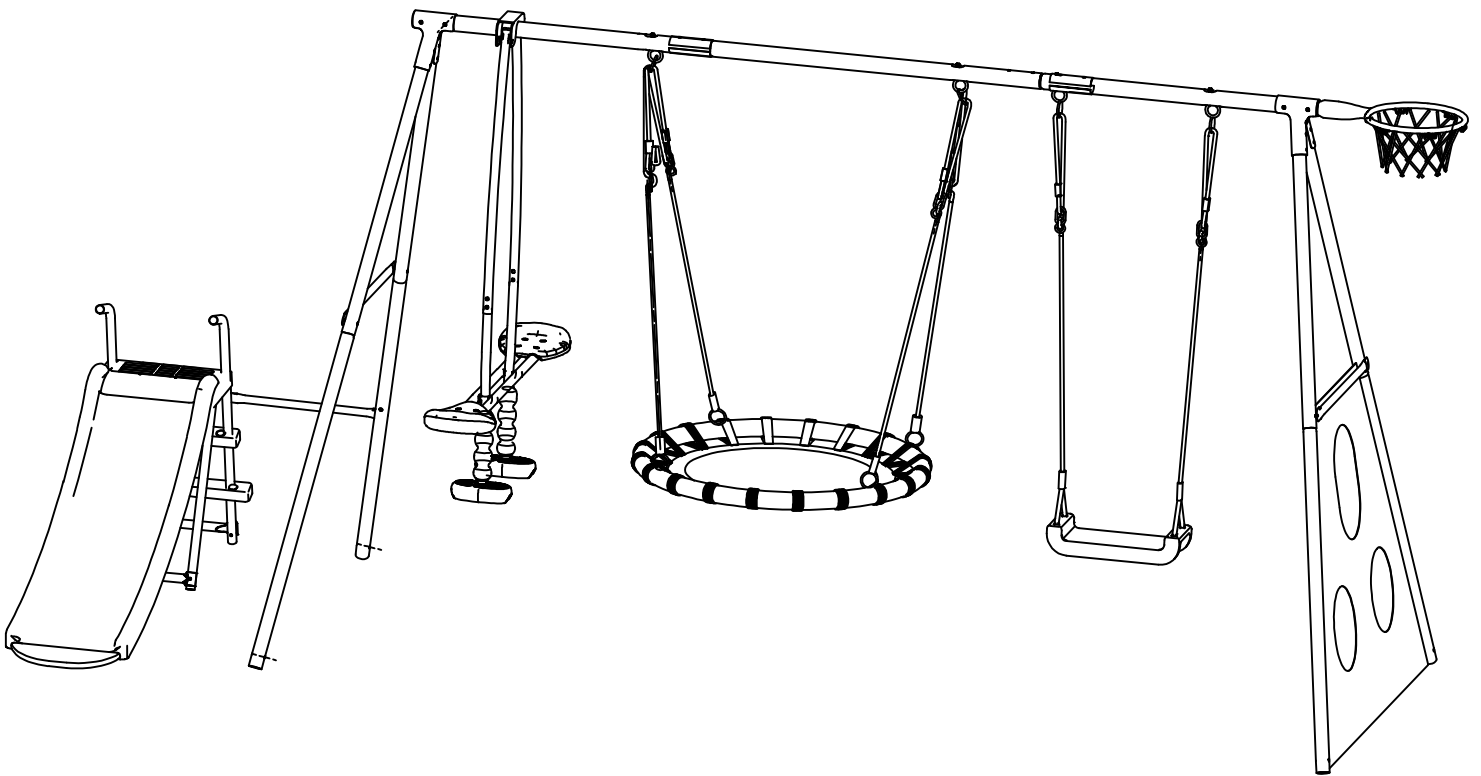



















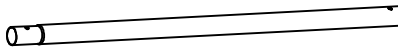
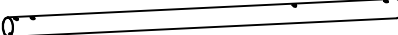
The product has passed the EN71 test

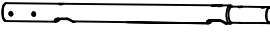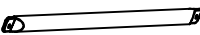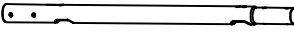WARNING: ONLY FOR DOMESTIC OUTDOOR USE



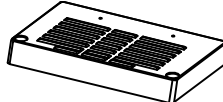

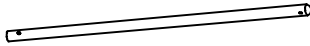
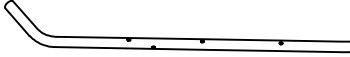
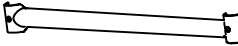
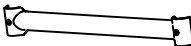
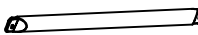
To guarantee safety. Please give special attention to the assembly, safety, and care instructions detailed in this document.

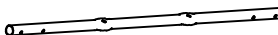PARTS LIST

Backbone component

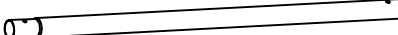



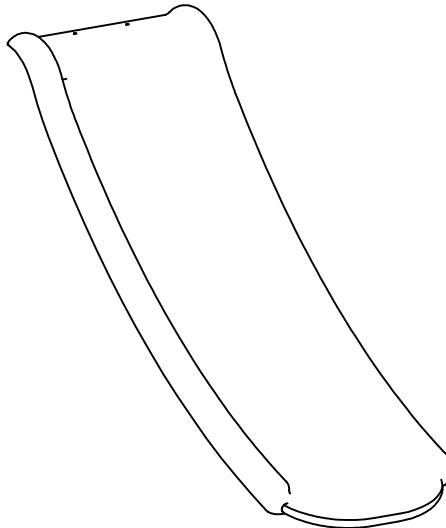


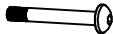













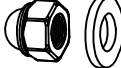


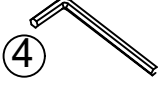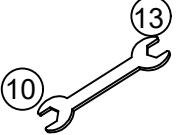YC52 x2 	YC50 x2 	S15 x4 	S7Lx1 	S5 x1 
			YBB5x2 	S6L x1 
YD2 x4 	YC51 x2 	S16 x2 	YB20 x2 	YB22x2 
			YB19 x2 	
YC40 x1 	S19 x1 	P-SW x1 	S8 x3 	
		P/DB x1 	S12-1 x1 	
			S9 x4 	

Slide part

YC17 x1 	YC27 x2 	YC65 x1 
	BS1 x1 	
	BS2 x2 	
	BS3 x1 	
	BS4 x1 	
	BS5 x2 	
	S17 x1 	


PARTS LIST

Screw bag

<div>YG32 x2</div> <div></div> <div>M 4.5x40</div>	<div>YN3x8</div> <div></div> <div>Ø 8/M6x40</div>	<div>Fa8 x8</div> <div></div> <div>Ø 8/M6x35</div>	<div>YN4 x4</div> <div></div> <div>Ø 8/M6x20</div>	<div>YF2 x2</div> <div></div> <div>M 8x50</div>	<div>YF11x8</div> <div></div> <div>M 6x25</div>
<div>YE1x17</div> <div></div> <div>M 6x35</div>	<div>YE5 x2</div> <div></div> <div>M 8x78</div>	<div>YE9 x8</div> <div></div> <div>M 6x45</div>	<div>YE29 x1</div> <div></div> <div>M 6x20</div>	<div></div> <div>4</div> <div>x2</div>	<div></div> <div>10</div> <div>13</div> <div>x1</div>
<div>YD10x18</div> <div></div> <div>Ø 6</div>	<div>YD11x28</div> <div></div> <div>Ø 8</div>	<div>YD12x2</div> <div></div> <div>Ø 10</div>	<div>YL1 x28</div> <div></div> <div>Ø 8</div>	<div>YL2 x18</div> <div></div> <div>Ø 6</div>	<div>YD3 x4</div> <div></div>
<div>YC3 x8</div> <div></div>	<div>YG1x8</div> <div></div> <div>M 6</div>	<div>YG13x38</div> <div></div> <div>M 6x20</div>	<div>YG2 x8</div> <div></div> <div>M 8</div>	<div>YG6x8</div> <div></div>	<div>YD15 x3</div> <div></div>

ASSEMBLY INSTRUCTIONS

 STEP 1

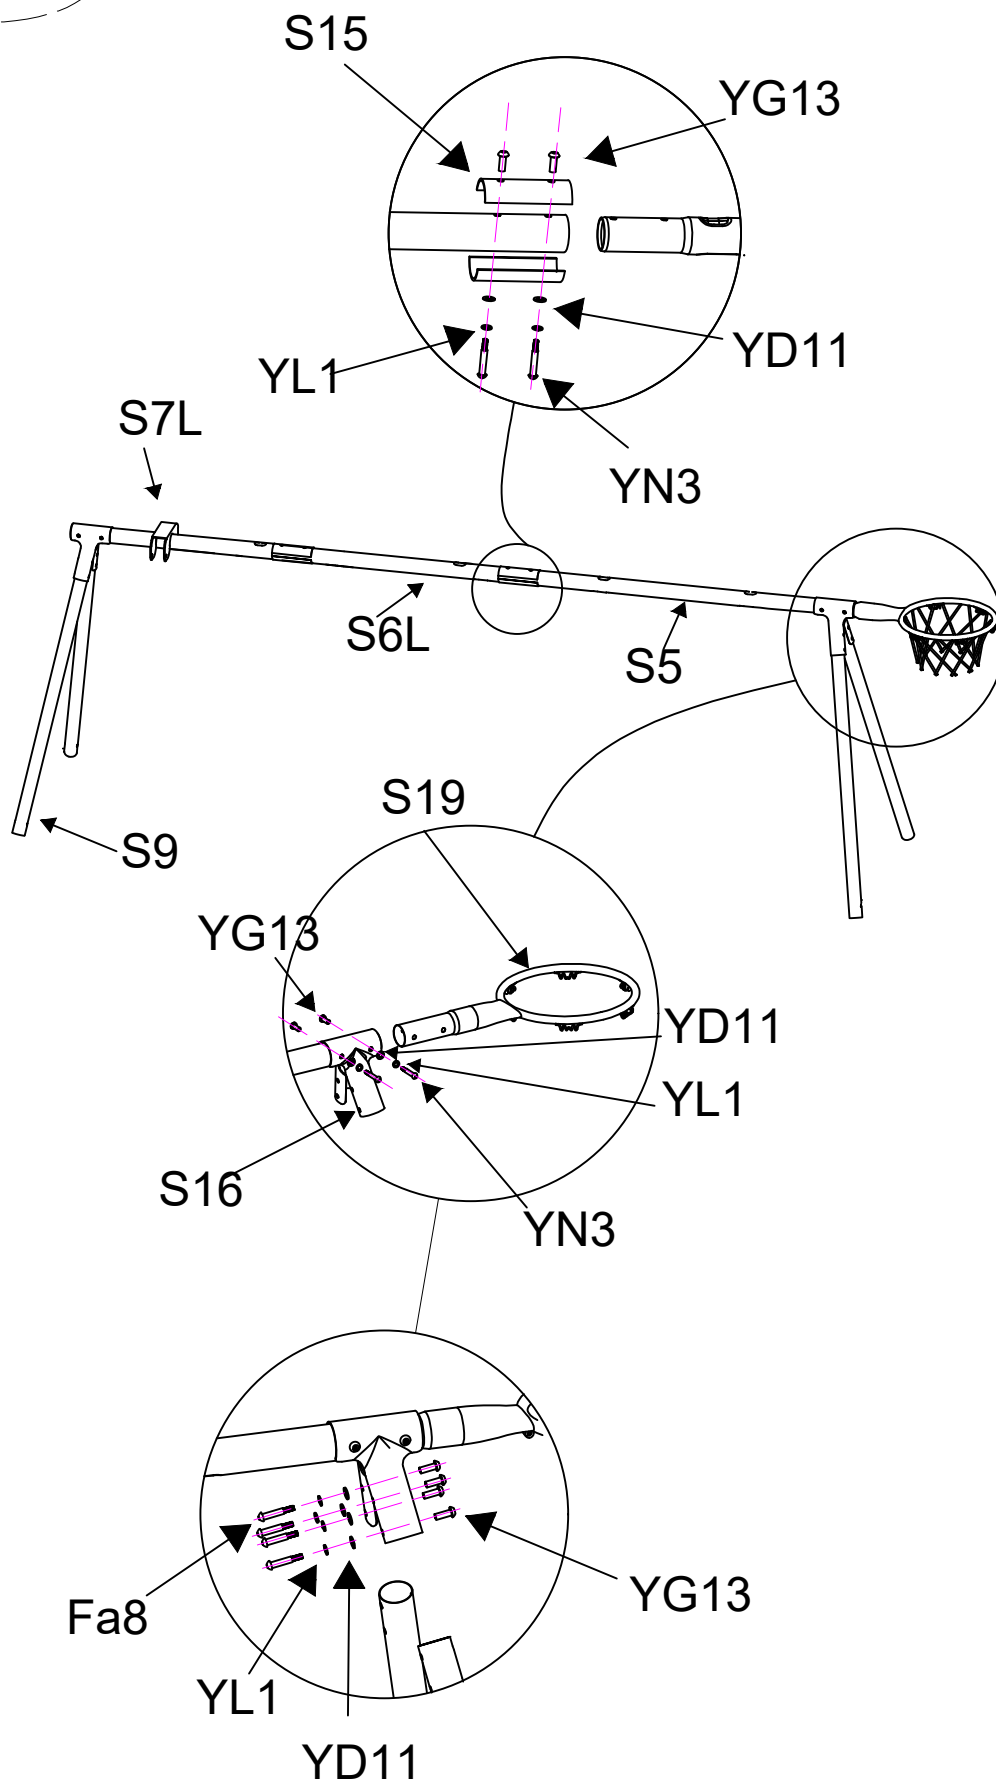


S5	x1
S7L	x1
S6L	x1
S9	x4
S19	x1
YD11	x16
YL1	x16
S16	x2
YN3	x8
Fa8	x8
YG13	x16
S15	x4

ASSEMBLY INSTRUCTIONS


STEP 2

 YBB5 x2
 S8 x3
 P-SW x1
 YC40 x1
 YD10 x4
 YL2 x4
 YD3 x4
 YG2 x4
 YE1 x4
 YG13 x4
 S12-1 x1
 P/DB x1

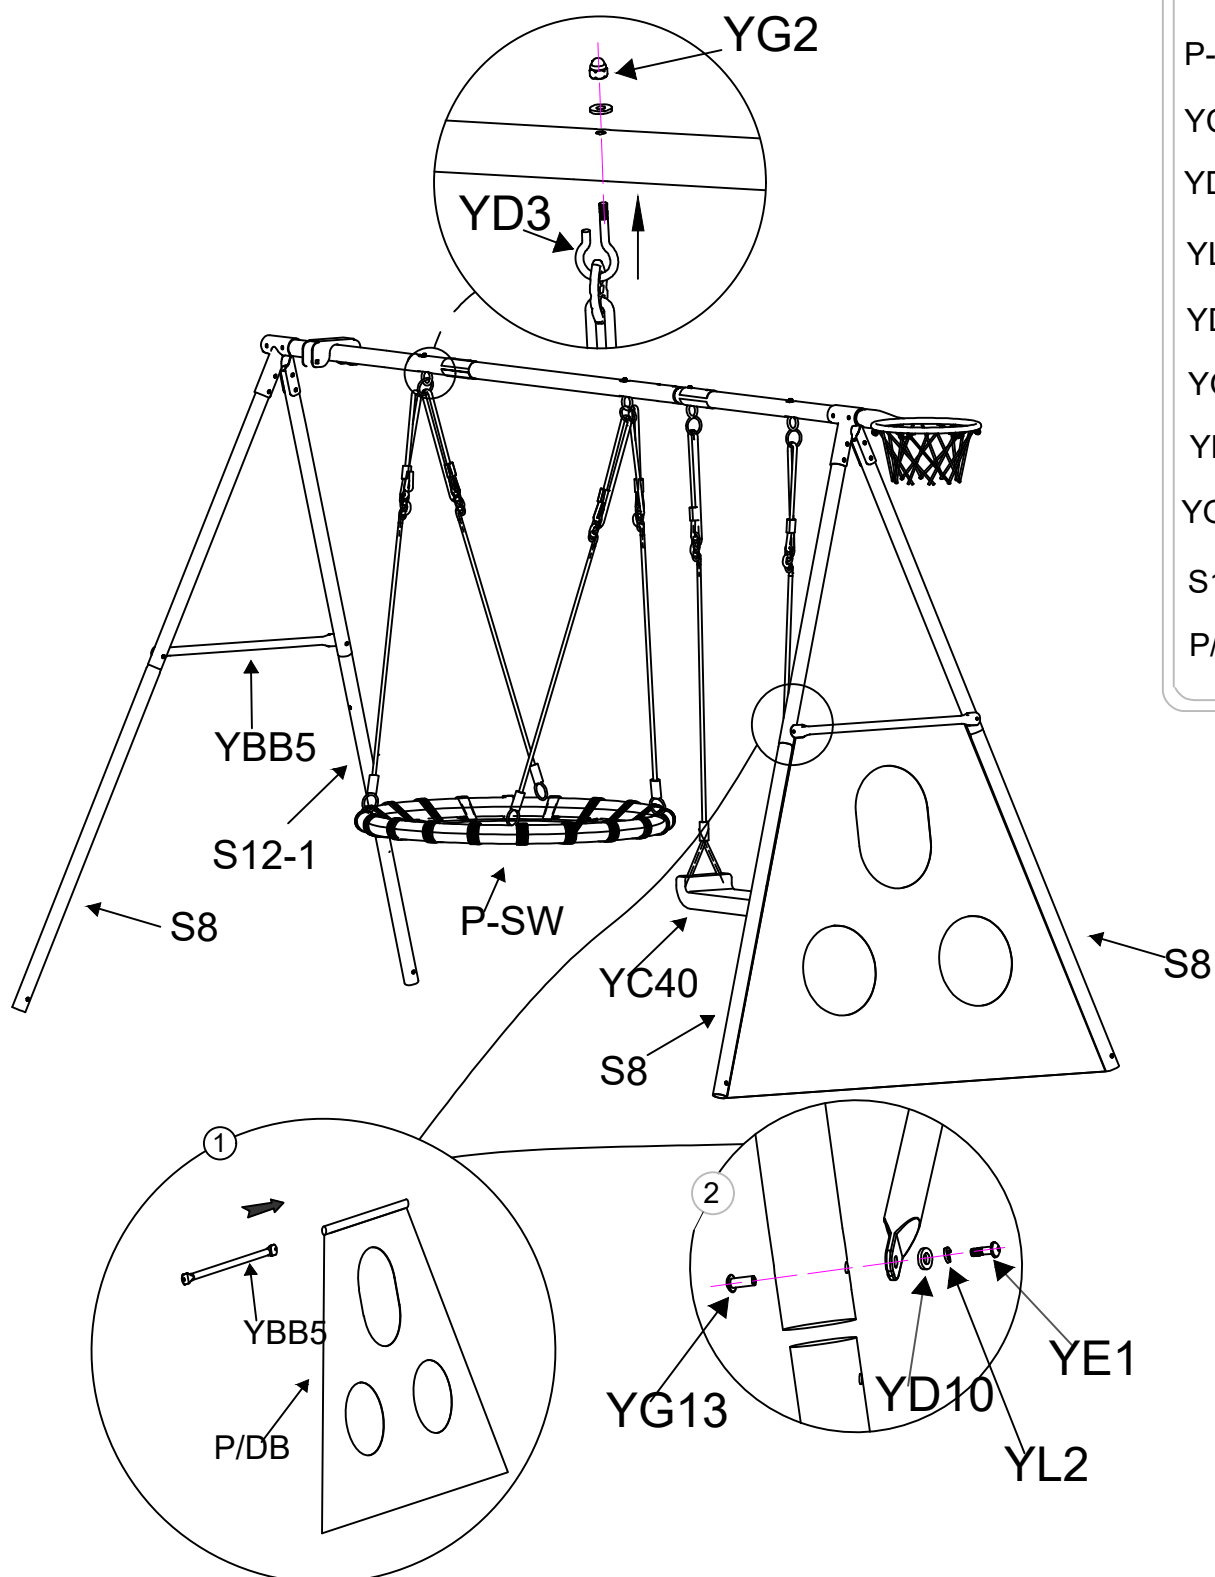

ASSEMBLY INSTRUCTIONS

 STEP 3

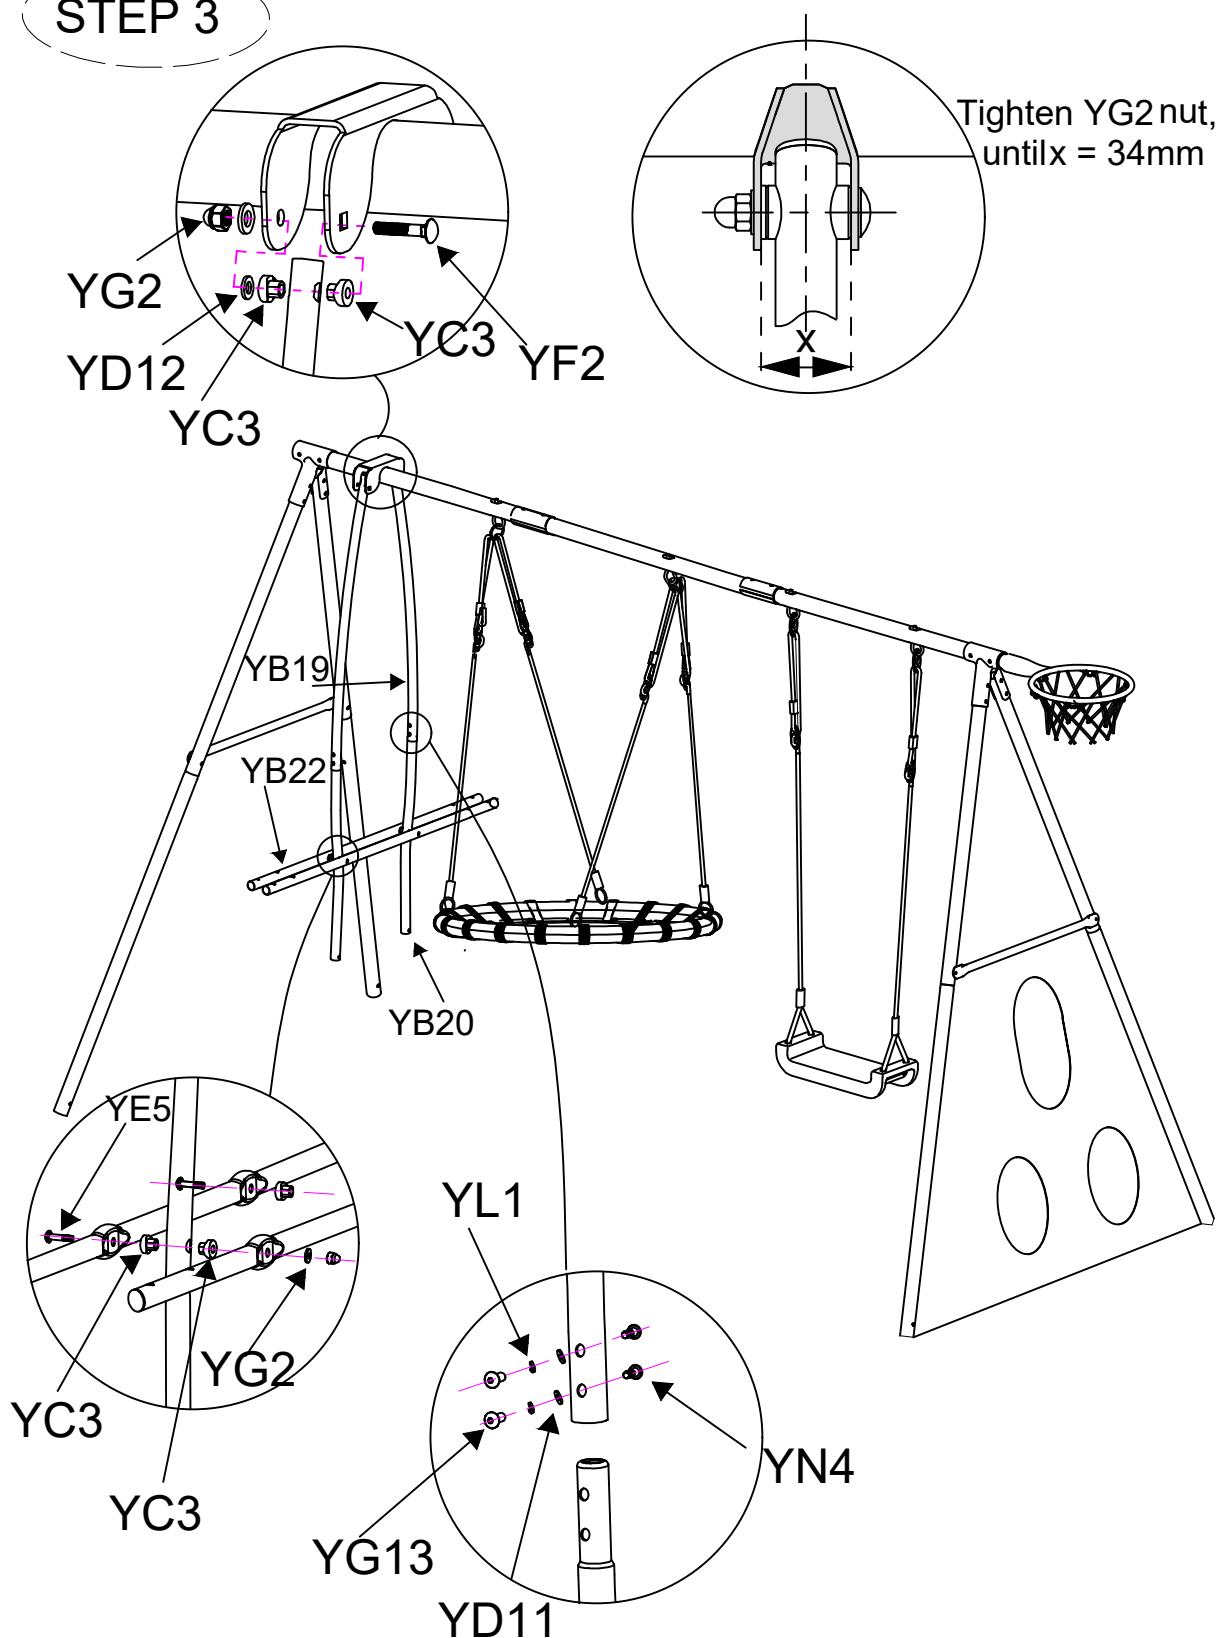


YD11	x4
YG2	x4
YF2	x2
YD12	x2
YC3	x8
YG13	x4
YL1	x4
YB19	x2
YB20	x2
YB22	x2
YN4	x4
YE5	x2

ASSEMBLY INSTRUCTIONS

STEP 4

YD11	x8
YL1	x8
YF11	x8
YC50	x2
YG13	x8
YC51	x2
YC52	x2
YG1	x2
YE1	x2

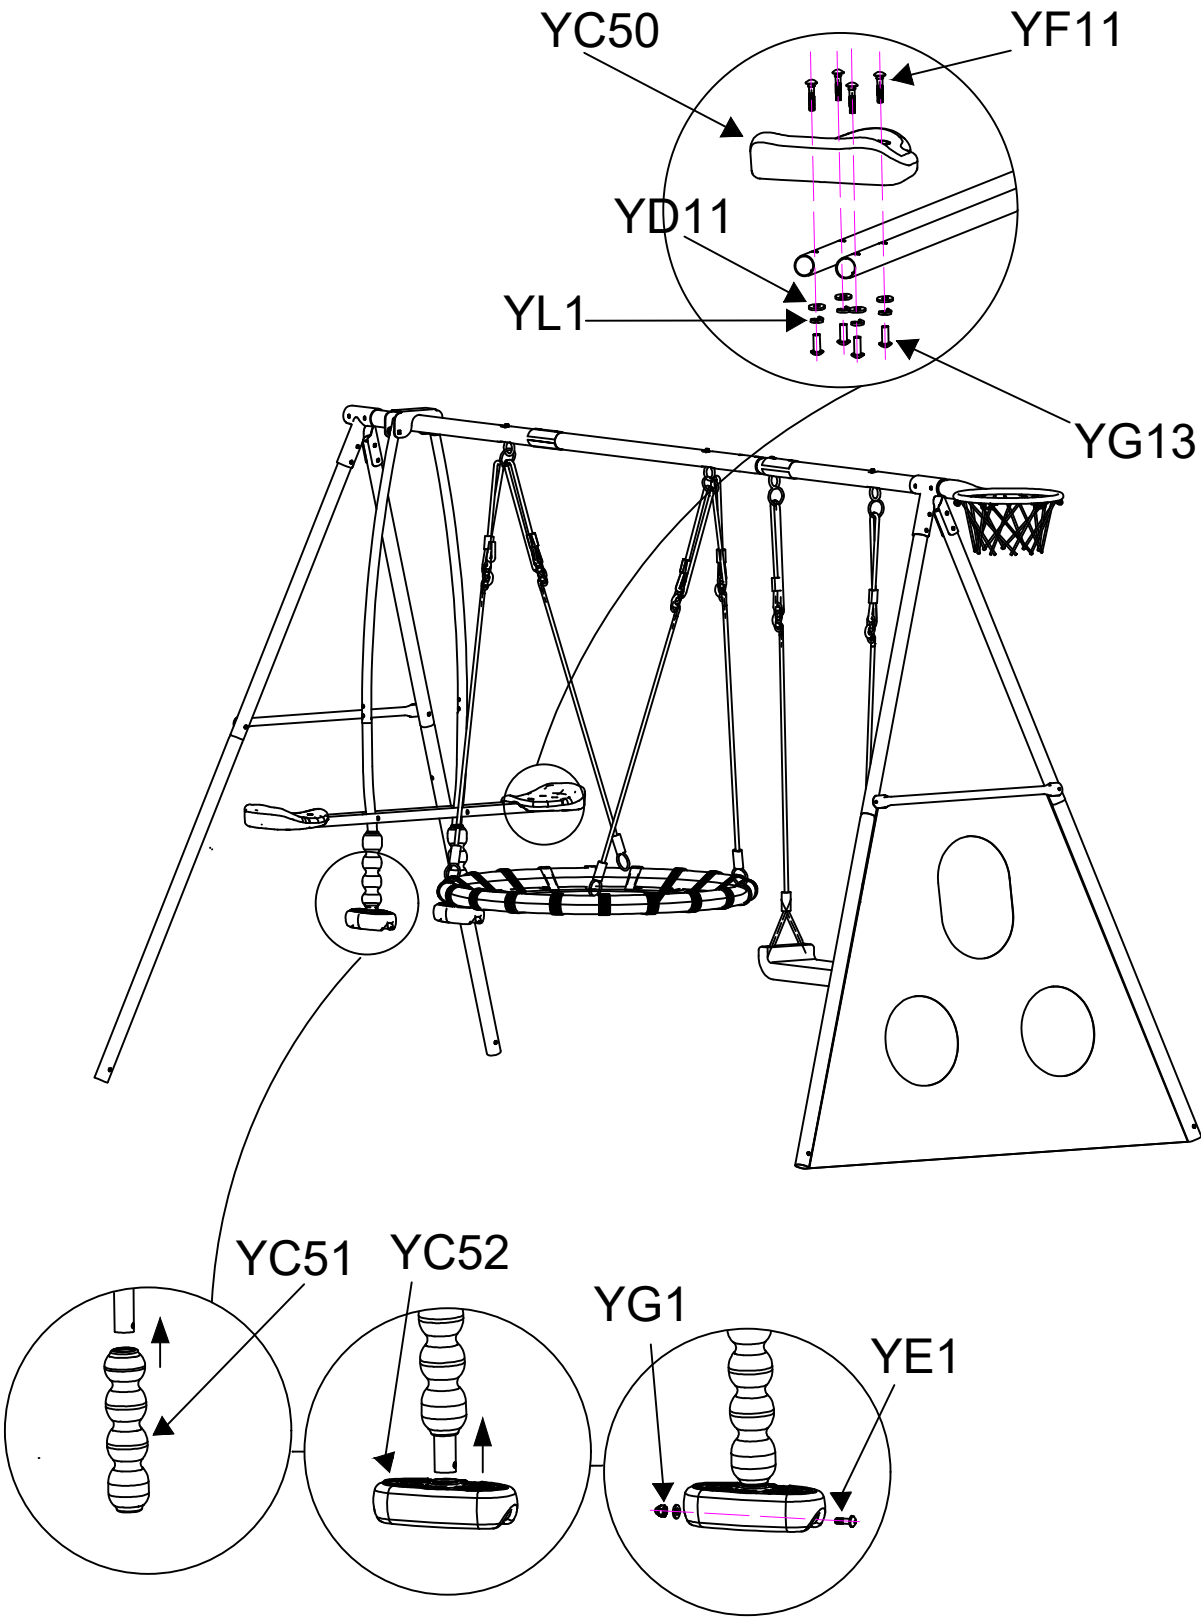 

ASSEMBLY INSTRUCTIONS

STEP 5

 
 
 
YL2 x4

YD10 x4

YE1 x4

YD2 x4

YG13 x4

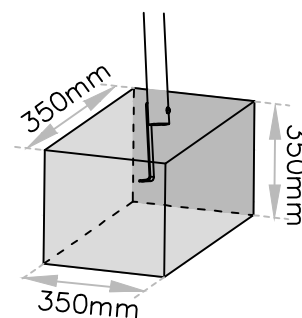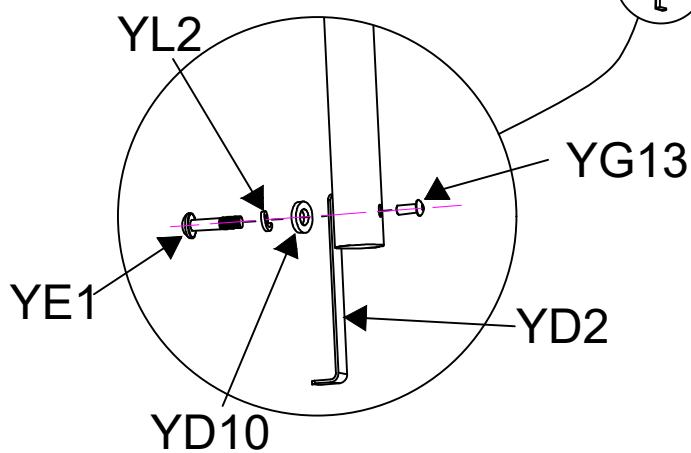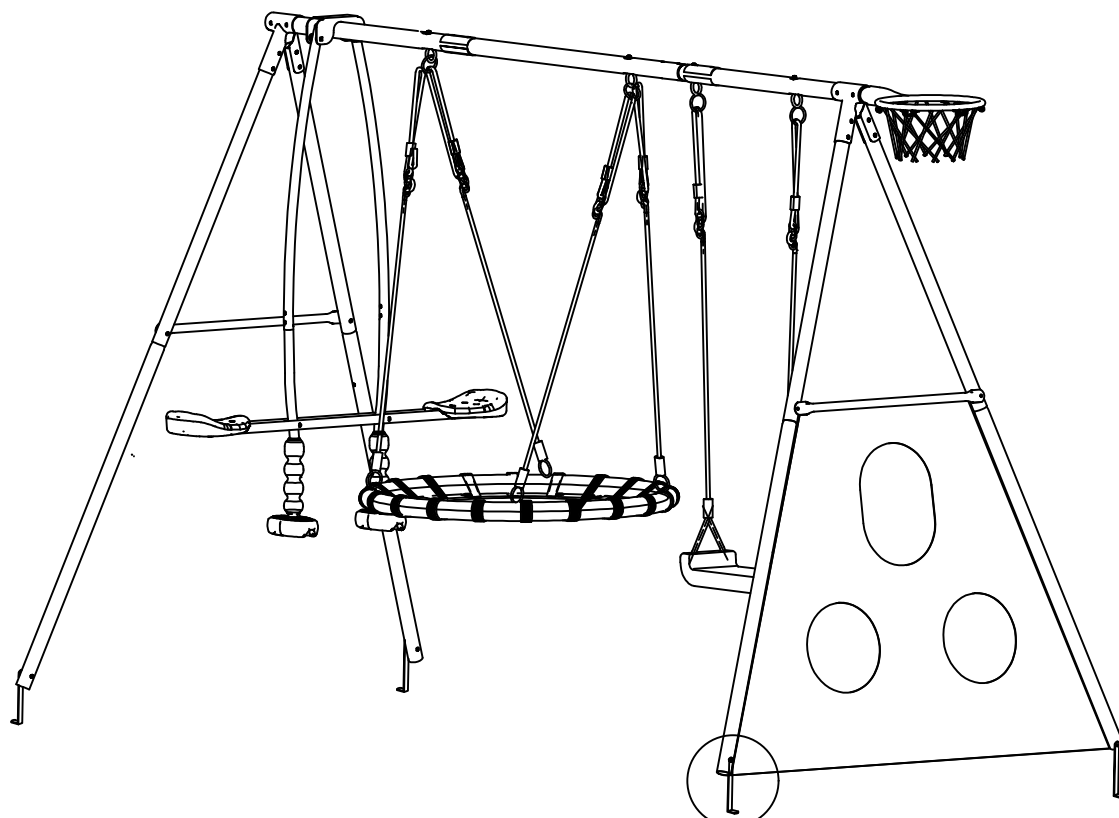

WARNING: The anchors must be placed under the ground in order to reduce tipping hazards

ASSEMBLY INSTRUCTIONS

STEP 6

BS3

BS1

BS1 x1
BS3 x1
BS5 x1
YC27x2
YE9 x4
YL2 x4
YG6 x4
YD10x4
YE1 x2
YG1 x2

YC27

YL2

YE9


YG6

YD10

BS5

YG1

 
YE1

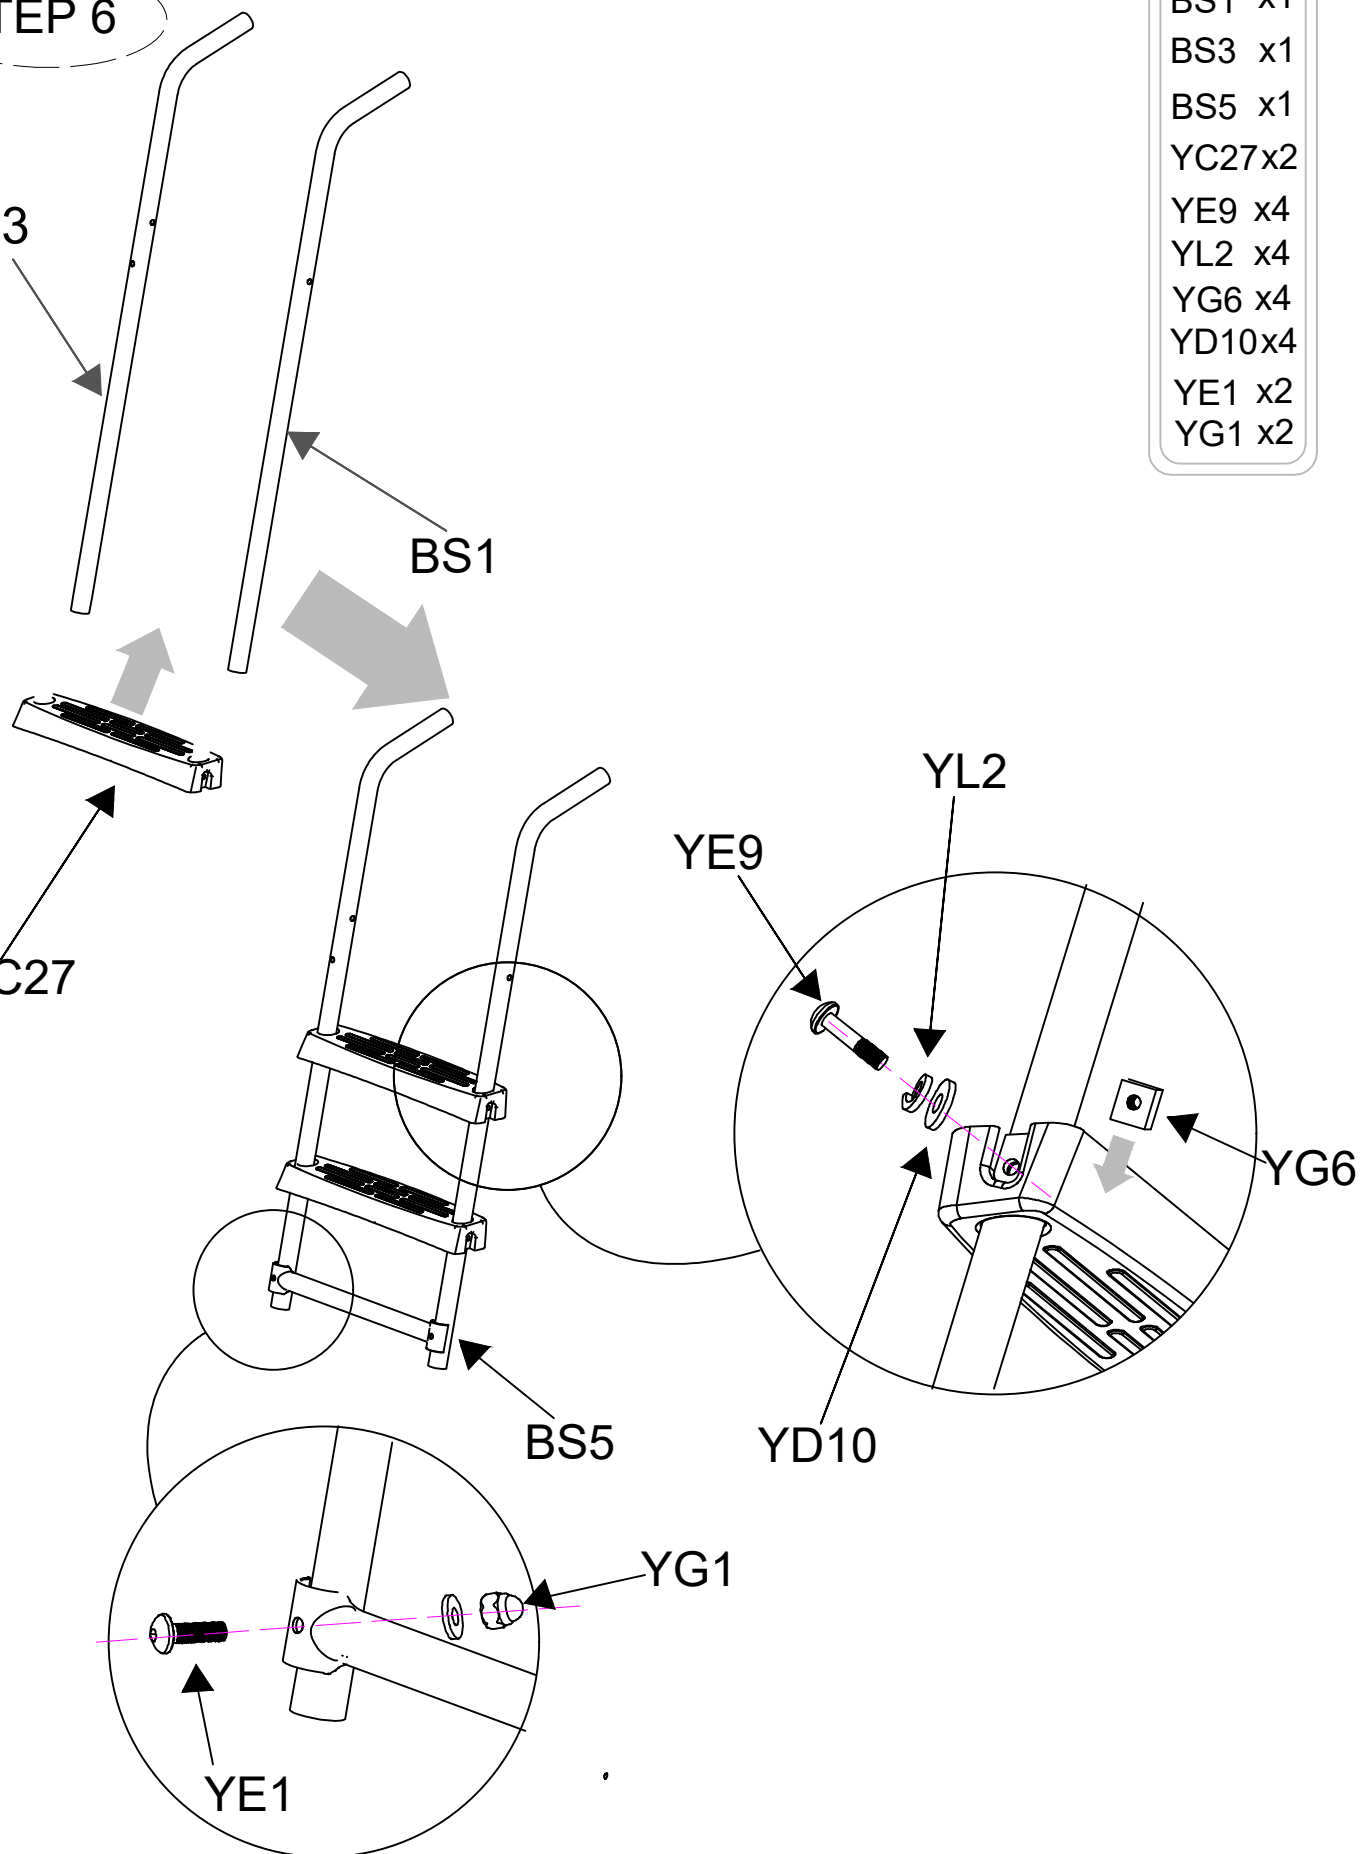

ASSEMBLY INSTRUCTIONS

STEP 7

 
- BS2 x2
- BS5 x1
- C65 x1
- YE1 x2
- YG1 x2
- YE9 x4
- YL2 x4
- YG6 x4
- YD10 x4

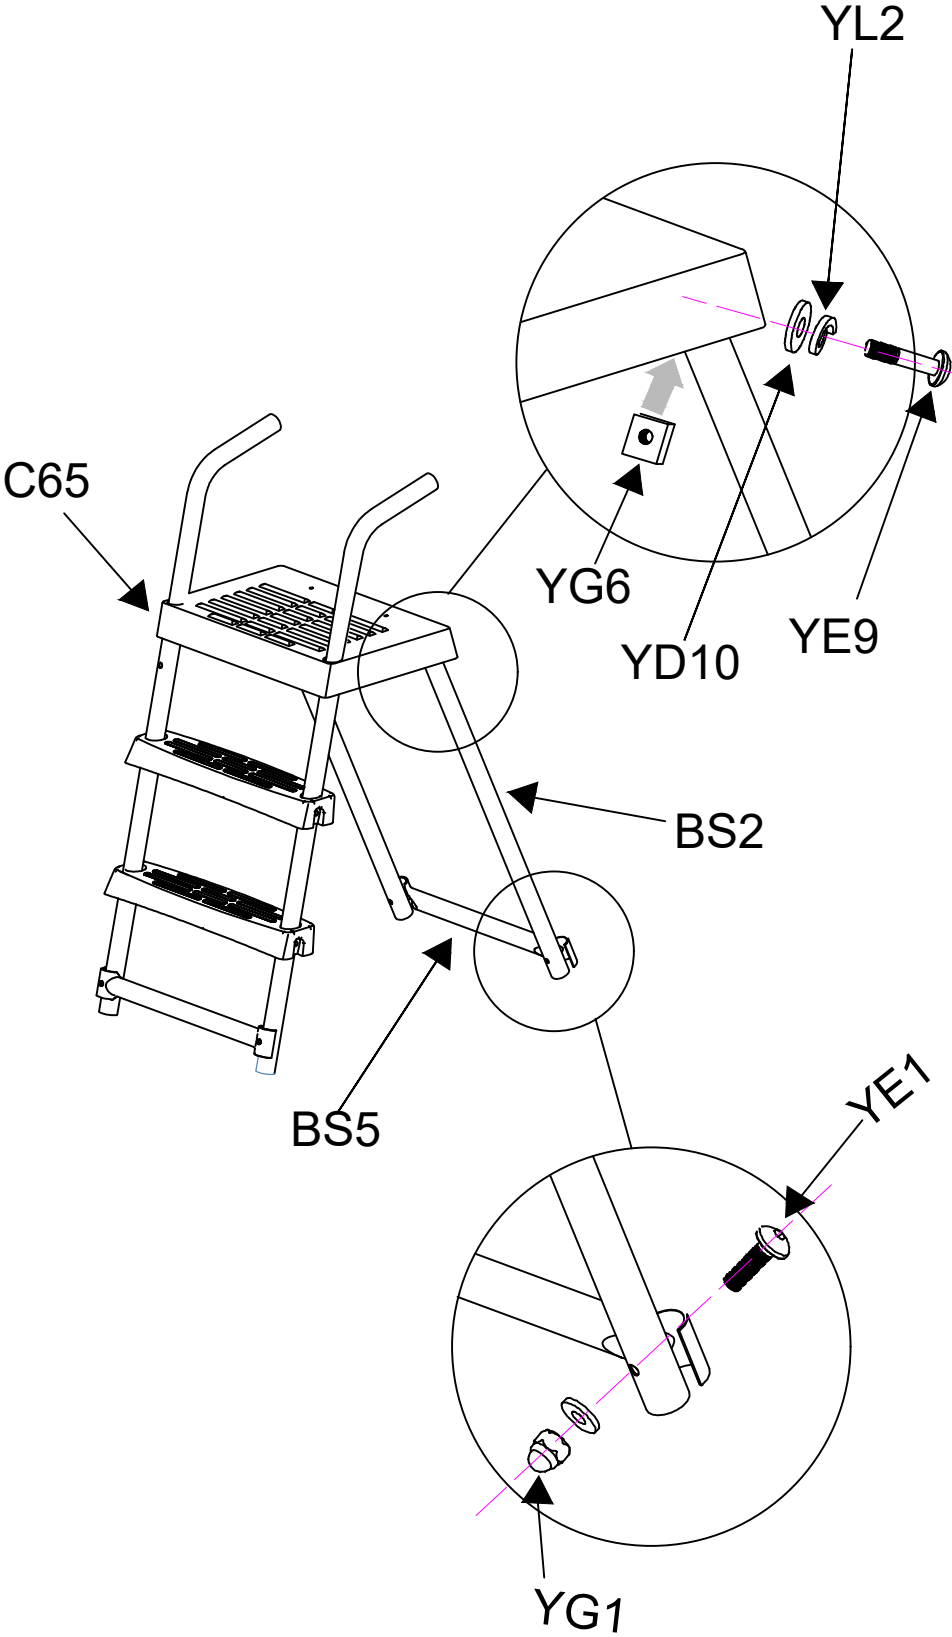

ASSEMBLY INSTRUCTIONS

STEP 8

 
YE1 x2
YG1 x2
YG32 x2
YC17 x1
BS4 x1

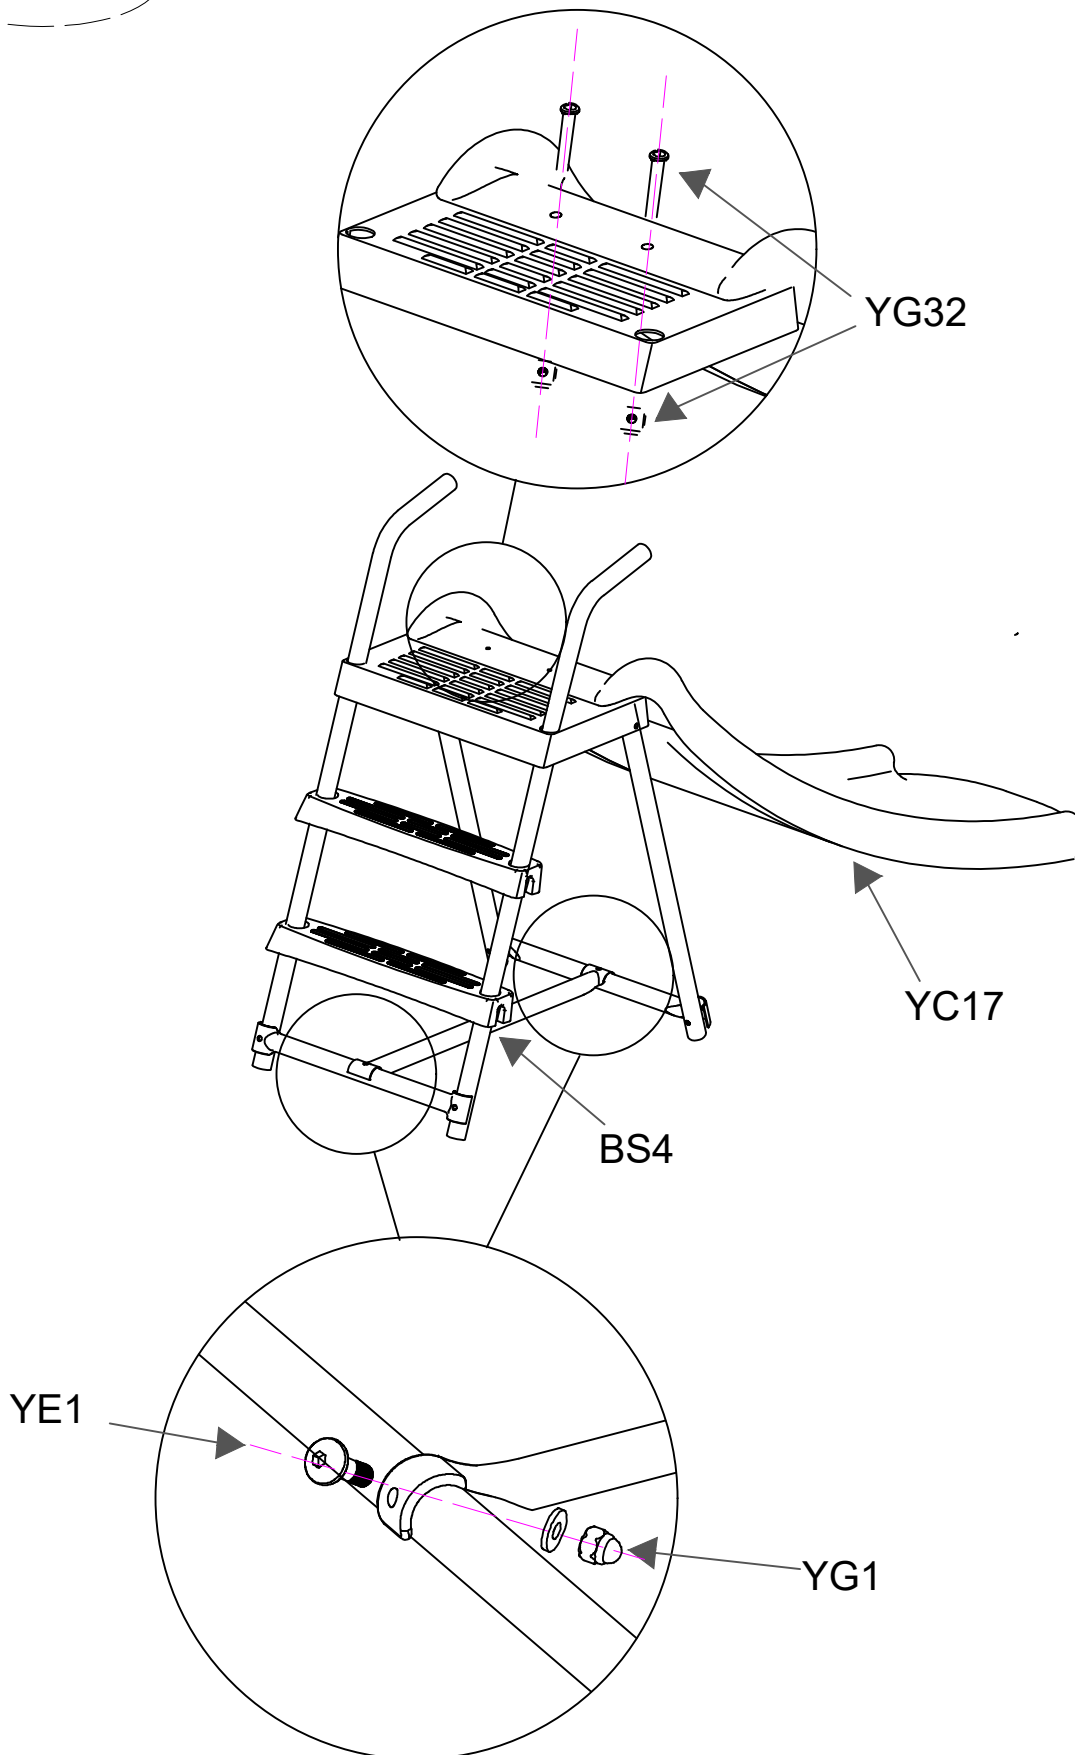

ASSEMBLY INSTRUCTIONS

STEP 9

 S17 x1
YG13 x2
YL2 x2
YD10 x2
YE1 x1
YE29 x1
YD15 x3

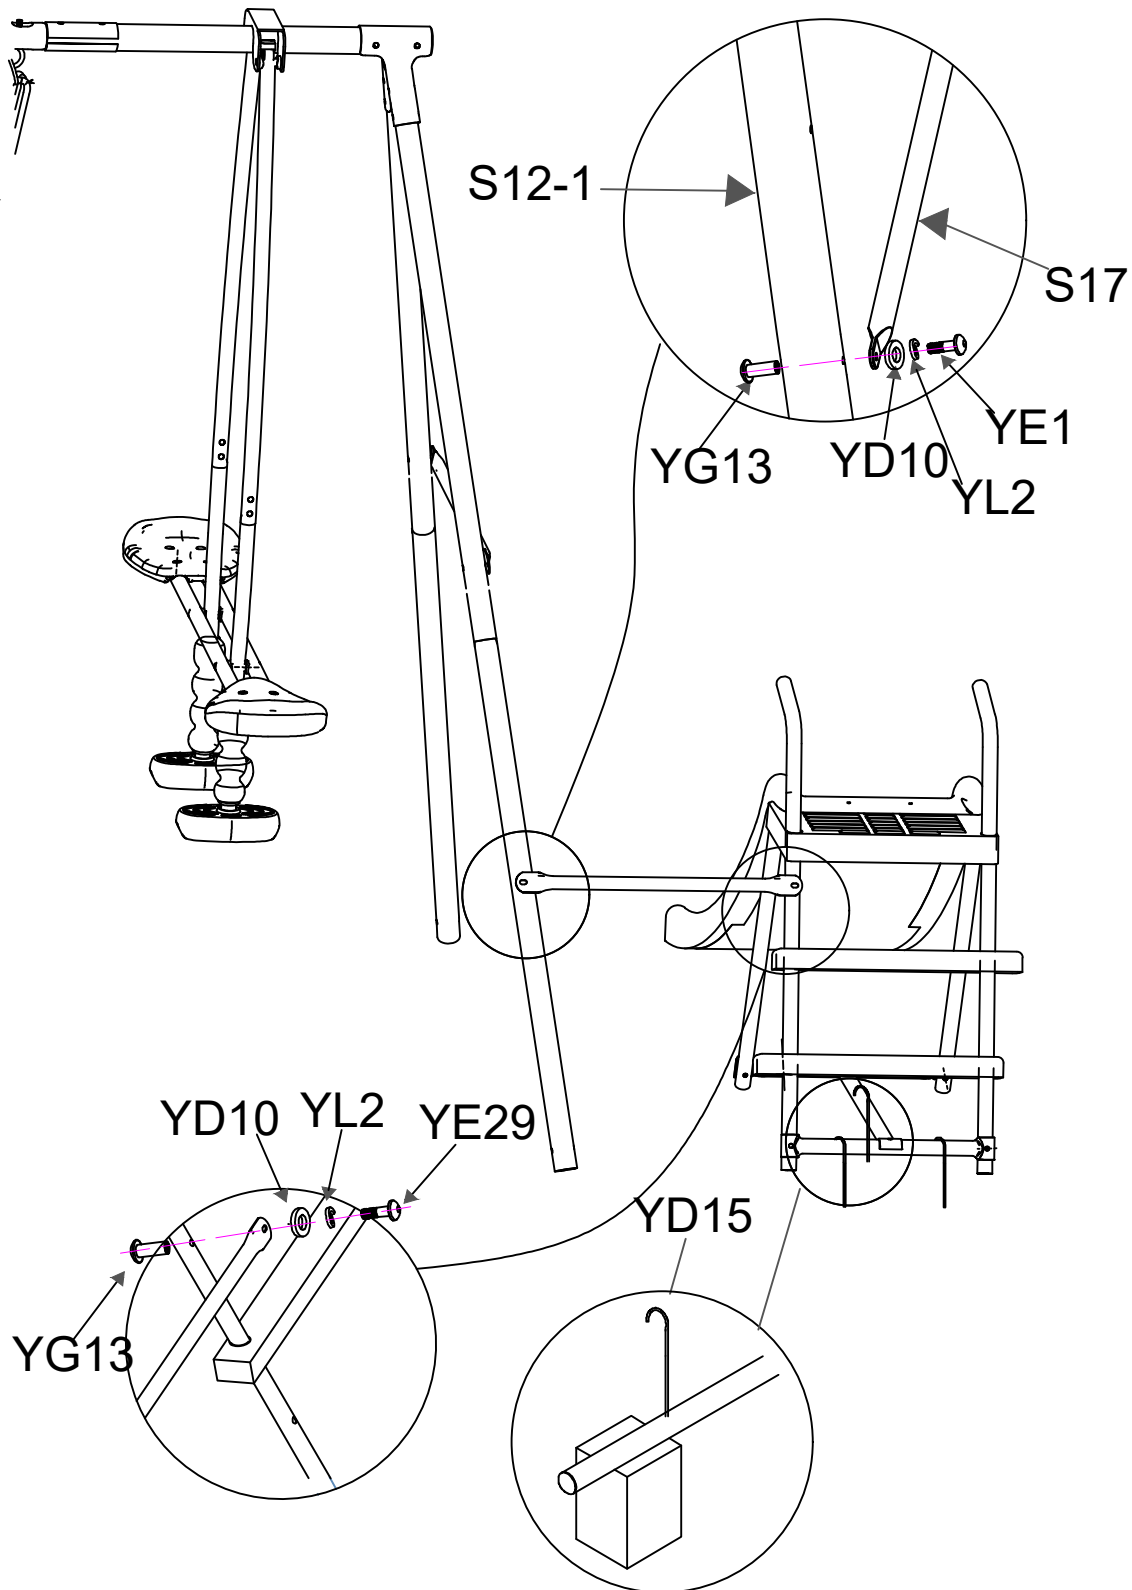

WARNINGS

ASSEMBLY INSTRUCTIONS

To be retained for future reference.

WARNING: *Only for domestic outdoor use.*

Dear Customer,

To guarantee safety, please give special attention to the assembly, safety, and care instructions detailed in this document.

ASSEMBLY ADVICE

Please follow the assembly instructions exactly as given.

- 1) This product must be assembled by an adult.
- 2) Keep a copy of your assembly instructions for future reference. This can be particularly handy for identification of parts if any after sales service is required.
- 3) The EN 71-8, chapter 4.6 standard requires a 40cm minimum distance between the ground and a 2 person swing and a 35cm minimum distance between the ground and swings. These distances are important for safe use. After having assembled the playground, check these distances. In case of non-conformity, do not hesitate to contact our after-sales service.
- 4) We advise that the swing set is not faced towards the sun
- 5) Before commencing, check that none of the parts are missing. If you find that you are missing a part please contact our after sales service department.
- 6) Dispose of packaging thoughtfully.
- 7) Do not allow children to play with packaging.

SAFETY ADVICE

- 1) This product must not be used by children under the age of 36 months. It is suitable only for children between the ages of 3 and 7 years with a maximum weight of 35kg. It must be used under adult supervision.
- 2) Only 4 children may safely use the equipment simultaneously
- 3) As this product contains small parts that could be swallowed, please keep parts away from children under 36 months.
- 4) This product is only for private use at home and must never be used in parks and public gardens, in schools, camp sites, hotels, public leisure areas, etc.
- 5) The swing set should be set up on a flat surface 2 meters away from all other things, structures or obstacles (walls, fences, trees, washing lines or electric cables etc.) that could cause injury during use.
- 6) This product must not be set up over hard surfaces such as concrete, asphalt or other hard surfaces. We recommend installation over grass or other soft surfaces.
- 7) This swing set must be embedded firmly into the ground. Please follow the instructions carefully for doing so. Only use this product when the concrete is dry.
- 8) Anchors should be placed level with or below ground level in order to reduce tripping hazards
- 9) The anchorage must be checked regularly, in addition to the hooks and fixtures.
- 10) Dispose of packaging thoughtfully.
- 11) Do not allow children to play with packaging.
- 12) During the assembly, keep children away from the toy to avoid child swallowing the small accessories.

FIXING INTO THE GROUND

- 1) Assemble the swing set completely and place it in the desired place.
- 2) Locate and mark the position for the sealing legs.
- 3) Check the dimensions showed on the diagram, and correct if necessary.
- 4) Under the four feet, mark a square of 350 X 350 mm and dig a 350 mm deep hole.
- 5) Fill these holes with concrete following the diagram of the recto. The top of the concrete should not exceed ground level.
- 6) Place the sealing legs in the concrete in the located place (see point 2). Make sure the drilled end of the sealing legs is above the level of the concrete.
- 7) Once the concrete is set, screw the feet into the sealing legs.
- 8) Ensure that the concrete is completely dry before using the swing.
- 9) Cover the concrete with soil. We strongly advise checking this anchoring periodically

MAINTENANCE

- 1) All metal parts are galvanized steel and powder coated for rust protection; however, in certain areas close to the sea we advise that additional rust prevention treatment may be necessary.
- 2) The surfaces of all the parts should be checked at least once a month, especially for the fixtures such as hooks on the overhead beam. If the fixtures and hooks show wear over 10% of their original thickness, then they should be replaced with the same fixtures as those originally provided.
- 3) To check all nuts and bolts for tightness and tighten when required.
- 4) To check all coverings for bolts and sharp edges and replace when required.
- 5) Toys may collapse or be dangerous if they don't check regularly.
- 6) All parts that are under constant friction should be oiled regularly with a suitable lubricant.
- 7) The ground on which the product is placed should be controlled regularly. All elements such as stones or other objects that could cause injury in the case of a fall should be removed. It is advised to remove the apparatus during the winter period, when not in use, to avoid any deterioration due to bad weather conditions.
- 8) Check for signs of wear, especially where swinging apparatus' plastic ring attaches to the metal swing hooks on the upper beam. As soon as the plastic ring shows signs of deterioration, the apparatus should be replaced.
- 9) All used apparatuses and/or parts must be replaced by a part delivered by our after sales service, or by an approved retailer.
- 10) If any modifications made by consumer to the original activity toy shall be carried out according to the instructions of the manufacturer.
- 11) Sand rusted areas and tubular members and repaint using a non-lead based paint when required.
- 12) Check swing seats, chains, ropes and other means of attachment for evidence of deterioration;

PRACTICAL ADVICE

Frequent questions and observations

SAFETY

Safety checks should be carried out regularly on this product. These checks should include, if necessary, removing any sharp edges, replacing missing screw covers, and tightening the nuts and bolts. These checks should be done to avoid any danger or upturning of the swing set through normal wear and tear.

Comfort

- 1) If the swing set develops a squeak apply a suitable gel lubricant. Do not use liquid lubricant as it will run down the fixings and apparatus. The height of the swing can be adjusted using the plastic eyelet fixture. By pulling the rope through the fixture, the height of the seat can be adjusted to suit the user.

The dimensions given are indicative only, they may vary according to the assembly method.

- 2) This Swing Set must be used under adult supervision. Keep any additional components, they may be useful for later operation of maintenance.
- 3) When a child is playing on the device, other children can not run in the area of movements of elements to impact.

CAUTION !Fall danger

IMPORTANT! Wait until the concrete is set before using your slide and check anchorages regularly.



WARNINGS

Consumer information sheet for playground surfacing materials

The US Consumer Product Safety Commission (CPSC) estimates that about 100000 playground equipment related injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it may quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are installed and maintained at depths of 150 mm, 225 mm and 300 mm.

Table B.1---Fall height in millimeters from which a life-threatening head injury would not be expected

Type of material	Depth of surfacing material		
	150mm	225mm	300mm
Double shredded bark mulch	1800	3000	3300
Wood chips	1800	2100	3600
Fine sand	1500	1500	2700
Fine gravel	1800	2100	3000

However, it should be recognised that all injuries due to falls cannot be prevented, no matter what surfacing material is used.

It is recommended that a shock absorbing material extend a minimum of 1 800 mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area, and its cost.

This information has been extracted from the CPSC publications “*Playground Surfacing — Technical Information Guide*” and “*Handbook for Public Playground Safety*”.