

Instructions Tools Required: Screwdriver,

Adjustable Wrench

1. Turn off water supply.

2. Remove handle screw (A)

- and pull off handle (B).

 3. Unscrew bonnet (C) and pull out stem (D).
- Insert new seat (E) into faucet body.
 Insert new stem into faucet
- 5. Insert new stem into fauce body.6. Replace bonnet (C) and
- tighten.
 7. Place handle (B) on stem and tighten with screw (A).