



Trex® Outdoor Furniture™

EXTENDED CARE TIPS

Tips and tricks to keep your Trex® Furniture looking like new.

Quick Clean

Wipe down with a soap and water mixture; loosen any dirt and debris that may catch in the surface grooves with a soft-bristle brush; rinse clean.

Basic Cleaning

Mix a solution of 1/3 bleach and 2/3 water, using a soft-bristle brush, as necessary. Let this solution sit for a few minutes; rinse clean.

Deep Cleaning

Use a pressure washer, making sure pressure doesn't exceed 1,500 psi; loosen any debris in grooves with a soft-bristle brush where necessary.

Tips to Minimize Cleaning

Cover or store your furniture when not in use. This keeps additional dirt and debris from collecting and also protects from year-round sun exposure.

For more cleaning tips visit: trexfurniture.com/cleaning