



Portfolio® is a registered trademark of LF, LLC. All Rights Reserved.


ITEM #0161851

SEMI-FLUSHMOUNT CEILING FIXTURE

MODEL #FJ06-092-1


Français p. 6

Español p. 11

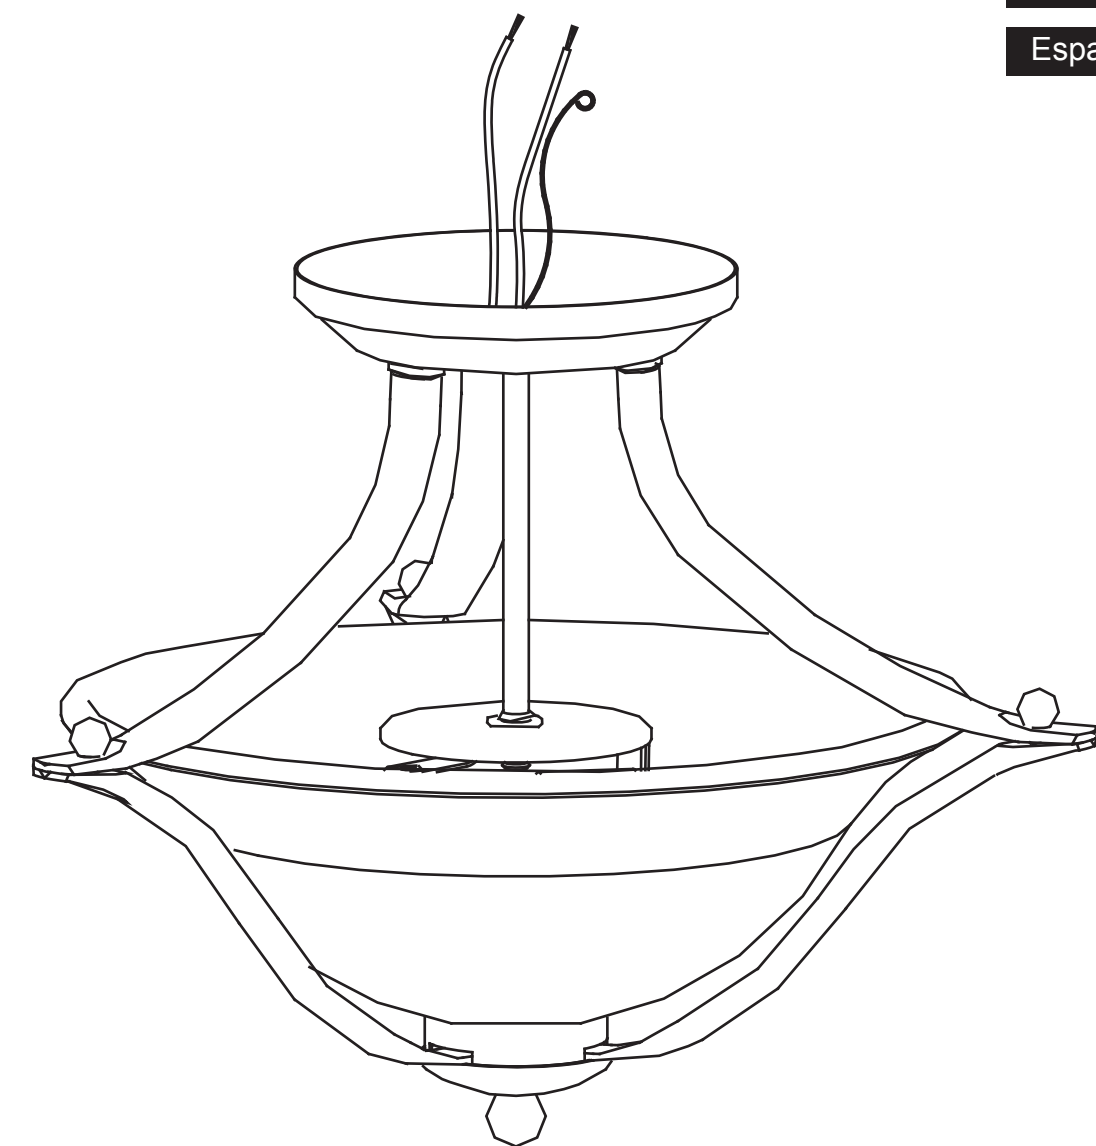

Intertek

PACKAGE CONTENTS

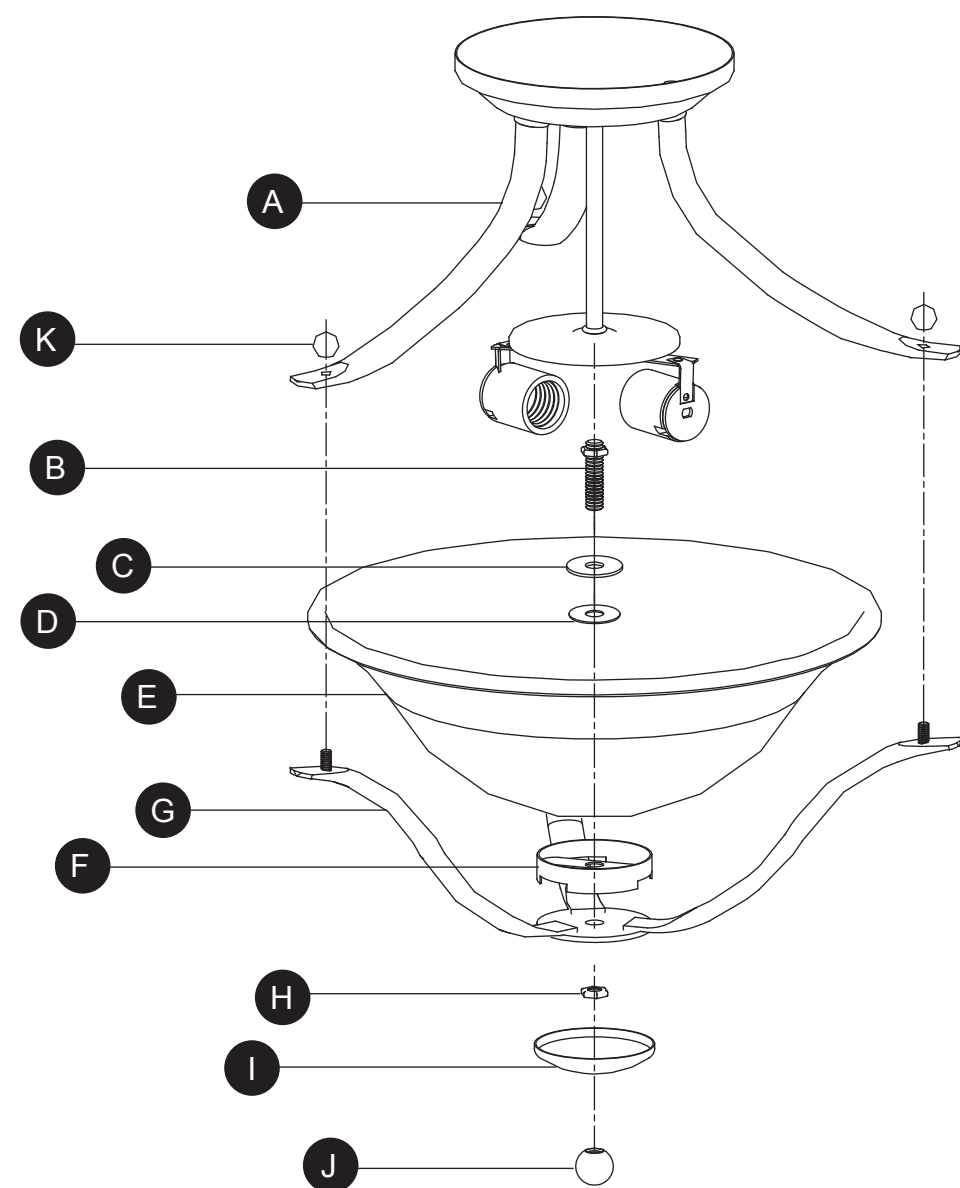

Part	Description	Quantity
A	Fixture	1
B	Threaded nipple and nut	1
C	Washer (preassembled to Theaded nipple and nut (B))	1
D	Rubber ring (preassembled to Theaded nipple and nut (B))	1
E	Glass Shade	1
F	Cap (preassembled to Theaded nipple and nut (B))	1
G	Steel circle	1
H	Nut (preassembled to Theaded nipple and nut (B))	1
I	Plate (preassembled to Theaded nipple and nut (B))	1
J	Knob (preassembled to Theaded nipple and nut (B))	1
K	Ball nut (preassembled to Steel circle (G))	3

HARDWARE CONTENTS

Part	Description	Quantity	Picture (shown to size)
AA	Mounting screw	2	
BB	Outlet box screw	2	
CC	Wire nut	3	
DD	Decorative nut	2	
EE	Mounting bracket	1	
FF	Green screw (preassembled to Mounting bracket (EE))	1	

⚠ WARNINGS AND CAUTIONS

WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching circuit breaker off).
- MIN 75°C SUPPLY CONDUCTORS.

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 25 minutes

Tools Required for Assembly: Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses (not included).




Helpful Tools: Wire strippers (not included).




ASSEMBLY INSTRUCTIONS


1. Shut off main power at the circuit breaker or fuse panel before removing old fixture. (Fig. 1)

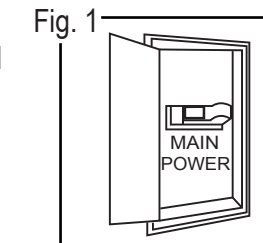


2. Remove old fixture and disconnect wiring. (Fig. 2)

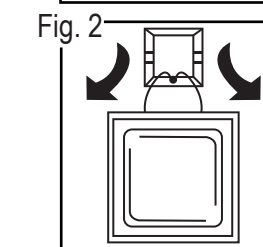


3. Tighten the mounting screws (AA) 2 full turns into the mounting bracket (EE). (Fig. 3)

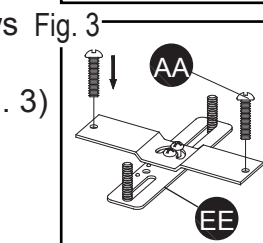


4. Fasten mounting bracket (EE) on the ceiling outlet box using two outlet box screws (BB). (Fig. 4)

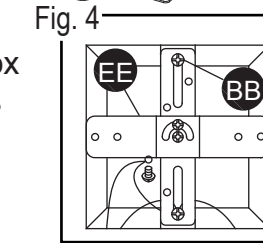

5. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers, black to black (power), white to white (neutral). Snip ends. (Fig. 5)

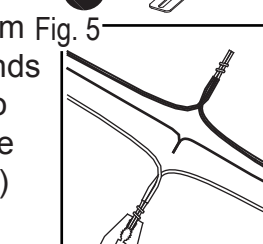


6. Attach wire nuts (CC). Tape nuts (CC) and wires together. (Fig. 6)

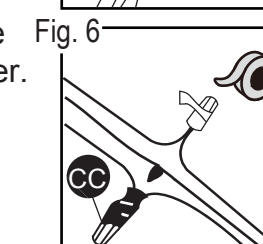


CARE AND MAINTENANCE

- Clean with soft, dry cloth. Do not use abrasives.
- Fixture uses two 100-watt type A medium base bulbs. Shut off main power supply before replacing bulbs.


7. Attach grounding wire from the supply circuit to the mounting bracket (EE) with the green screw (FF). (Fig. 7)

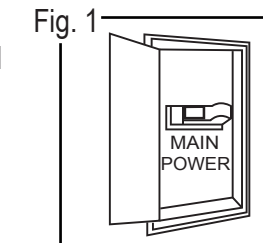


8. Place the fixture (A) over the outlet box. Allow mounting screws (AA) to come out through the holes. Tighten decorative nuts (DD) to secure fixture (A). (Fig. 8)

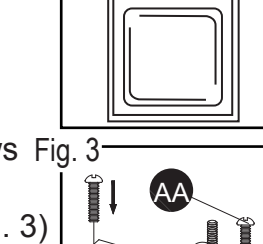


9. Install light bulbs. Use only bulbs of the specified type and maximum rated wattage or less. (Fig. 9)

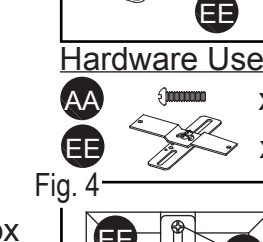

10. Place the washer (C), rubber ring (D), glass shade (E), cap (F) and steel circle (G) onto the threaded nipple and nut (H) and place the cap (I) onto the threaded nipple and nut (B). Tighten with knob (J). (Fig. 10)

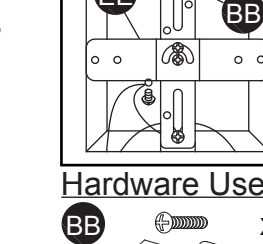

11. Attach glass shade (E) assembly onto fixture (A). Tighten ball nuts (K) to secure steel circle (G). (Fig. 11)

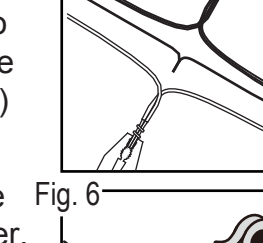

TROUBLESHOOTING

Problem	Possible Cause	Corrective Action
Bulb won't light	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty wall on/off switch.	1. Replace light bulbs. 2. Check power supply. 3. Check wiring. 4. Test or replace wall on/off switch.


WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

Part	Description	Part #
AA	Mounting screw	FA-039
BB	Outlet box screw	FA-003
CC	Wire nut	ED-120
DD	Decorative nut	NC-055
FF	Green screw	FA-002

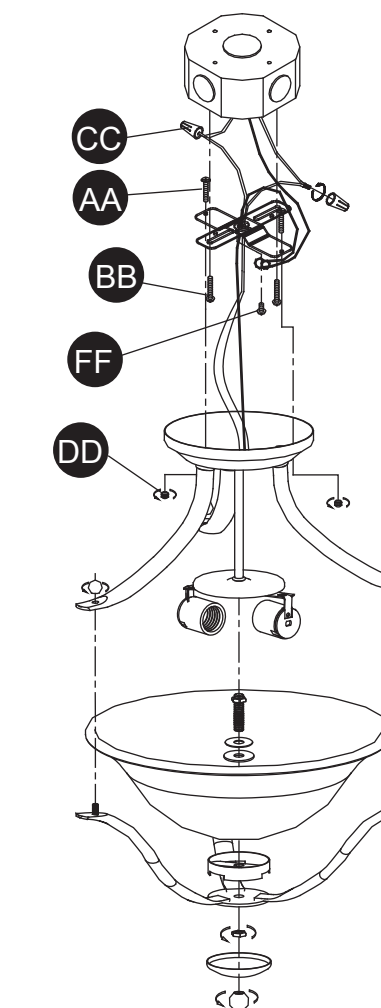

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.