 
 


 
 
# Wardrobe

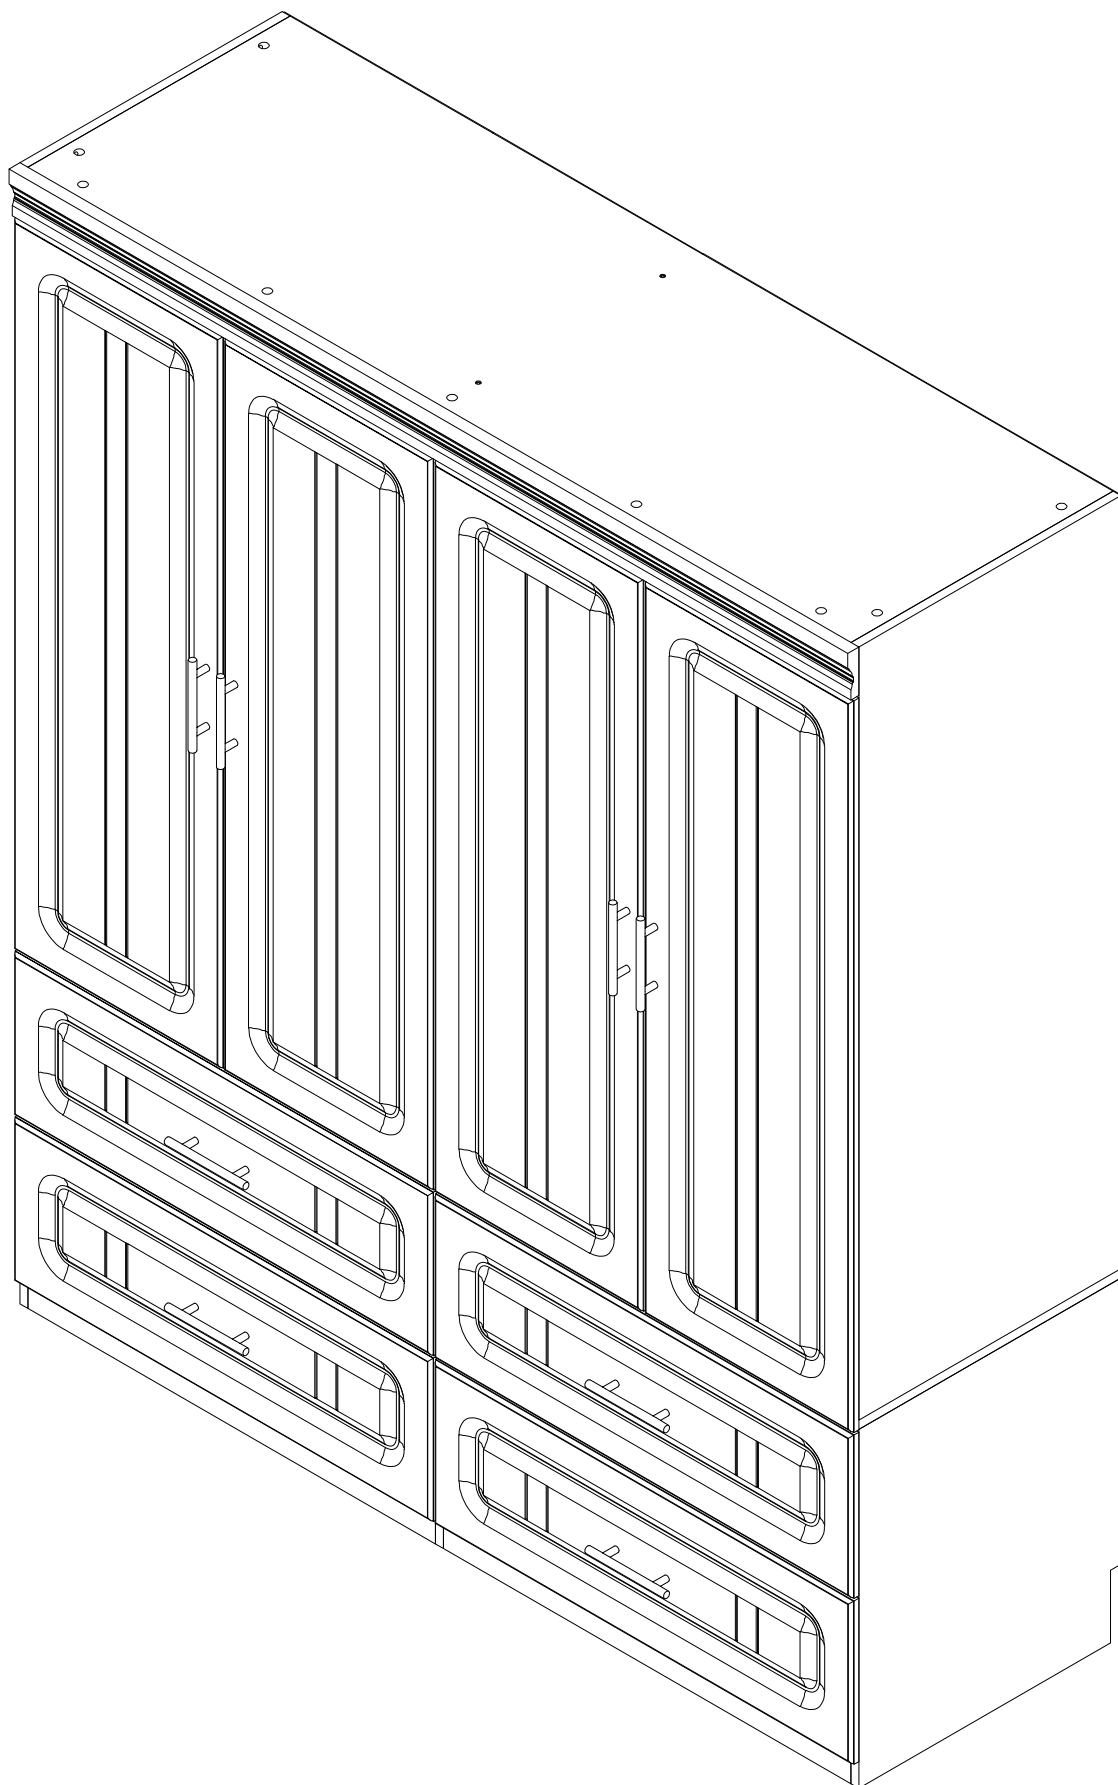

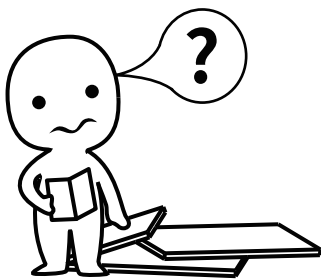

 
### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

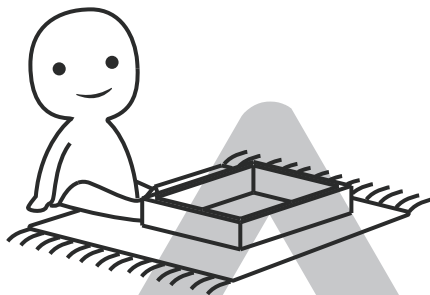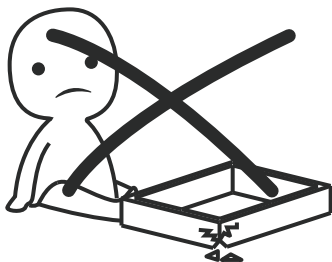

 
 
### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

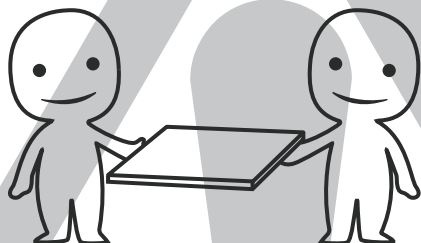

### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

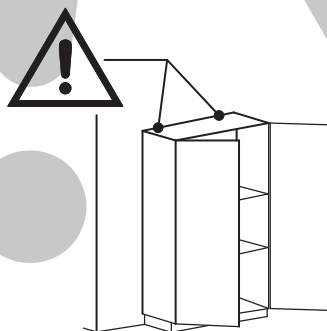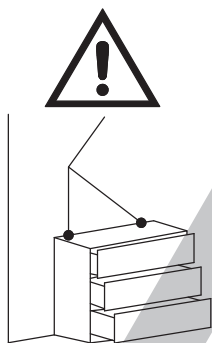

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**

 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

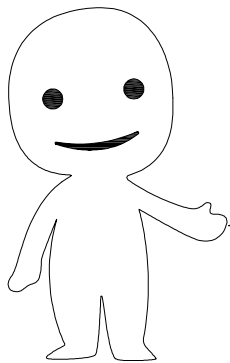

Please prepare the following tools

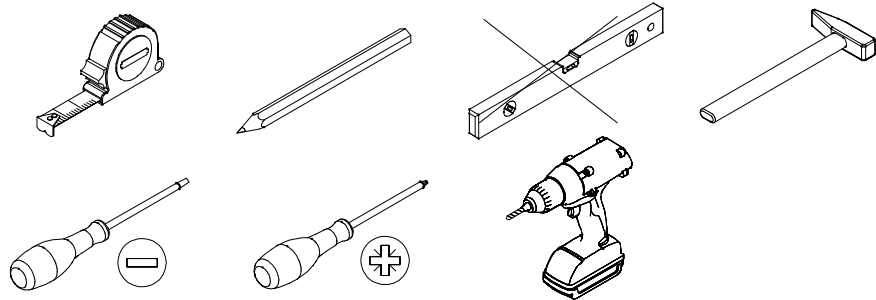

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 67



 
Ø6 x 34mm

B x 67



Ø15 x 12mm

C x 58



Ø8 x 30mm

D x 8



Ø4 x 40mm

E x 16



Ø4 x 30mm

F x 38



Ø3 x 12mm

G x 15



15.5 x 10 x 1.2mm

H x 15



Ø3 x 16mm

J x 4



Ø35mm

K x 4



Ø35mm

L x 48



Ø4 x 16mm

M x 8



150 x 34mm

N x 16



Ø4 x 18mm

P x 4



35 x 400mm

Q x 32



 
Ø3.5 x 14mm

R x 2



53 x 24 x 12mm

S x 1



770mm

 
T x 4



Ø4 x 14mm

U x 1



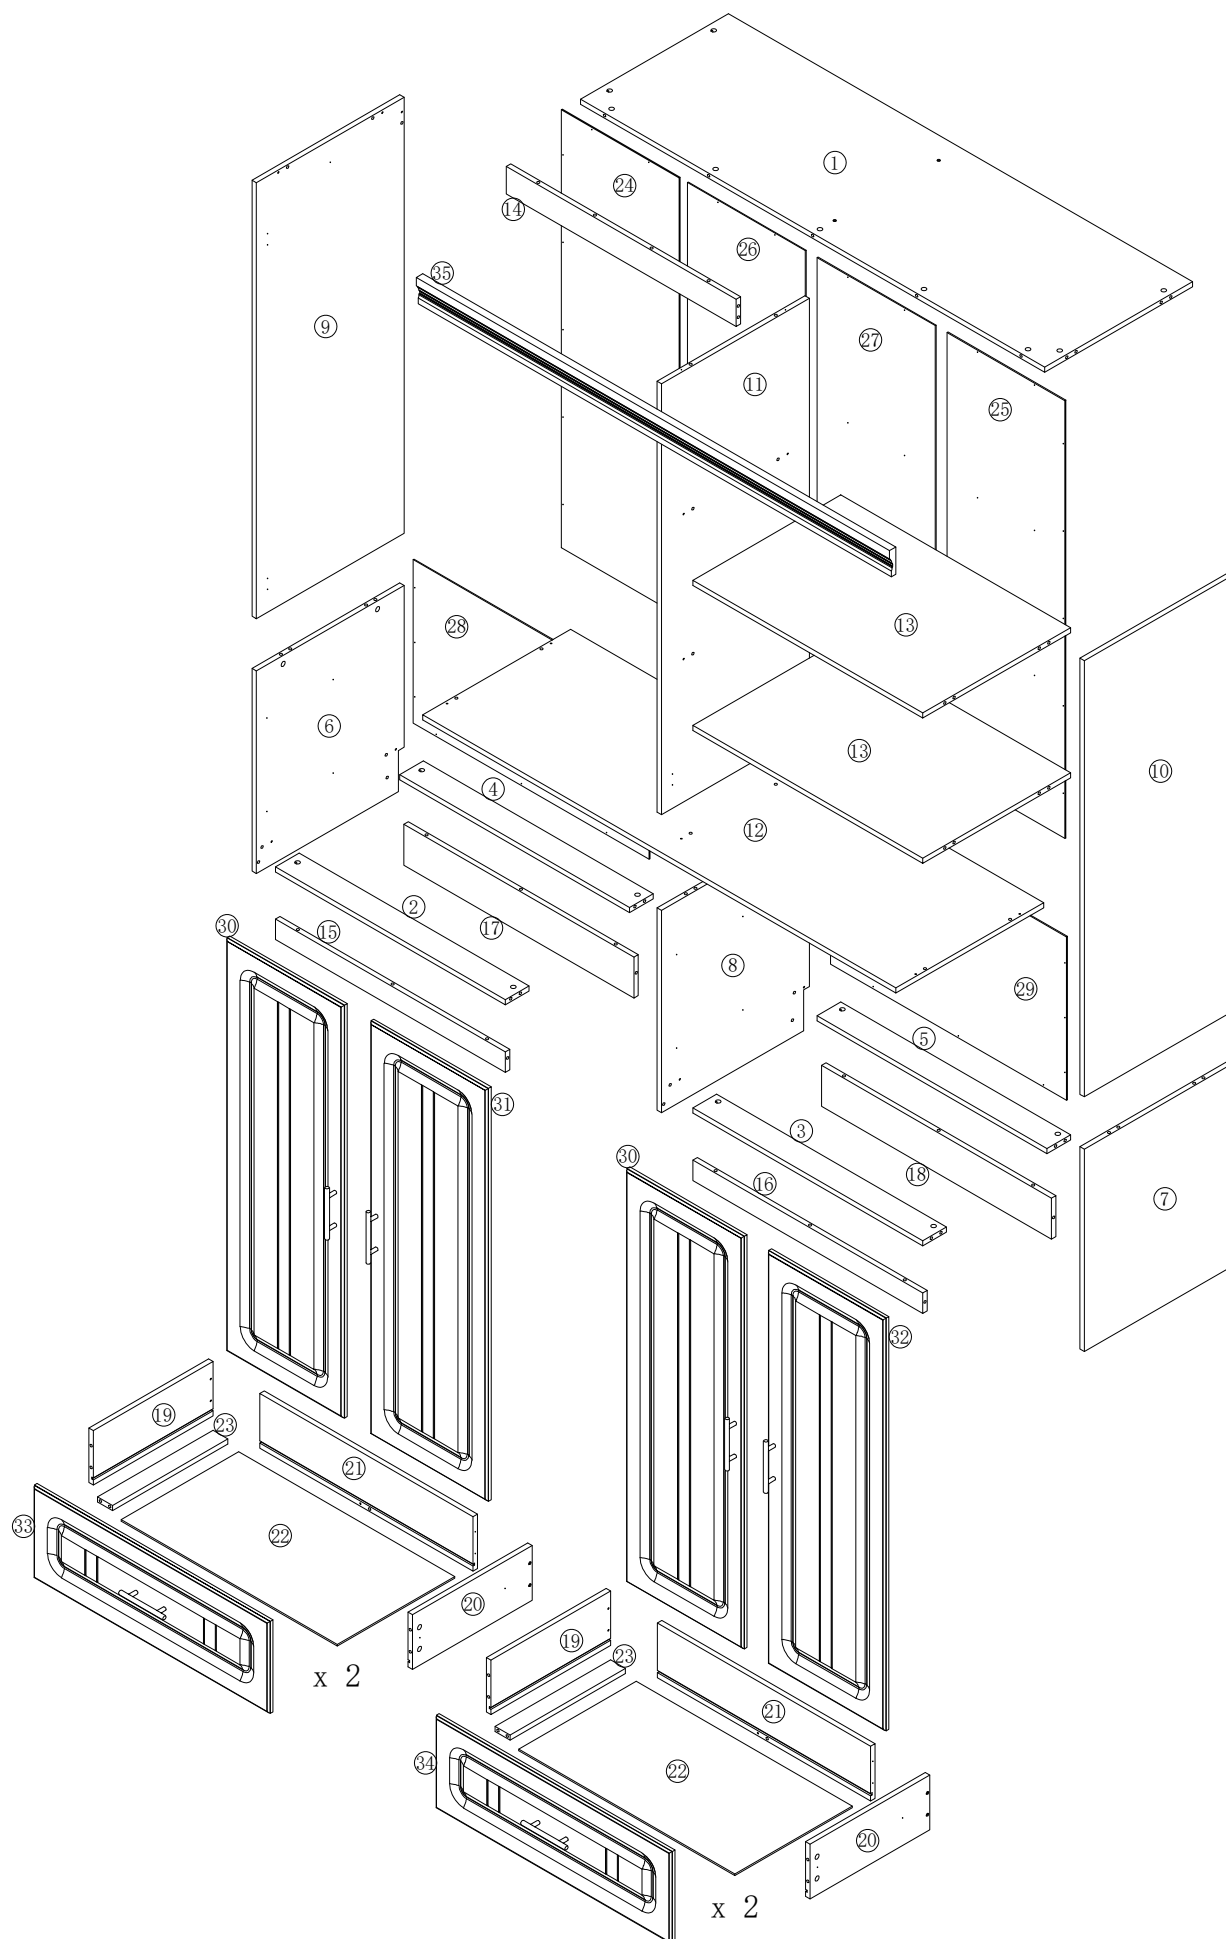 




 
**Slides Must Be Separated Before Assembly.**  
**After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

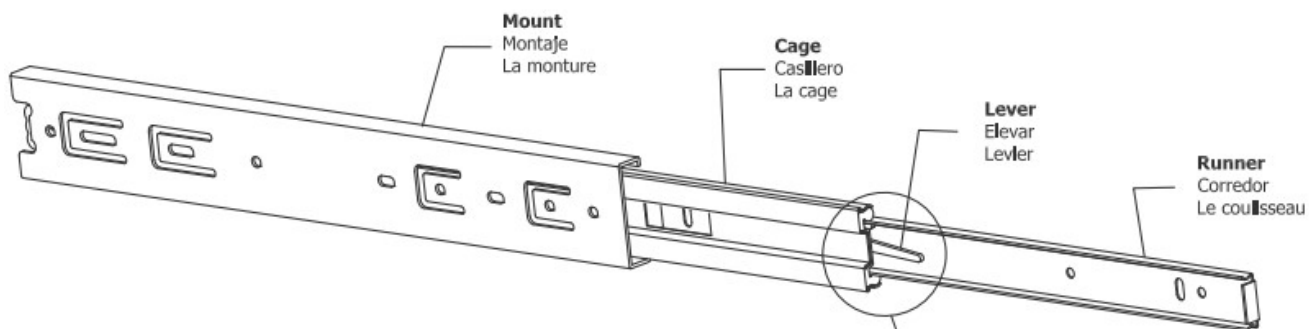

 
**STEP 1: Extend Slide**  
Extender la diapositiva  
Extendre la diapositive

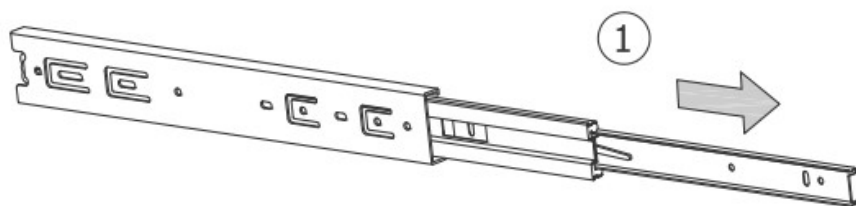

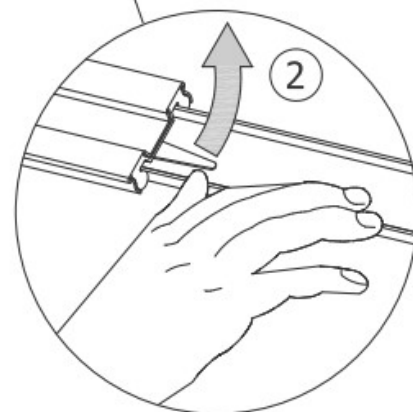

**STEP 2: Push Lever UP**  
Empujar hacia arriba  
Lever le levier

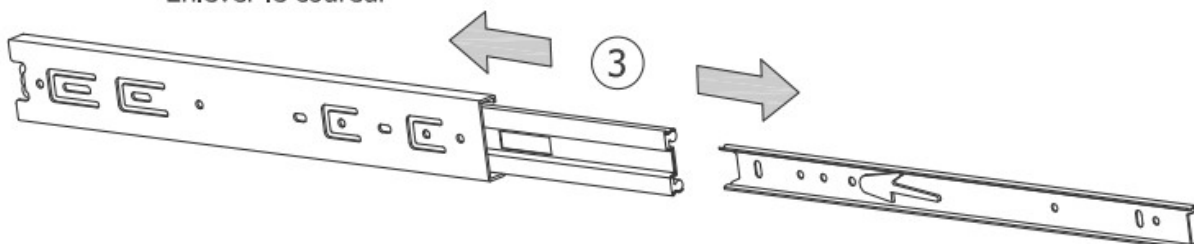 


**STEP 3: Remove Runner**  
Quitar el corredor  
Enlever le coureur

 


# 1

<p>P x 4</p>  <p>CL DR CR</p> <p>35 x 400mm</p>	<p>Q x 16</p>  <p>Ø3.5 x 14mm</p>
--	--

 


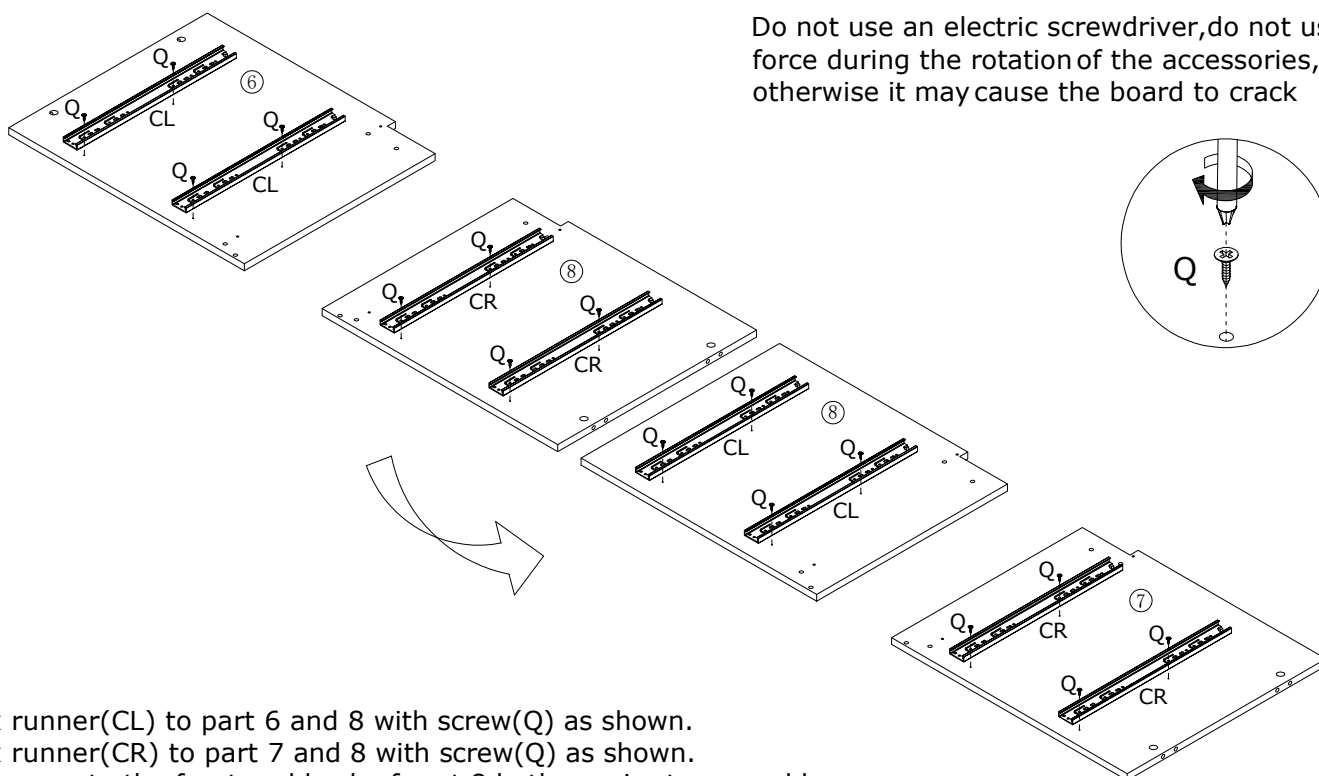

 
 
Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack



Fix runner(CL) to part 6 and 8 with screw(Q) as shown.  
Fix runner(CR) to part 7 and 8 with screw(Q) as shown.  
Please note the front and back of part 8 both require to assemble runners.




# 2

 
 
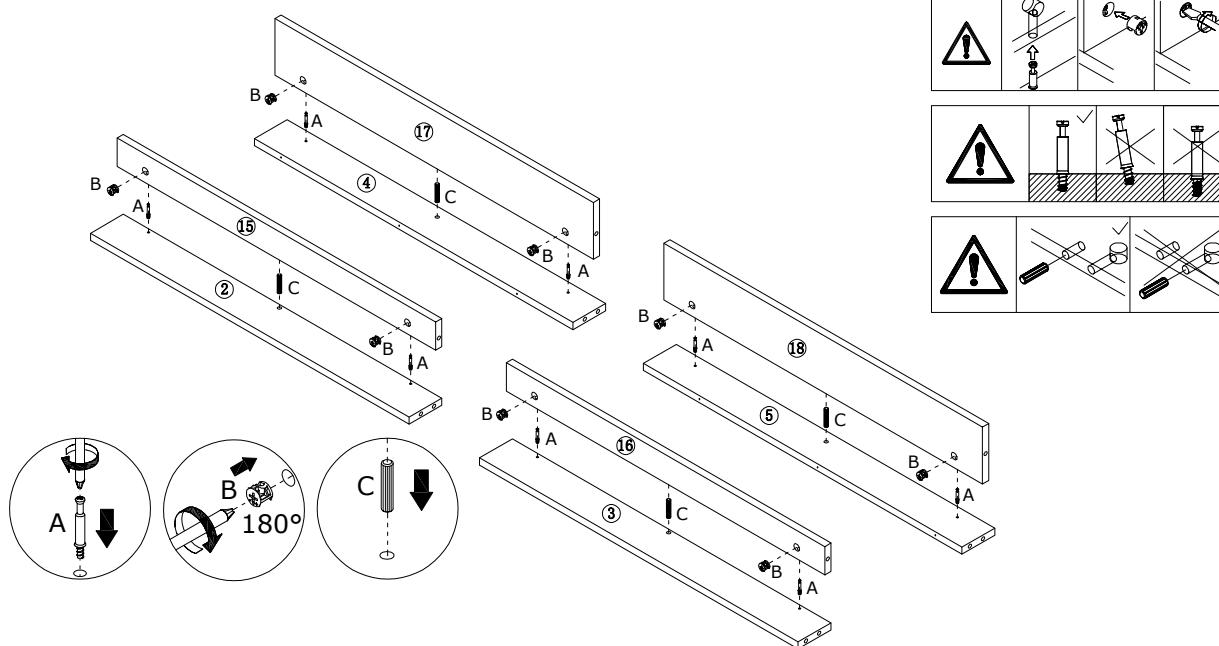 
 
<p>A x 8</p>  <p>Ø6 x 34mm</p>	<p>B x 8</p>  <p>Ø15 x 12mm</p>	<p>C x 4</p>  <p>Ø8 x 30mm</p>
---	--	---



Insert quickfit screw(A) into part 2, 3, 4 and 5. Hammer wooden pin(C) into part 15, 16, 17 and 18. Attach these parts respectively, turn cam locks(B) clockwise to tighten as shown.

# 3

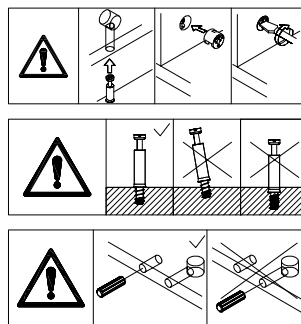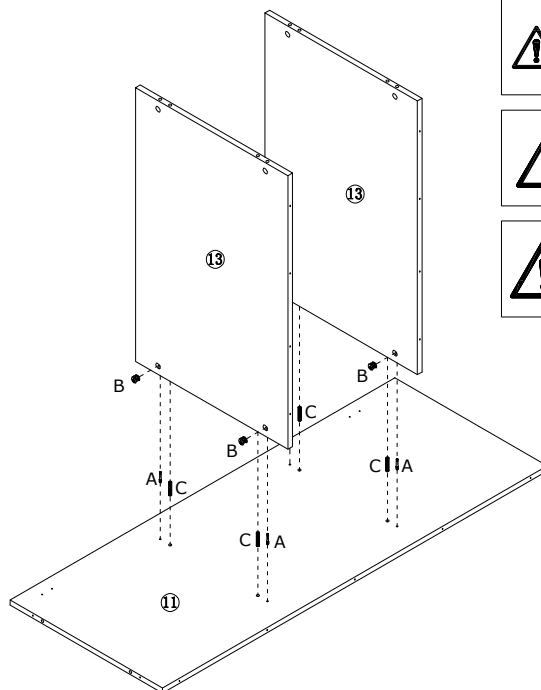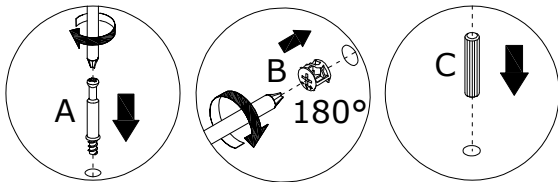


A x 4  Ø6 x 34mm	B x 4  Ø15 x 12mm	C x 4  Ø8 x 30mm
---	--	---

 
 
 
 


Insert quickfit screw(A) into part 11.

Attach two part 13 to part 11 with wooden pin(C), turn cam locks(B) clockwise to tighten as shown.

# 4



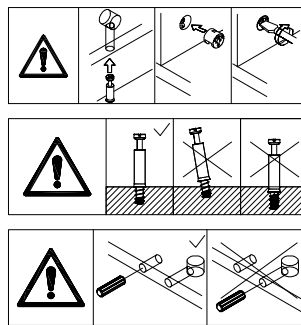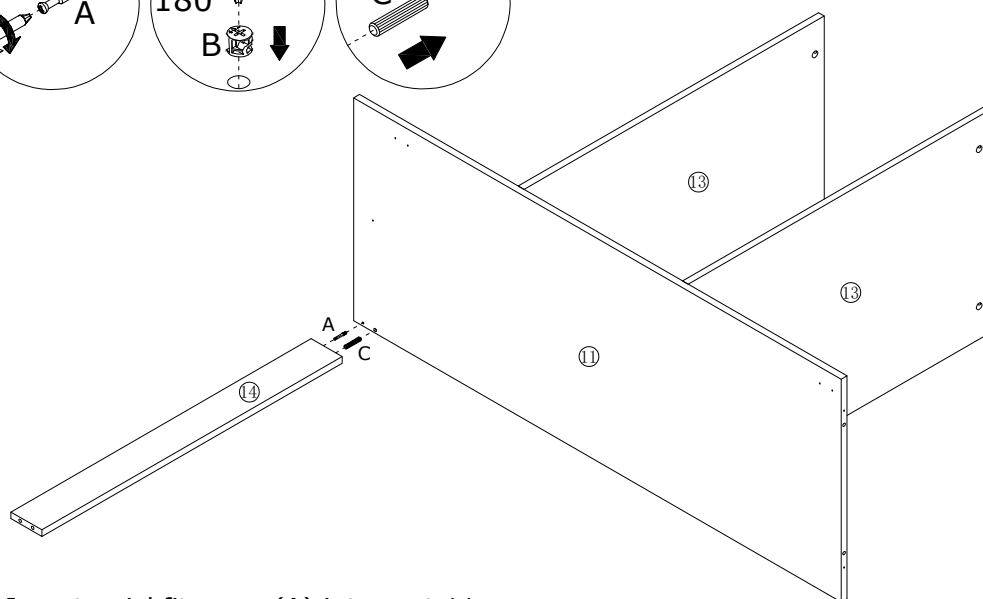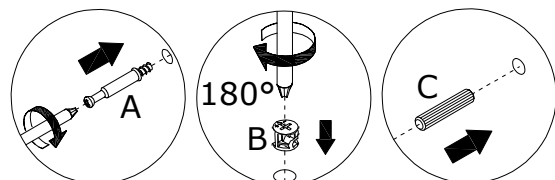

A x 1  Ø6 x 34mm	B x 1  Ø15 x 12mm	C x 1  Ø8 x 30mm
---	--	---

 
 
 
 
 
 


Insert quickfit screw(A) into part 11.

Attach part 14 to part 11 with wooden pin(C), turn cam locks (B) clockwise to tighten as shown.




# 5

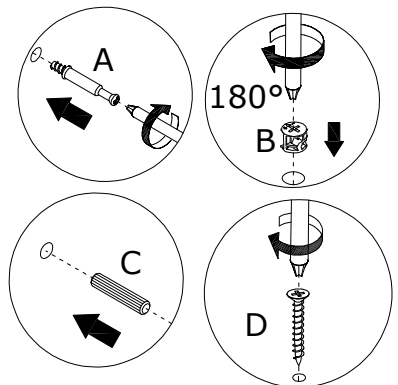 
 
 
 
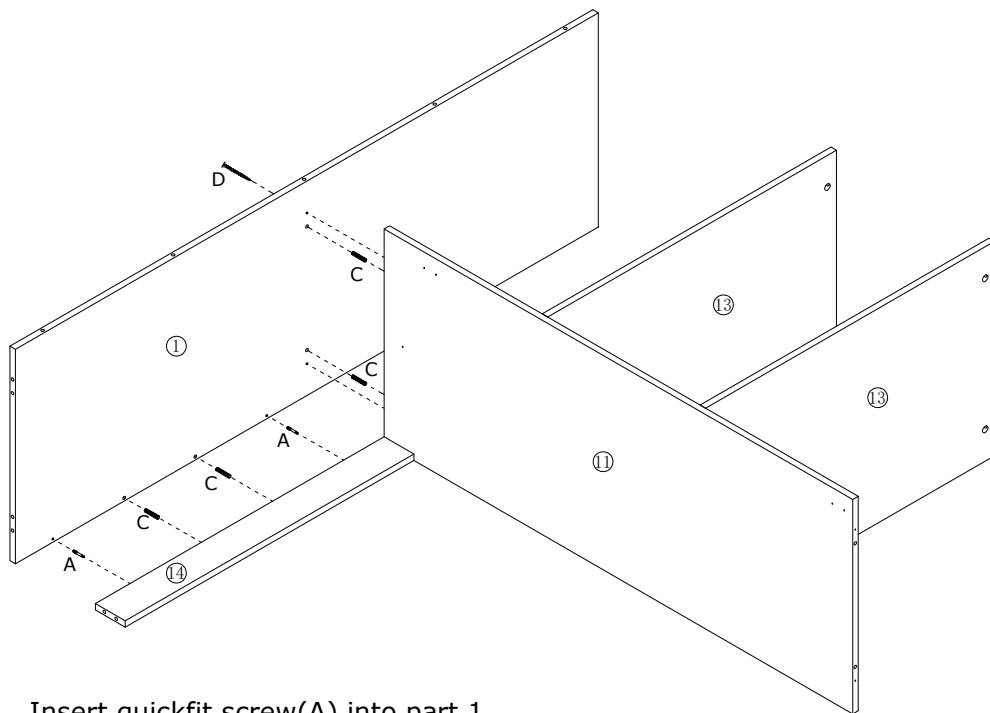 
 
A x 2  Ø6 x 34mm	B x 2  Ø15 x 12mm	C x 4  Ø8 x 30mm	D x 2  Ø4 x 40mm
---	--	---	---



Insert quickfit screw(A) into part 1.  
Cover part 1 to assembled component with wooden pin(C),  
turn cam locks(B) clockwise to tighten as shown.  
And use screw(D) to fix part 1 and part 10 as shown.




# 6

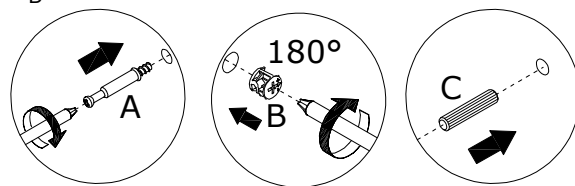 
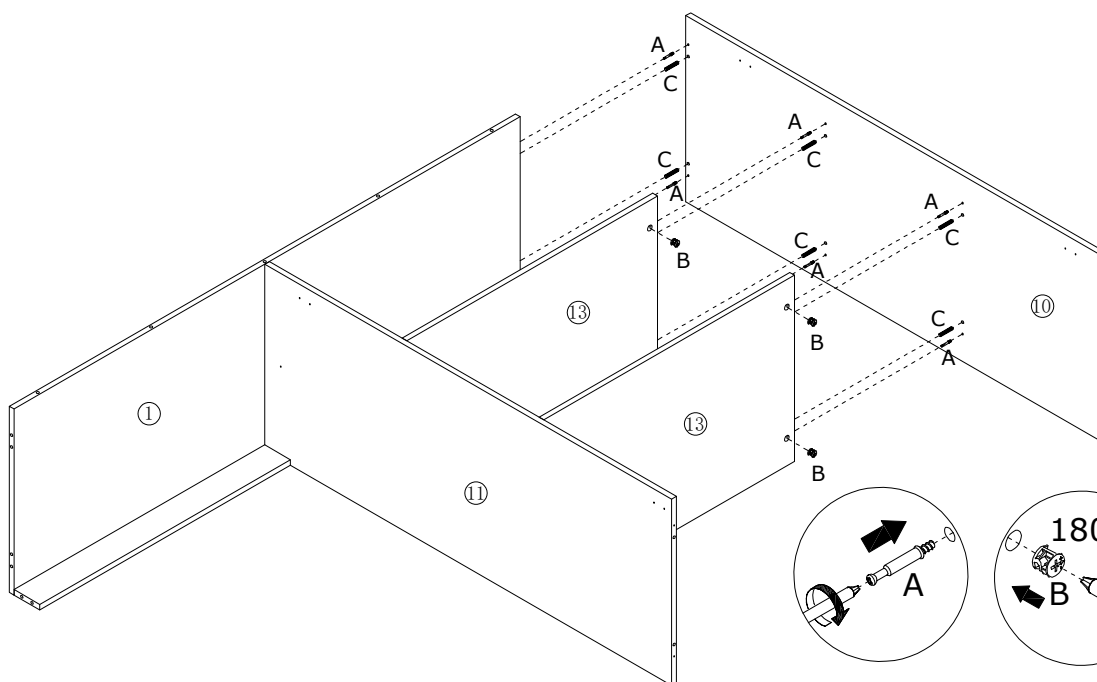 
 
A x 6  Ø6 x 34mm	B x 6  Ø15 x 12mm	C x 6  Ø8 x 30mm
---	--	---



 
Insert quickfit screw(A) into part 10.  
Cover part 10 to assembled component with wooden pin(C),  
turn cam locks(B) clockwise to tighten as shown.

# 7


 
A x 3  Ø6 x 34mm	B x 3  Ø15 x 12mm	C x 3  Ø8 x 30mm
---	--	---

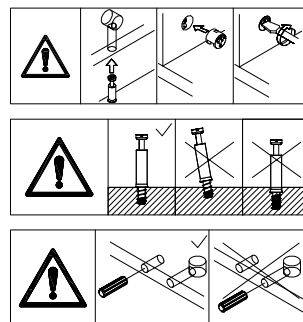 
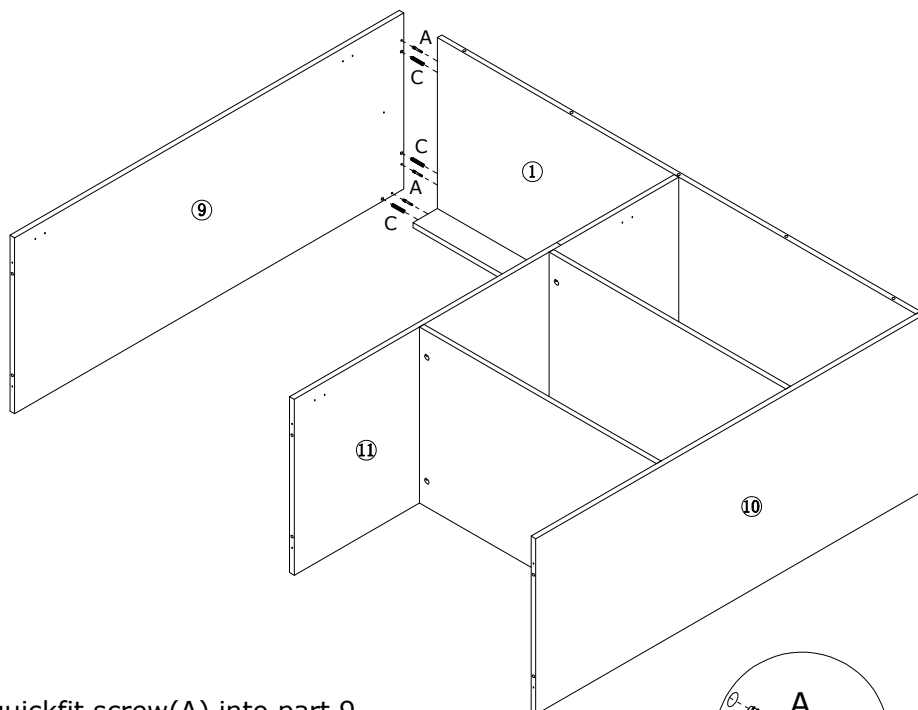 
 


Insert quickfit screw(A) into part 9.  
Cover part 9 to assembled component with wooden pin(C),  
turn cam locks(B) clockwise to tighten as shown.

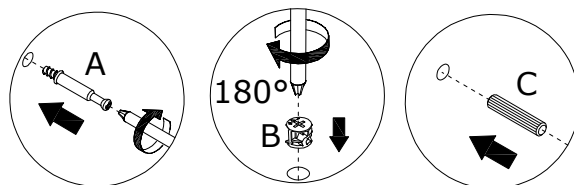 


# 8

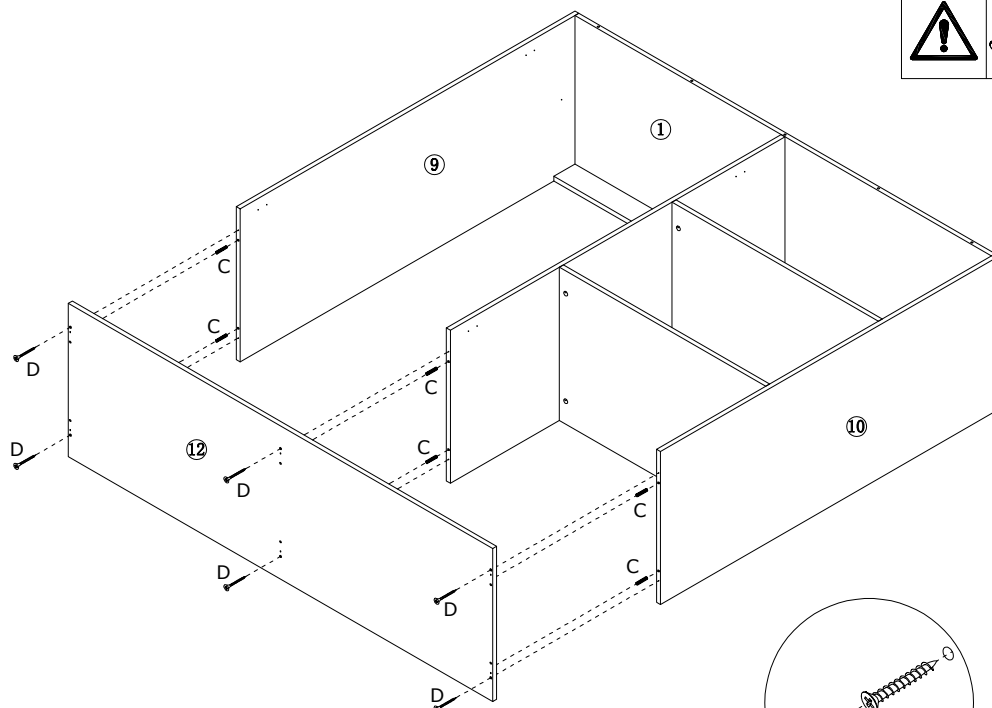


C x 6  Ø8 x 30mm	D x 6  Ø4 x 40mm
---	---

 
 
 
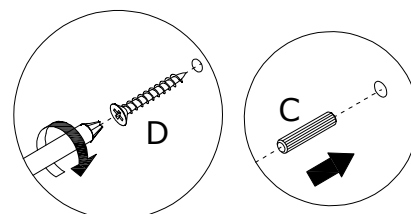 


Fix part 12 to assembled unit using screw(D) as shown.



 

 
# 9

 
 
 
 
A x 2	B x 2	C x 4
		
Ø6 x 34mm	Ø15 x 12mm	Ø8 x 30mm

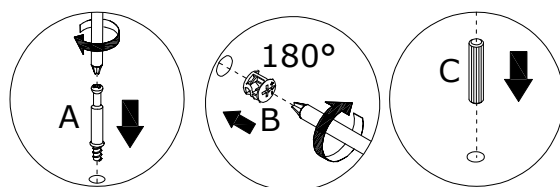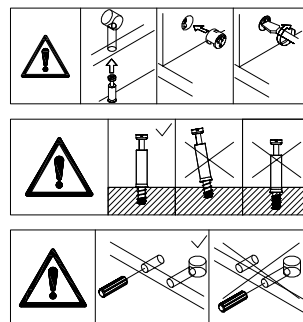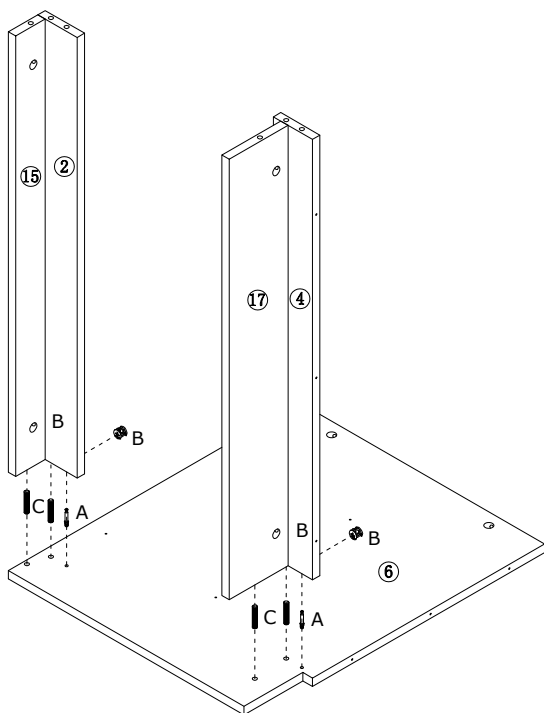

Insert quickfit screw(A) into part 6.  
Hammer one wooden pin(C) into part 2&15 and part 4&17 respectively.  
Attach two components to part 6, turn cam locks(B) clockwise to tighten as shown.




# 10

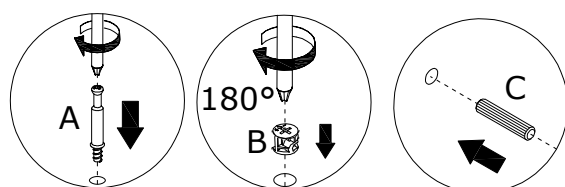 
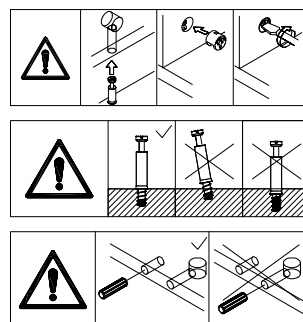 
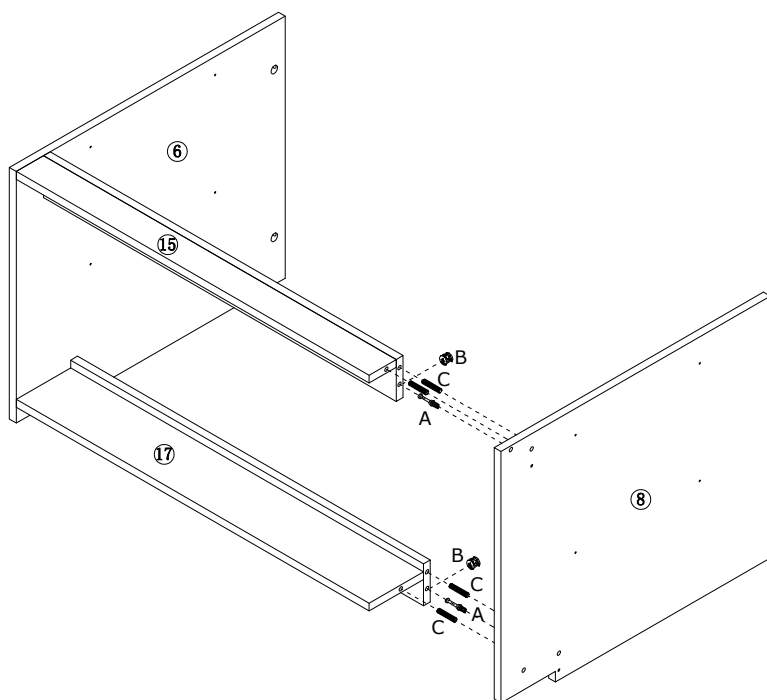 
 
A x 2	B x 2	C x 4
		
Ø6 x 34mm	Ø15 x 12mm	Ø8 x 30mm



Insert quickfit screw(A) into part 8.  
Attach part 8 to assembled unit with wooden pin(C), turn cam locks(B) clockwise to tighten as shown.

 

 
# 11

 
 
 
 
A x 2	B x 2	C x 4
		
Ø6 x 34mm	Ø15 x 12mm	Ø8 x 30mm

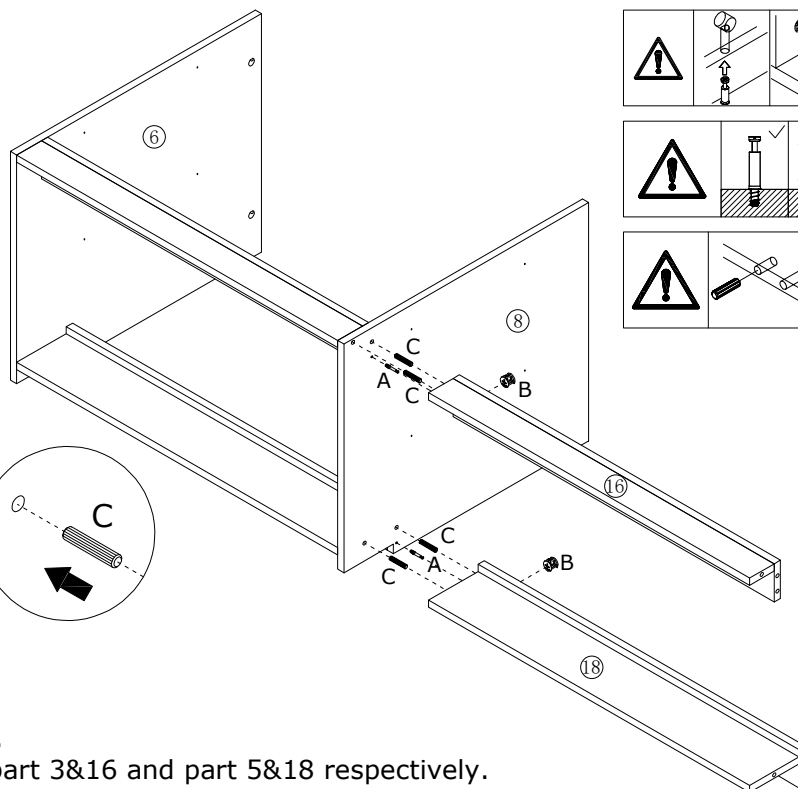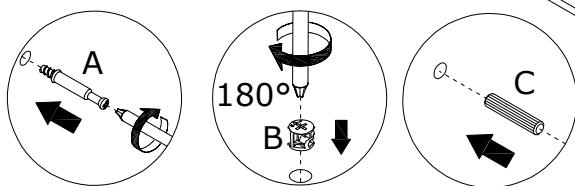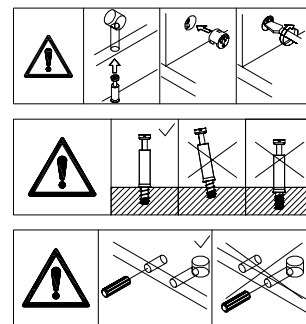

Insert quickfit screw(A) into part 8.  
Hammer one wooden pin (C) into part 3&16 and part 5&18 respectively.  
Attach two components to part 8, turn cam locks (B) clockwise to tighten as shown.




# 12

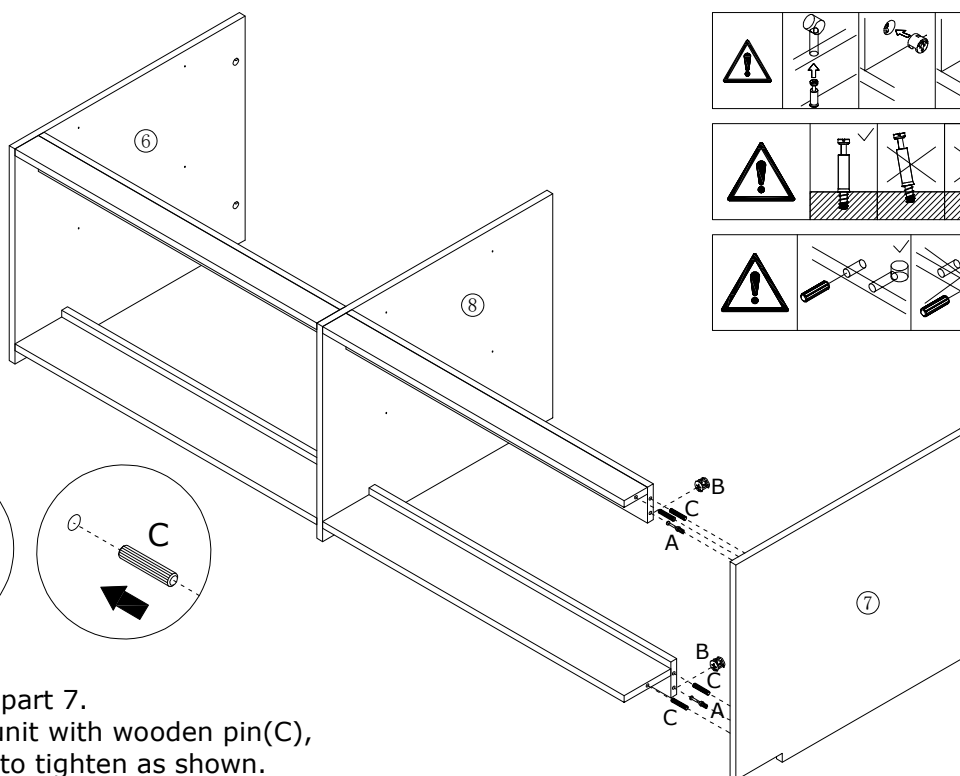 
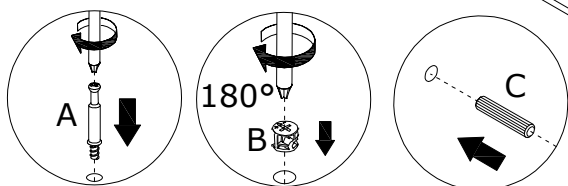 
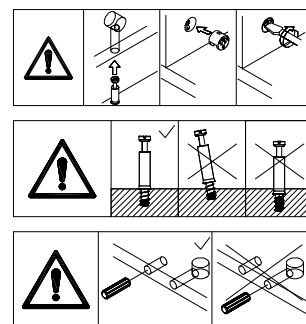 
 
A x 2	B x 2	C x 4
		
Ø6 x 34mm	Ø15 x 12mm	Ø8 x 30mm



Insert quickfit screw(A) into part 7.  
Attach part 7 to assembled unit with wooden pin(C),  
turn cam locks(B) clockwise to tighten as shown.

 

# 13

 
 
 
 
A x 6  Ø6 x 34mm	B x 6  Ø15 x 12mm	C x 6  Ø8 x 30mm
---	--	---

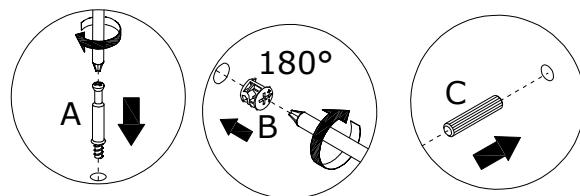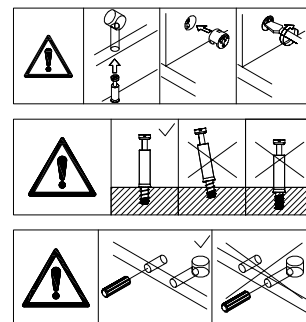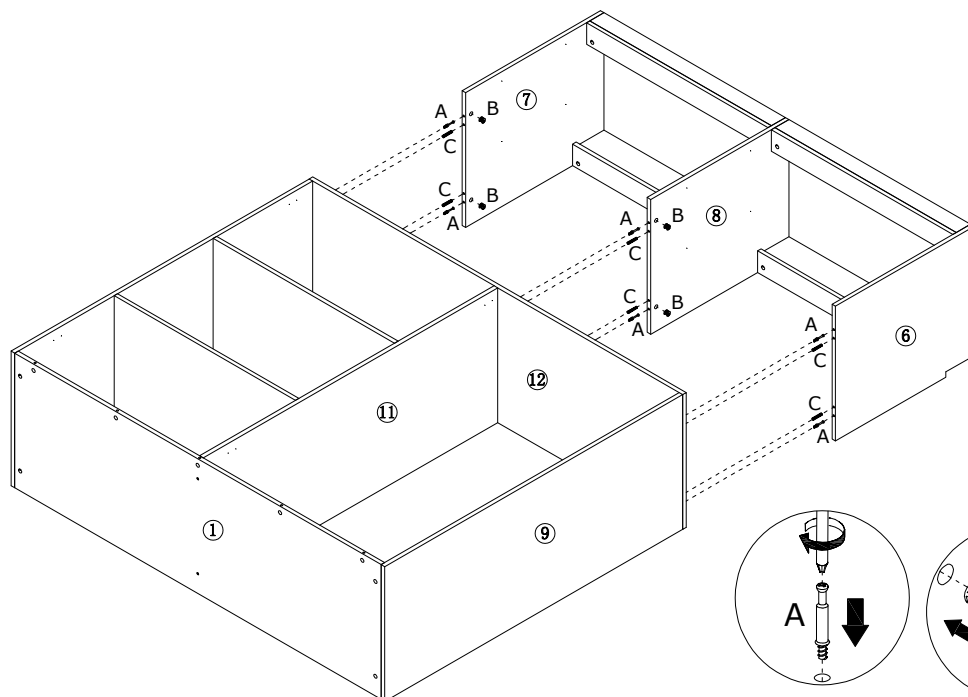

Insert quickfit screw(A) into part 12.  
Connect 2 components with wooden pin(C), turn cam locks(B) clockwise to tighten as shown.

# 14


A x 5  Ø6 x 34mm	B x 5  Ø15 x 12mm
---	--

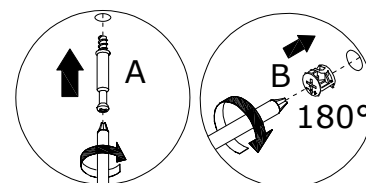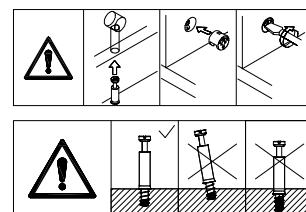 
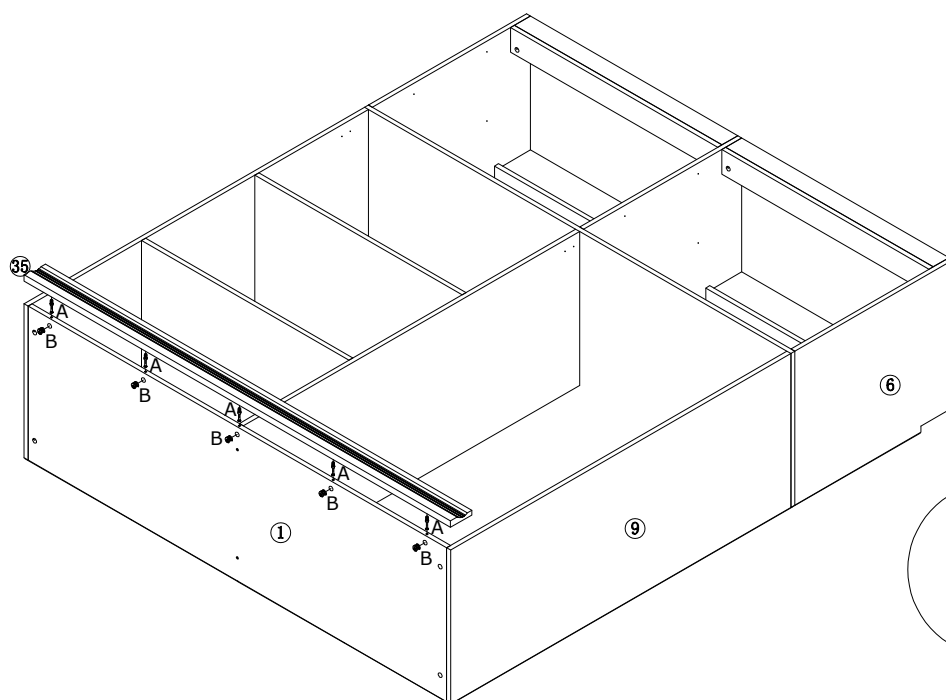 
 


Insert quickfit screw(A) into part 35.  
Attach part 35 to part 1 with wooden pin(C), turn cam locks(B) clockwise to tighten as shown.



# 15

 
 
 
F x 38  Ø3 x 12mm	G x 15  15.5 x 10 x 1.2mm	H x 15  Ø3 x 16mm	
--	--	--	---

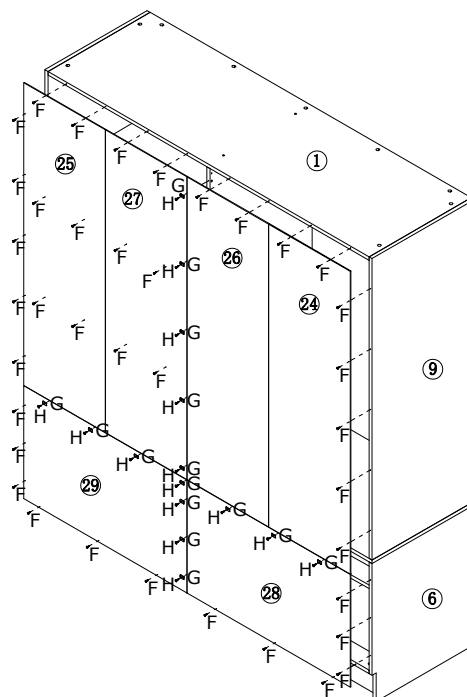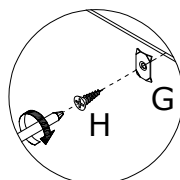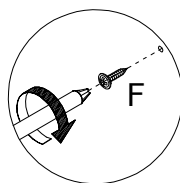

Cover part 24, 25, 26, 27, 28 and 29 to the unit with screw (F).  
And use part (G) and (H) to reinforce each panel.



# 16

 
 
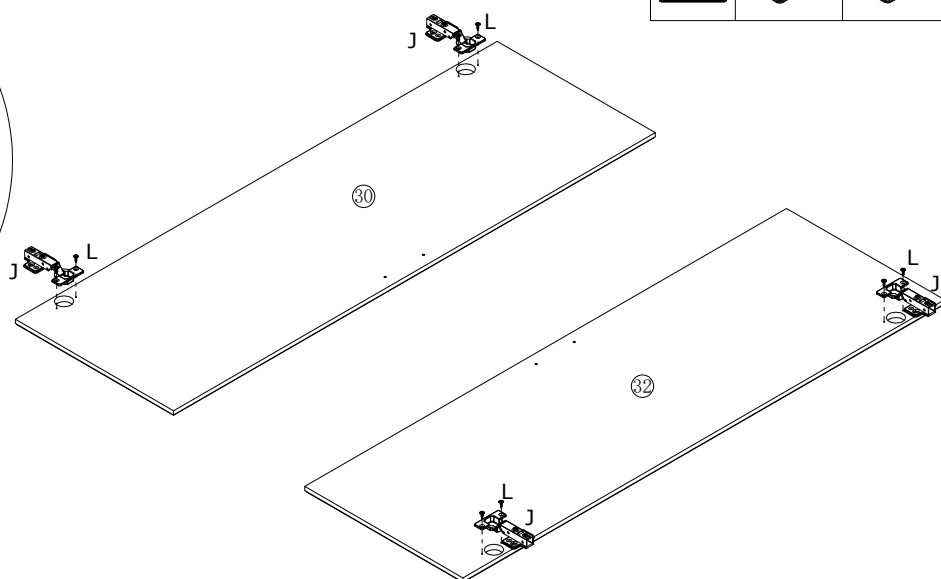 
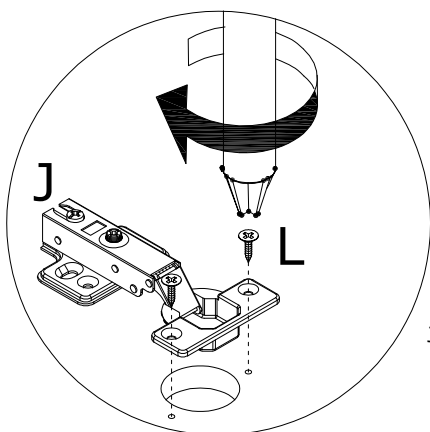 
J x 4  Ø35mm	L x 8  Ø4 x 16mm	
---	---	---



Fix hinge(J) to part 30 and 32 with screw(L) as shown.


 


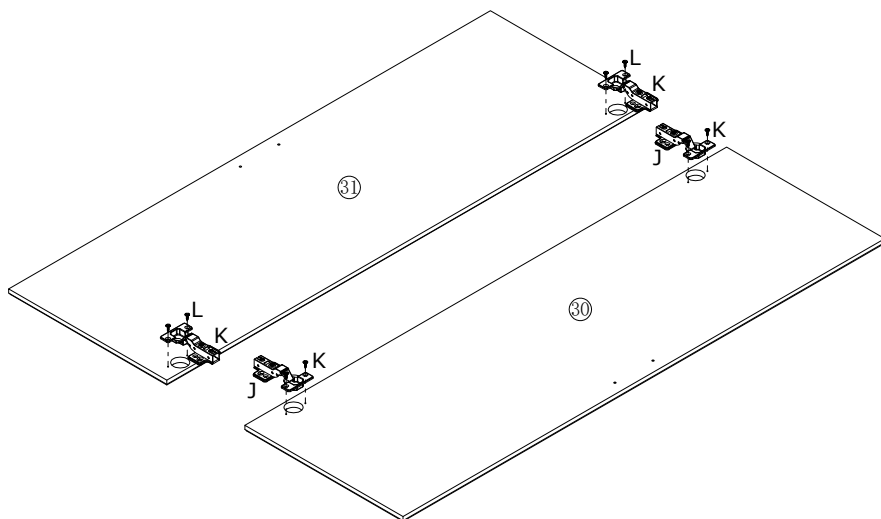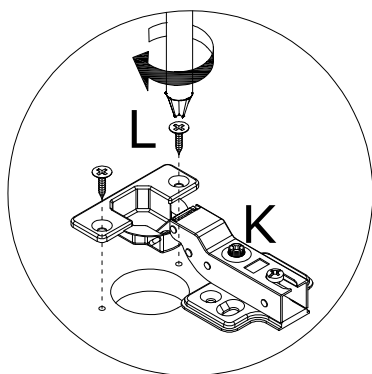

# 17

 
 
 
 
 
 
K x 4 	L x 8 
Ø35mm	Ø4 x 16mm



Fix hinge(K) to part 31 another part 30 with screw(L) as shown.


 

# 18

 
 
 
 
L x 16 	M x 2 	N x 4 	R x 2 	S x 1 	T x 4 
Ø4 x 16mm	150 x 34mm	Ø4 x 18mm	53 x 24 x 12mm	770mm	Ø4 x 14mm

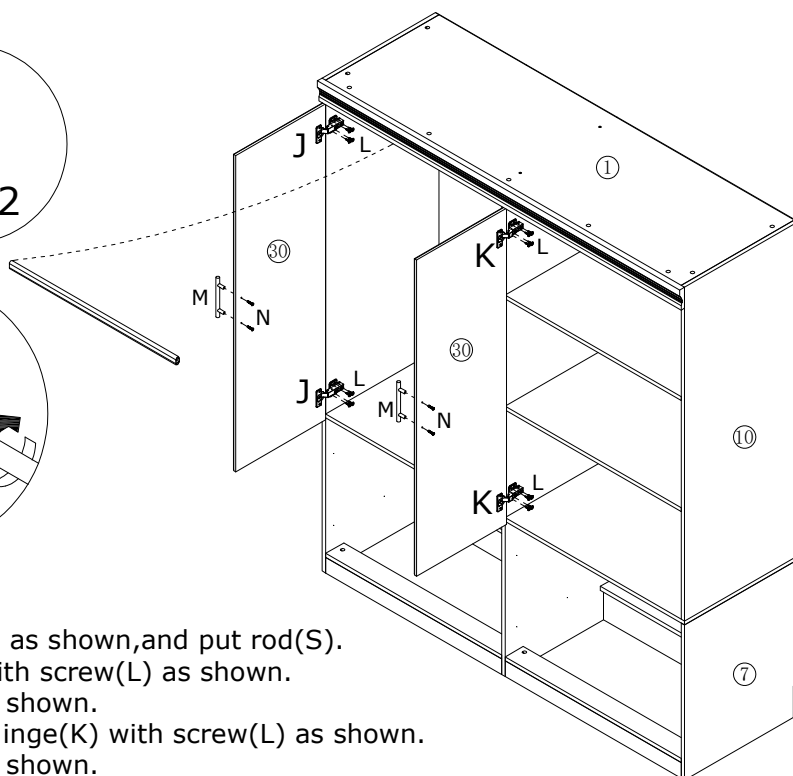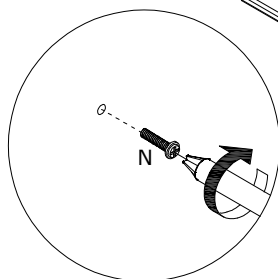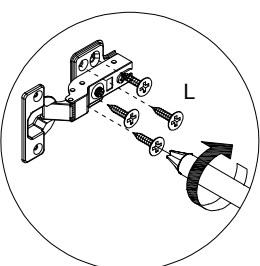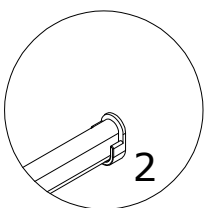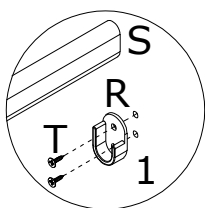

Fix part(R) to part 9 and 11 with screw(T) as shown, and put rod(S).  
 Attach part 30 to part 9, fixing hinge(J) with screw(L) as shown.  
 Fix handle(M) to part 30 with screw(N) as shown.  
 Attach another part 30 to part 11, fixing hinge(K) with screw(L) as shown.  
 Fix handle(M) to part 30 with screw(N) as shown.



# 19

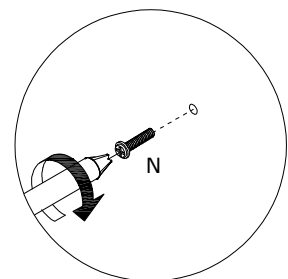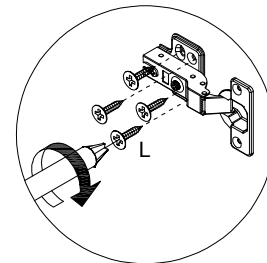 
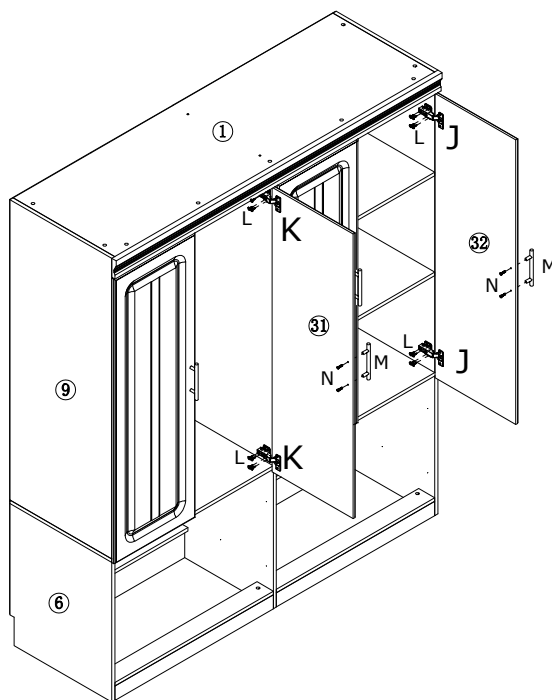 
 
L x 16 	M x 2 	N x 4 
Ø4 x 16mm	150 x 34mm	Ø4 x 18mm



Attach part 32 to part 10, fixing hinge(J) with screw(L) as shown.  
 Fix handle(M) to part 32 with screw(N) as shown.  
 Attach part 31 to part 11, fixing hinge(K) with screw(L) as shown.  
 Fix handle(M) to part 31 with screw(N) as shown.

# 20



P x 4 	Q x 16 
35 x 400mm	Ø3.5 x 14mm

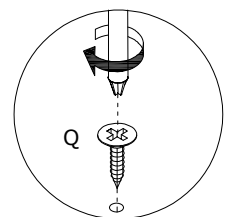 
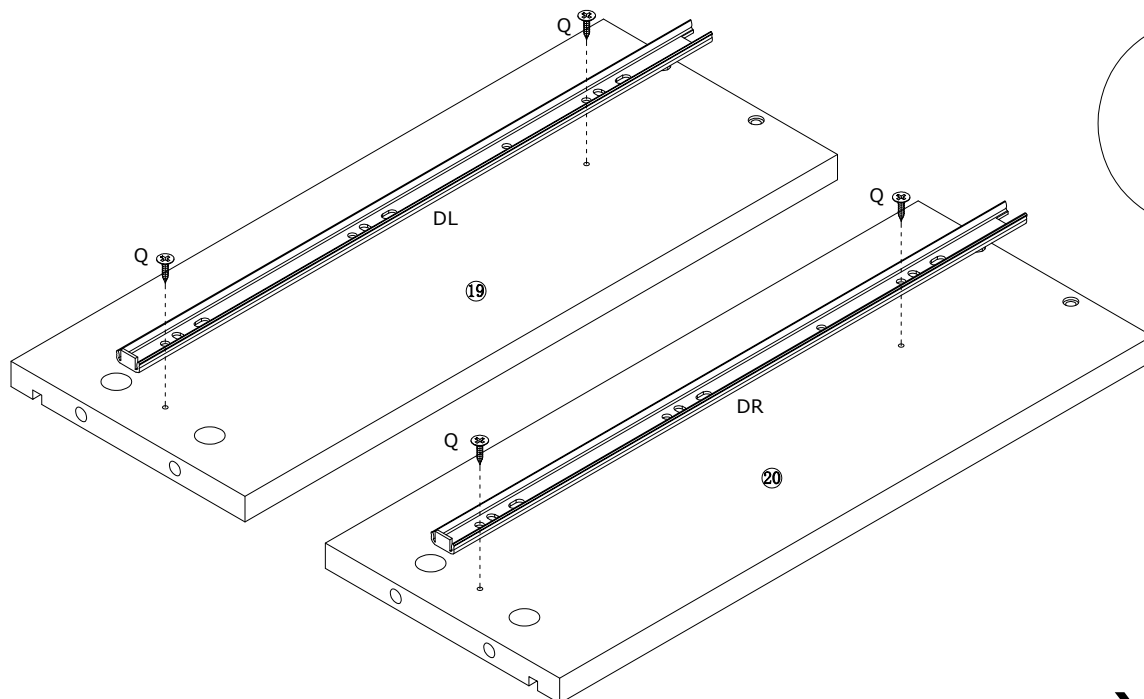 
 


Fix runner(DL) and (DR) to part 19 and 20 with screw(Q) as shown.

# x 4

# 21
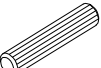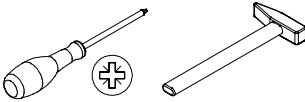
<p>A x 4</p>  <p>Ø6 x 34mm</p>	<p>B x 4</p>  <p>Ø15 x 12mm</p>	<p>C x 4</p>  <p>Ø8 x 30mm</p>	
---	--	---	---

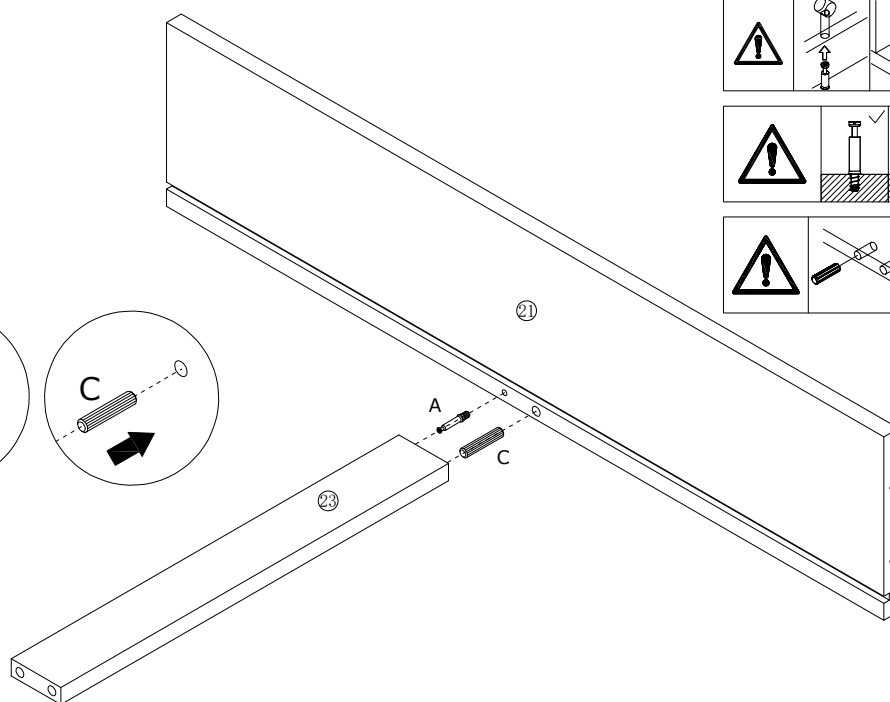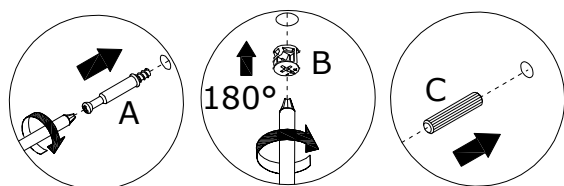 
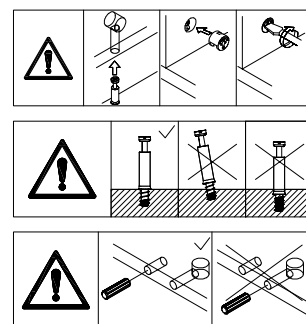 


Insert quickfit screw(A) into part 21.  
Attach part 23 to part 21, turn cam locks(B) clockwise to tighten as shown.

x 4

# 22

 
<p>E x 16</p>  <p>Ø4 x 30mm</p>	
--	---

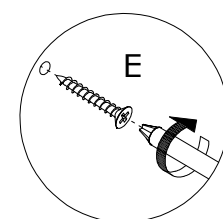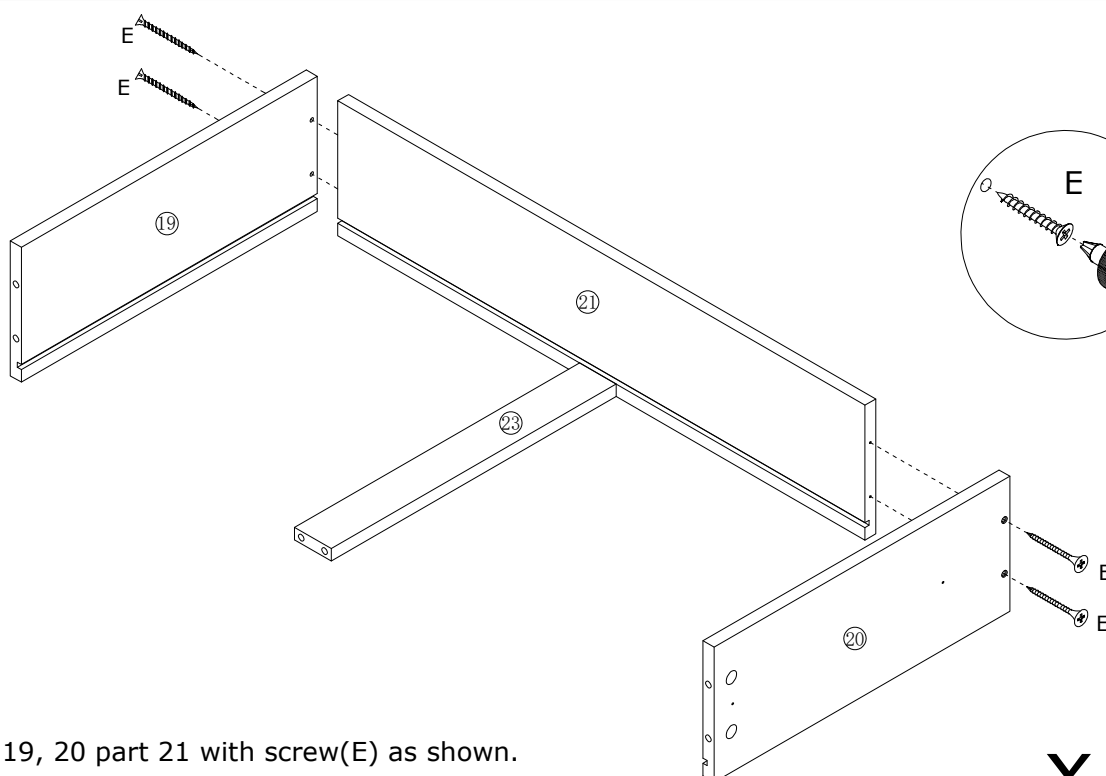

Attach part 19, 20 part 21 with screw(E) as shown.

x 4

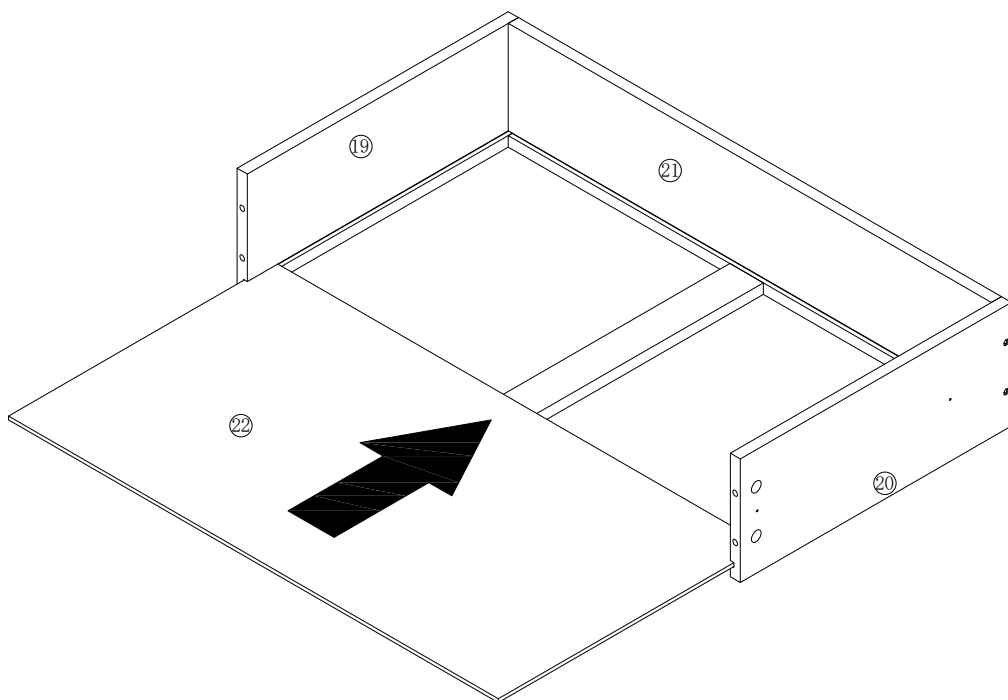 


# 23

 
 
 
 
 
 
 
 


x 4

Insert part 22 into available slots of part 19, 20 and 21.

# 24

A x 10	B x 10	C x 2
		
Ø6 x 34mm	Ø15 x 12mm	Ø8 x 30mm

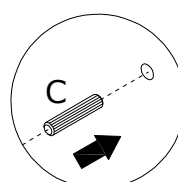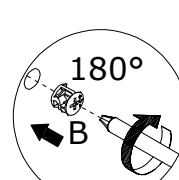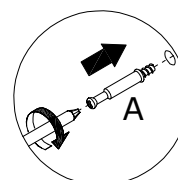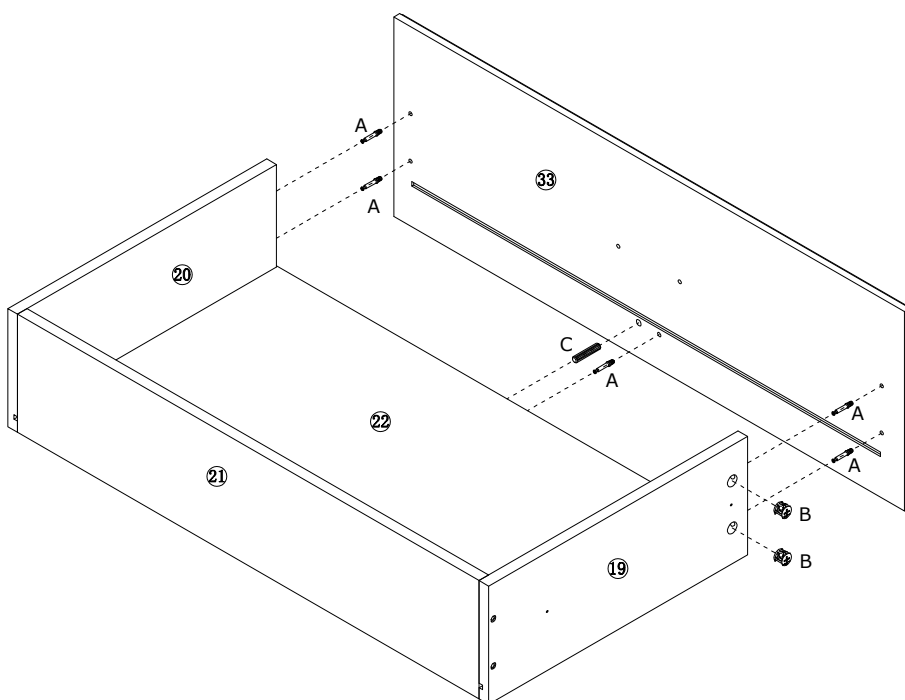 



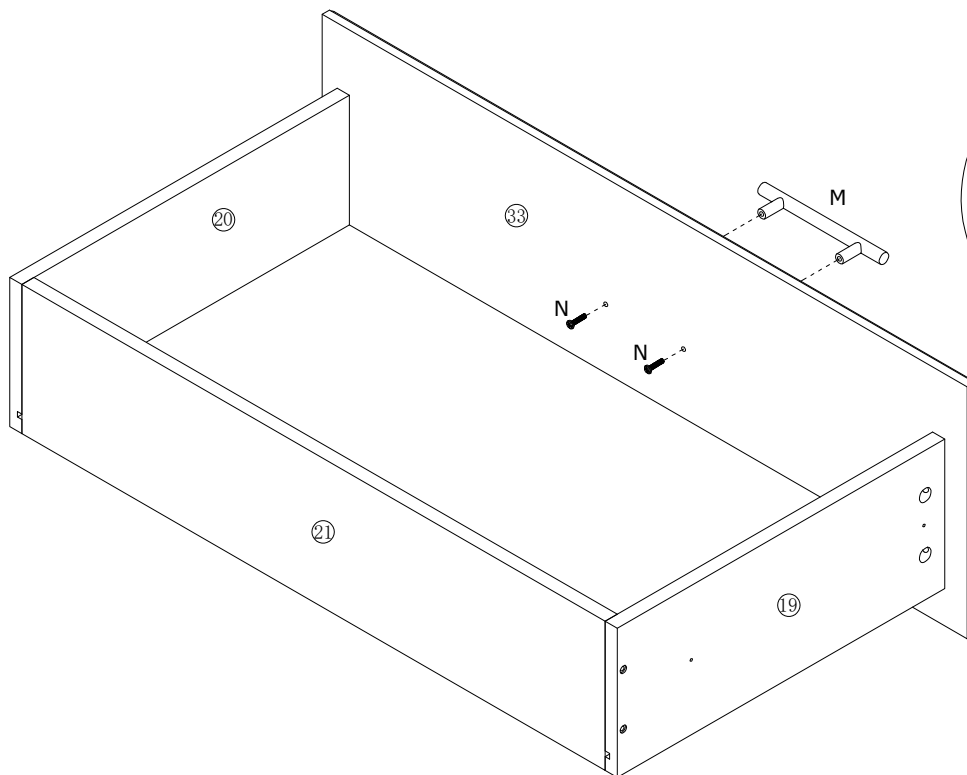 
 
x 2

Insert quickfit screw(A) into part 33.

Attach part 33 to assembled unit with wooden pin(C), turn cam locks(B) clockwise to tighten as shown.

# 25




M x 2 	N x 4 
150 x 34mm	Ø4 x 18mm

 
 
 
 
 
 
 


## x 2

Fix handle(M) to part 33 with screw(N) as shown.

# 26

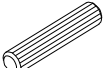A x 10 	B x 10 	C x 2 
Ø6 x 34mm	Ø15 x 12mm	Ø8 x 30mm

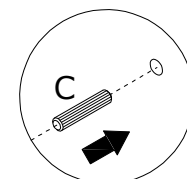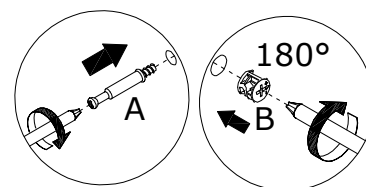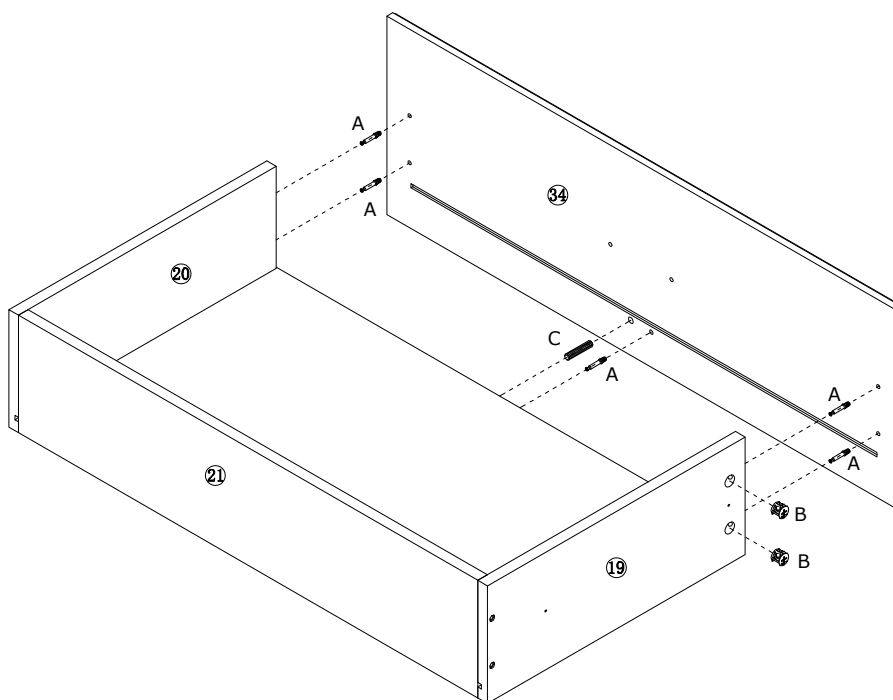 


## x 2

Insert quickfit screw(A) into part 34.

Attach part 34 to assembled unit with wooden pin(C), turn cam locks(B) clockwise to tighten as shown.

 
# 27

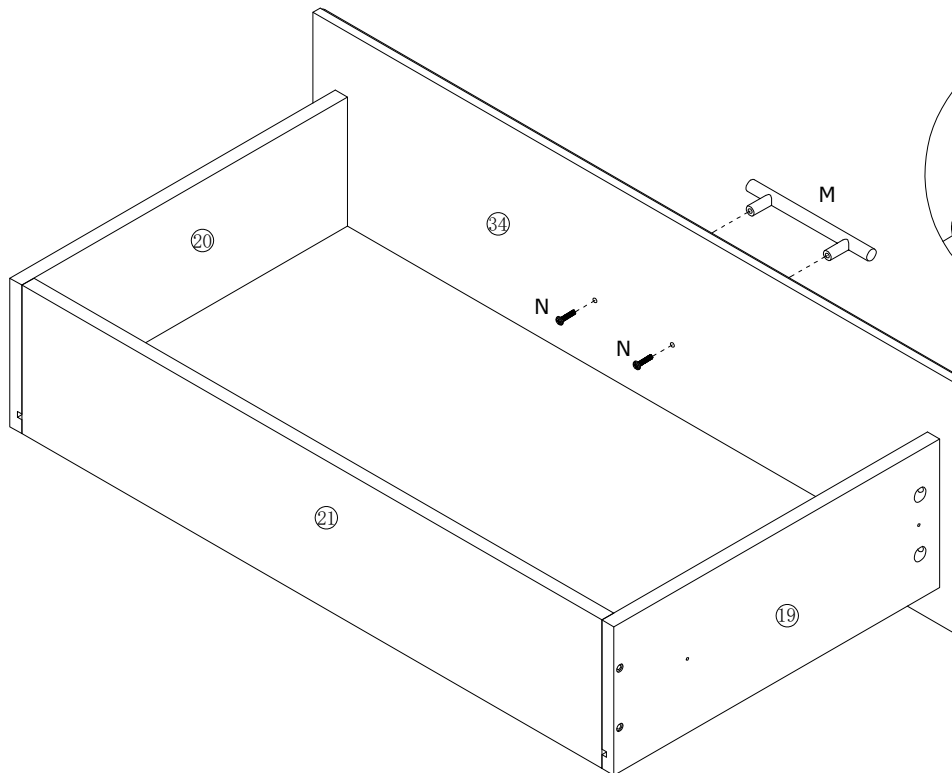

 
x 2

Fix handle(M) to part 34 with screw(N) as shown.

# 28

 
 
 
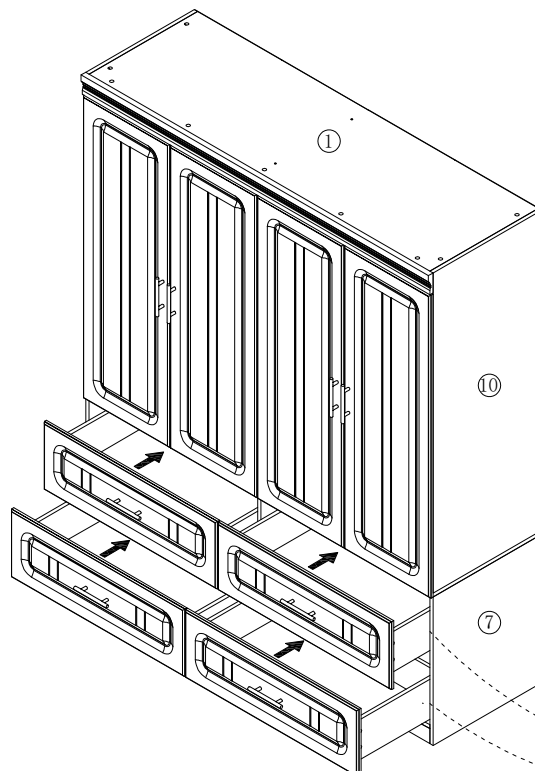 


Align the rails, put all drawers.

 
 
 
 
 
 
 
 
 
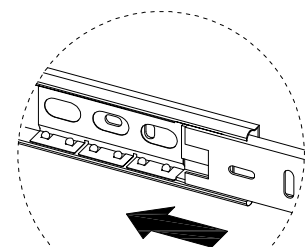 


29

U x 1

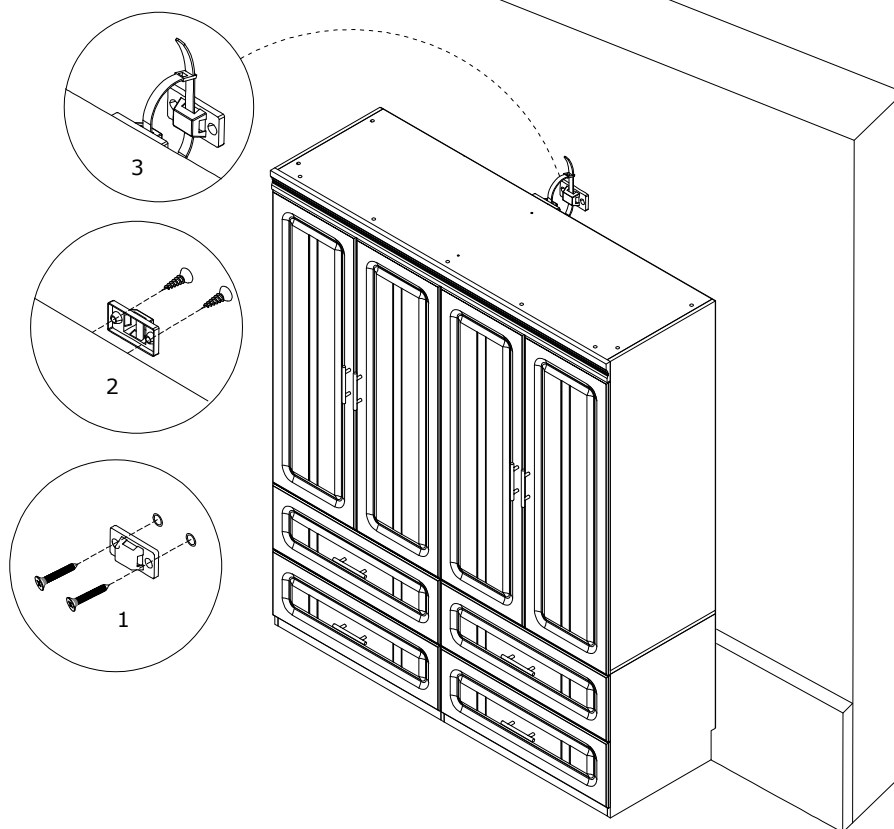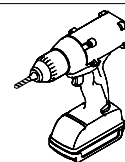

30

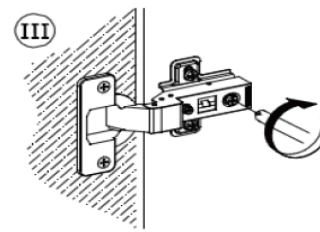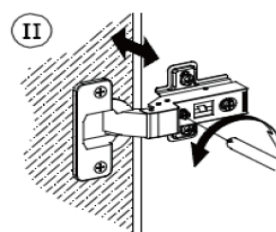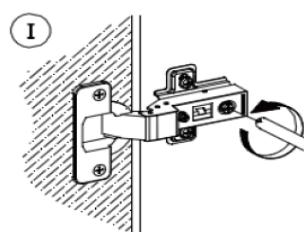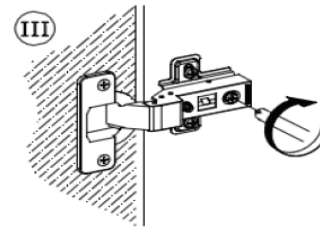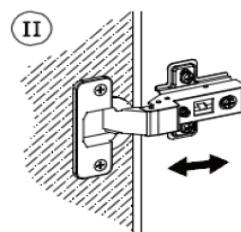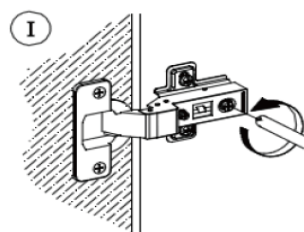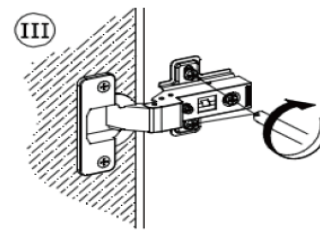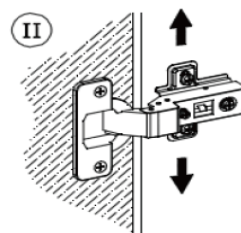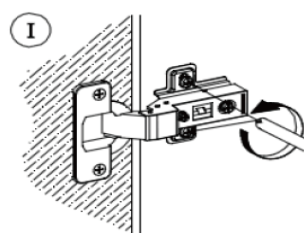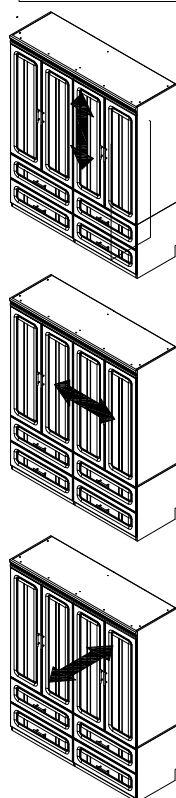



# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## **CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?**

### **PLEASE FOLLOW THE BELOW INSTRUCTIONS:**

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### **DEFECTIVE ITEMS**

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at [feedbackstation@163.com](mailto:feedbackstation@163.com) as there may be a simple solution to the issue.

### **DAMAGED ITEMS**

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.