


Thank you for your purchase of our LuxenHome product. This product is manufactured with the highest standards of safety and quality.

Product Name:	Metal Rectangular Raised Garden Planter with Casters
SKU #:	WHPL1605

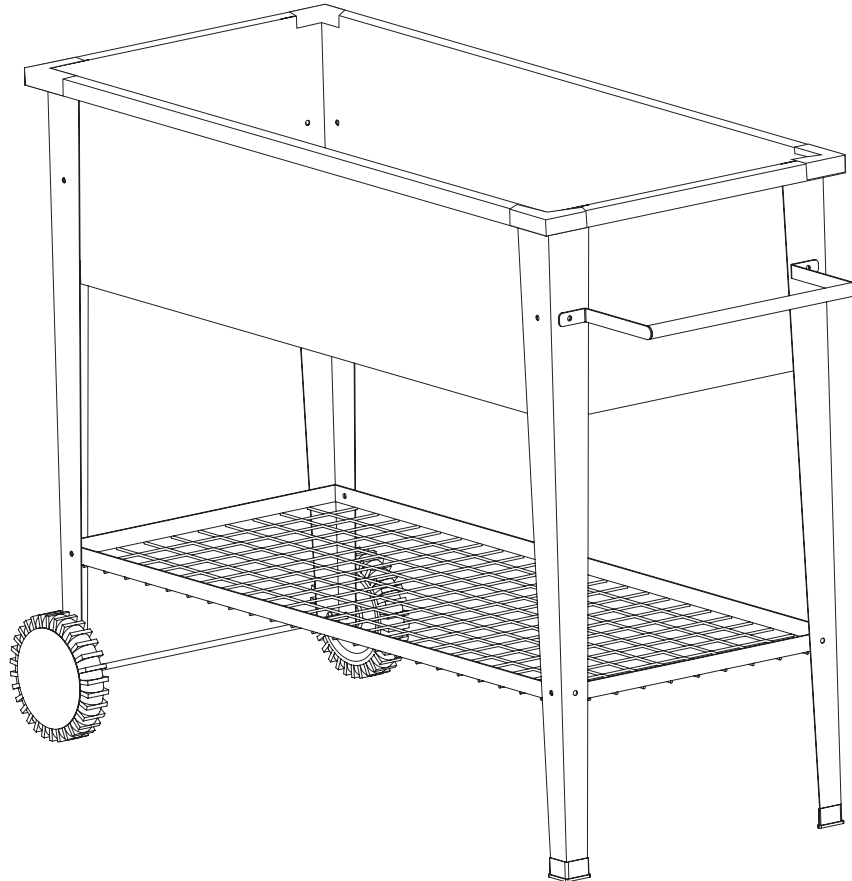

PREPARATION


Before assembling product, make sure all parts are present. Compare parts with package contents list and hardware contents below. If any part is missing or damaged, do not attempt to assemble the product.

Tools required for assembly (included): Allen key , Spanner

SAFETY INFORMATION





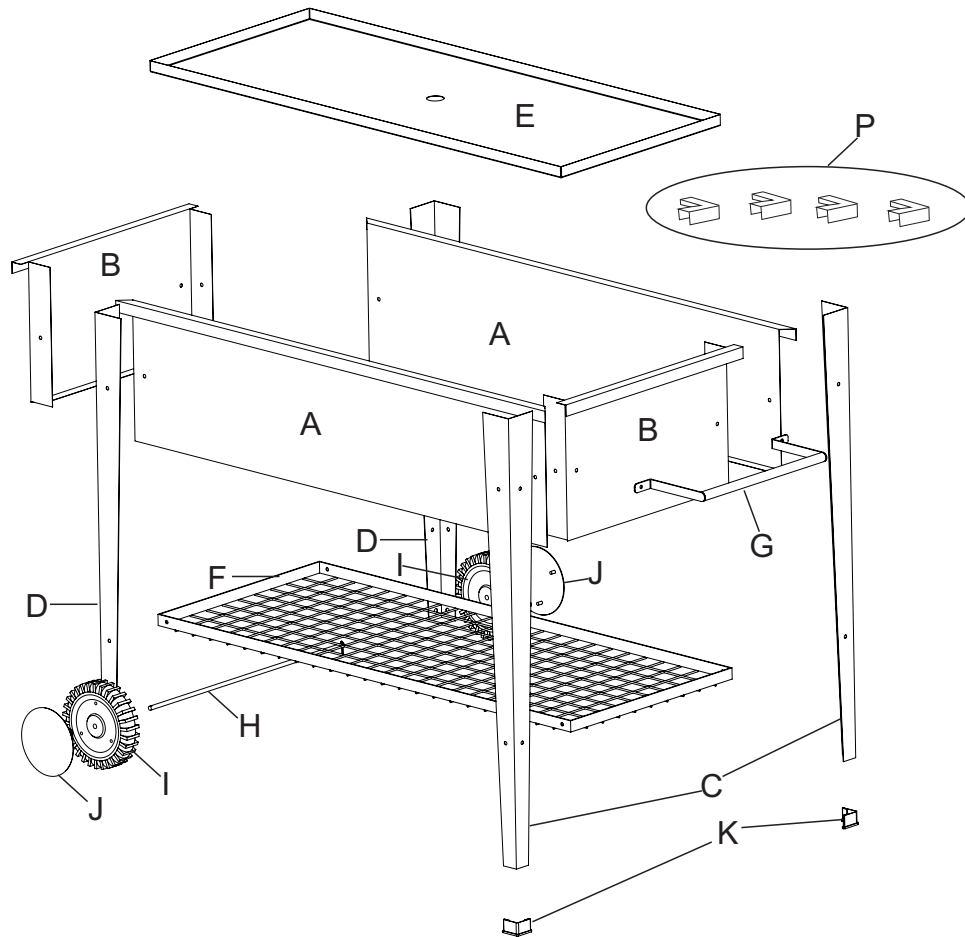

- Tighten all the screws before using.
- This planter is intended for outdoor use only. The floor may be wet when watering the plant.
- Not for use by children. Keep children and pets away from the planter.
- It's suggested to wear gloves when assembling product.

Product Name:	Metal Rectangular Raised Garden Planter with Casters
SKU #:	WHPL1605

  


Part	Description	Quantity
A	Long panel	2
B	Short panel	2
C	Long stand leg	2
D	Short stand leg	2
E	Bottom panel	1
F	Iron frame	1
G	Handle	1
H	Caster connector	1
I	Caster	2
J	Caster cap	2
K	Plastic leg cover	2
P	Plastic corner cover	4

HARDWARE CONTENTS


L	M	N	O	Q	R
					
M6x12MM Screw 8PCS	M6x15MM Screw 4PCS	Nut 12PCS	Pin 2PCS	Spanner 1PC	Allen key 1PC

Product Name:	Metal Rectangular Raised Garden Planter with Casters
SKU #:	WHPL1605

 
- 1 Make sure the plastic leg cover (K) are well attached to all long stand legs (C).



- 2 Upside down the panels when assembling. Place long panel (A). and short panel (B) as picture (1) shown. Make sure (B) is on top of (A) as picture (2) shown.

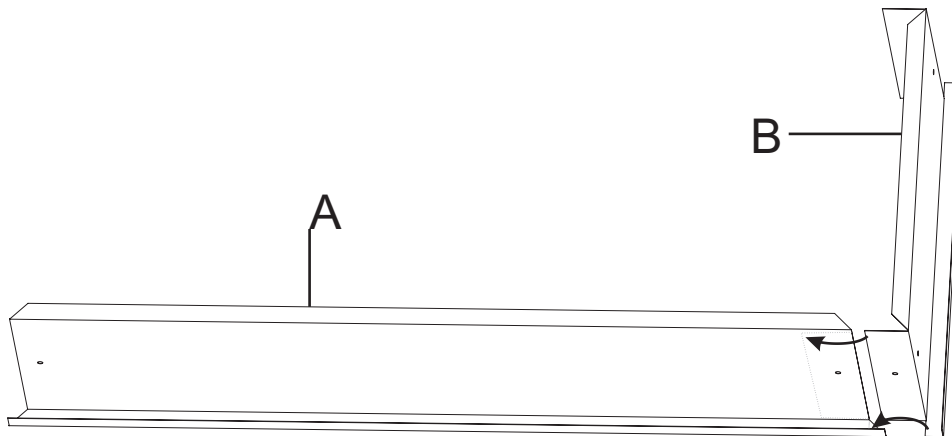

(1)

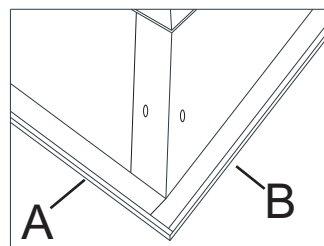

(2)


Product Name:	Metal Rectangular Raised Garden Planter with Casters
SKU #:	WHPL1605

3 Attach short stand legs (D) to (B) and (A) with screws (L) and nuts (N).


Hardware used:


L  x4
Screw

N  x4
Nut

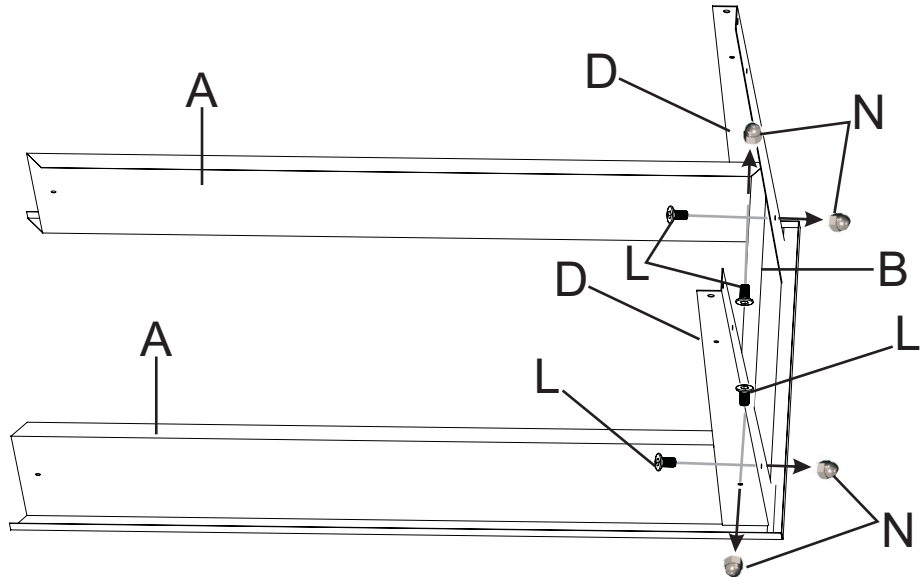

4 Attach long stand legs (C) and handle (G) to (B) and (A) with screws (L) and nuts (N).

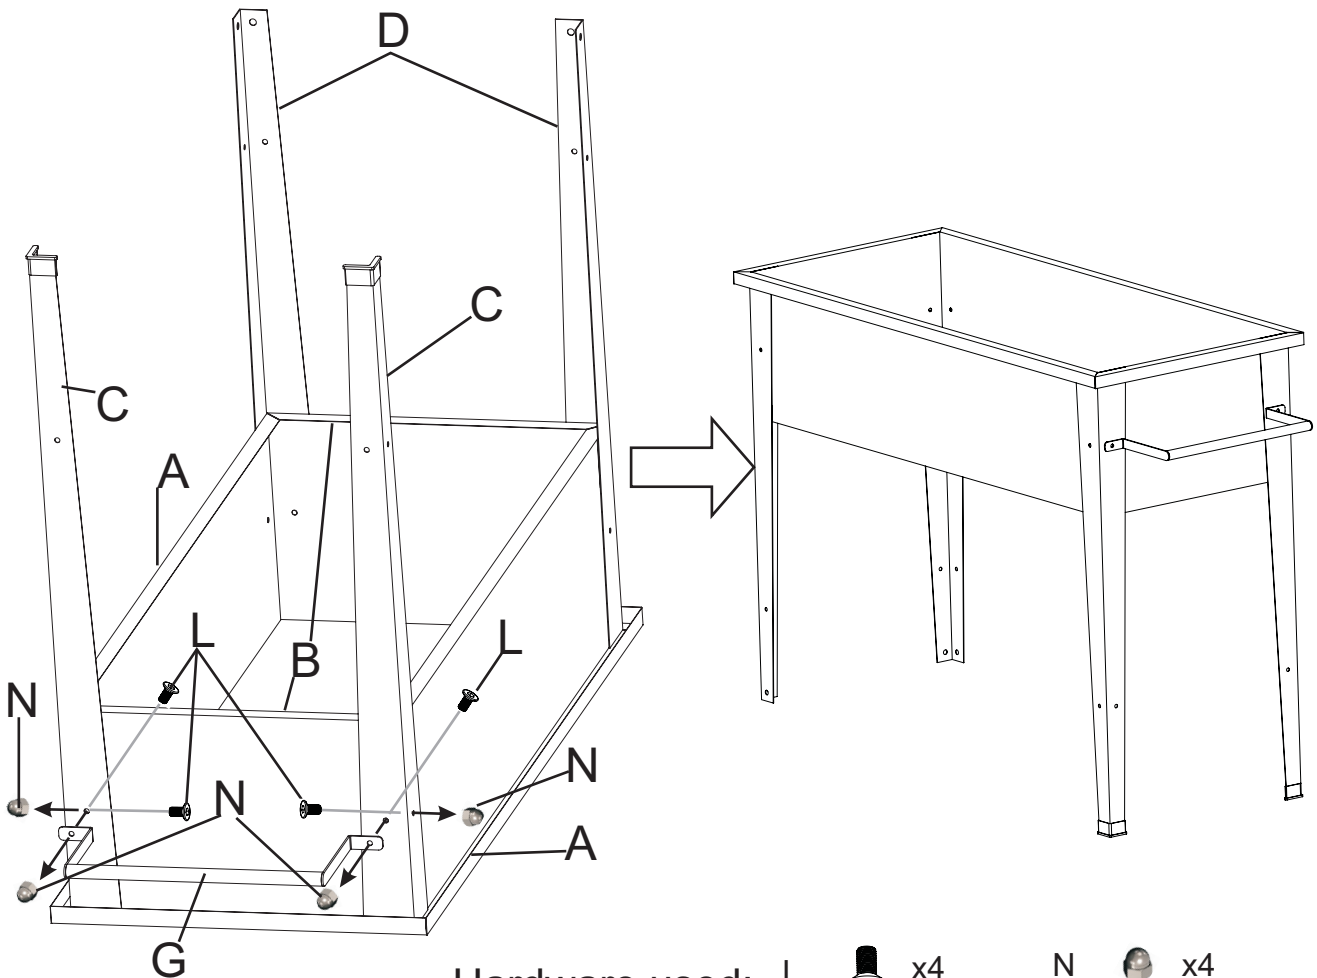

Hardware used: L  x4
Screw

N  x4
Nut


Product Name:	Metal Rectangular Raised Garden Planter with Casters
SKU #:	WHPL1605

5 Attach the iron fame (F) with screws (M) and nuts (N).


Hardware used:

M  x4
Screw

N  x4
Nut

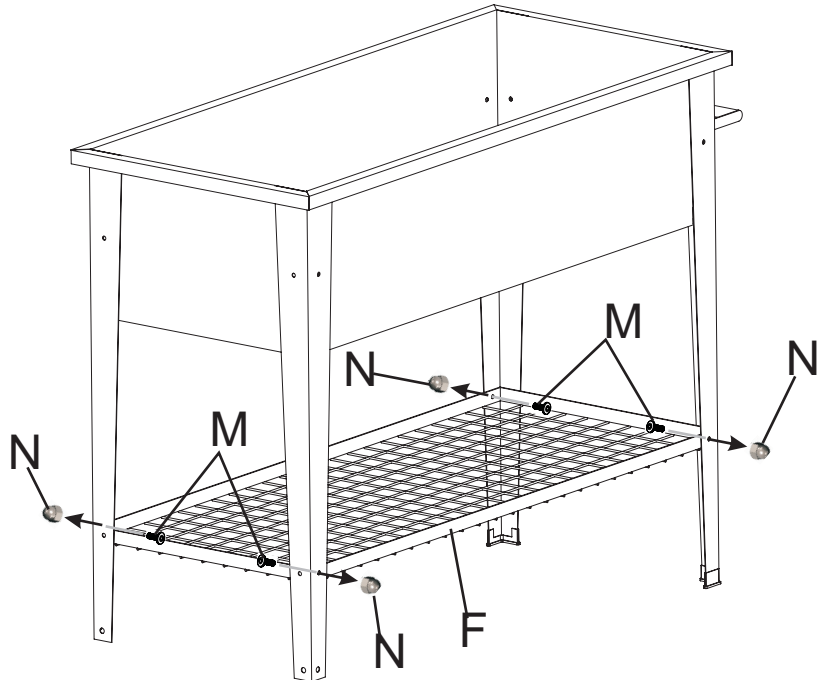




6 Insert the caster connector (H) through the holes of short stand legs (D). Put the casters (I) to both ends.

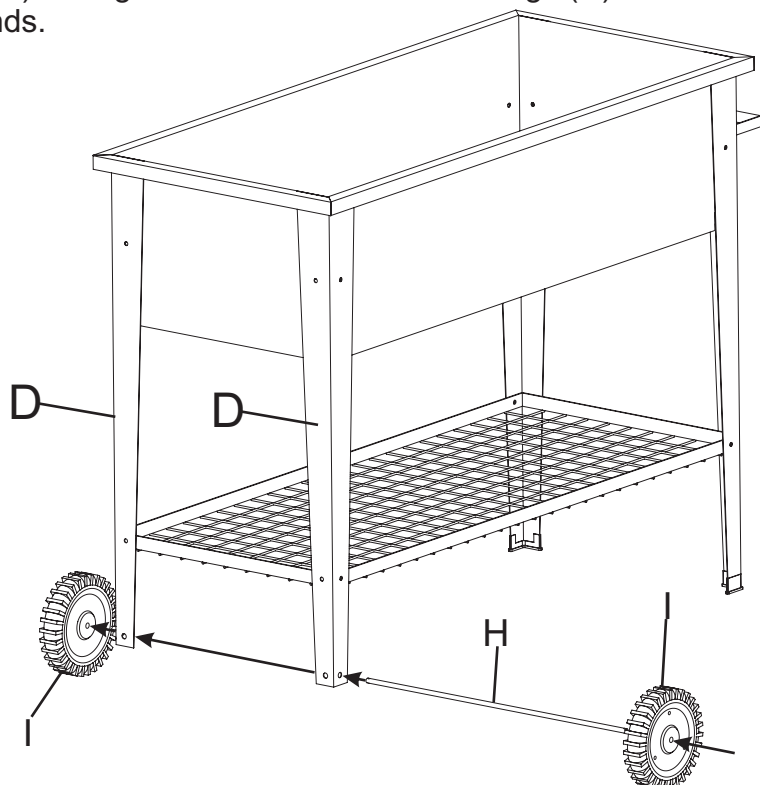

Product Name:	Metal Rectangular Raised Garden Planter with Casters
SKU #:	WHPL1605

- 7** Insert the pins into the holes of the caster connector, and bend one of the legs of the pin. Cover the caster (I) with caster cap (J).

Hardware used:

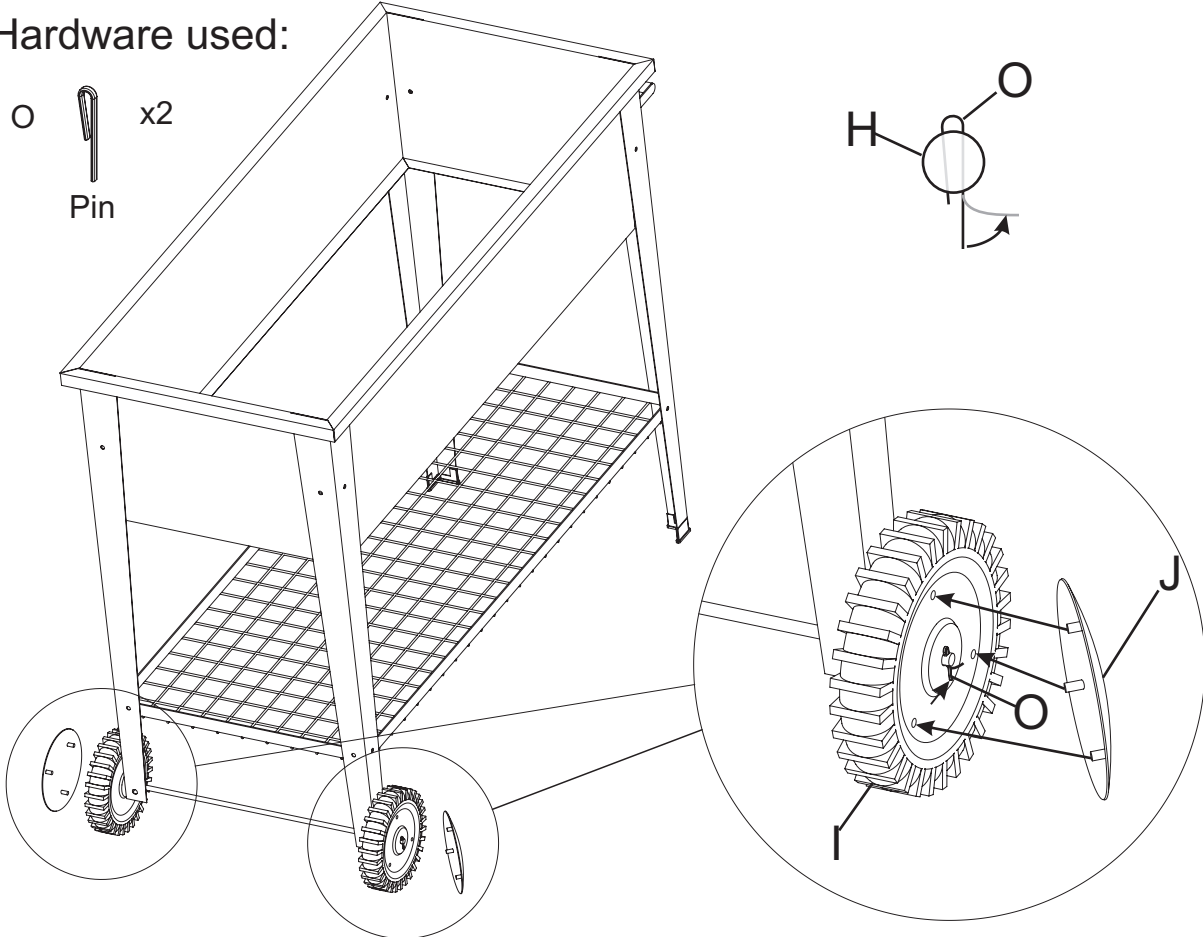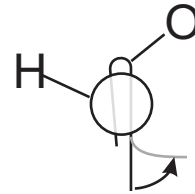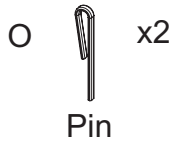

- 8** Turn upright the planter, place bottom panel (E) into the planter. Attach plastic corner covers (P) to 4 planter corners.

