


3-LIGHT FLUSHMOUNT CEILING FIXTURE

MODEL #LWS1011A1

Français p. 9

Español p. 17

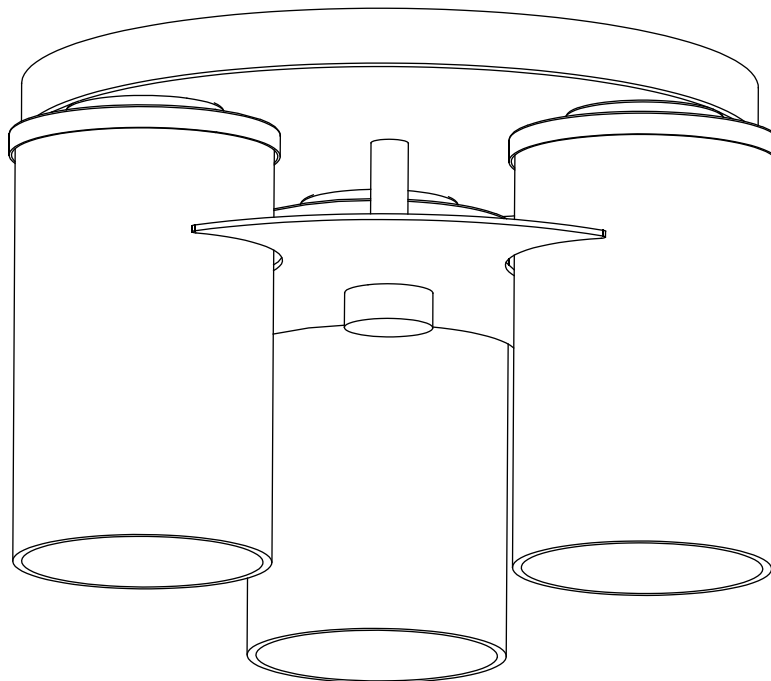


ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-877-888-8225, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PACKAGE CONTENTS

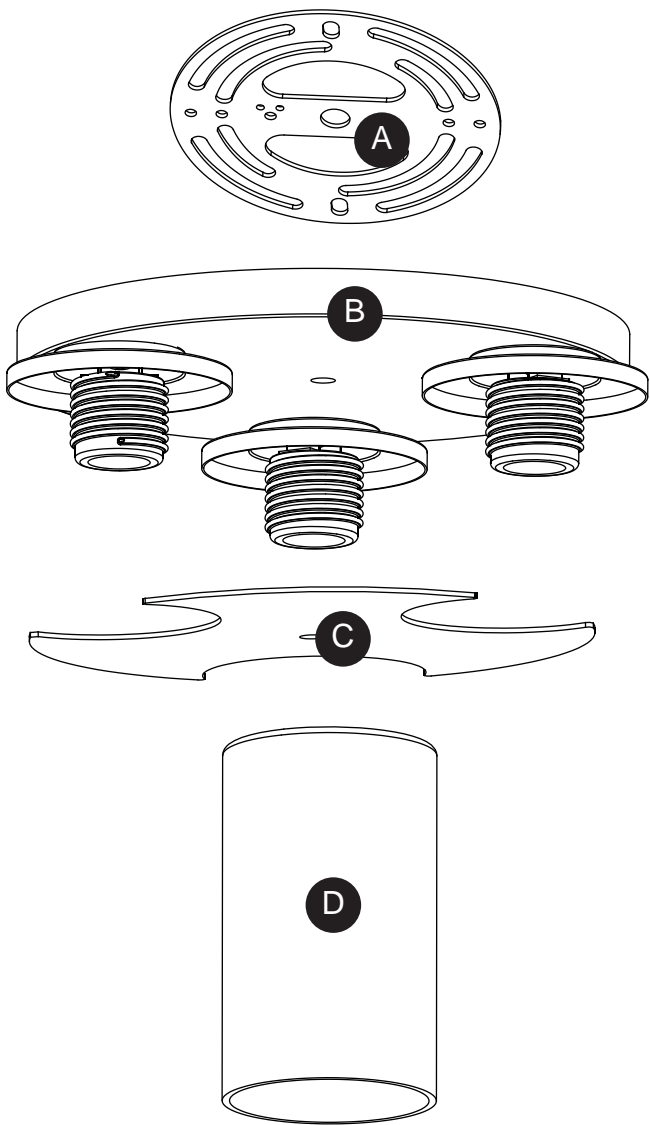

PART	DESCRIPTION	QUANTITY
A	Crossbar	1
B	Socket Assembly	1
C	Decorative Pan	1
D	Shade	3

HARDWARE CONTENTS (shown actual size)

AA



Green Ground
Screw

[preassembled
to Crossbar (A)]

Qty. 1


BB



Wire
Connector

Qty. 3

 CC



Outlet
Box
Screw

Qty. 2

DD



Lock
Washer

Qty. 1


EE



Hex Nut

Qty. 1

FF

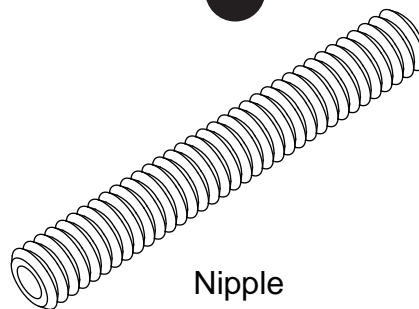

Nipple

Qty. 1

GG

Stem

Qty. 1

HH

Finial

Qty. 1

II





Socket
Collar

Qty. 3

JJ

Socket
Collar
Tool
(not shown to size)

Qty. 1

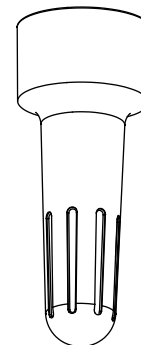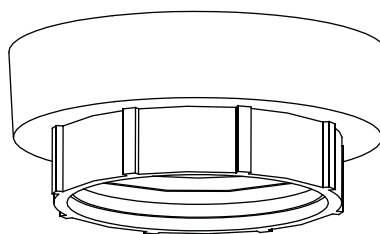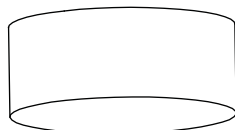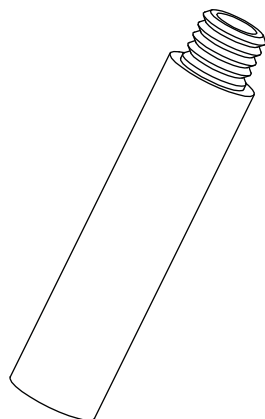

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- RISK OF ELECTRIC SHOCK - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.
- RISK OF FIRE - Use bulbs specified by the markings and/or labels on the fixture.

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.
- Turn off electricity to fixture before replacing the bulb(s).

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 30 - 45 minutes

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Wire cutters, Electrical tape, Safety goggles and Ladder.


Helpful Tools (not included): Wire strippers

ASSEMBLY INSTRUCTIONS

1. Secure the crossbar (A) to the outlet box (not included) with outlet box screws (CC). Tighten until snug.

Hardware Used

CC Outlet Box Screw  x 2

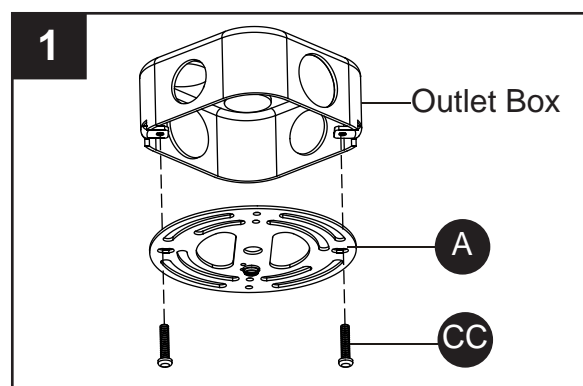


2. Thread the hex nut (EE) onto top end of the nipple (FF). Place the lock washer (DD) over the top end of the nipple (FF) and then thread the nipple (FF) into the center lock hole of the crossbar (A). Using pliers (not included), thread the hex nut (EE) against the crossbar (A) and hand tighten until snug.

Hardware Used

DD Lock Washer  x 1


EE Hex Nut  x 1

FF Nipple  x 1


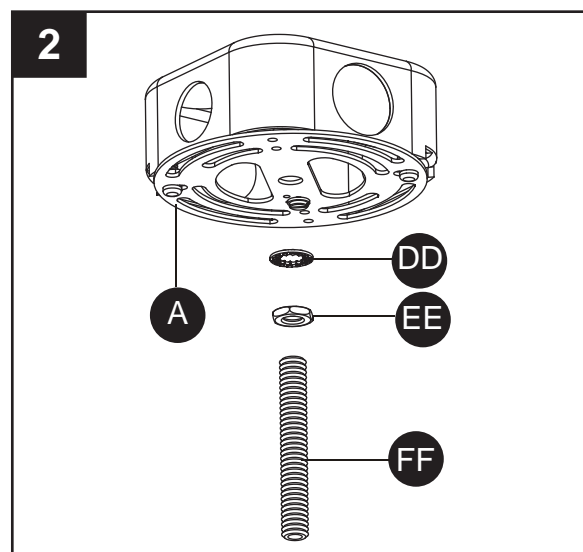


ASSEMBLY INSTRUCTIONS

- 3 . Attach ground fixture wire to either the green ground screw (AA) on crossbar (A) or to the ground wire in the outlet box (usually GREEN or BARE). If attaching fixture ground wire to the crossbar (A), it is imperative the outlet box in your home be properly grounded. Connect the neutral WHITE or RIBBED side fixture wire to the neutral usually WHITE wire from the outlet box. Connect the hot BLACK or SMOOTH side fixture wire to the hot usually BLACK wire from the outlet box. Fasten wires together with a wire connector (BB) and tightly wrap wire connector (BB) with electrical tape (not included).

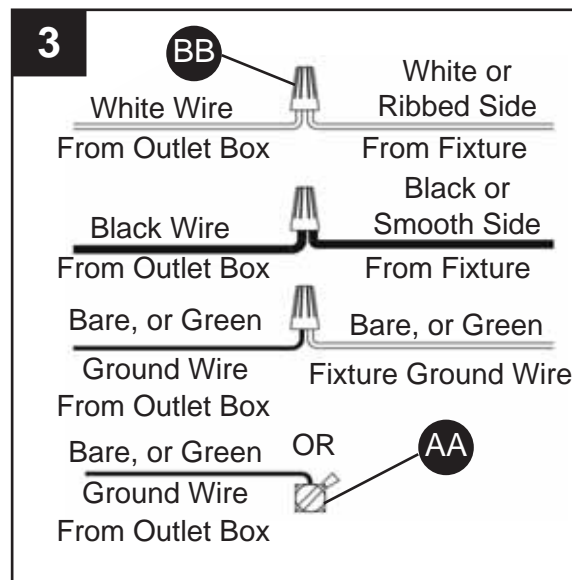


Hardware Used

  AA	Green Ground Screw		x 1
BB	Wire Connector		x 3

4. Pass center hole of ceiling canopy on the socket assembly (B) over the nipple (FF). Secure by threading the stem (GG) onto the nipple (FF). Tighten until the ceiling canopy is flush against the ceiling.

Hardware Used



GG	Stem		x 1
-----------	------	---	-----

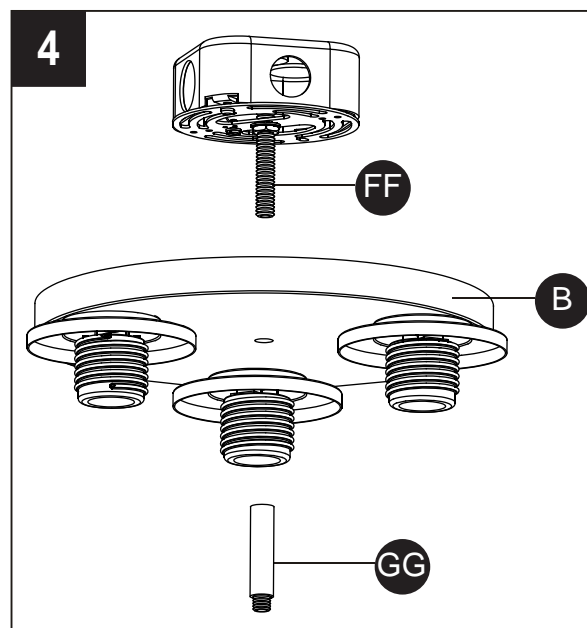


ASSEMBLY INSTRUCTIONS

5. Place the shade (D) over the socket as shown. Using the socket collar tool (JJ), thread the socket collar (II) onto the socket to secure the shade (D). Hand tighten until snug.

  Hardware Used


II	Socket Collar		x 3
JJ	Socket Collar Tool		x 1

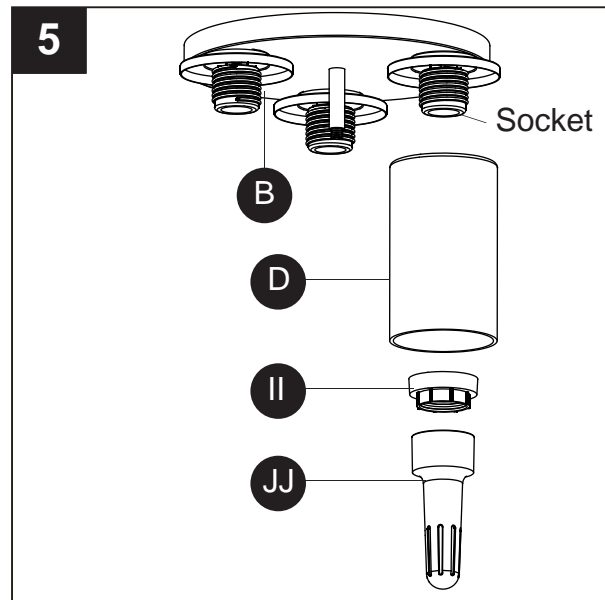


6. Place the decorative pan (C) over the end of the stem (GG) with the plating side visible. Secure by threading the finial (HH) onto the stem (GG). Hand tighten until snug.

Hardware Used

HH	Finial		x 1
----	--------	---	-----

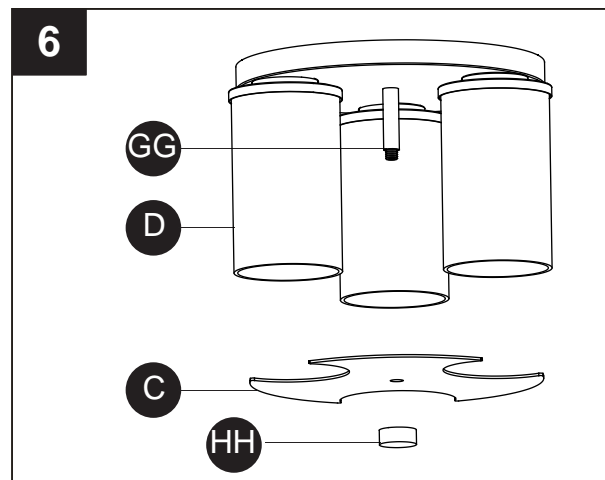

7. Install bulbs (not included). Use three 100-watt max. standard-base bulbs only.

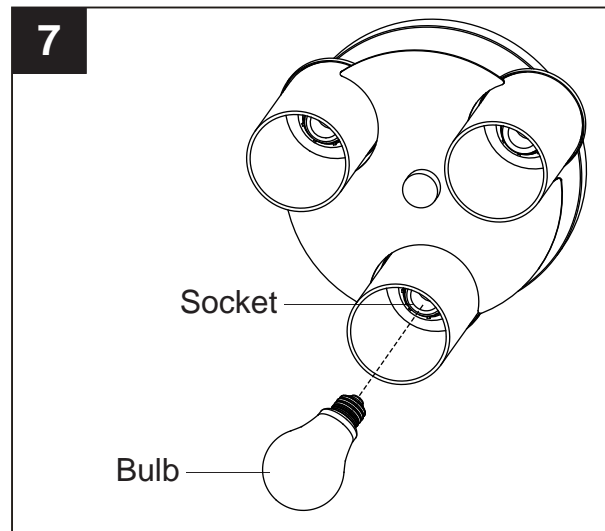

CARE AND MAINTENANCE

- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulbs will not light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace the switch.
Fuse blows or the circuit breaker trips when light is turned on.	1. Crossed wires or power wire is grounding out.	1. Check wire connection.

WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights. You may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-877-888-8225, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	NUMBER
A	Crossbar	9568KIT
AA	Green Ground Screw	
BB	Wire Connector	
CC	Outlet Box Screw	
DD	Lock Washer	
EE	Hex Nut	
FF	Nipple	G3331SH
D	Shade	

