

MAINTENANCE

HLB-4000EC & HLB-4000ER

■ CLEANING THE WATER STRAINER


1. CLOSE THE WATER SUPPLY BY TURNING THE SHUT OFF VALVE CLOCKWISE AND DRAIN THE TOILET WATER TANK COMPLETELY.

2. DETACH THE BIDET SEAT HOSE FROM THE INLET ADAPTER.

IN CASE OF UNCOMMON TOILET BOWL, THE HOSE MAY NOT BE DETACHED EASILY. ON THIS OCCASION, DETACH THE BODY OF A UNIT FROM TOILET BOWL FIRST, AND DETACH THE HOSE FROM THE INLET ADAPTER.

3. BEGIN BY DETACHING THE STRAINER FROM THE INLET ADAPTER, CLEAN AND INSERT IT AGAIN.

(IN CASE THAT IT IS HARD TO DETACH THE STRAINER WITH A HAND, TRY AGAIN WITH A KIND OF NIPPERS)

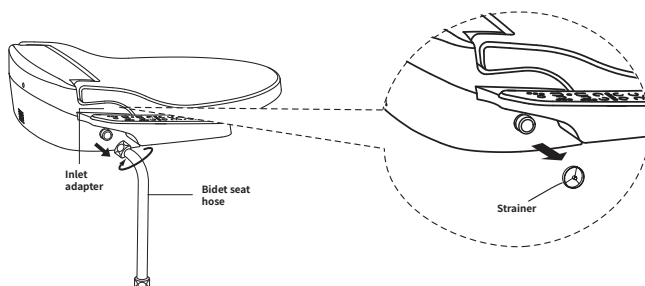

4. AFTER ATTACHING THE HOSE TO THE INLET ADAPTER, TURN THE WATER SUPPLY VALVE TO THE LEFT AND HAVE IT OPENED.

■ CLEANING THE NOZZLE

1. PRESS THE “NOZZLE CLEANING” BUTTON. THE NOZZLE MOVES FOR 2 MINUTES BACK AND FORTH, THE WASH WATER COMES OUT AND THE NOZZLE IS CLEANED.
2. PRESS THE “NOZZLE CLEANING” BUTTON FOR MORE THAN 4 SECONDS. THE NOZZLE COMES OUT AND STOPS FOR 2 MINUTES.
3. CLEAN THE NOZZLE MANUALLY WITH A SOFT BRUSH. PRESS THE “STOP” BUTTON AND THE NOZZLE RETURNS TO ITS STORAGE POSITION, THEN SELF-CLEANING FUNCTION IS OPERATED.

■ EXTERNAL CLEANING

- The external case of the unit is made of the plastic which may be damaged by scrubbers, chemicals, etc. Do not use any chemicals.
- Disconnect the power plug when cleaning. Please be careful not to splash the water to the plug or socket.
- Touching the power socket with wet hands can cause an electric shock.
- Clean the unit with a tightly wrung wet soft cloth. Do not spray water the unit.

