

H429701 RUBY PENDANT

ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOUILD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

INSTALLATION

STEP 1. Feed the cord through the screw collar, canopy, nipple, and mounting plate until you desired hanging height is met. STEP 2. Tie an overhand knot to secure wire in place above the nipple, and trim off excess wire to min 6" beyond the knot. Strip each wire end 5/8" STEP 3. Attach the mounting plate to the outlet box using the mounting screws. STEP 4. Fasten bare ground wire to ground wire from the wall outlet box (usually green or copper color) or connect ground wire to green screw on the mounting plate. STEP 5. Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire nut and tightly wrap the wire nut with electrical tape. STEP 6. Repeat the previous step with the hot (black wires). Make DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

 IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.

- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

sure there are no exposed wires or strands that could cause a dangerous short circuit. FAILURE TO CONNECT THE APPROPRIATE WIRES

CORRECTLY COULD RESULT IN SEROIUS INJURY OR DEATH!

- **STEP 7.** Carefully place wires into Outlet Box.
- **STEP 8.** Place the canopy with the fixture over the outlet box and fasten it by the screw collar.
- **STEP 9.** Lift the glasses and washers to the glass fitter then secure with socket ring.
- **STEP 10.** Install the lamps. The fixture is rated for 60 watt type G25 lamp.

DO NOT EXCEED RECOMMENDED WATTAGE! .

STEP 11. Restore power to the circuit at breaker or fuse box

provided by your local electrical distributor, home center, or hardware store.

CLEANING

Please clean with a soft, dry cloth ONLY! Do not use cleaning products.



H429701 RUBY PENDANT

ASSEMBLY AND MOUNTING DIAGRAM



WIRE NUT/TAPING DIAGRAM

ELECTRICAL TAPE APPROVED FASTNER (WIRE NUT)