
CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

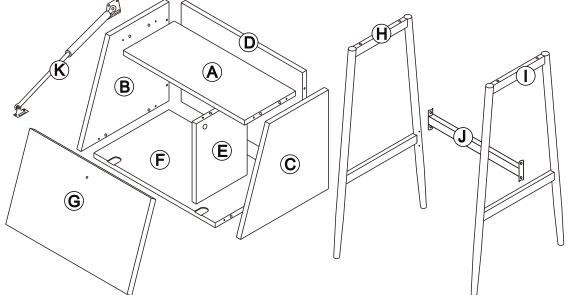


HW1x4	HW2x4	HW3x14	HW4x14	HW5x16	HW6x2	HW7x2	HW8x12
					••••••••••••••••••••••••••••••••••••••		ennum (R)
6x40mm	6x12mm						3.5x12mm
HW9x1	HW10x1	HW11x1	HW12x8	HW13x1	HW14x1	HW15x2	HW16x1
	()		{			0	
			4x16mm	4x40mm			



Model# DSK2203A

Product Dimensions: 22.0"W×15.0"D×44.5"H

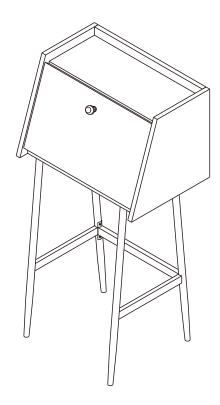

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product. **6**x2 Estimated Assembly Time: 40 minutes. \bigcirc <u>3</u>x2 <u>4</u>x2 E **5**x2 A \bigcirc \bigcirc 5x22 **3**x6 **3** x6 **12**x4 **©** \bigcirc \bigcirc



