

 
ASSEMBLY AND INSTALLATION INSTRUCTIONS

W0122 / W0123

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):



Mounting Strap (A)



Mounting Screw (B)



headless Screw (C)



Lock Nut (D)




Green Grounding Screw (E)



Wire Nut (F)



Ball Nut (G)

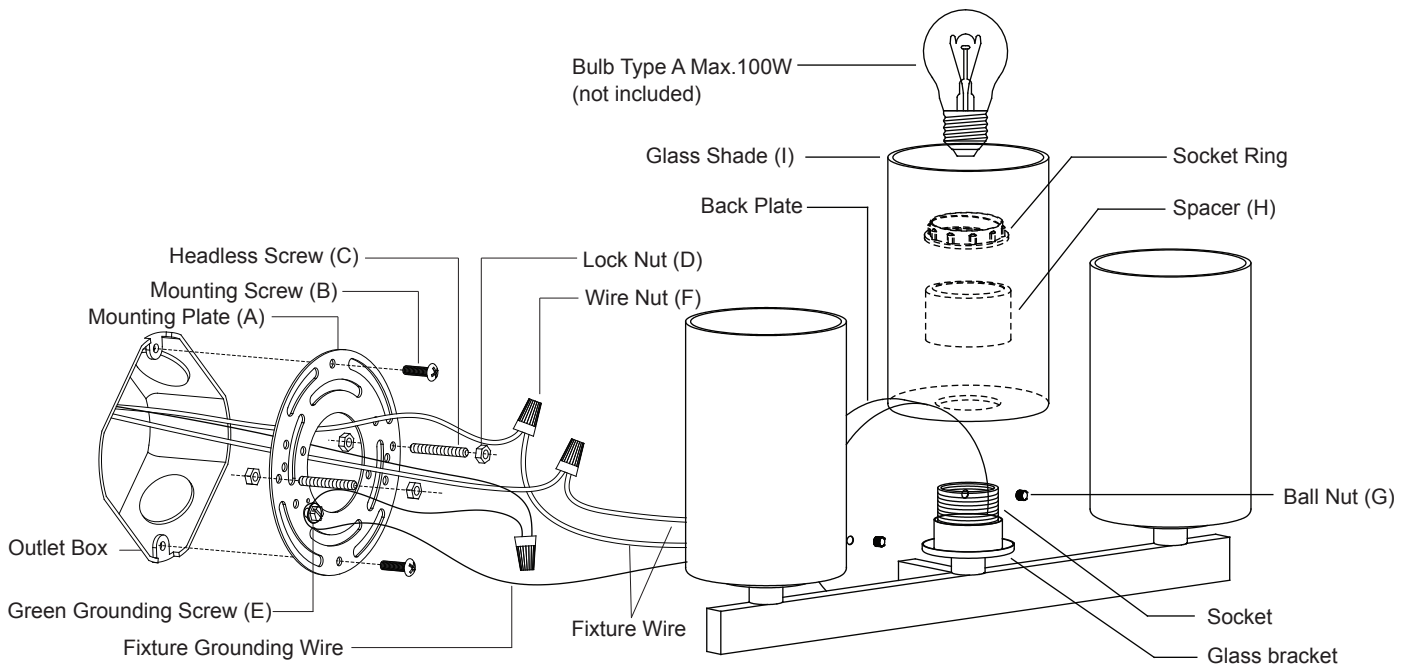

Assembly Instructions:




Turn off the power at fuse or circuit box.

1. Thread two headless screws through holes in mounting plate as shown, then secure them with four lock nuts. Adjust the length of the headless screws if necessary.
Note: Make sure that the headless screws are lined up horizontally, to ensure that the fixture will be level.
2. Attach the mounting plate to outlet box using two mounting screws.
3. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
 - Connect the hot wire (usually black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (usually white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire (usually bare wire) to the mounting plate with the green grounding screw. Then connect it to the house grounding wire with a wire nut. If your outlet box does not have a house grounding wire, then wrap the fixture grounding wire around the green grounding screw.Carefully tuck the wires back into the outlet box.

4. Attach the back plate to the mounting plate: insert the headless screws through the two holes, then secure it with two ball nuts.
5. Place the glass shades onto the glass brackets, then secure using spacers and socket rings.
6. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.

Turn on the power at the main fuse or circuit breaker box.

The following parts are available for re-order if damaged or missing.

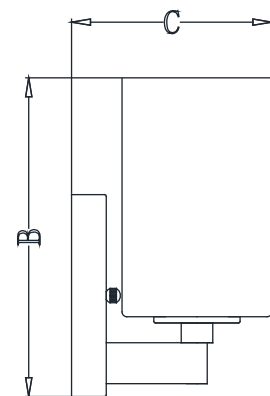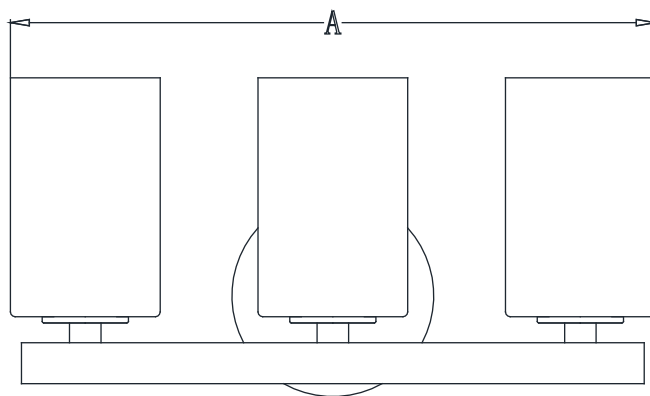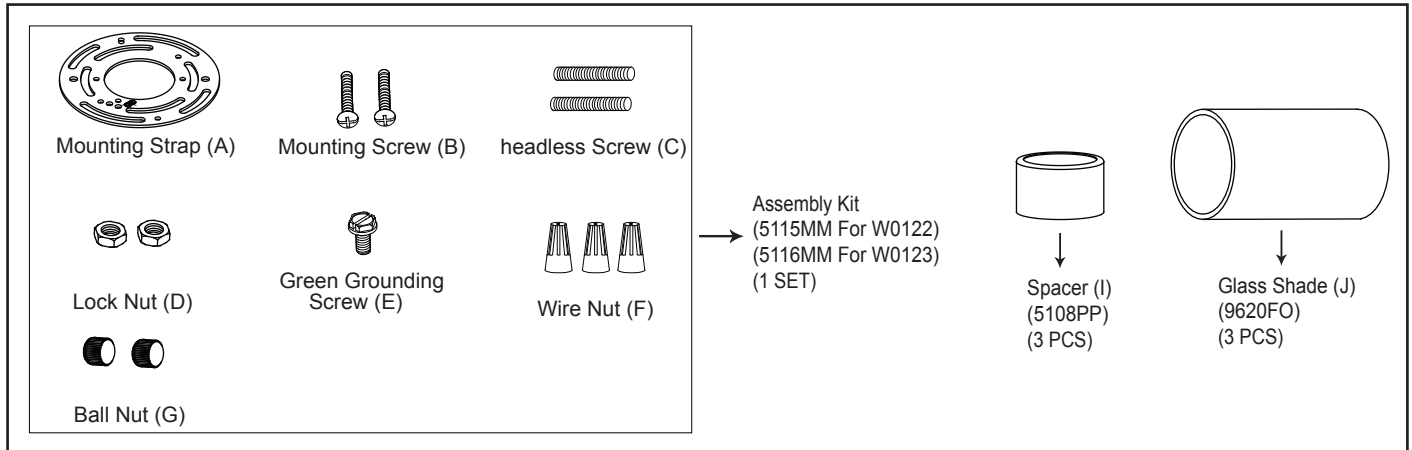

A: 16-1/8"

B: 8"

C: 5"