

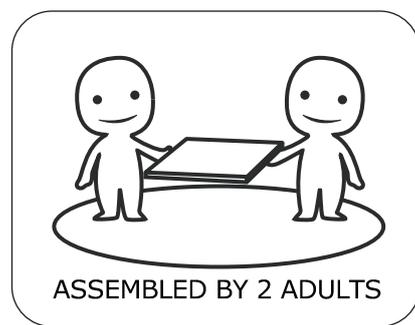




# Dog Cage Cabinet

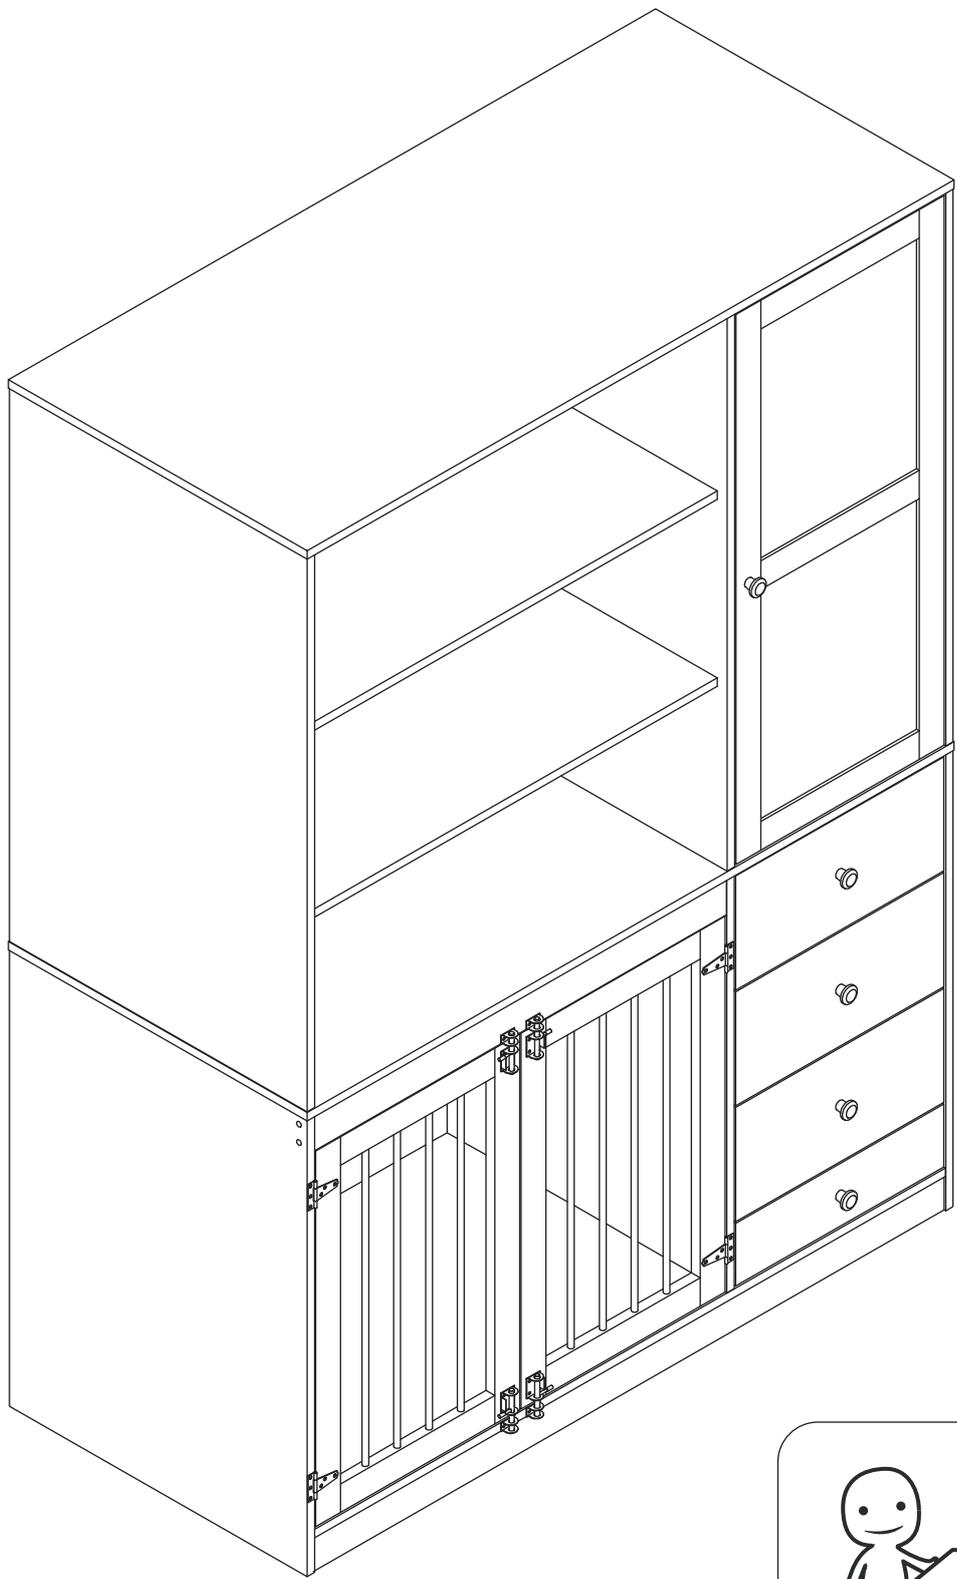

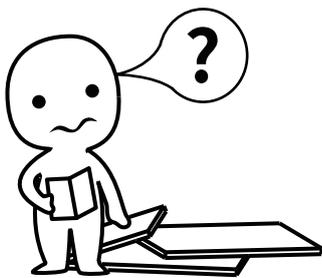


### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

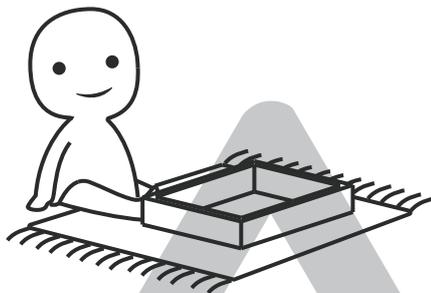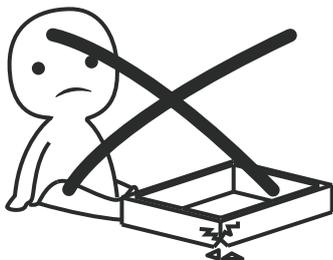


### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

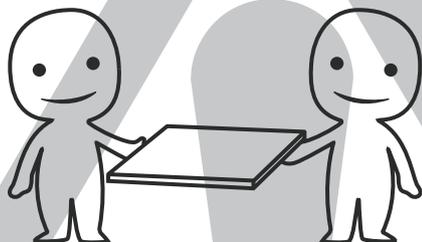

### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

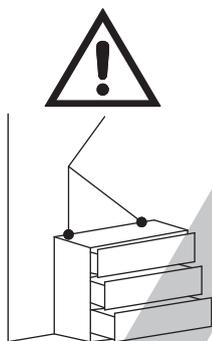

### **ANTI-TOPPLE WARNING !**


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.













Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

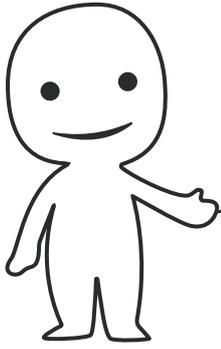






Please prepare the following tools

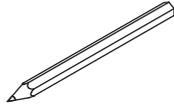


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
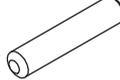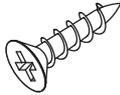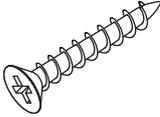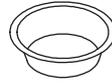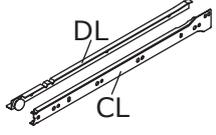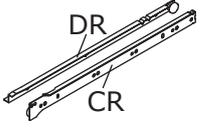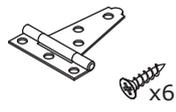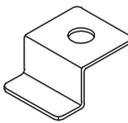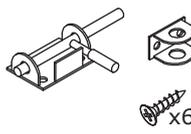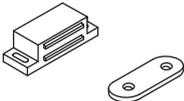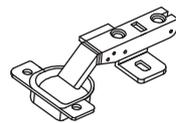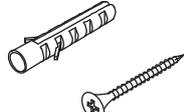
<p>A x 96+6</p>  <p>Ø6 x 35 mm</p>	<p>B x 64+4</p>  <p>Ø15 x 12 mm</p>	<p>C x 32+2</p>  <p>Ø15 x 9.5 mm</p>	<p>D x 53+4</p>  <p>Ø6 x 30 mm</p>	<p>E x 36+4</p>  <p>Ø3 x 14 mm</p>
<p>F x 12+2</p>  <p>Ø3.5 x 14 mm</p>	<p>G x 16</p>  <p>Ø4 x 30 mm</p>	<p>H x 1</p>  <p>Ø4 x 20 mm</p>	<p>J x 2</p>  <p>Ø160 mm</p>	<p>K x 5</p>  <p>Ø4 x 22 mm</p>
<p>L x 4</p>  <p>350 mm</p>	<p>M x 4</p>  <p>350 mm</p>	<p>N x 4</p>  <p>Ø6 x 40 mm</p>	<p>P x 4</p>  <p>Ø6 x 10 mm</p>	<p>Q x 24</p>  <p>Ø3 x 16 mm</p>
<p>R x 4</p>  <p>Ø3.5 x 14 mm</p>	<p>S x 1</p> 	<p>T x 4</p>  <p>Ø3.5 x 14 mm</p>	<p>U x 1</p> 	<p>V x 3</p> 
<p>W x 2</p>  <p>Ø6 x 40 mm</p>	<p>X x 2</p>  <p>Ø4 x 12 mm</p>	<p>Y x 96</p>  <p>Ø20 mm</p>		

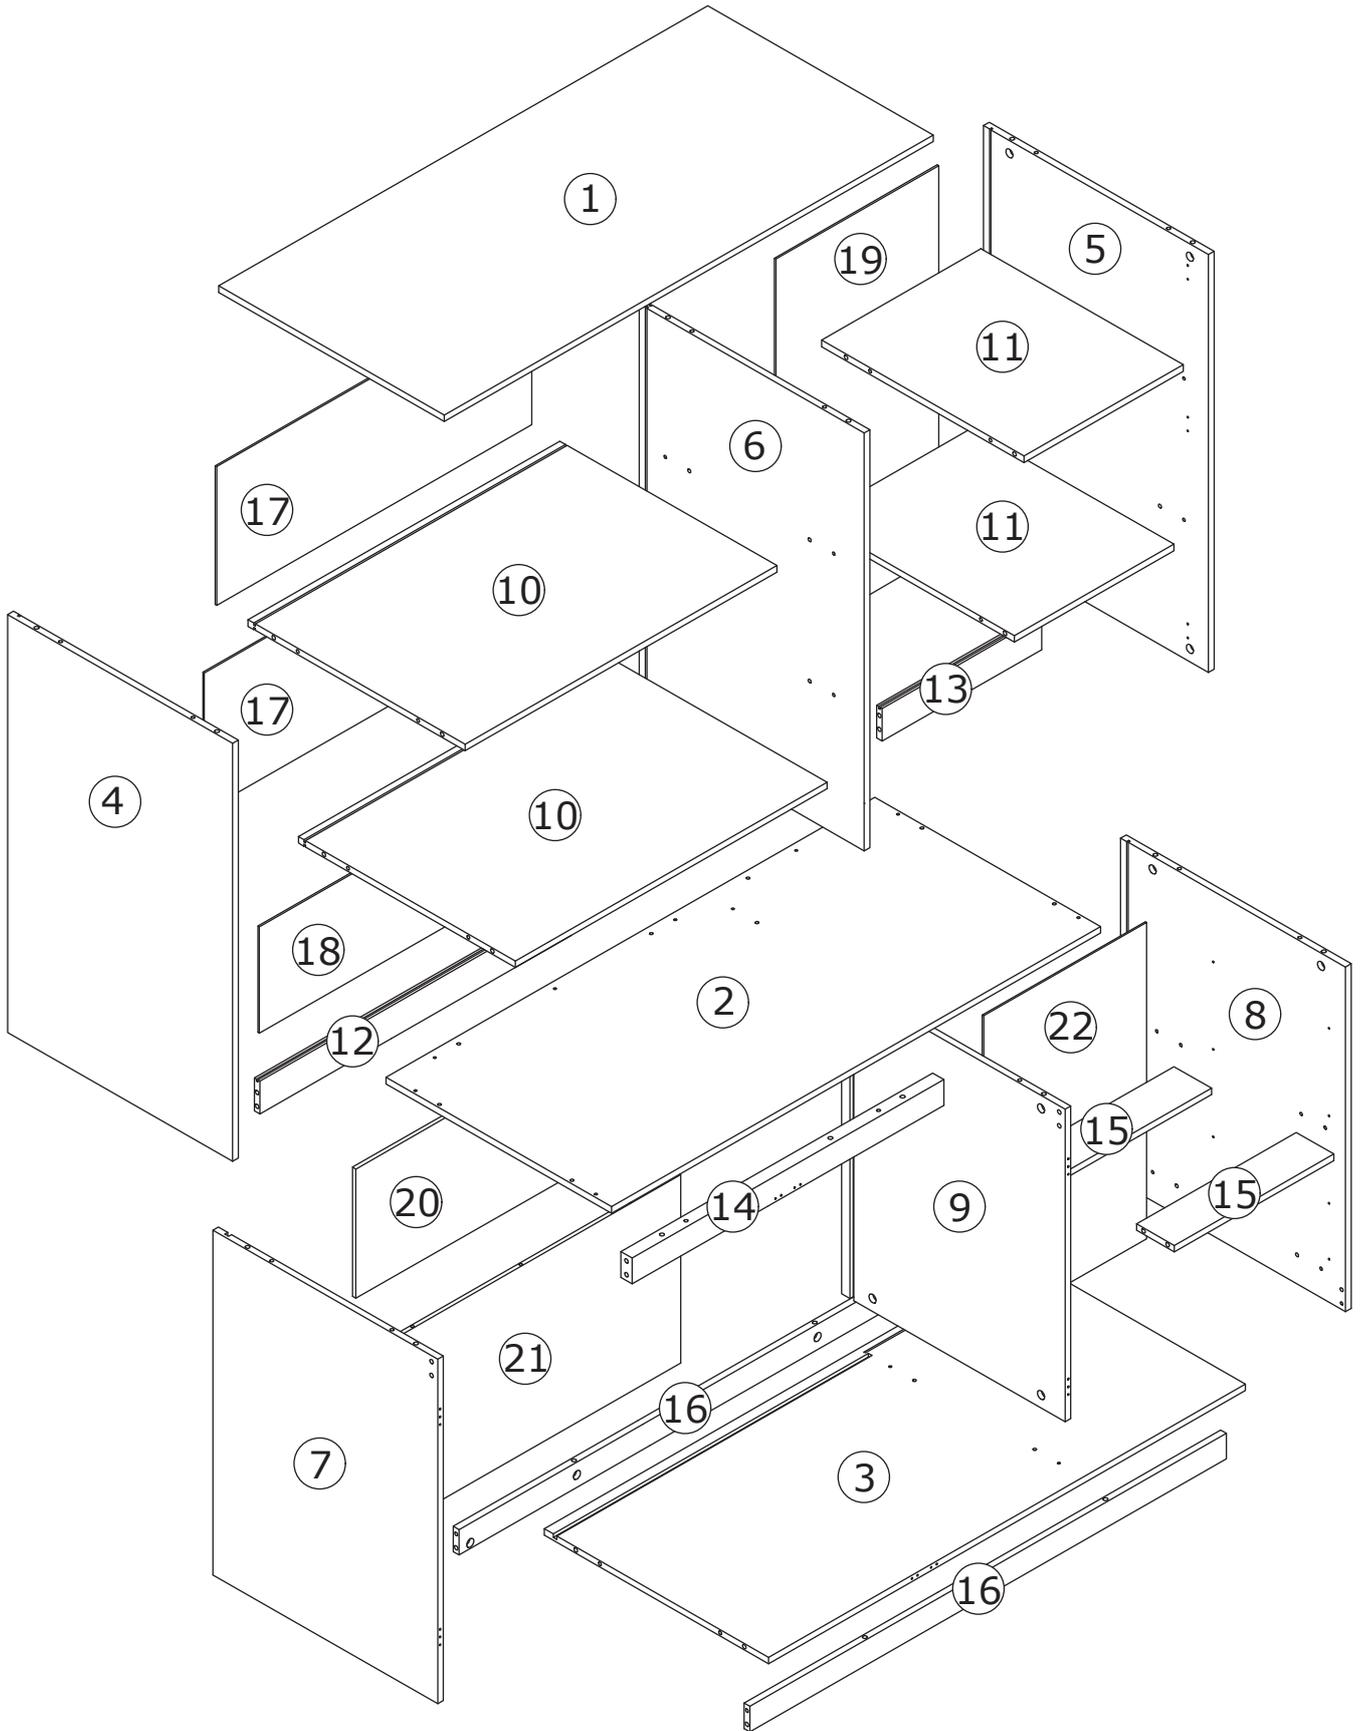

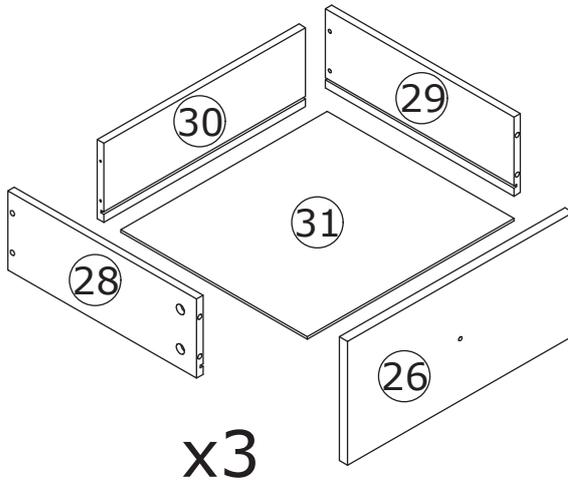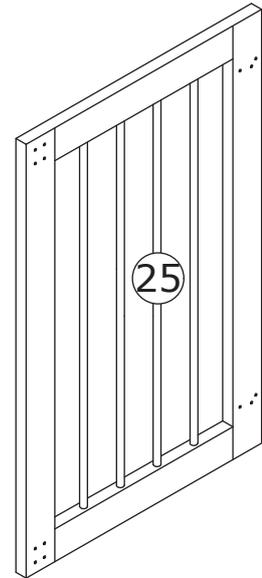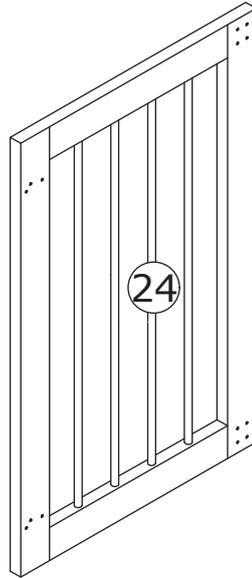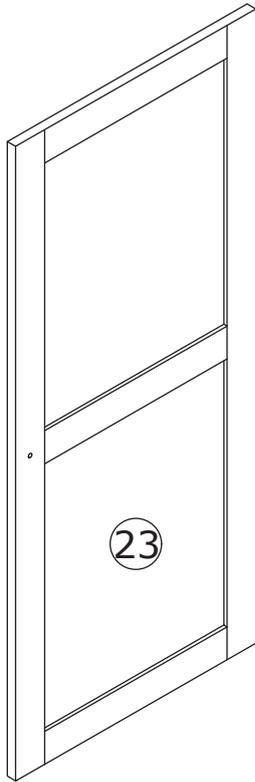

x3

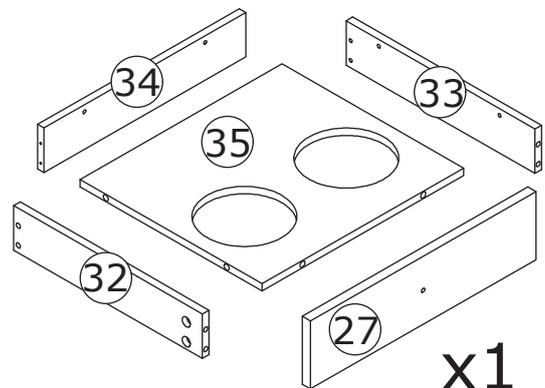

x1

## ⚠ WARNING






Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.





*This is a permanent label.  
Do not remove!*




1

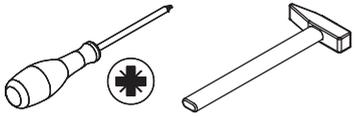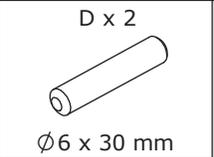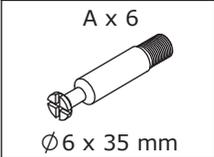






Screw eccentric rod(A) and insert wooden dowel(D) into board 3 at first. Flip the board to back, screw eccentric rod(A) into as shown.

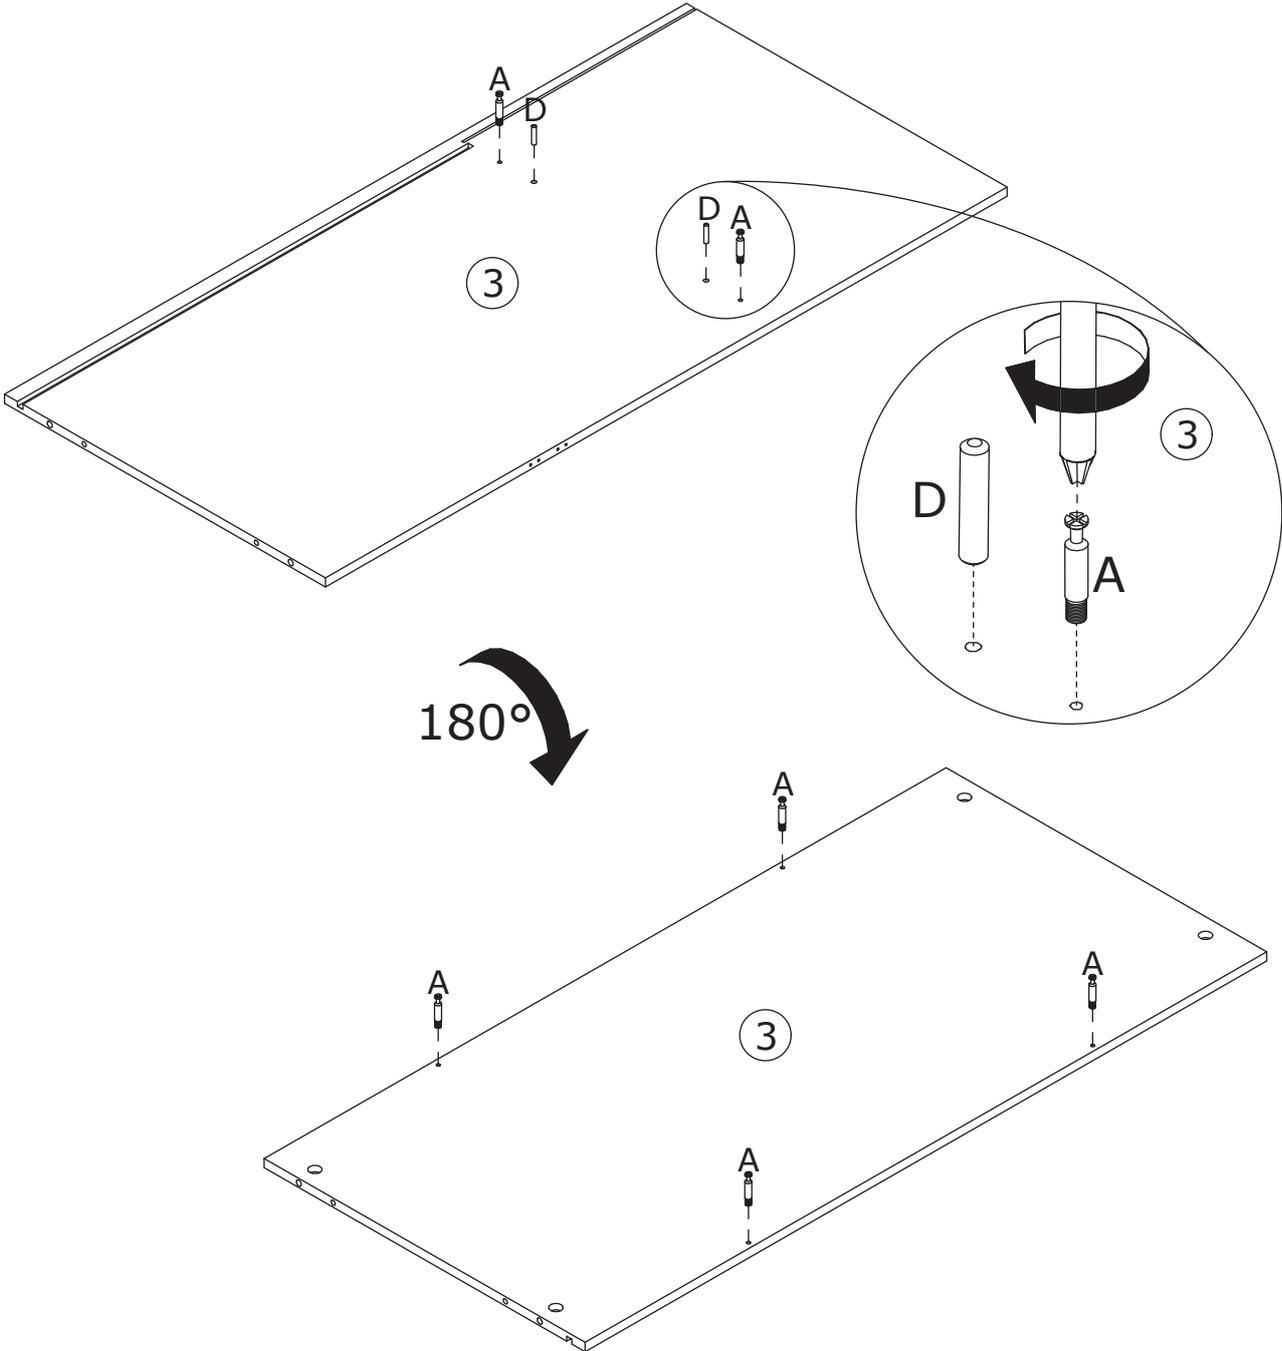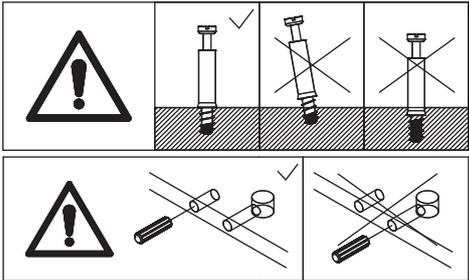



2
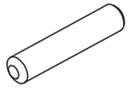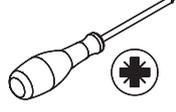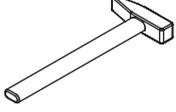
<p>A x 12</p>  <p>∅6 x 35 mm</p>	<p>D x 4</p>  <p>∅6 x 30 mm</p>	<p>E x 16</p>  <p>∅3 x 14 mm</p>	 
---	--	---	--



<p>L x 4</p>  <p>CL 350 mm</p>	<p>M x 4</p>  <p>CR 350 mm</p>
---	---

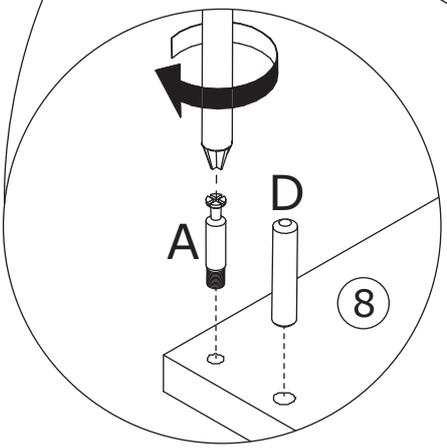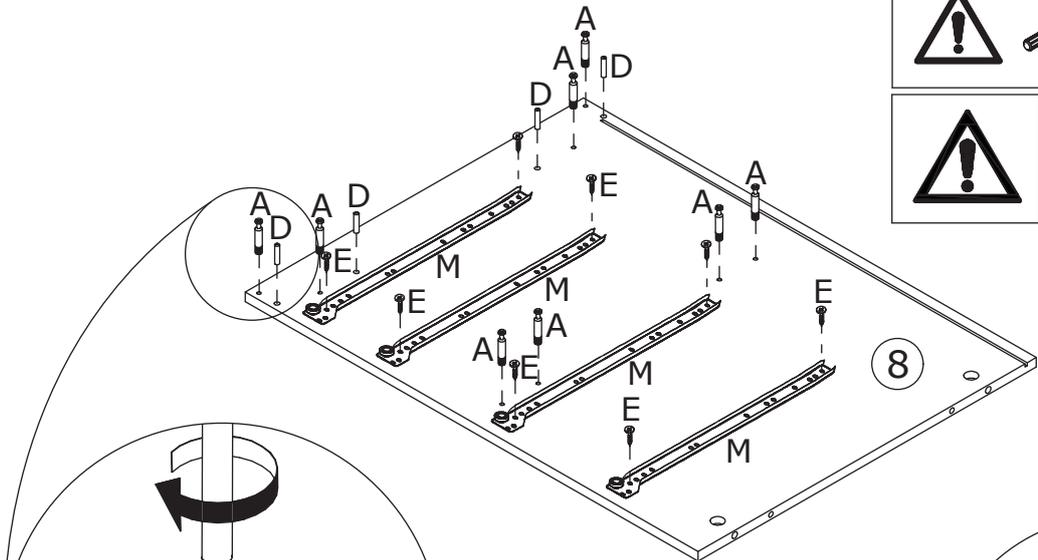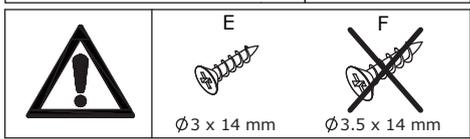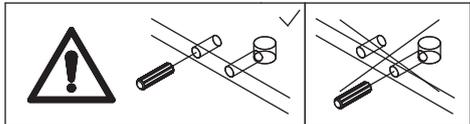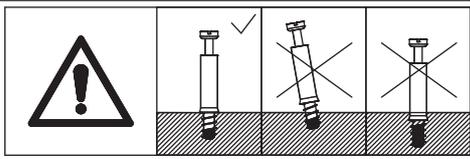








Screw eccentric rod(A) and insert wooden dowel(D) into board 8, fix slide rail(M) with screw(E) as shown.

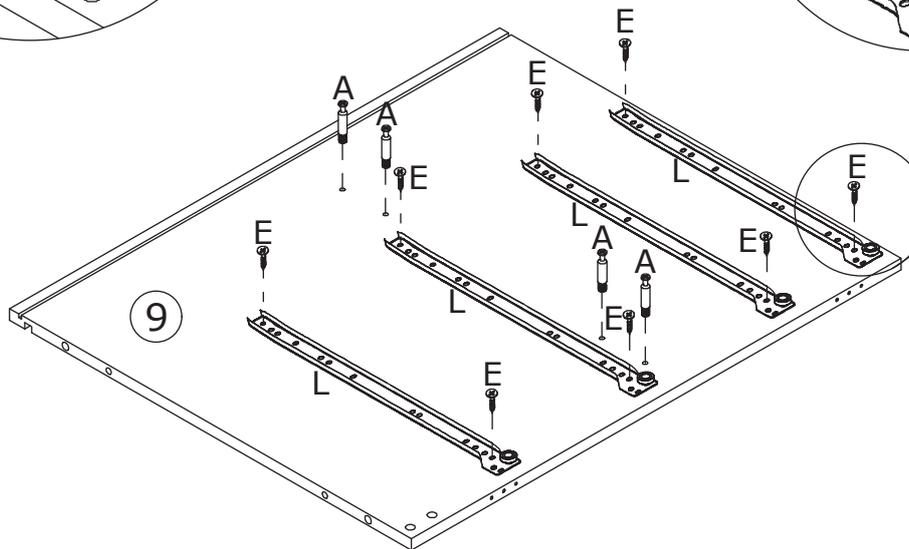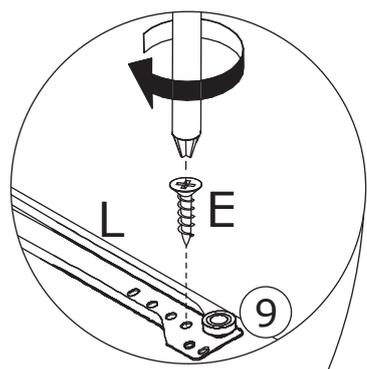

Screw eccentric rod(A) into board 9, fix slide rail(L) with screw(E) as shown.

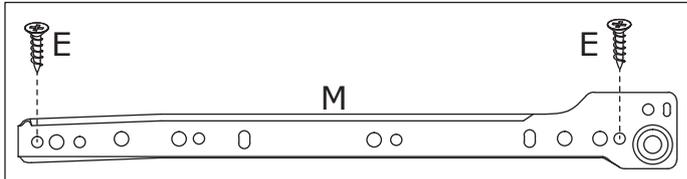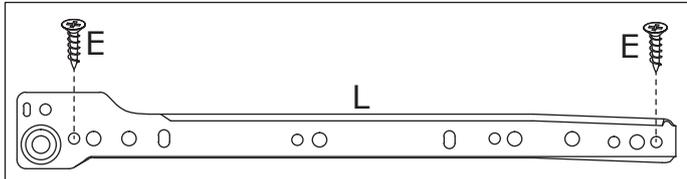




3

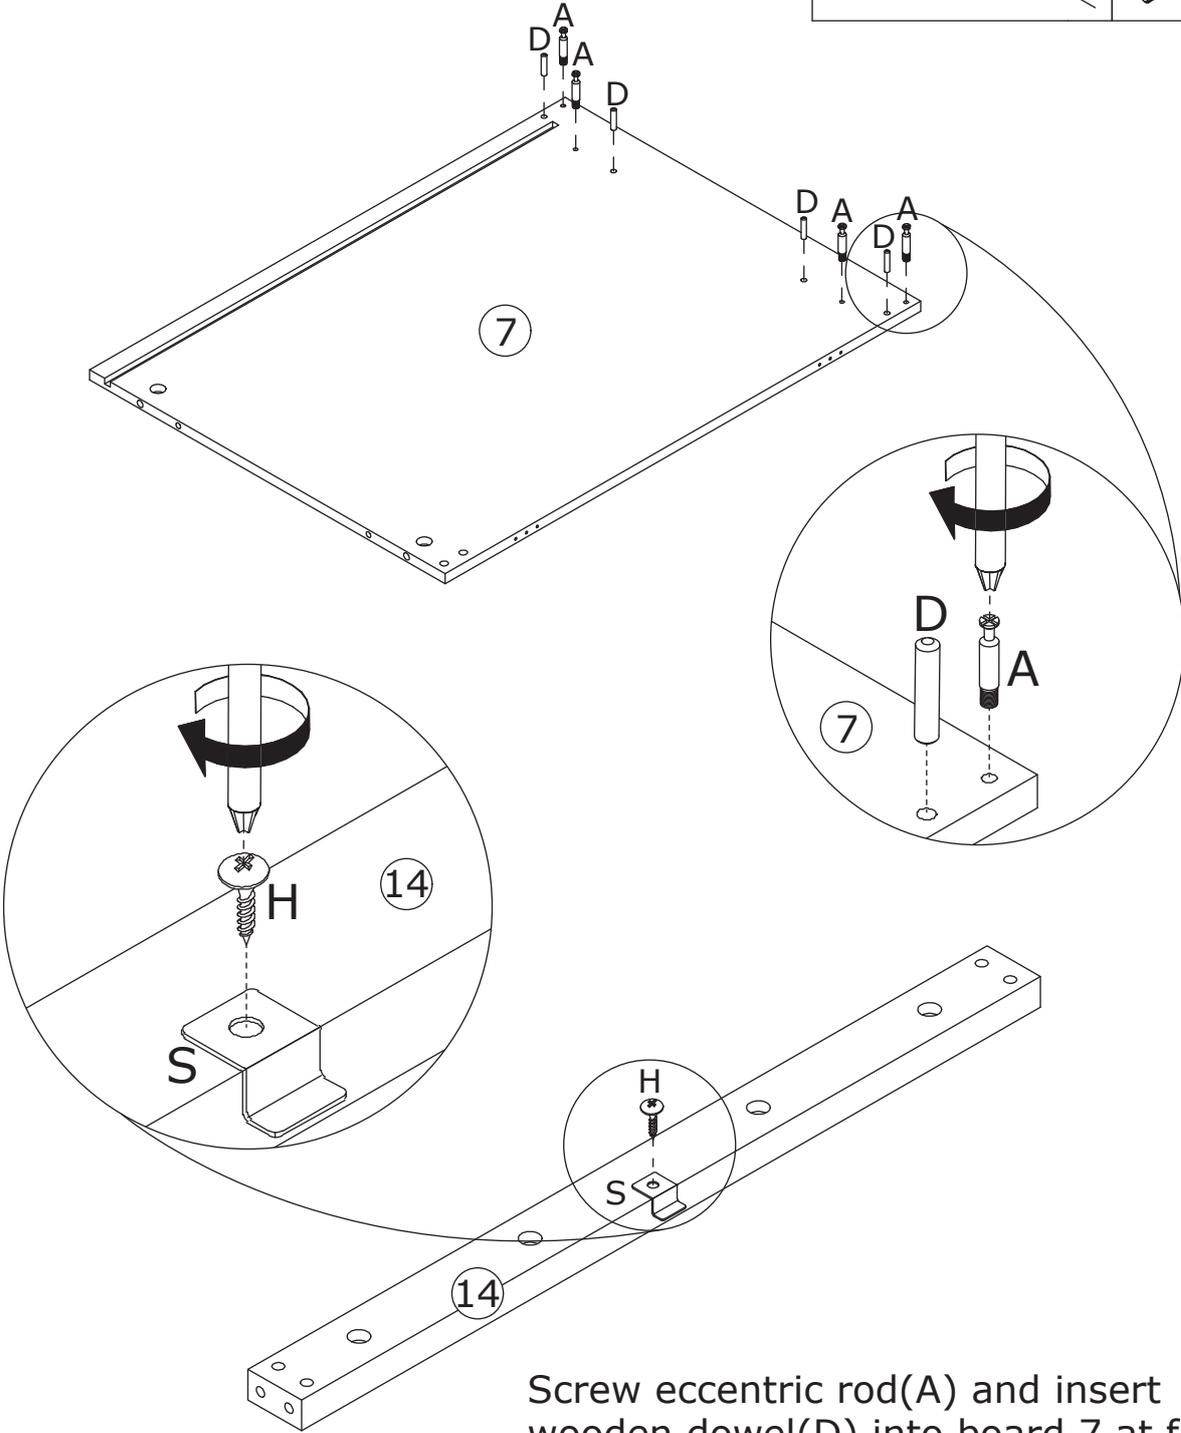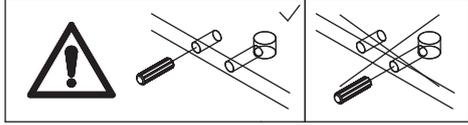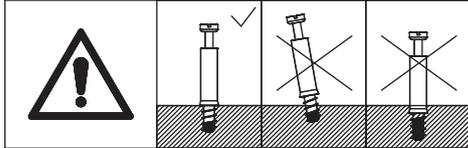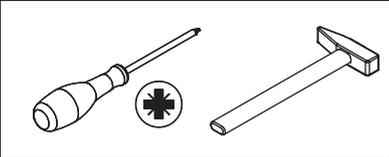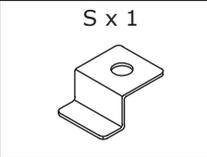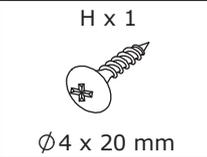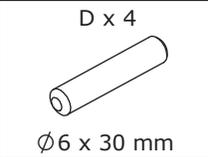

Screw eccentric rod(A) and insert wooden dowel(D) into board 7 at first. Fix part(S) to board 14 with screw(H) as shown.

4




B x 4  
Ø 15 x 12 mm

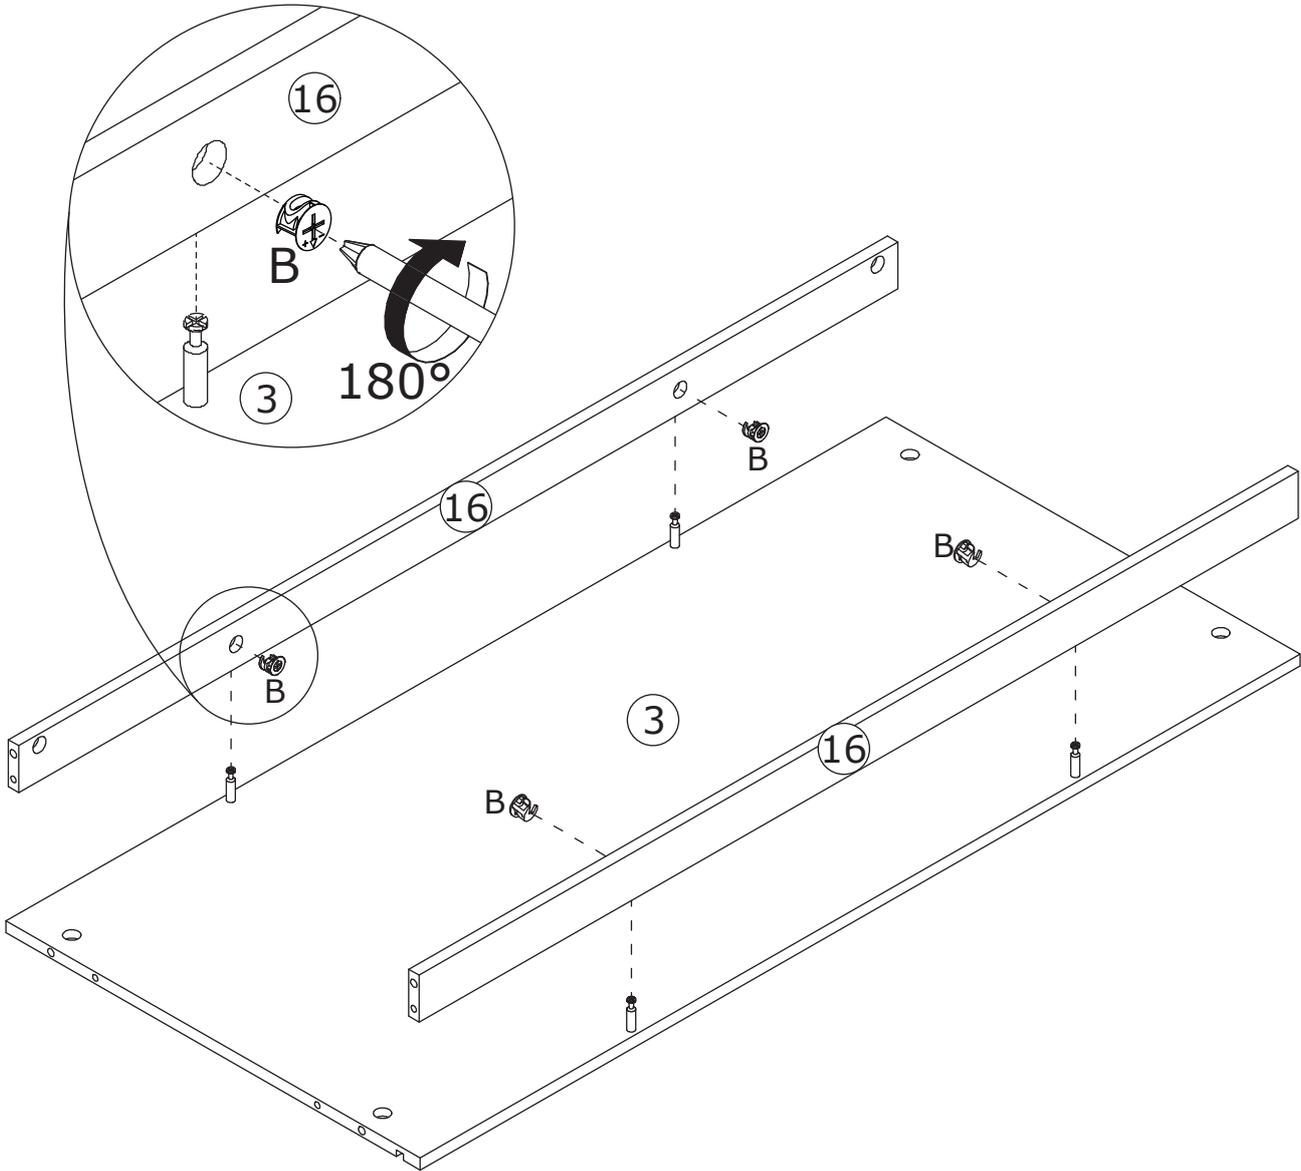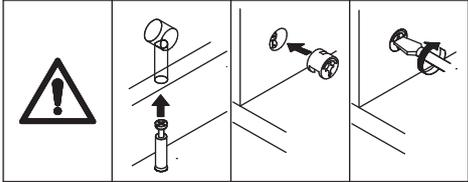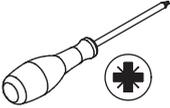

Attach board 16 to board 3, add cam lock(B) into board 16 and turn clockwise to tighten as shown.

5





B x 2  
Ø 15 x 12 mm

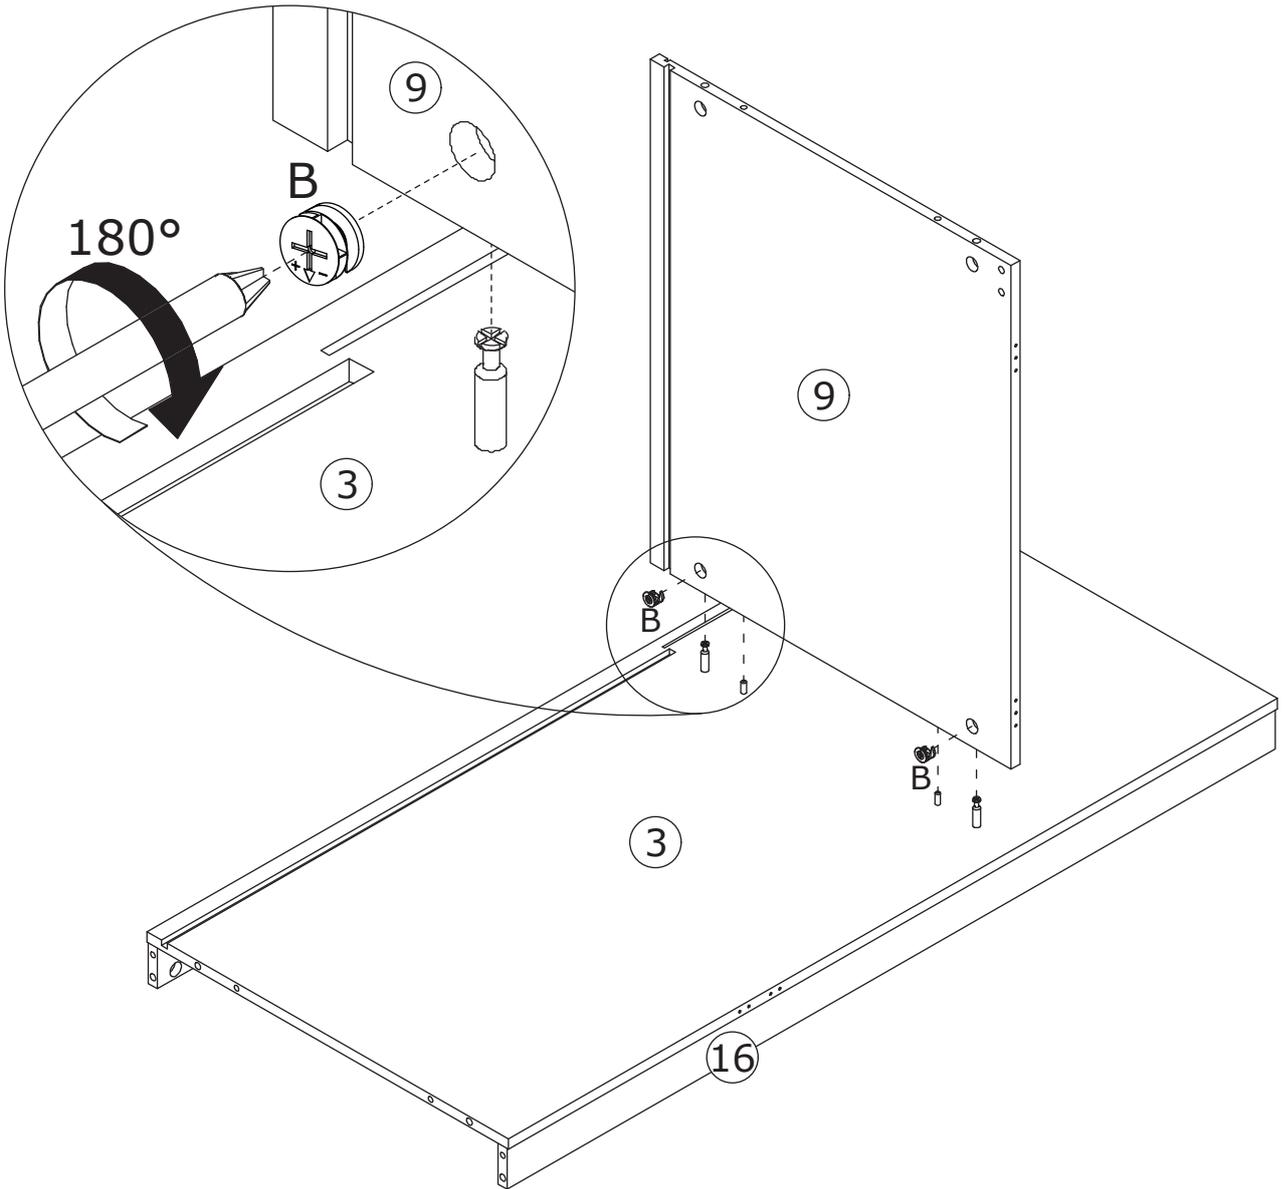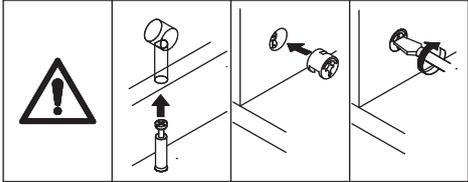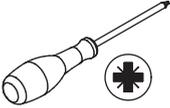

Attach board 9 to board 3, add cam lock(B) into board 9 and turn clockwise to tighten as shown.

6



B x 4  
Ø 15 x 12 mm

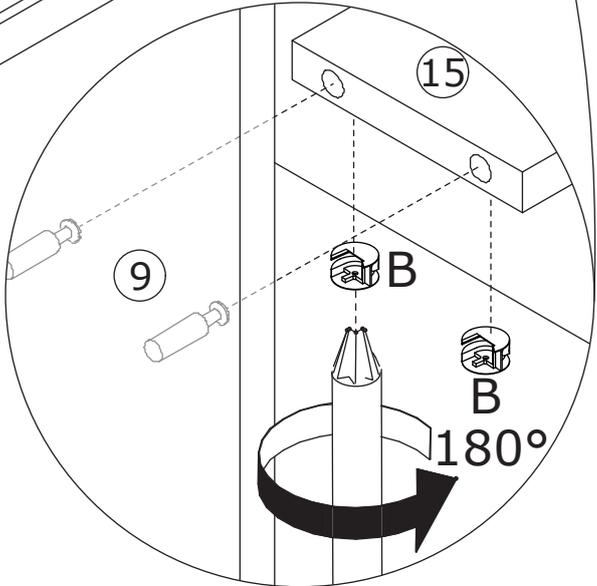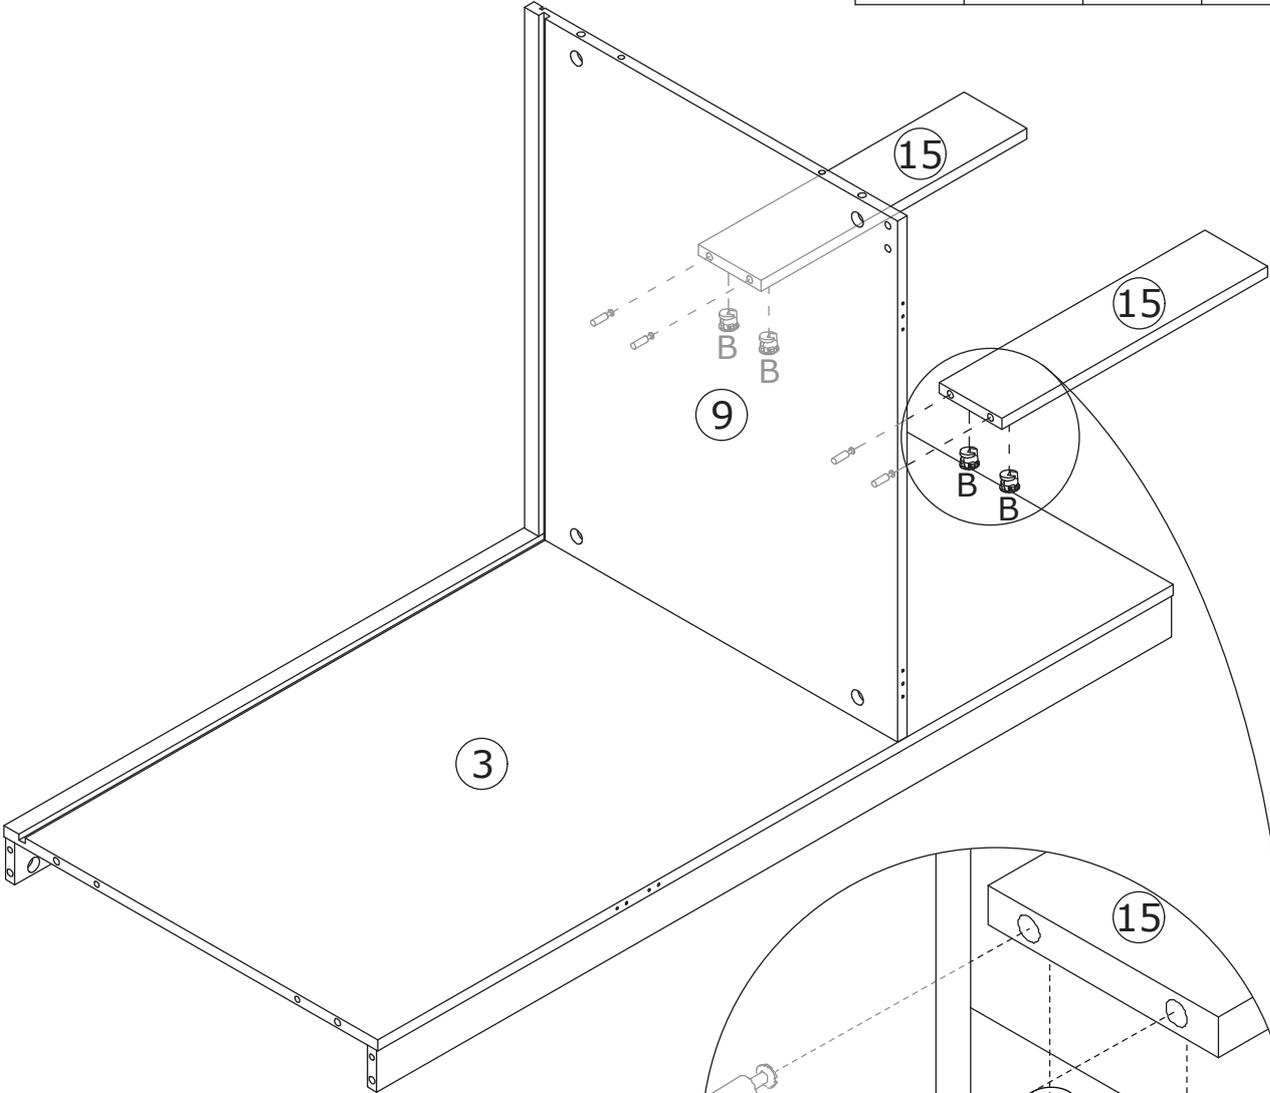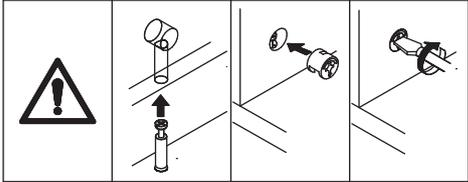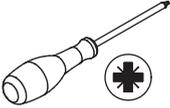


Attach board 15 to board 9, add cam lock(B) into board 15 and turn clockwise to tighten as shown.

7

B x 8  
Ø 15 x 12 mm

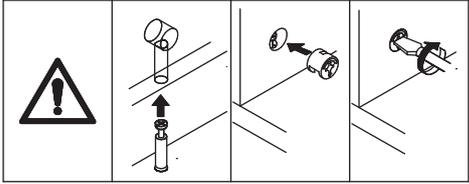
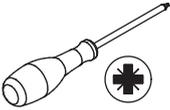


Attach board 8 to board 15, 3 and 16,  
add cam lock(B) into board 15,3,16  
and turn clockwise to tighten as shown.

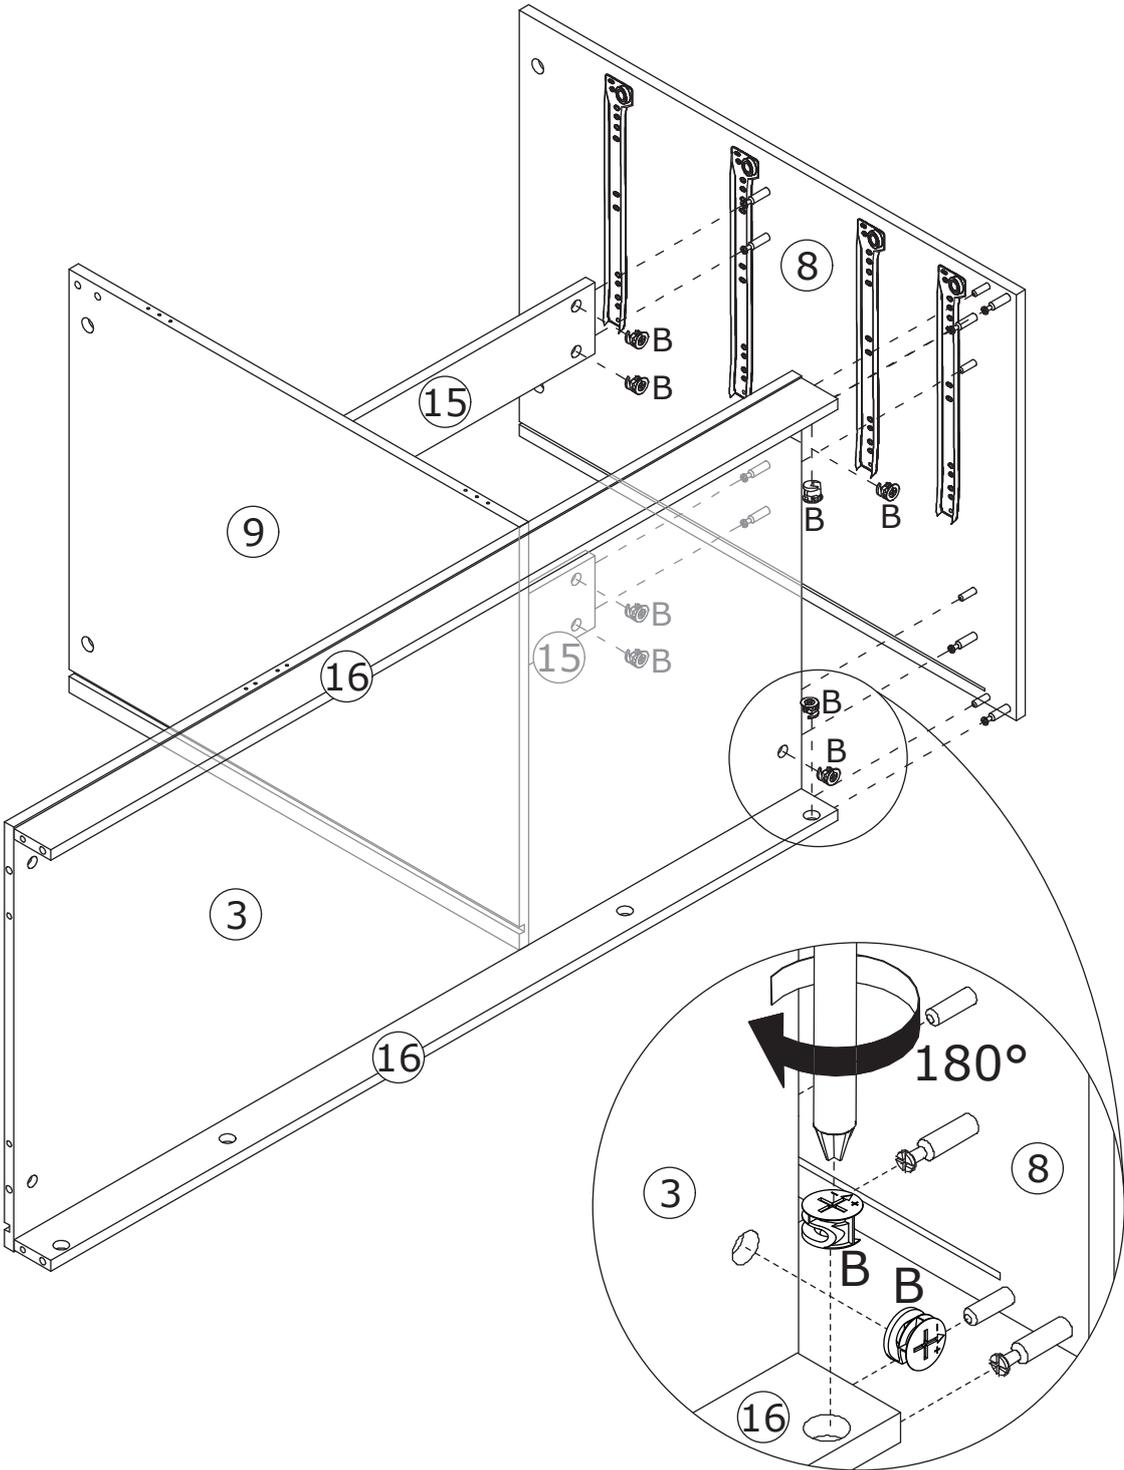


8





B x 4  
Ø15 x 12 mm

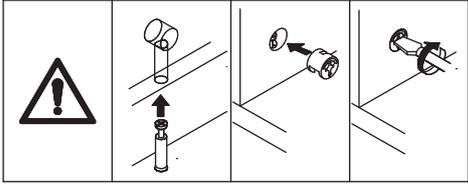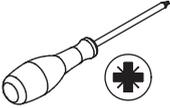


Attach board 7 to board 3 and 16,  
add cam lock(B) into board 3,16  
and turn clockwise to tighten as shown.

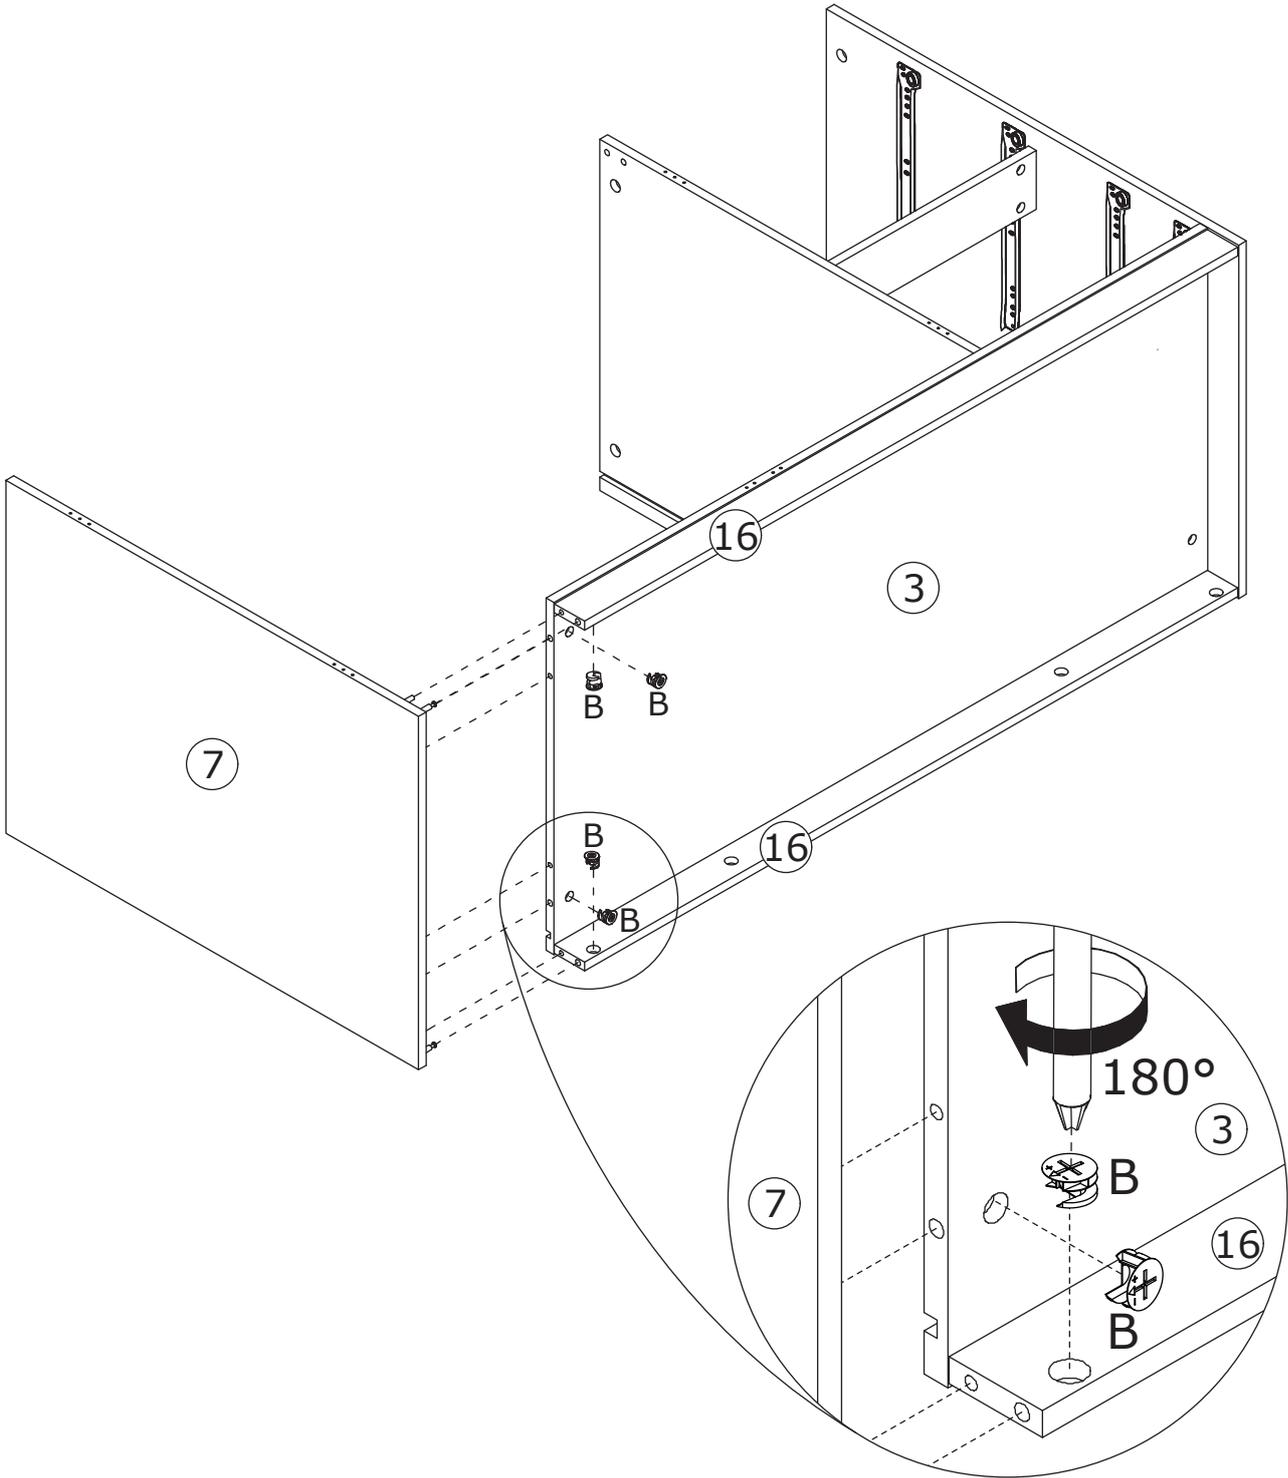




9

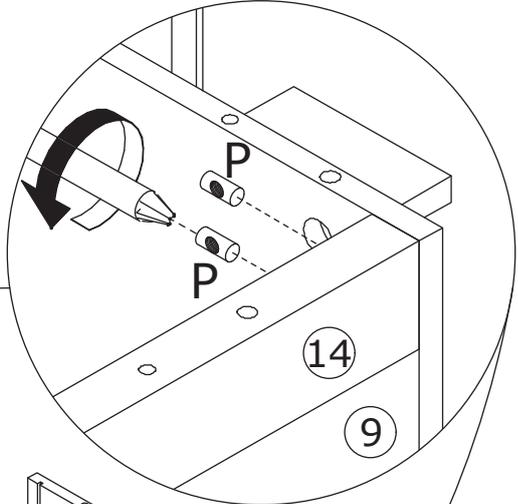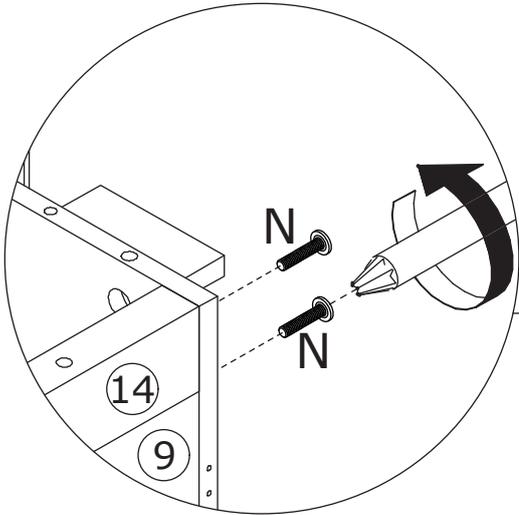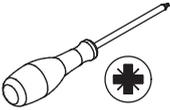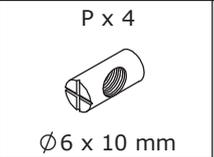



Add nut(P) into board 14 at first.  
Fix board 14 to board 7 and 9  
with screw(N) as shown.

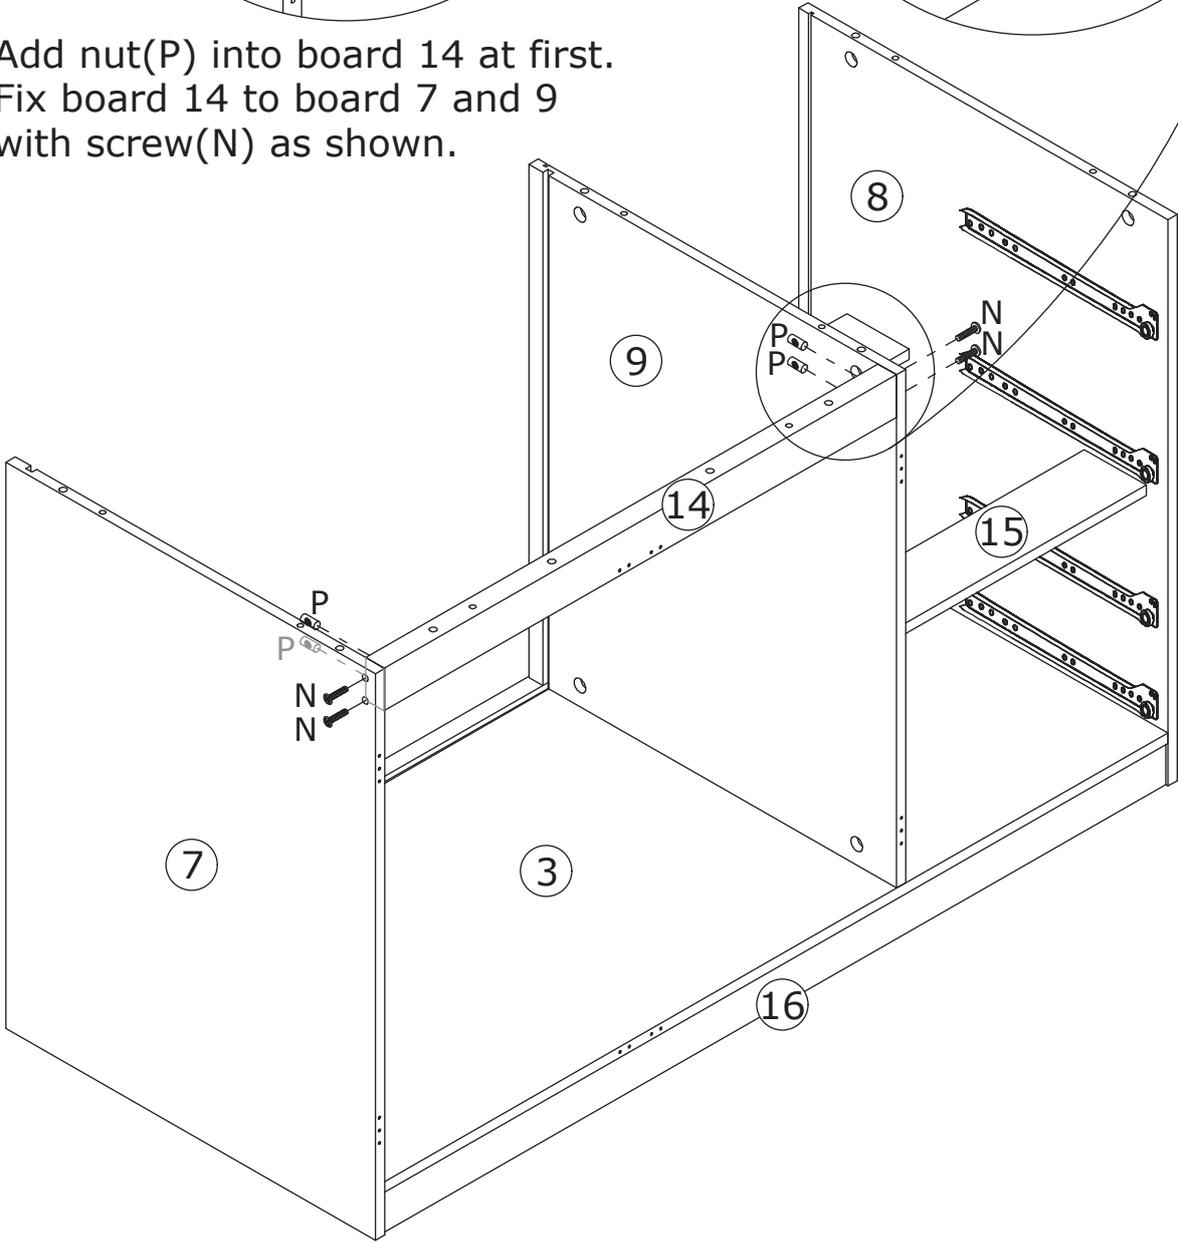



10

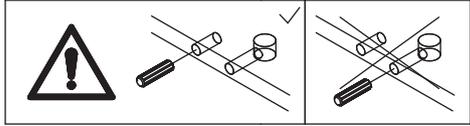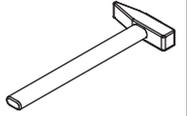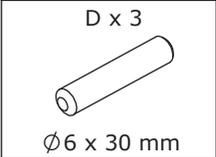




Connect board 20 to 21 with wooden dowel(D) at first. Insert back boards 20, 21 and 22 along available grooves as shown.

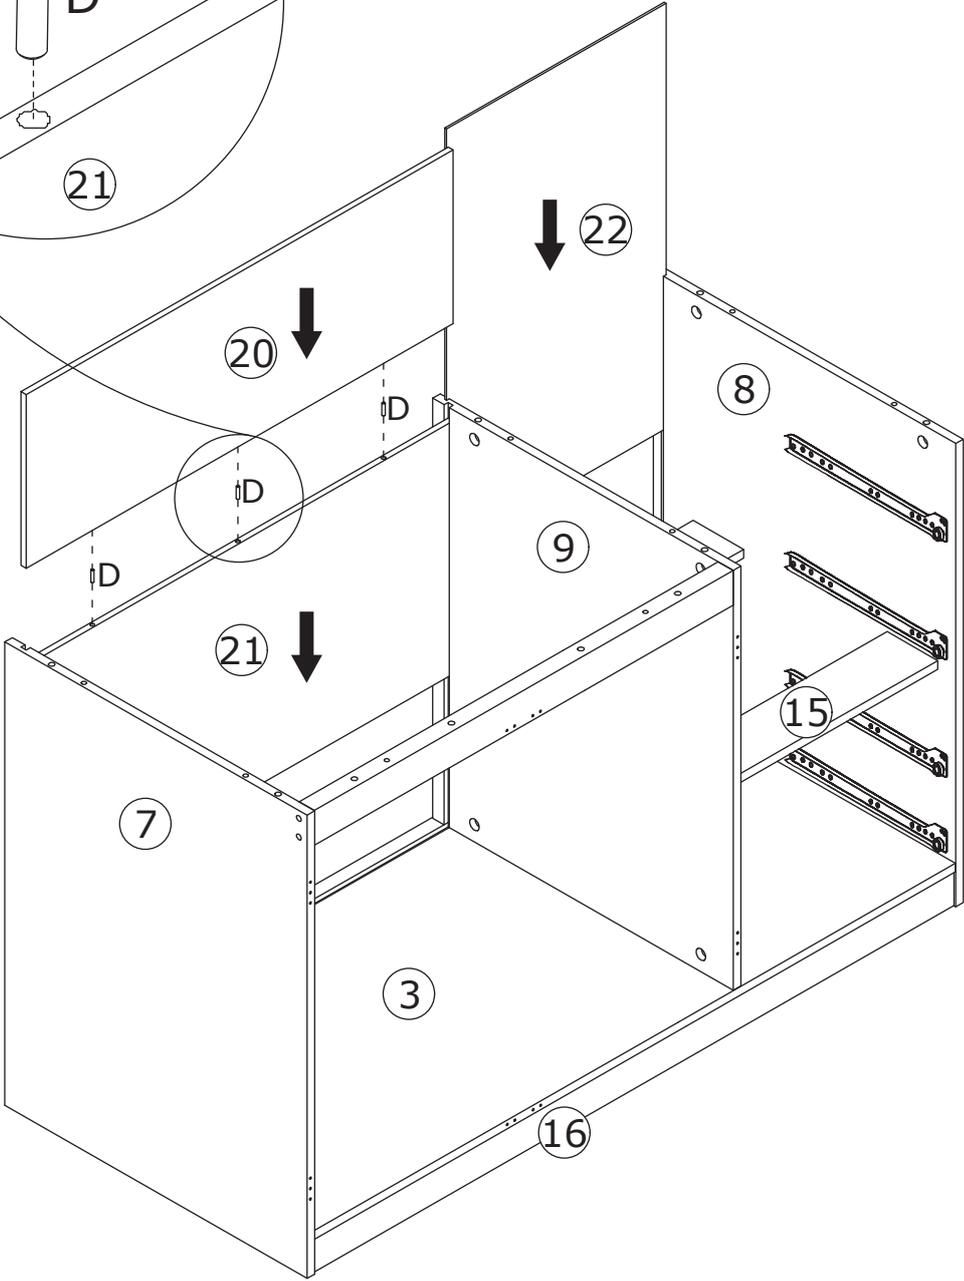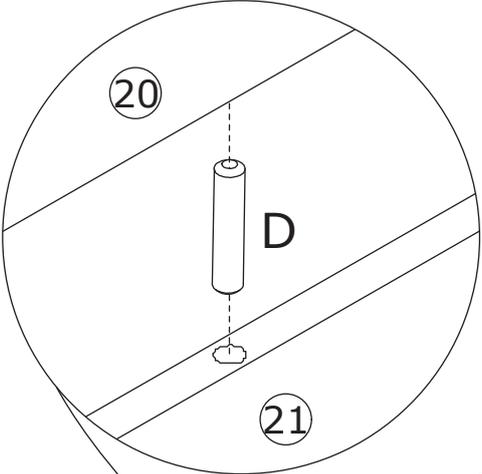

11

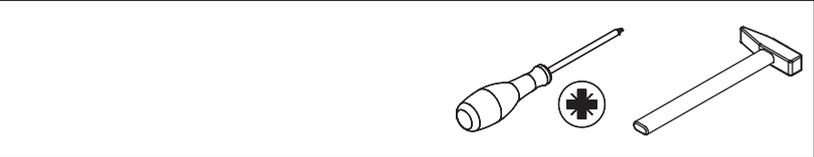
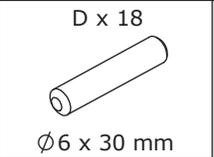


Screw eccentric rod(A) and insert wooden dowel(D) into board 3 at first. Flip the board to back, screw eccentric rod(A) and insert wooden dowel(D) into as well.

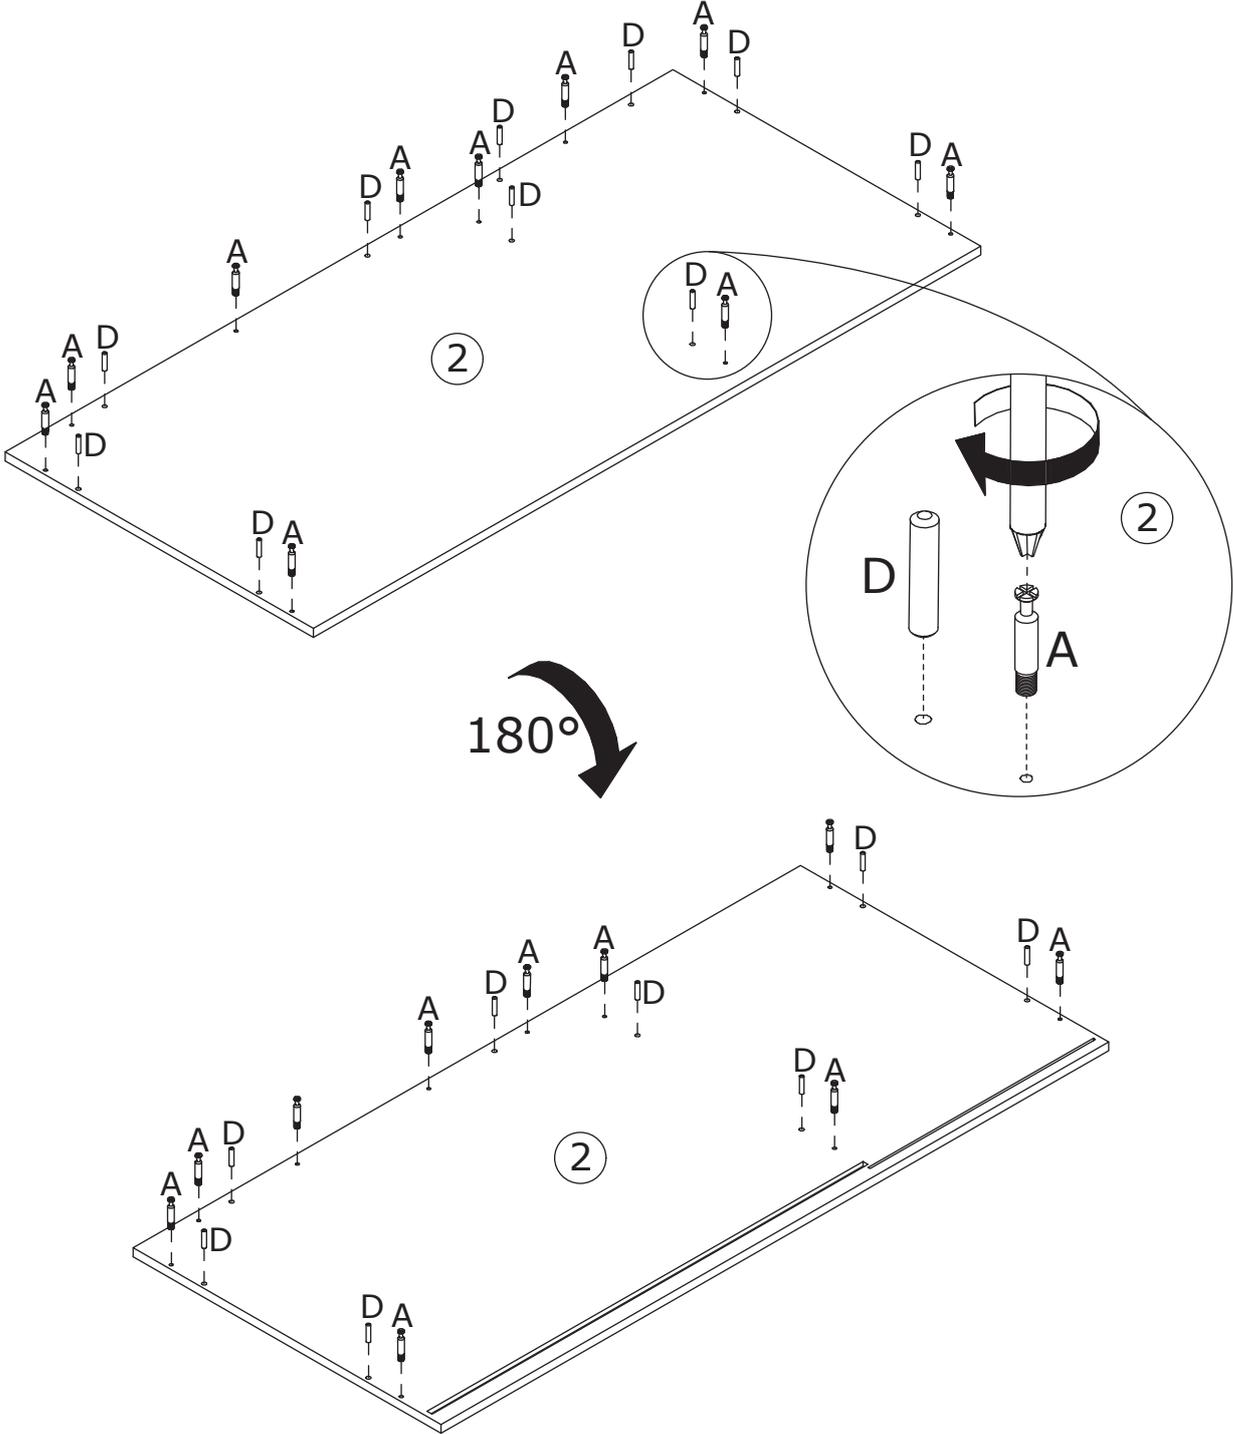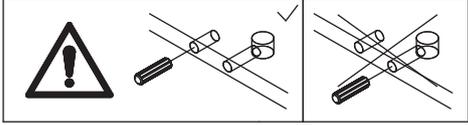
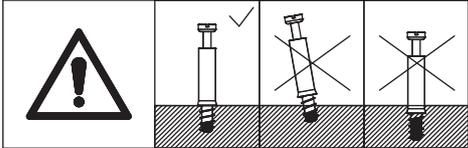


# 12






B x 10  
Ø 15 x 12 mm

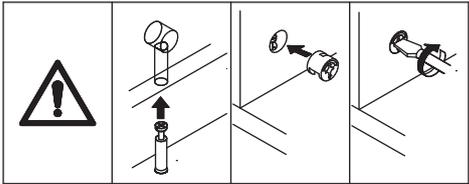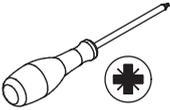


Cover board 2 to the top, add cam lock(B) into board 20,14,9,8 and turn clockwise to tighten as shown.

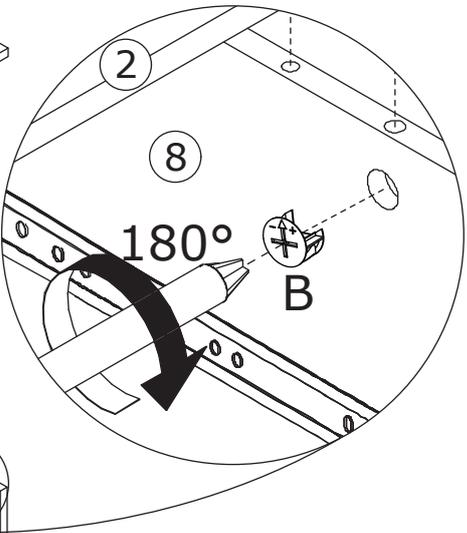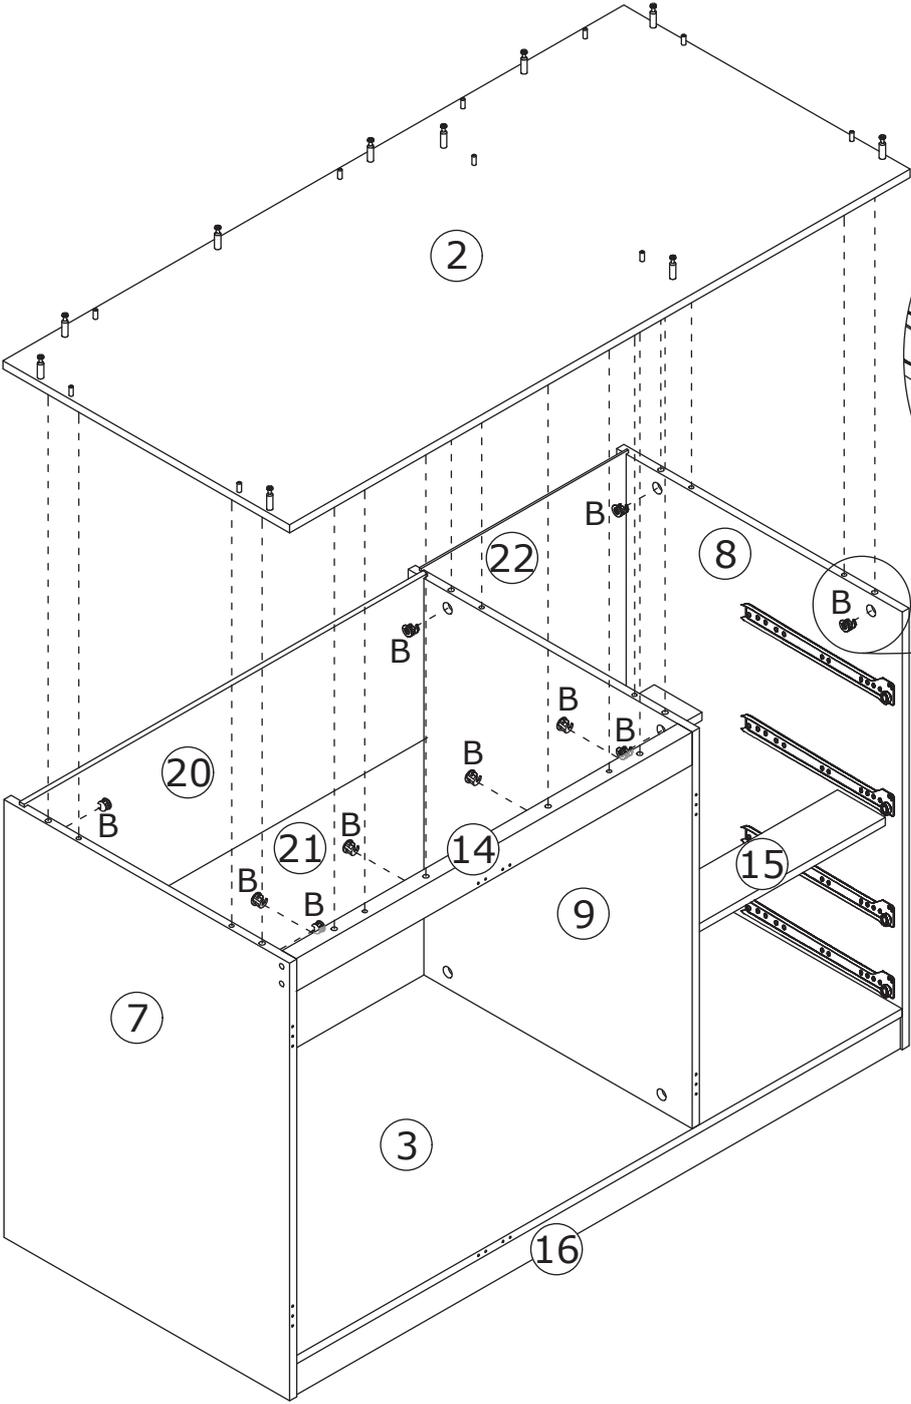



13

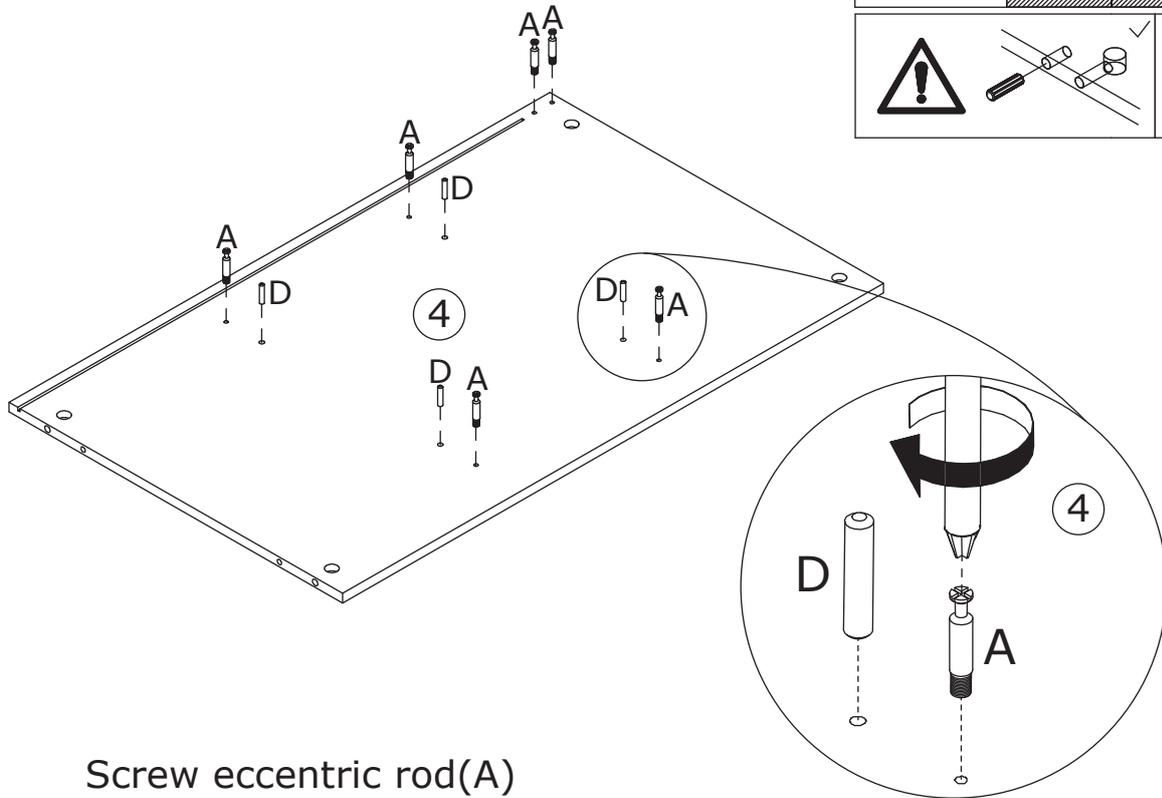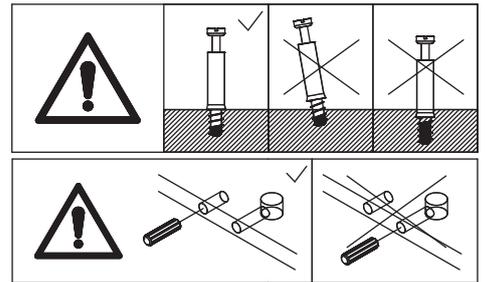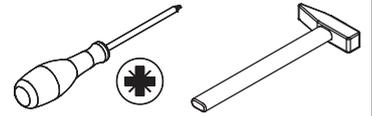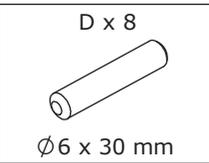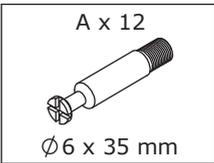



Screw eccentric rod(A)  
and insert wooden dowel(D)  
into board 4 and 5 at first.

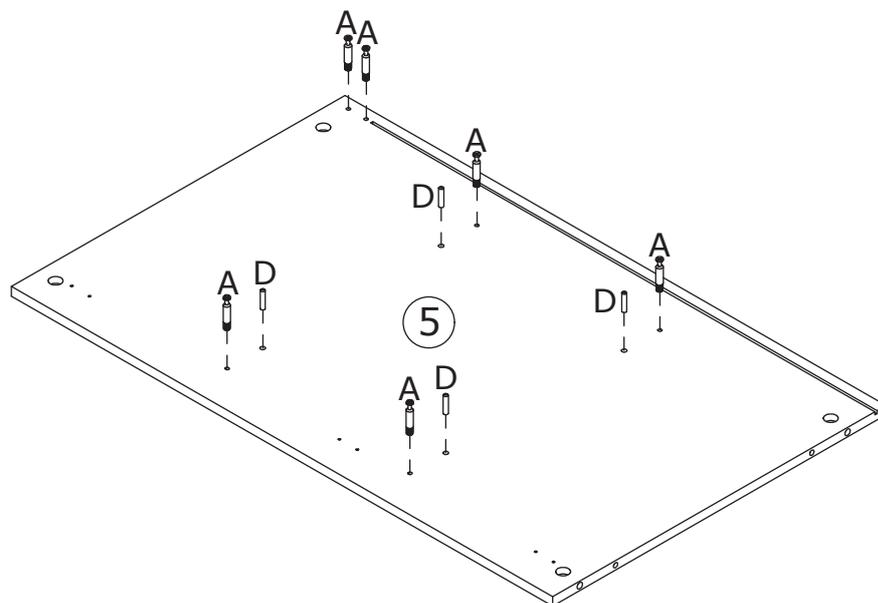


# 14

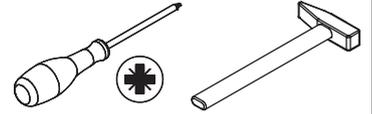
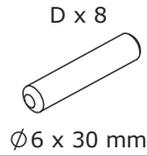


Screw eccentric rod(A) and insert wooden dowel(D) into board 6 at first. Flip the board to back, screw eccentric rod(A) and insert wooden dowel(D) into as well.

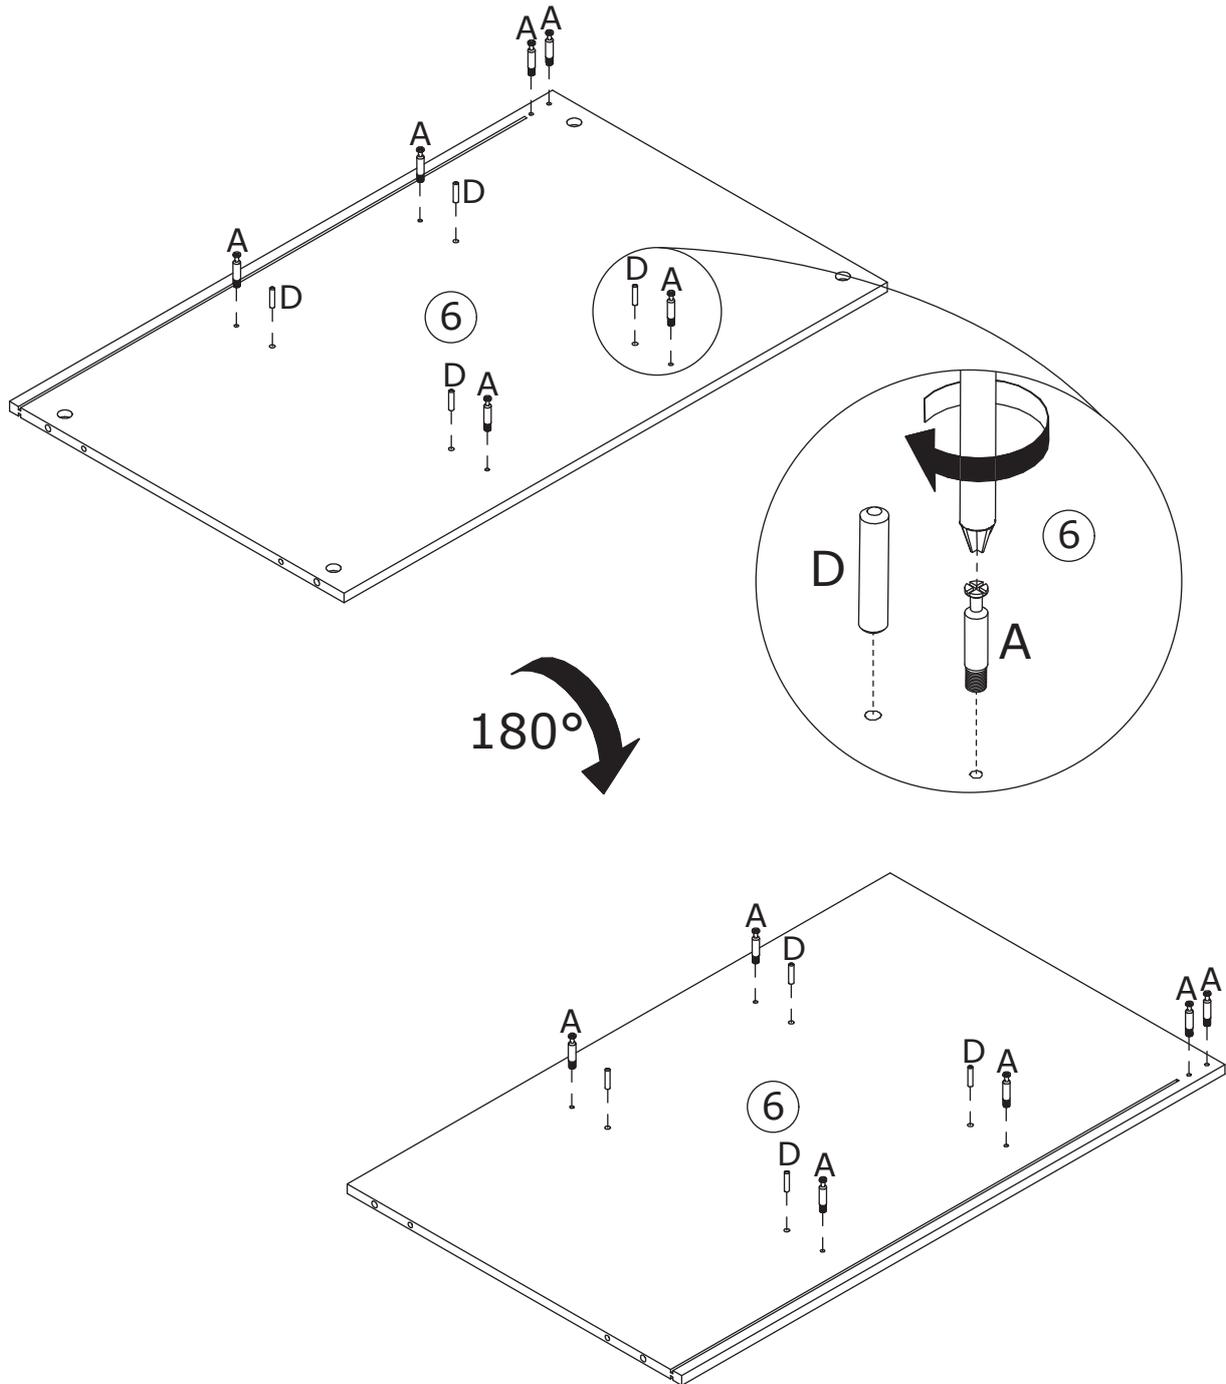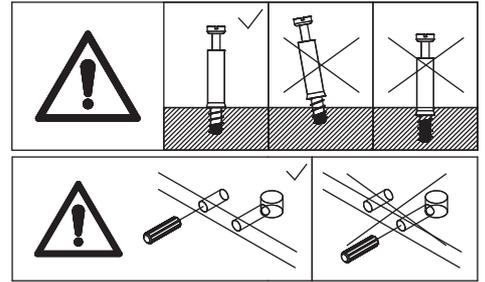

15
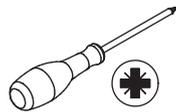
<p>B x 2</p>  <p>Ø 15 x 12 mm</p>	<p>C x 4</p>  <p>Ø 15 x 9.5 mm</p>	
--	---	---

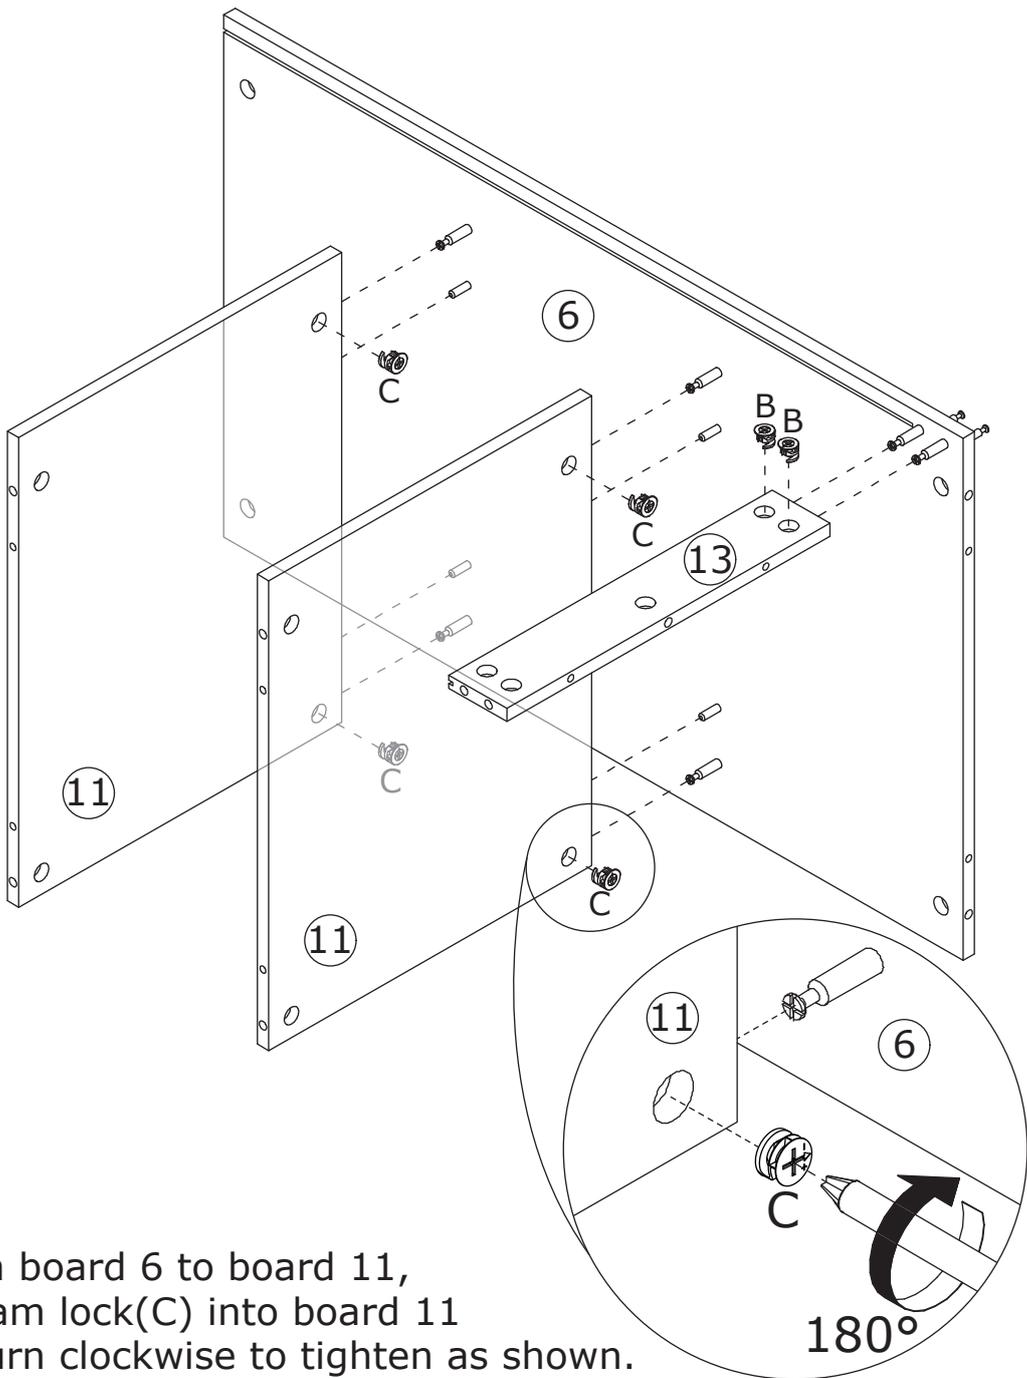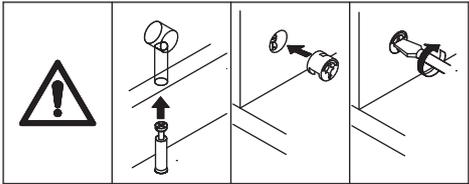





Attach board 6 to board 11,  
add cam lock(C) into board 11  
and turn clockwise to tighten as shown.  
Attach board 6 to board 13,  
add cam lock(B) into board 13  
and turn clockwise to tighten as shown.

# 16

B x 6







Ø15 x 12 mm

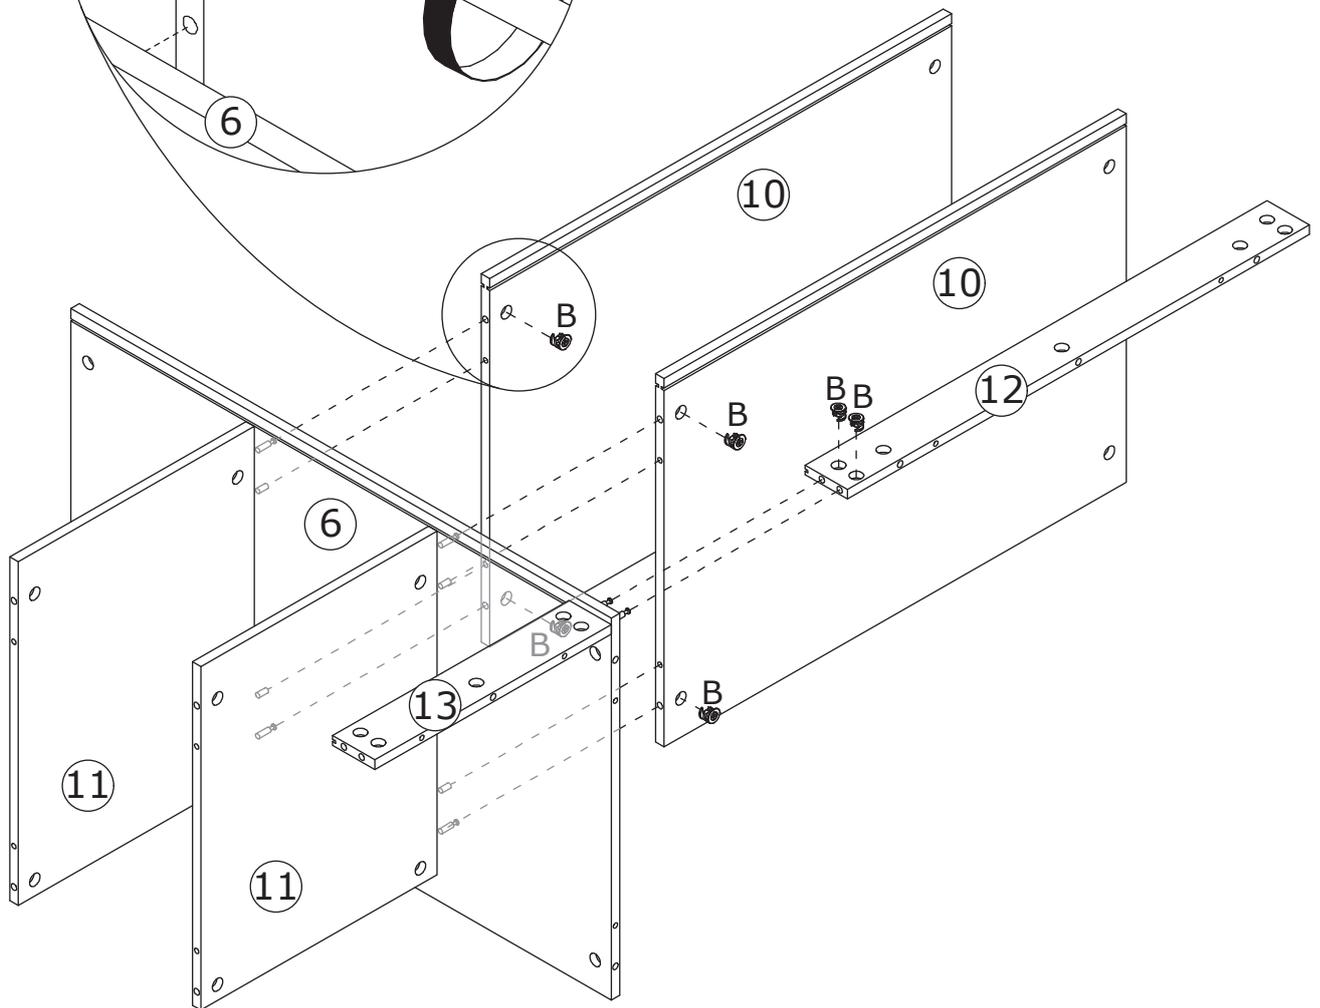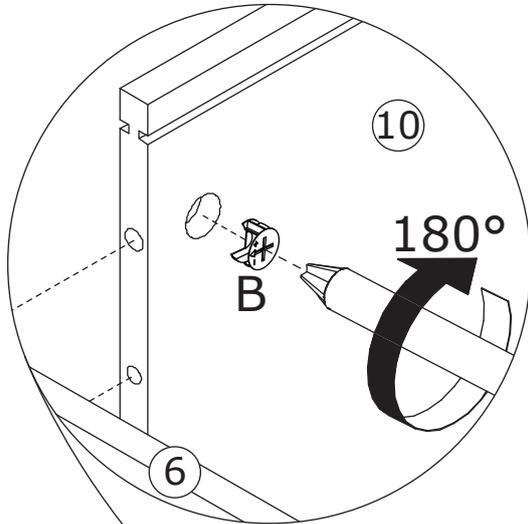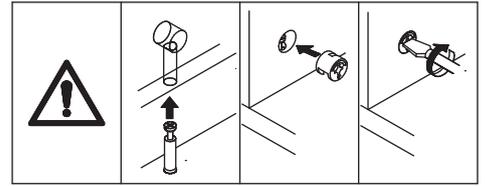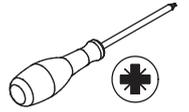


Attach board 10 and 12 to board 6,  
add cam lock(B) into board 10,12  
and turn clockwise to tighten as shown.

17

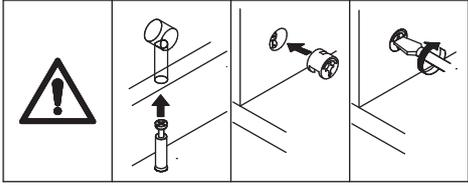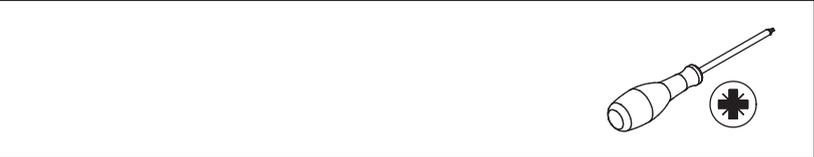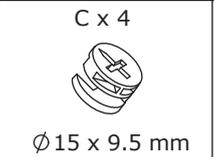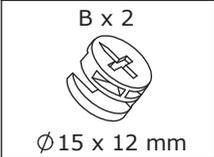


Attach board 5 to board 11,  
add cam lock(C) into board 11  
and turn clockwise to tighten as shown.  
Attach board 5 to board 13,  
add cam lock(B) into board 13  
and turn clockwise to tighten as shown.

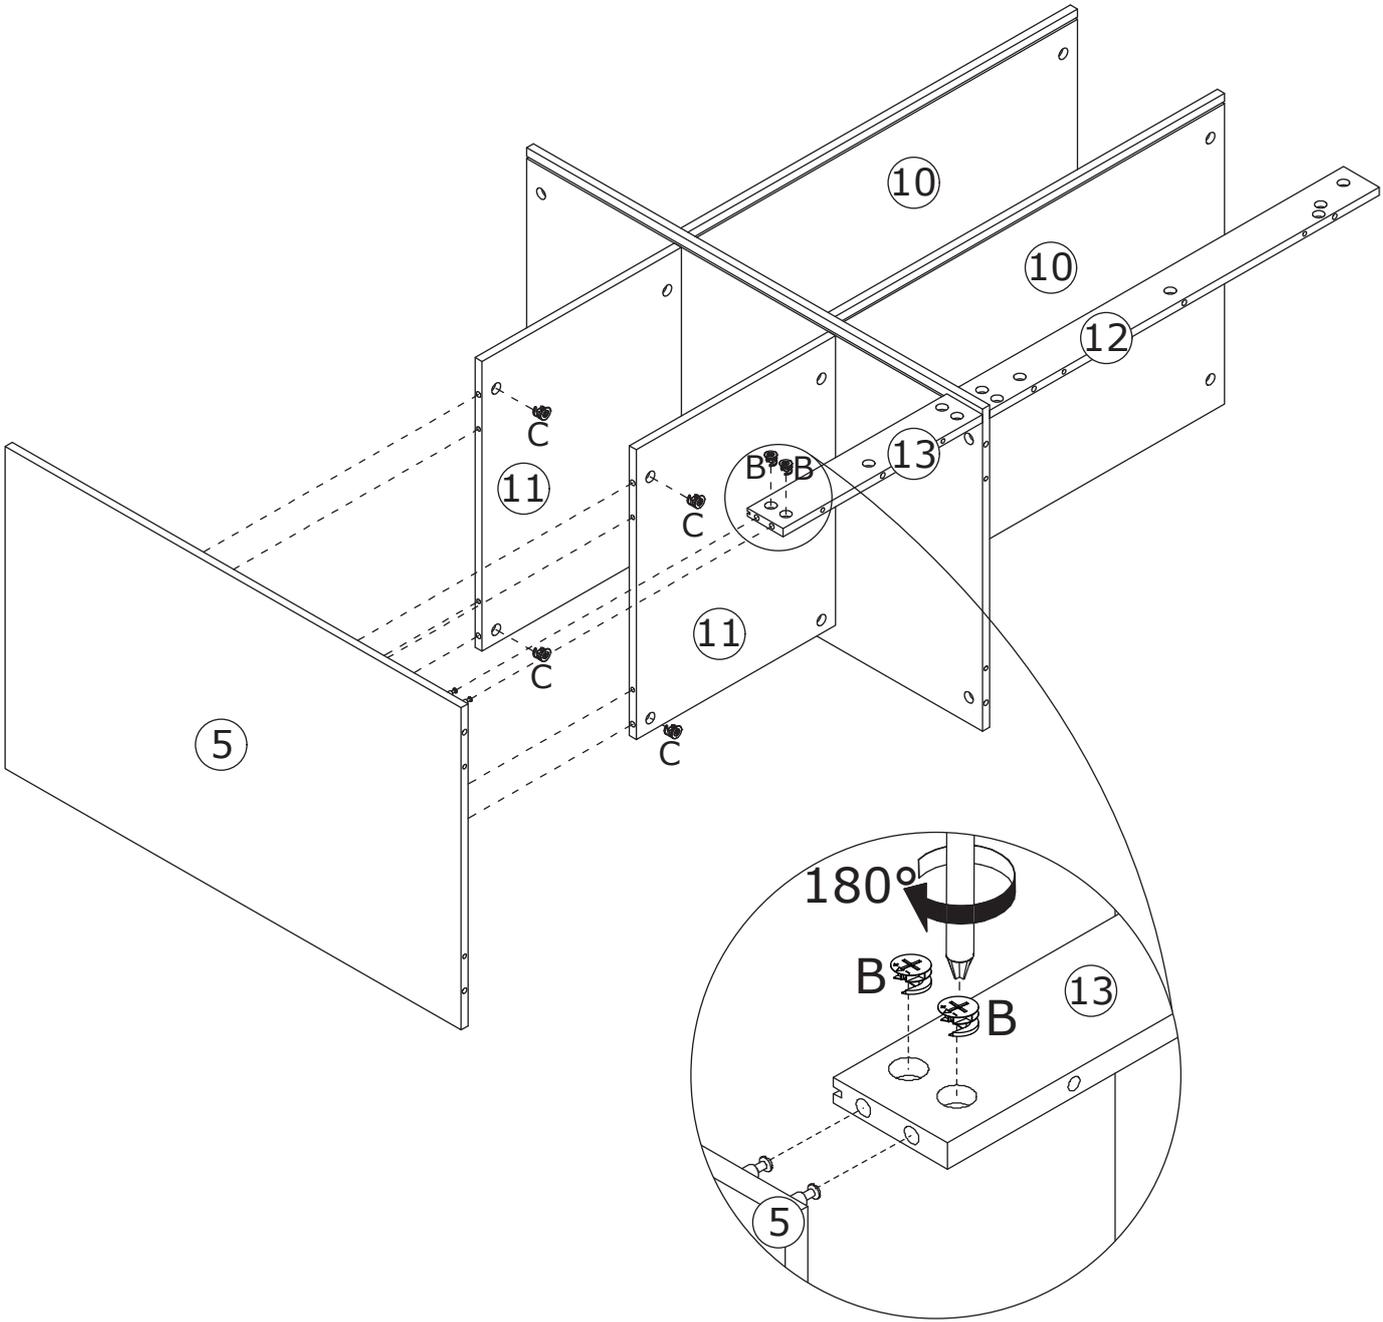



18





Insert back boards 17 and 18 along available grooves as shown.

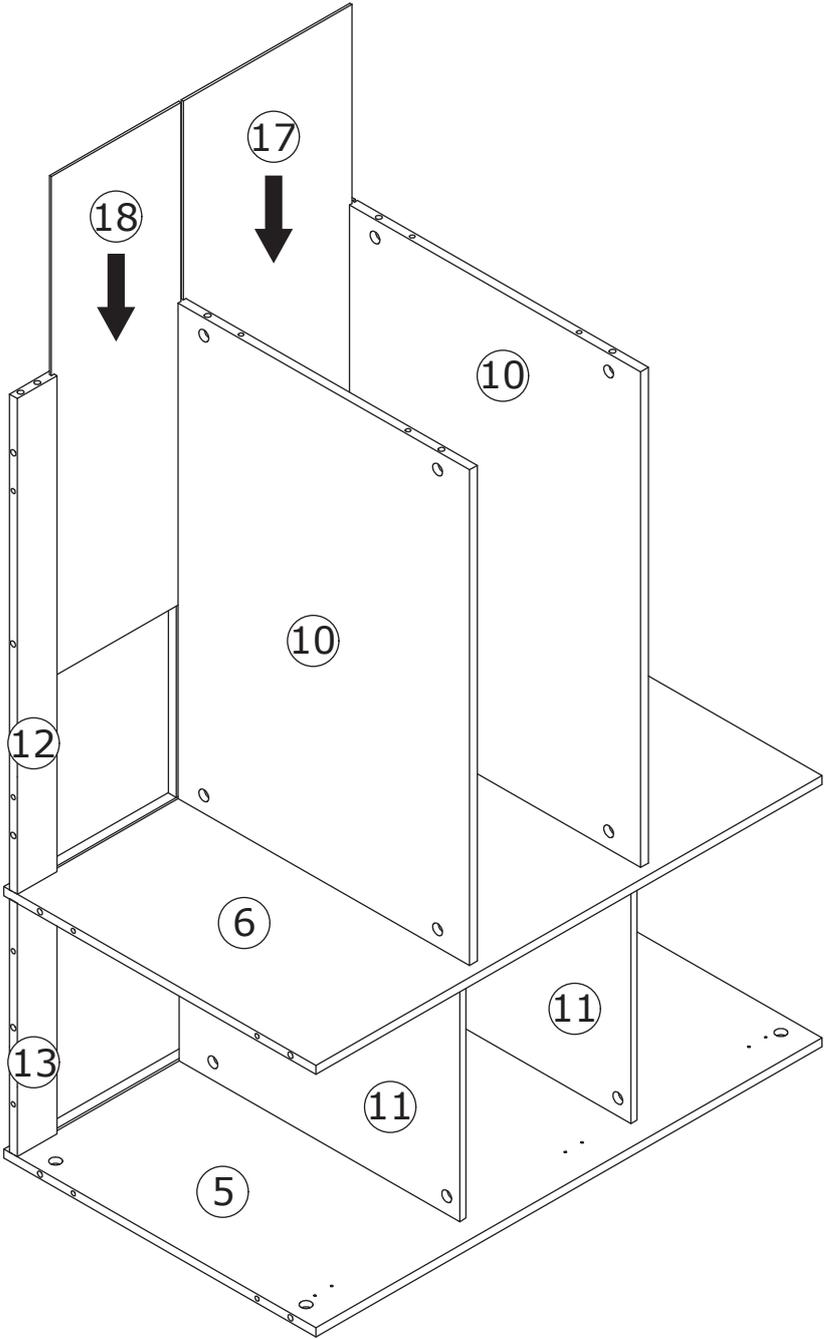

19

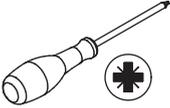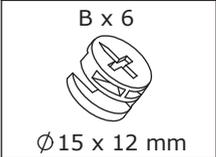


Attach board 4 to board 12 and 10,  
add cam lock(B) into board 12,10  
and turn clockwise to tighten as shown.

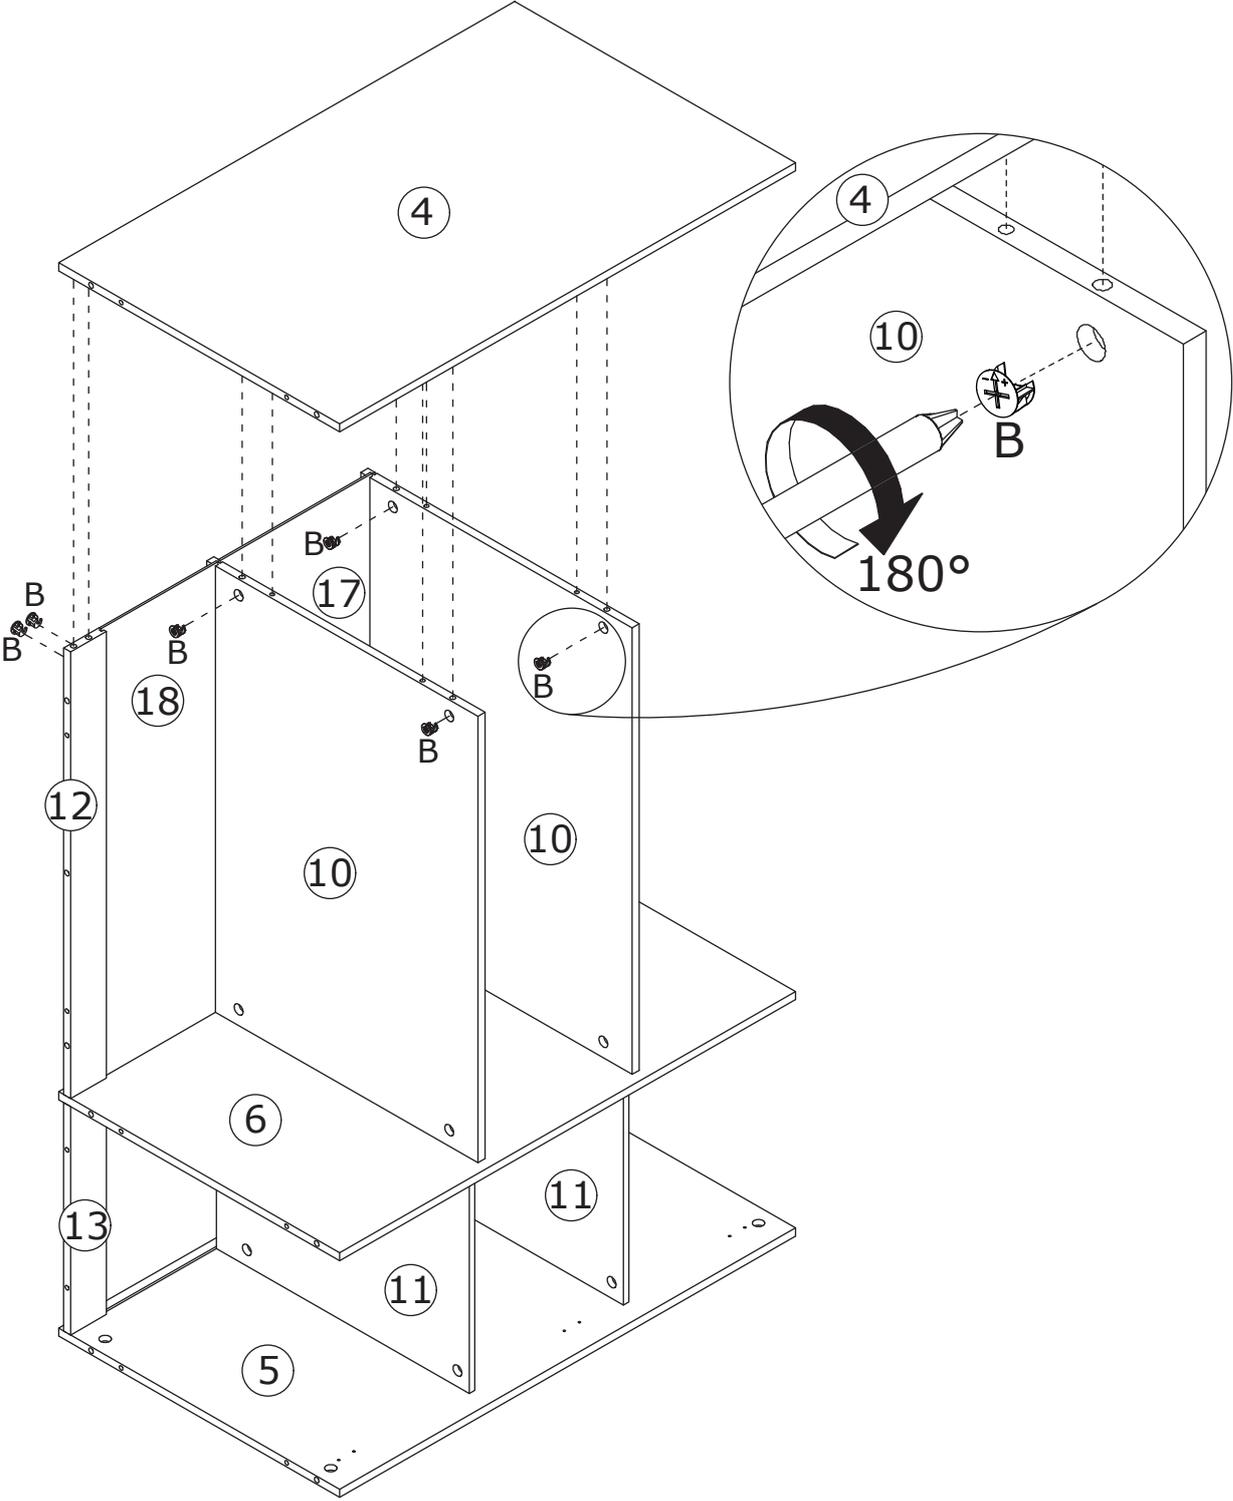
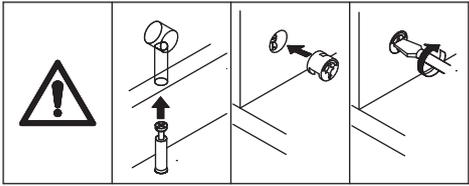







20

Insert back boards 17 and 19 along available grooves as shown.

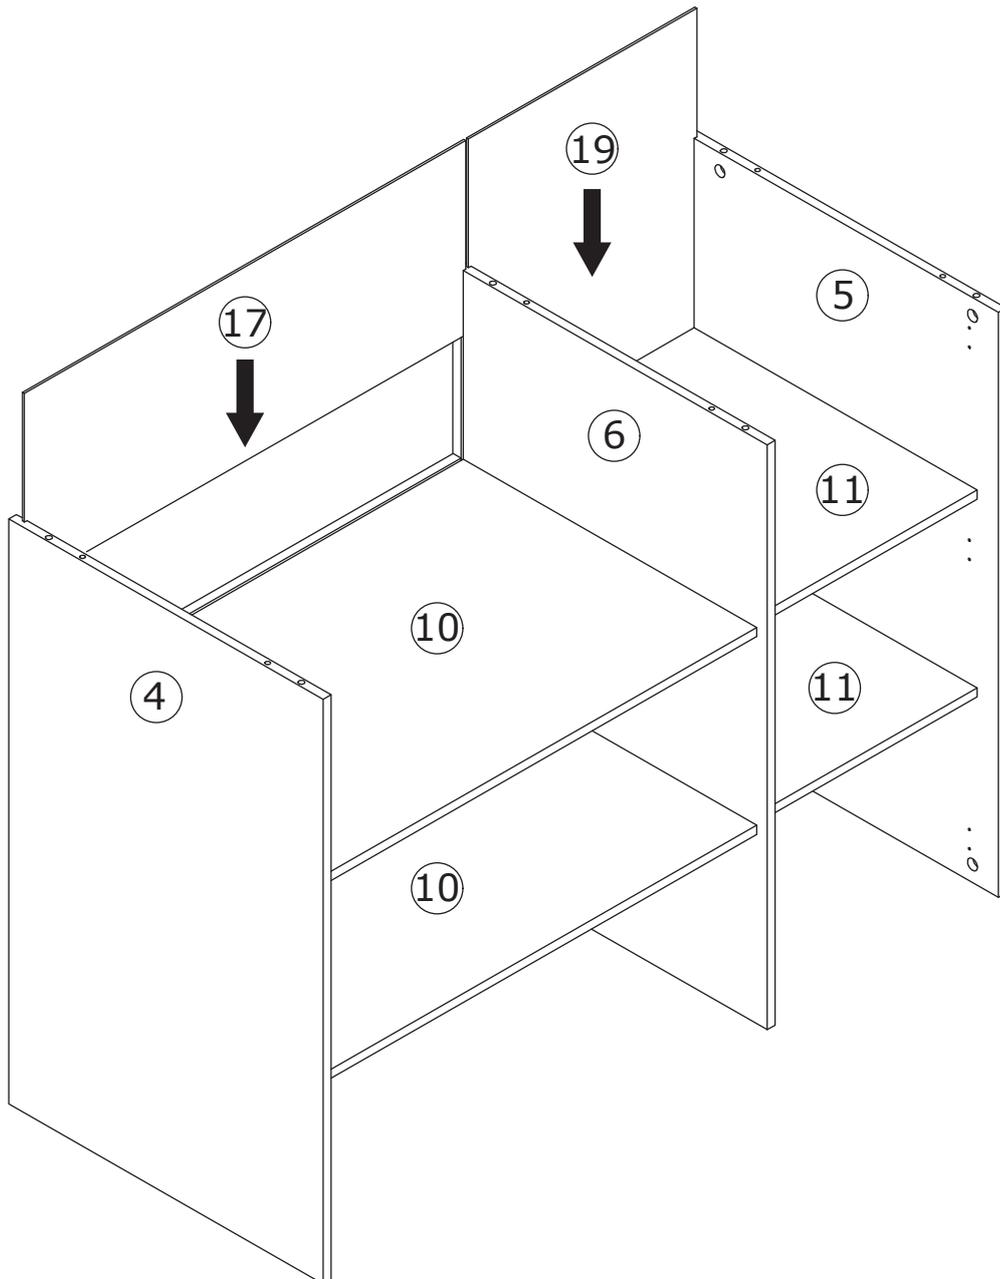

21

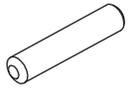
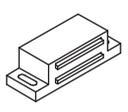
<p>A x 6</p>  <p>∅6 x 35 mm</p>	<p>D x 6</p>  <p>∅6 x 30 mm</p>	<p>E x 2</p>  <p>∅3 x 14 mm</p>	<p>U x 1</p> 	
--	--	--	---	---

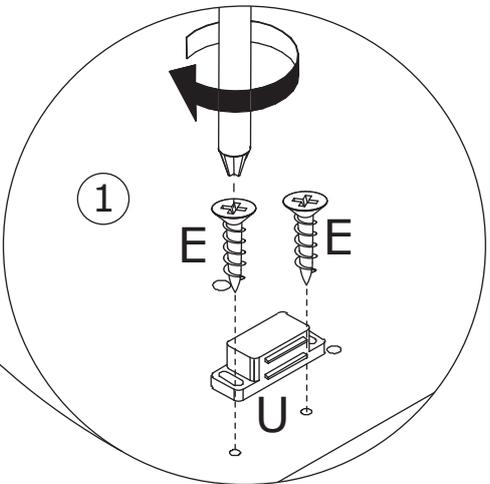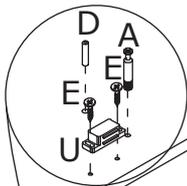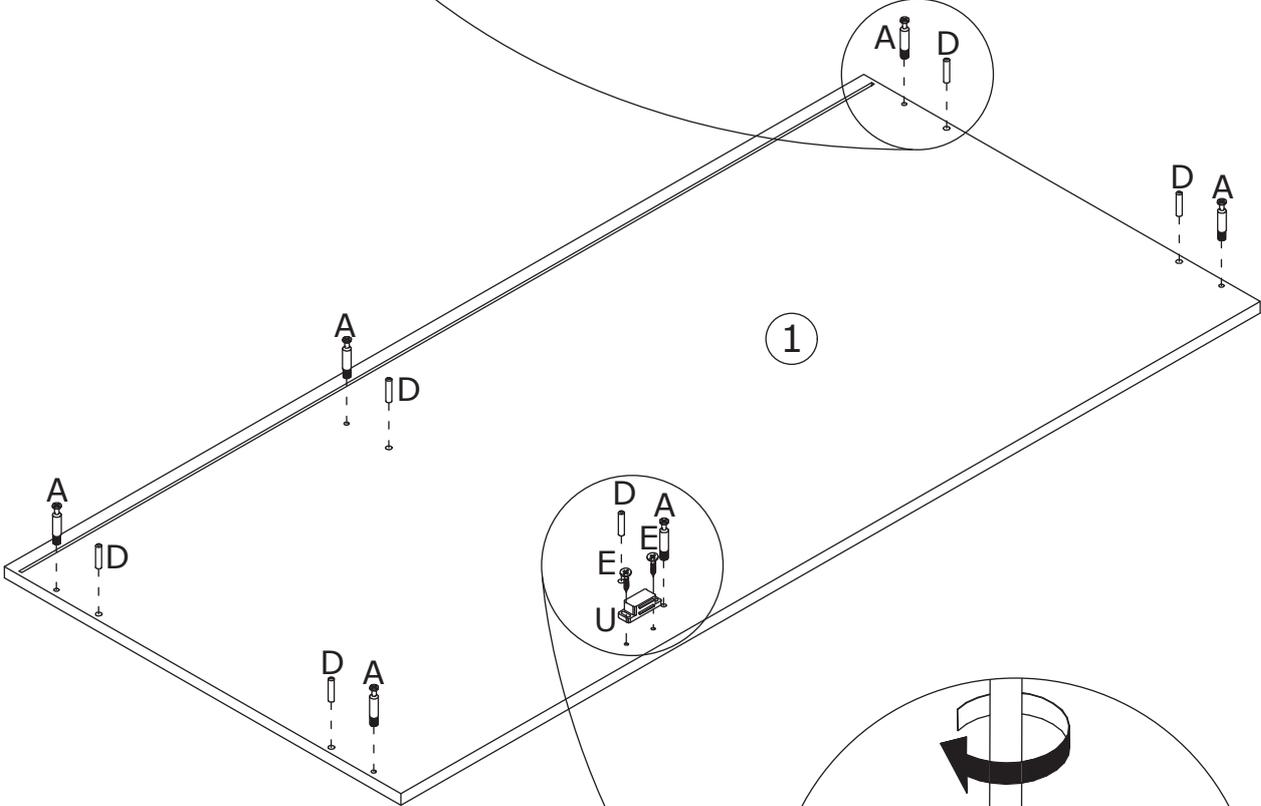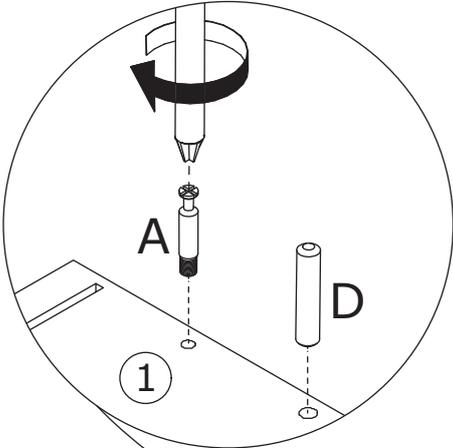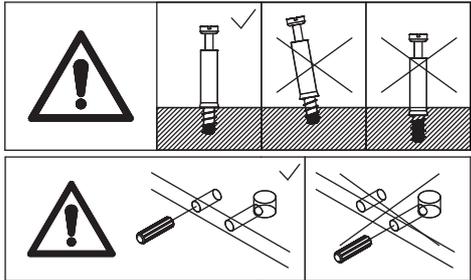


Screw eccentric rod(A) and insert wooden dowel(D) into board 1 at first. Fix part(U) to board 1 with screw(E) as shown.

22

B x 6  
Ø 15 x 12 mm

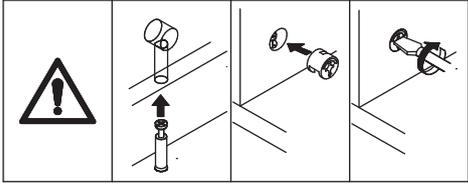
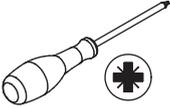


Cover board 1 to the top,  
add cam lock(B) and turn  
clockwise to tighten as shown.


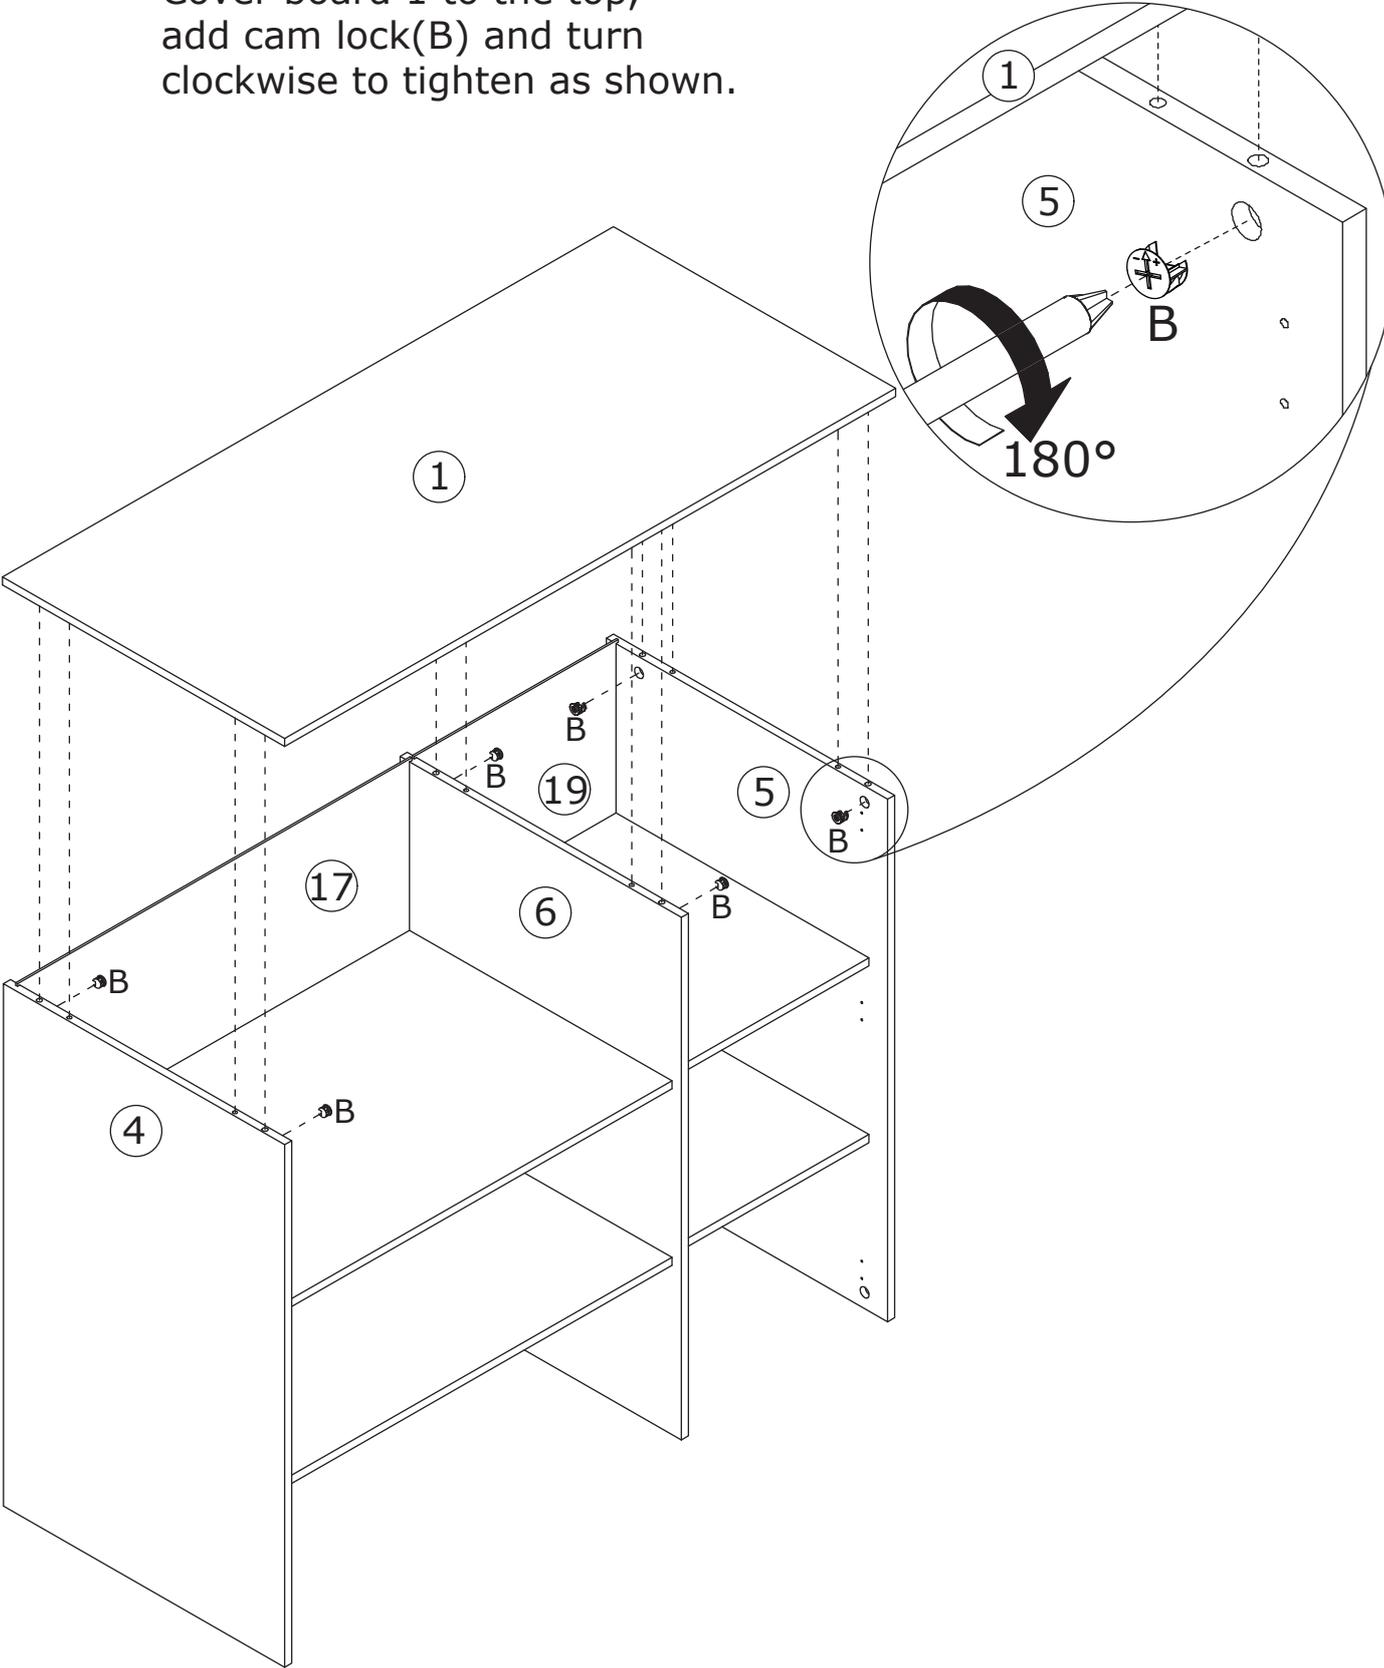


23

B x 10  
Ø 15 x 12 mm

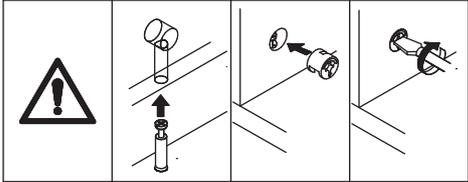
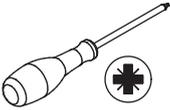


Connect the two assembled components, add cam lock(B) and turn clockwise to tighten as shown.

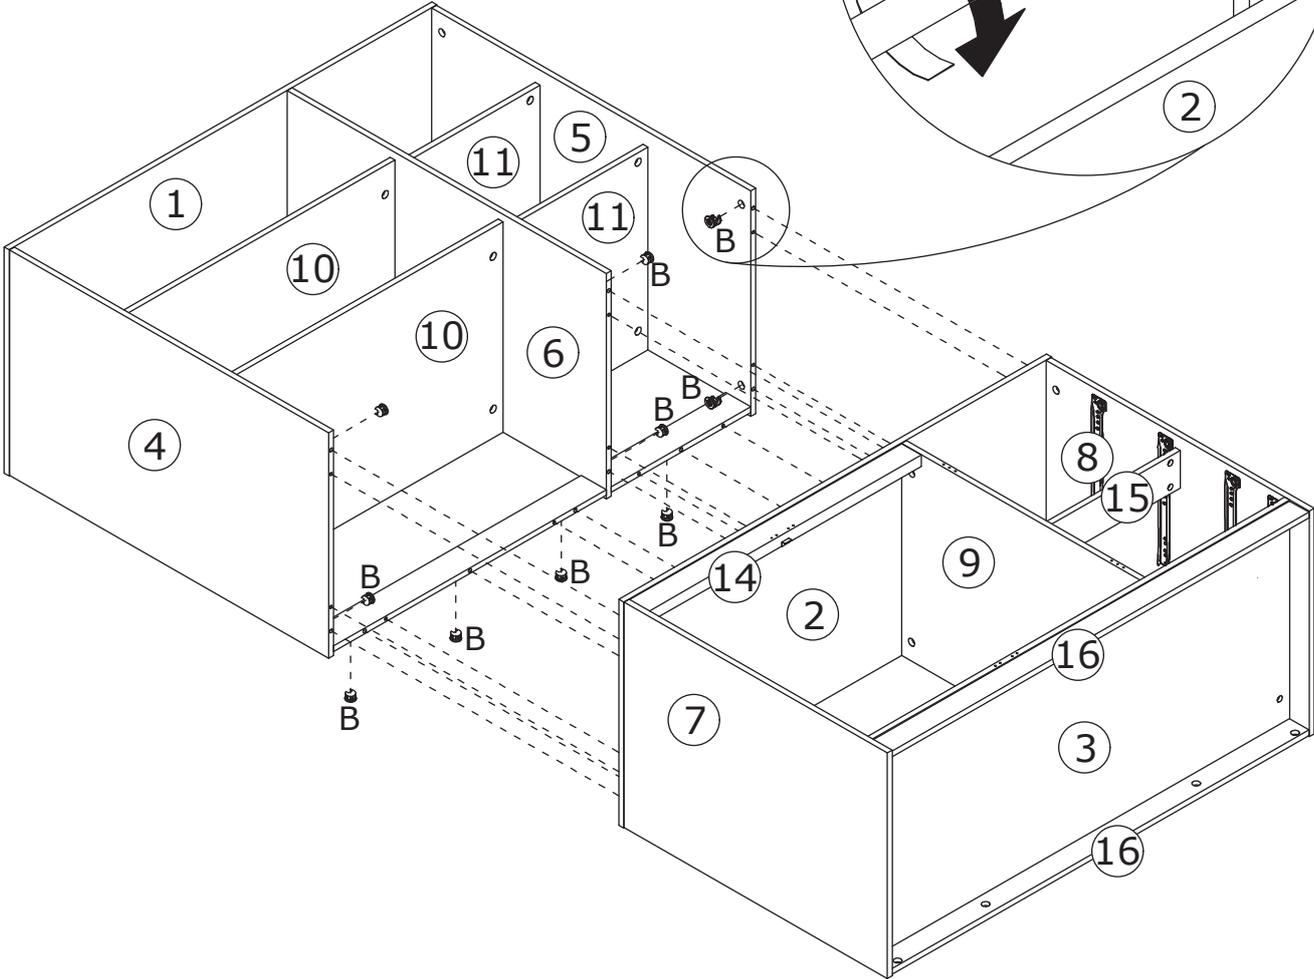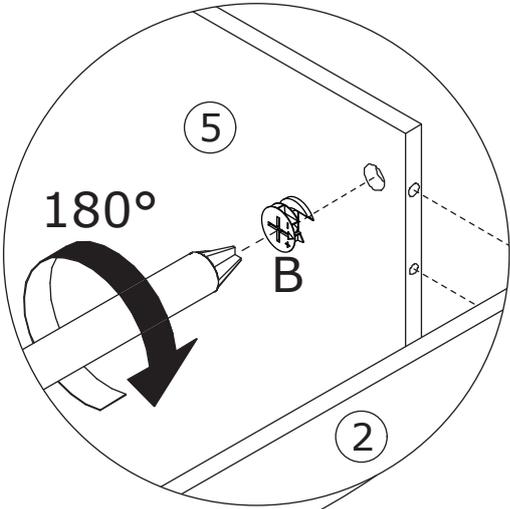


24







Q x 24  
Ø3 x 16 mm

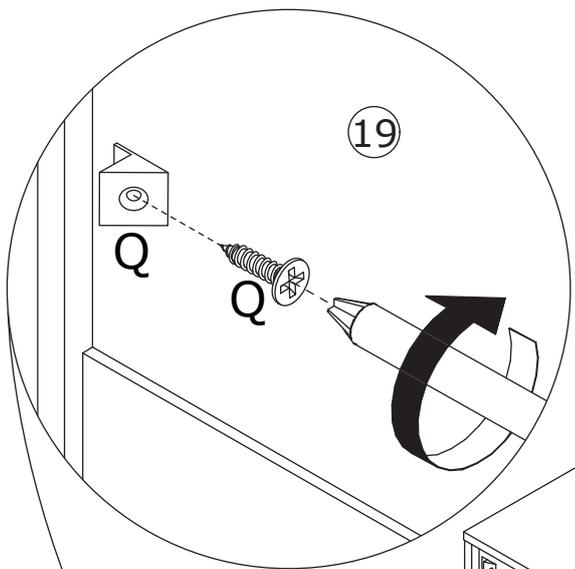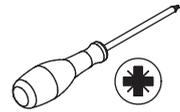


Insert buckle(Q) into back slots and fix it to tighten as shown.

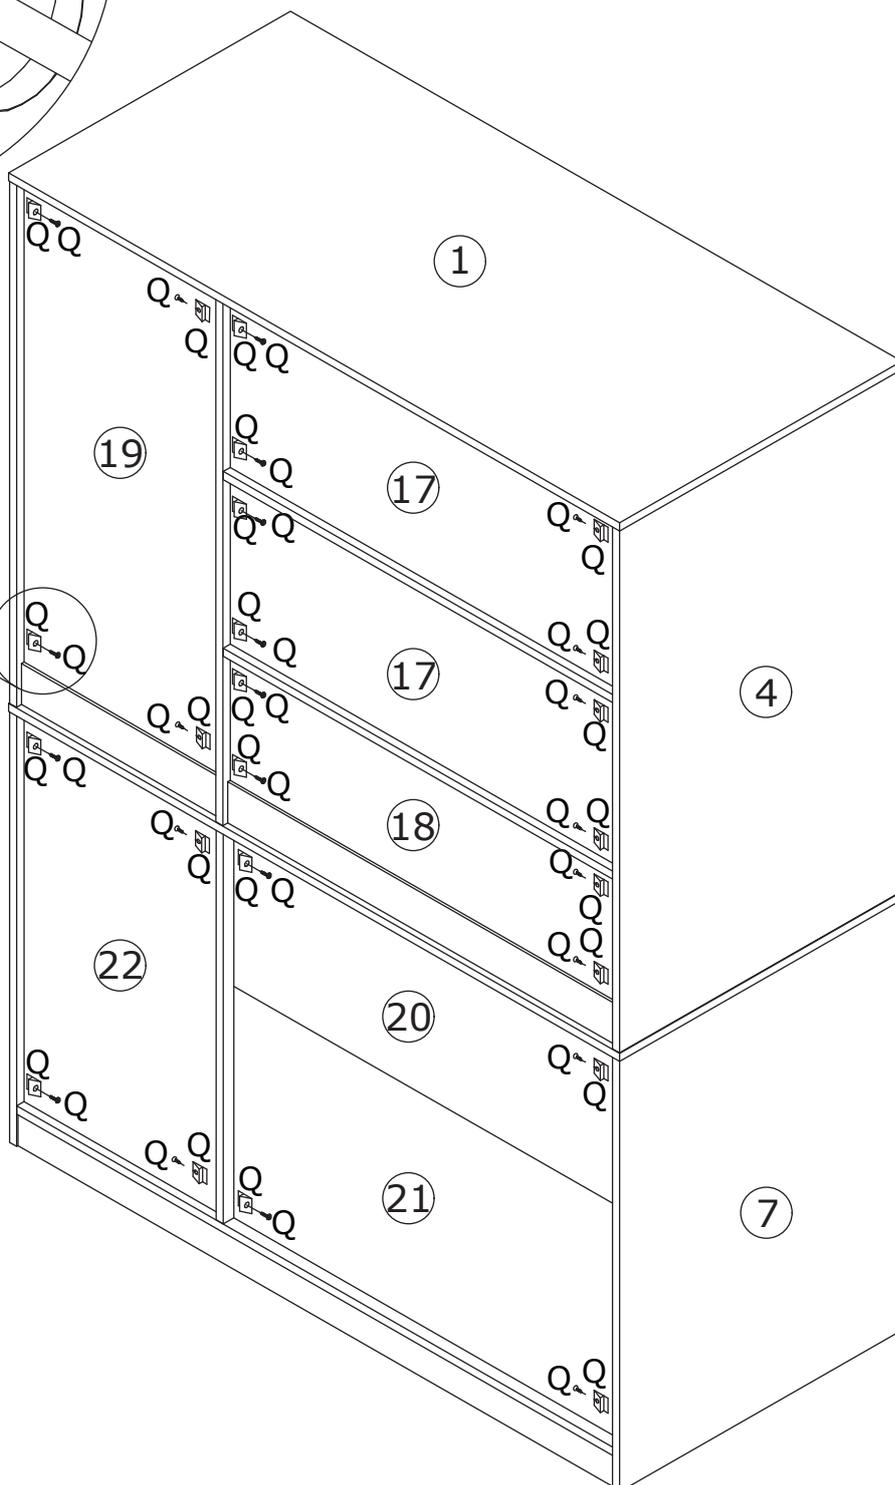


25

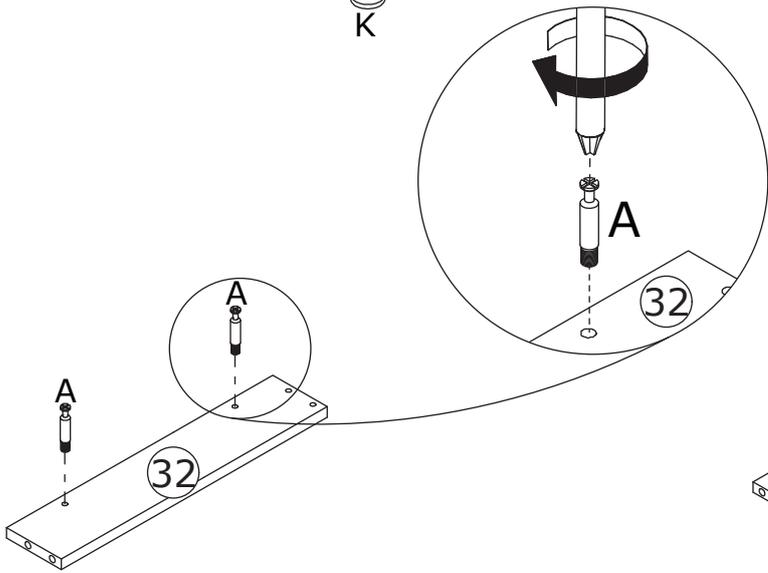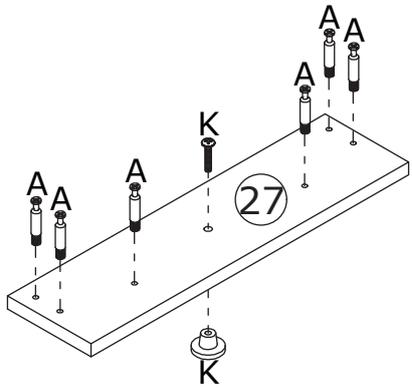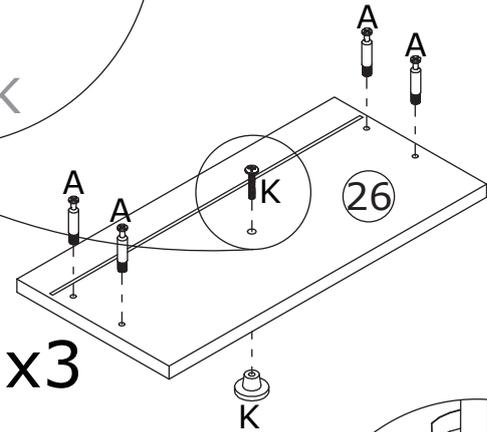
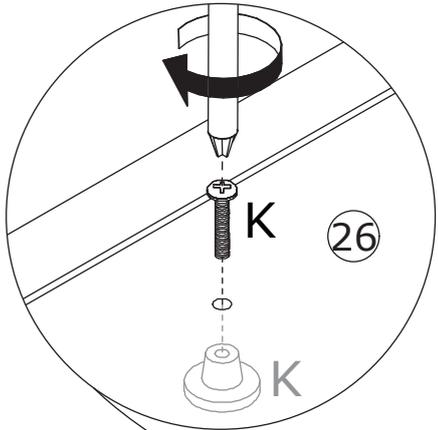
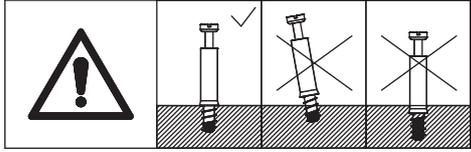
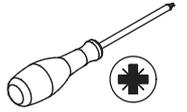


Screw eccentric rod(A) into board 26, 27, 32, 33 and 34 as shown.  
Fix knob(K) to board 26 and 27 as shown.

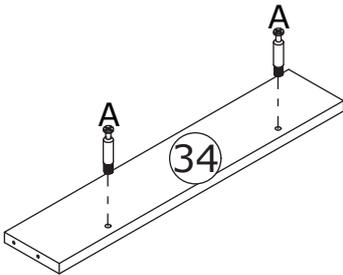


26






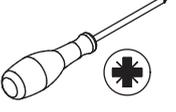
<p>C x 2</p>  <p>Ø15 x 9.5 mm</p>	<p>G x 12</p>  <p>Ø4 x 30 mm</p>	
--	---	---

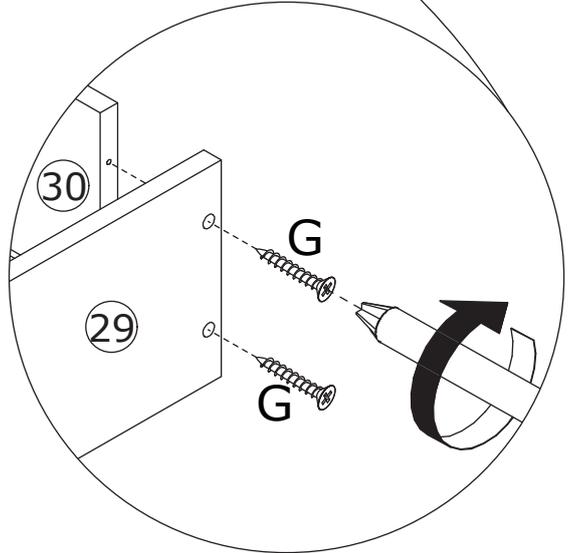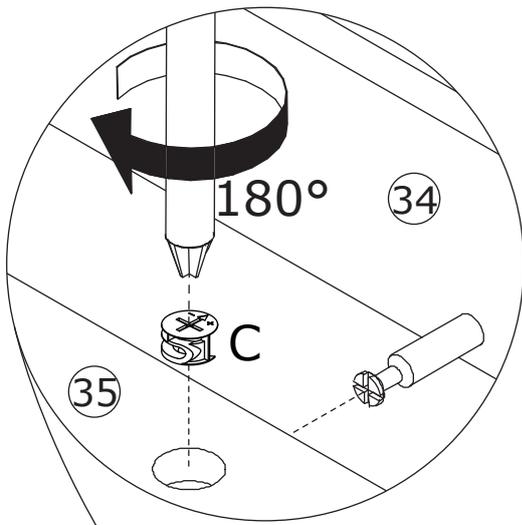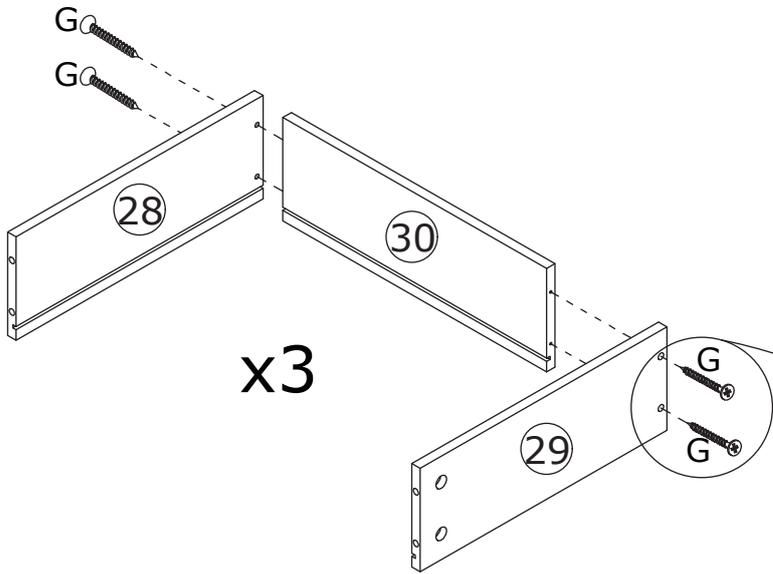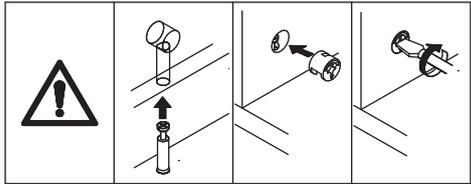

Fix board 28 and 29 to board 30 with screw(G) as shown. Attach board 34 to board 35, add cam lock(C) and turn clockwise to tighten as shown.

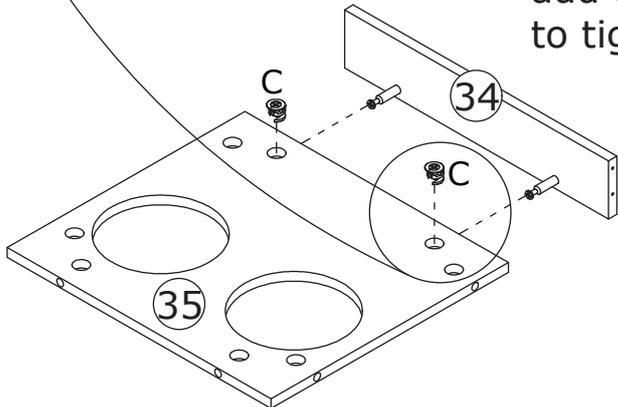

27

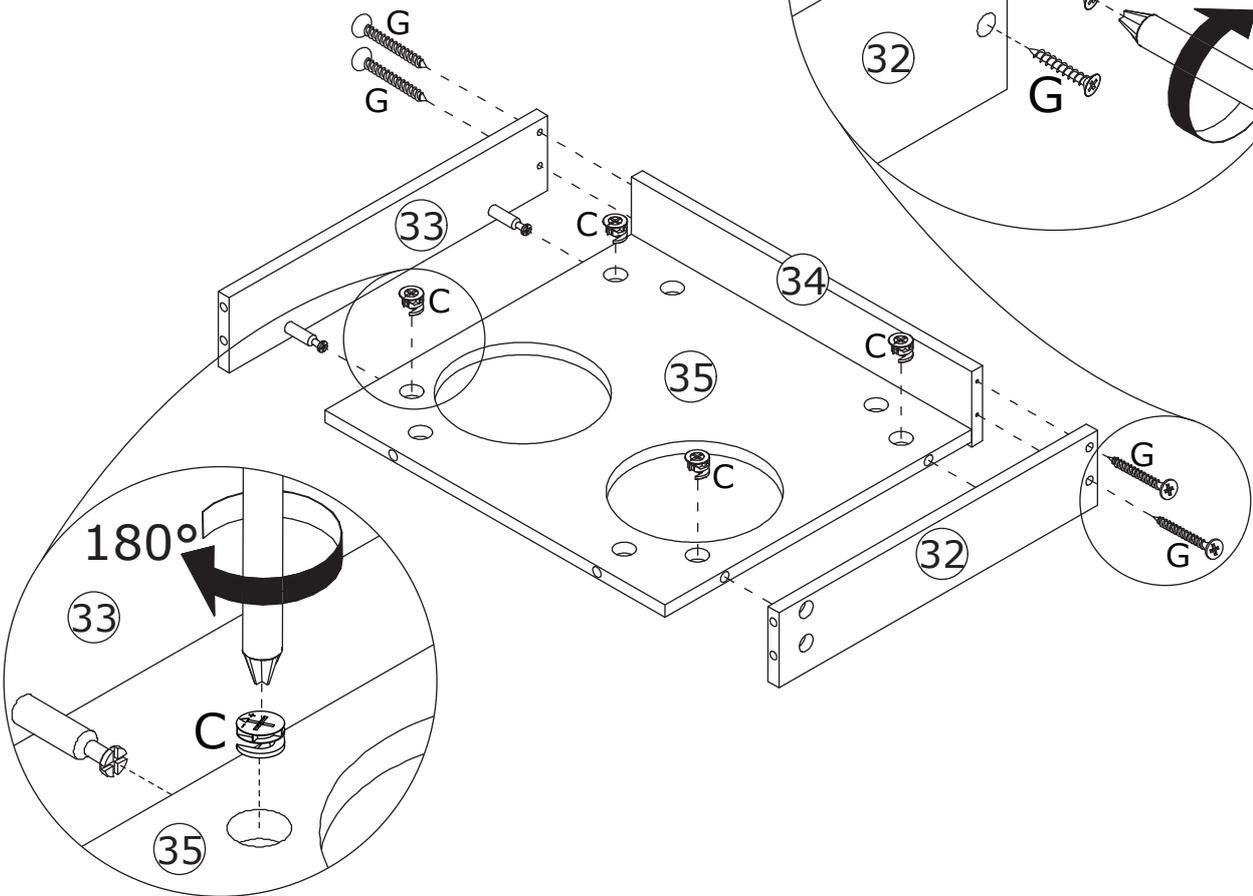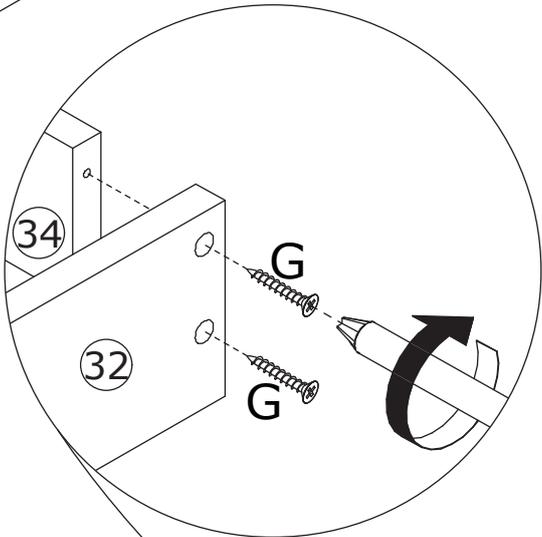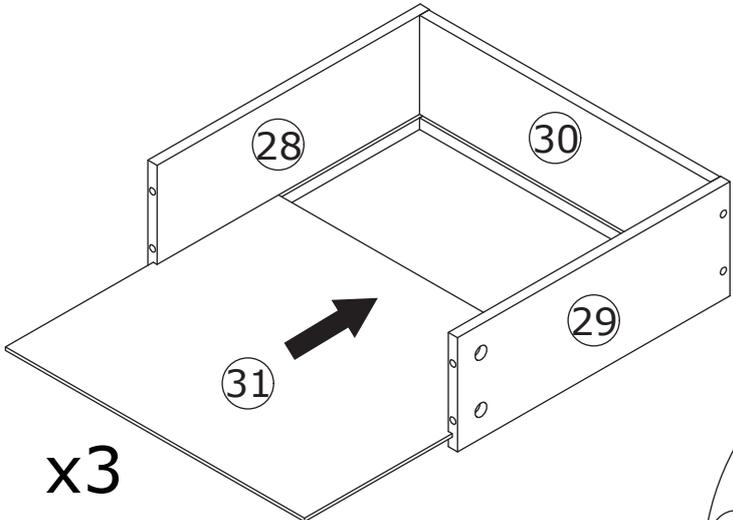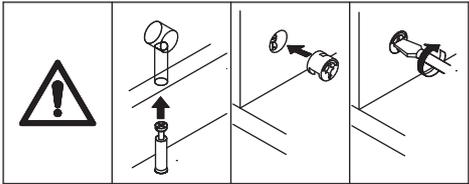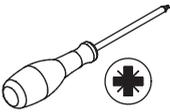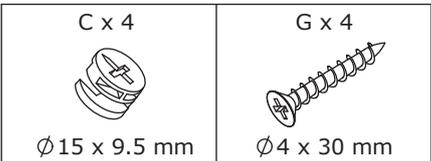




Insert bottom board 31 along grooves as shown. Attach board 33 and 32 to board 34 and 35, add cam lock(C) and turn clockwise to tighten, and fix to board 34 with screw(G) as shown.

# 28

C x 18




Ø15 x 9.5 mm

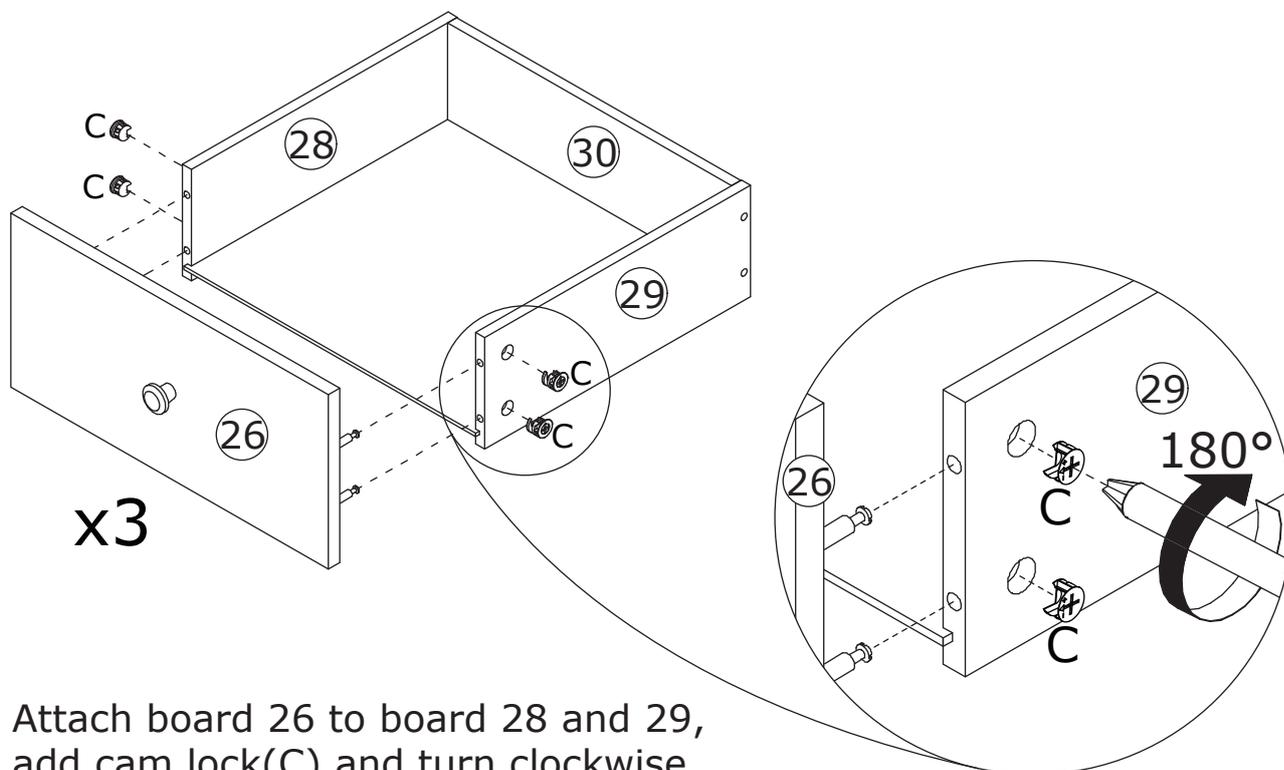
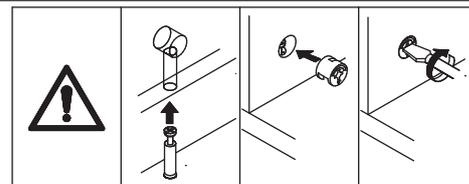
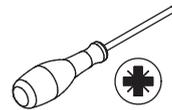


Attach board 26 to board 28 and 29, add cam lock(C) and turn clockwise to tighten as shown.




Attach board 27 to board 32, 35 and 33, add cam lock(C) and turn clockwise to tighten as shown.

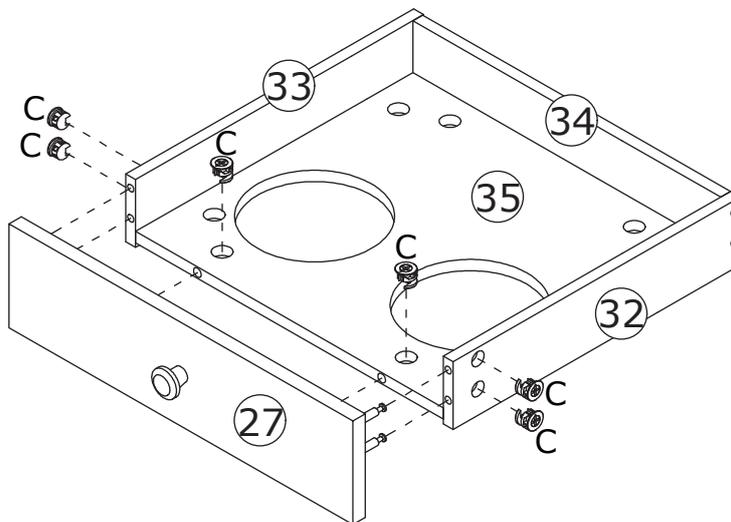


29

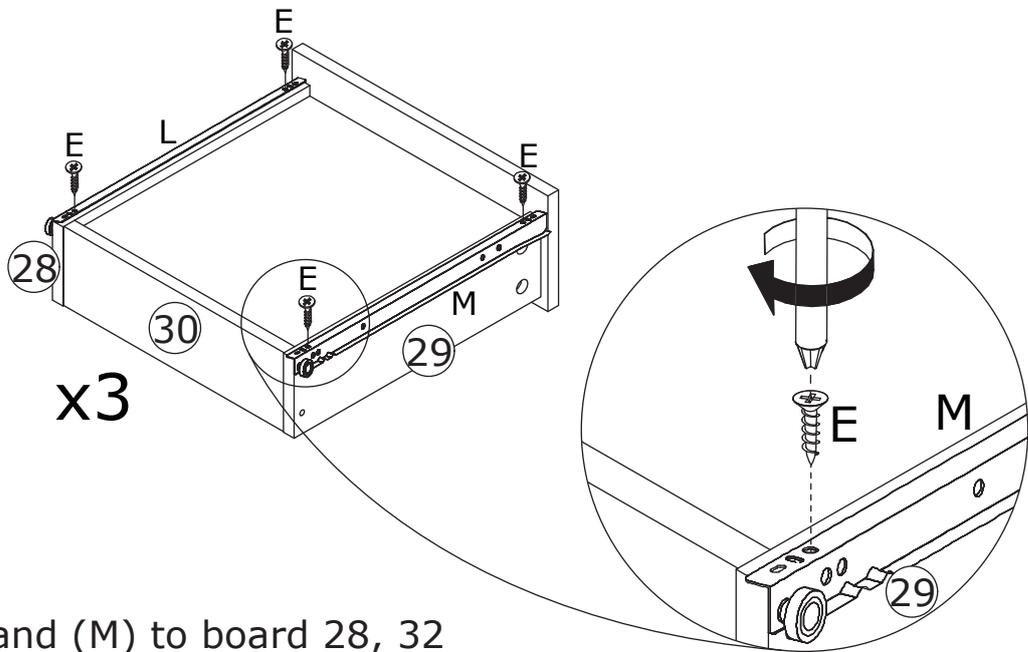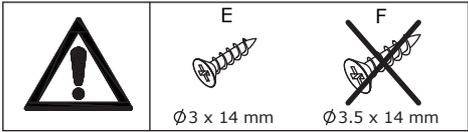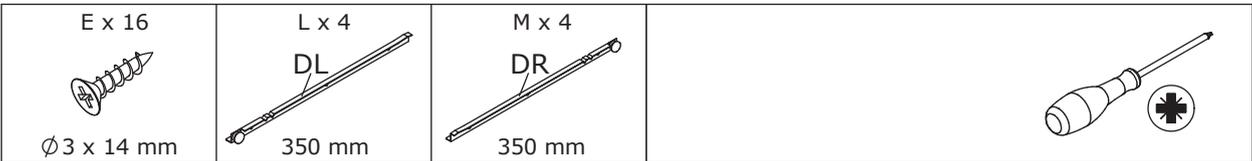


Fix runner(L) and (M) to board 28, 32 and 29, 33 respectively with screw(E) as shown.

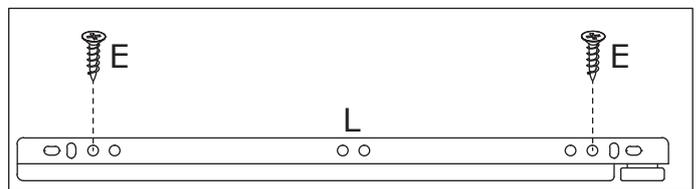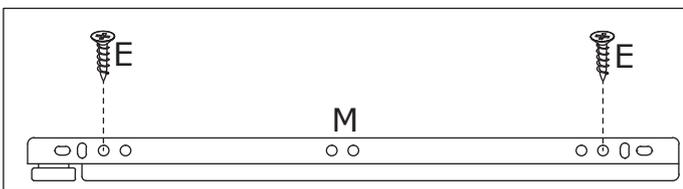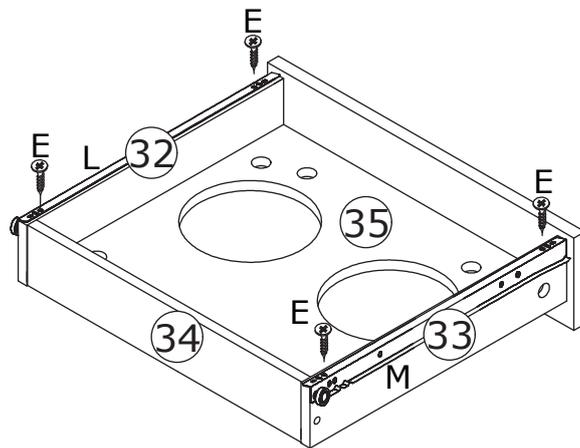




30

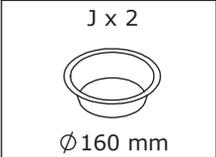


Align rails, insert all drawers in.  
And place bowl(J) into fourth drawer.

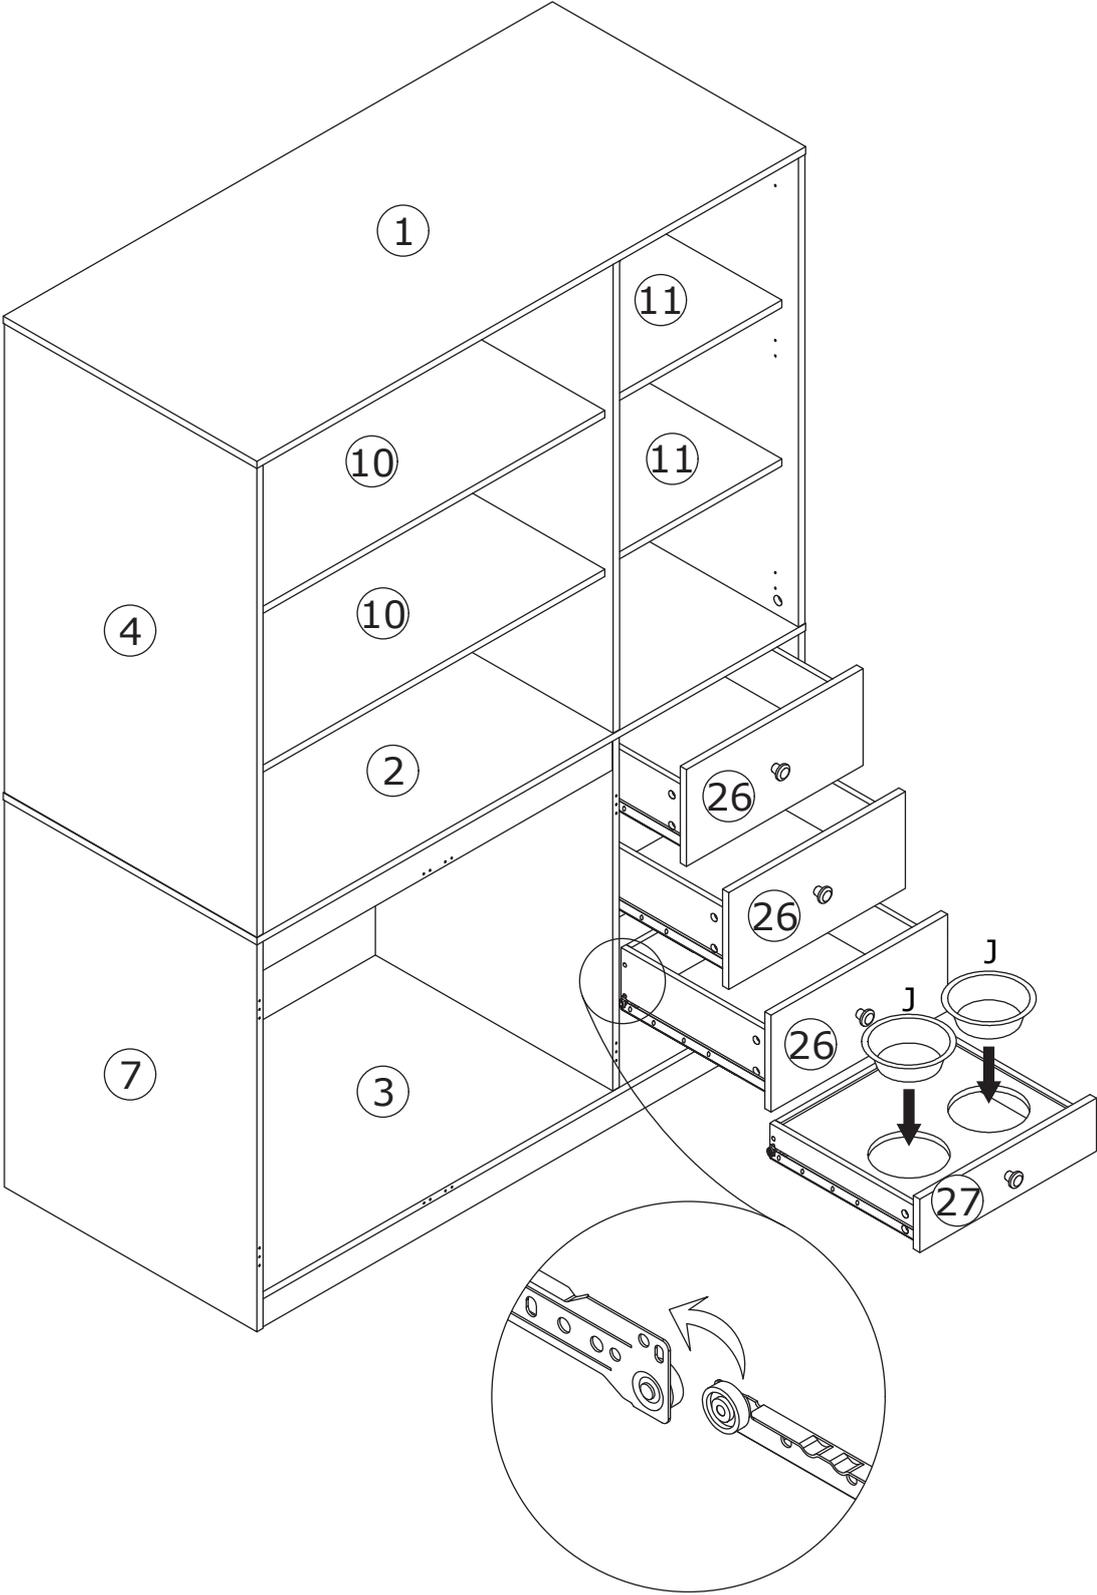



31

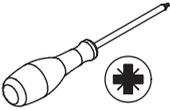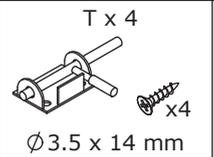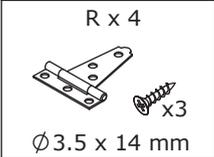


Fix hinge(R) and bolt(T) to board 24 and 25 as shown.

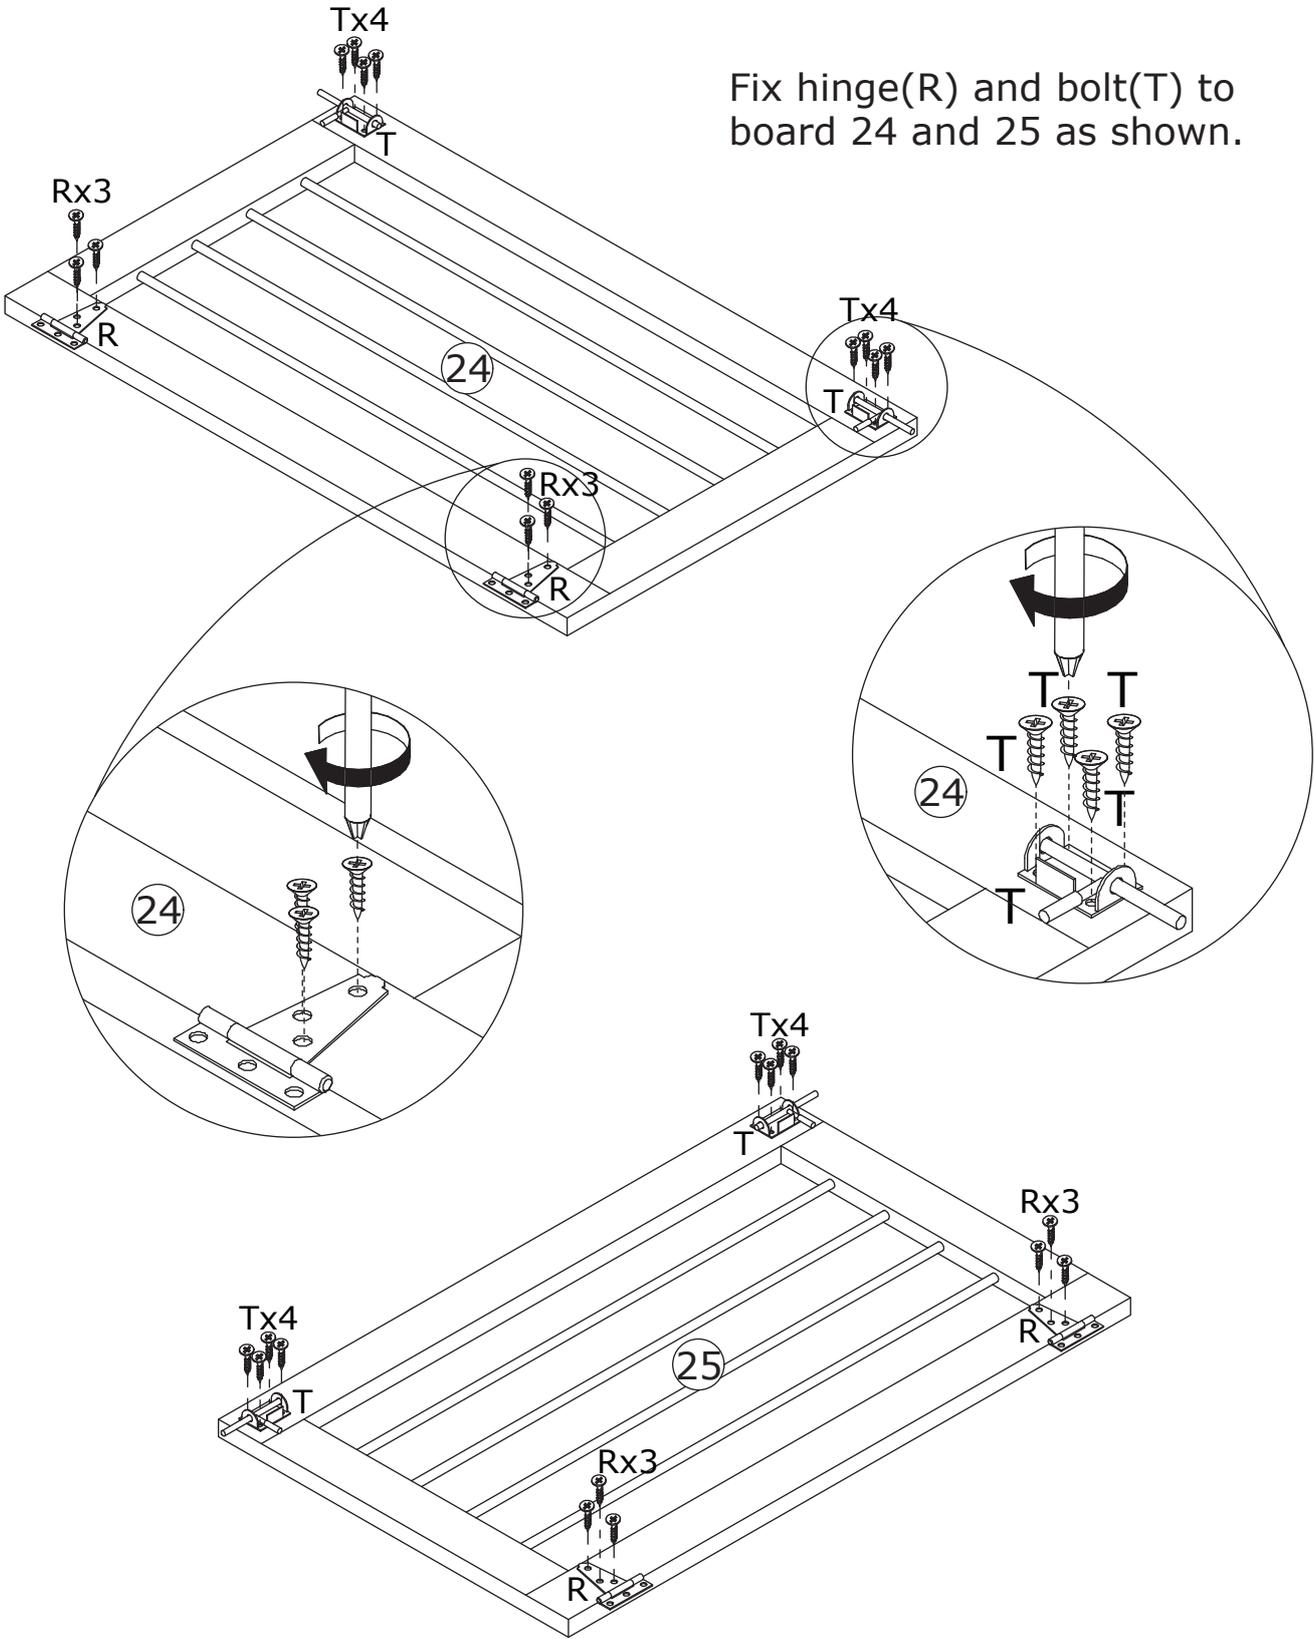

32


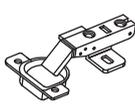
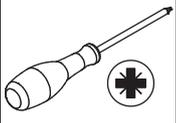
E x 2  Ø3 x 14 mm	F x 6  Ø3.5 x 14 mm	K x 1  Ø4 x 22 mm	U x 1 	V x 3 	
--	--	--	---	--	---

Fix hinge(V) to board 23 with screw(F) as shown.  
Fix knob(K) and part(U) as shown.

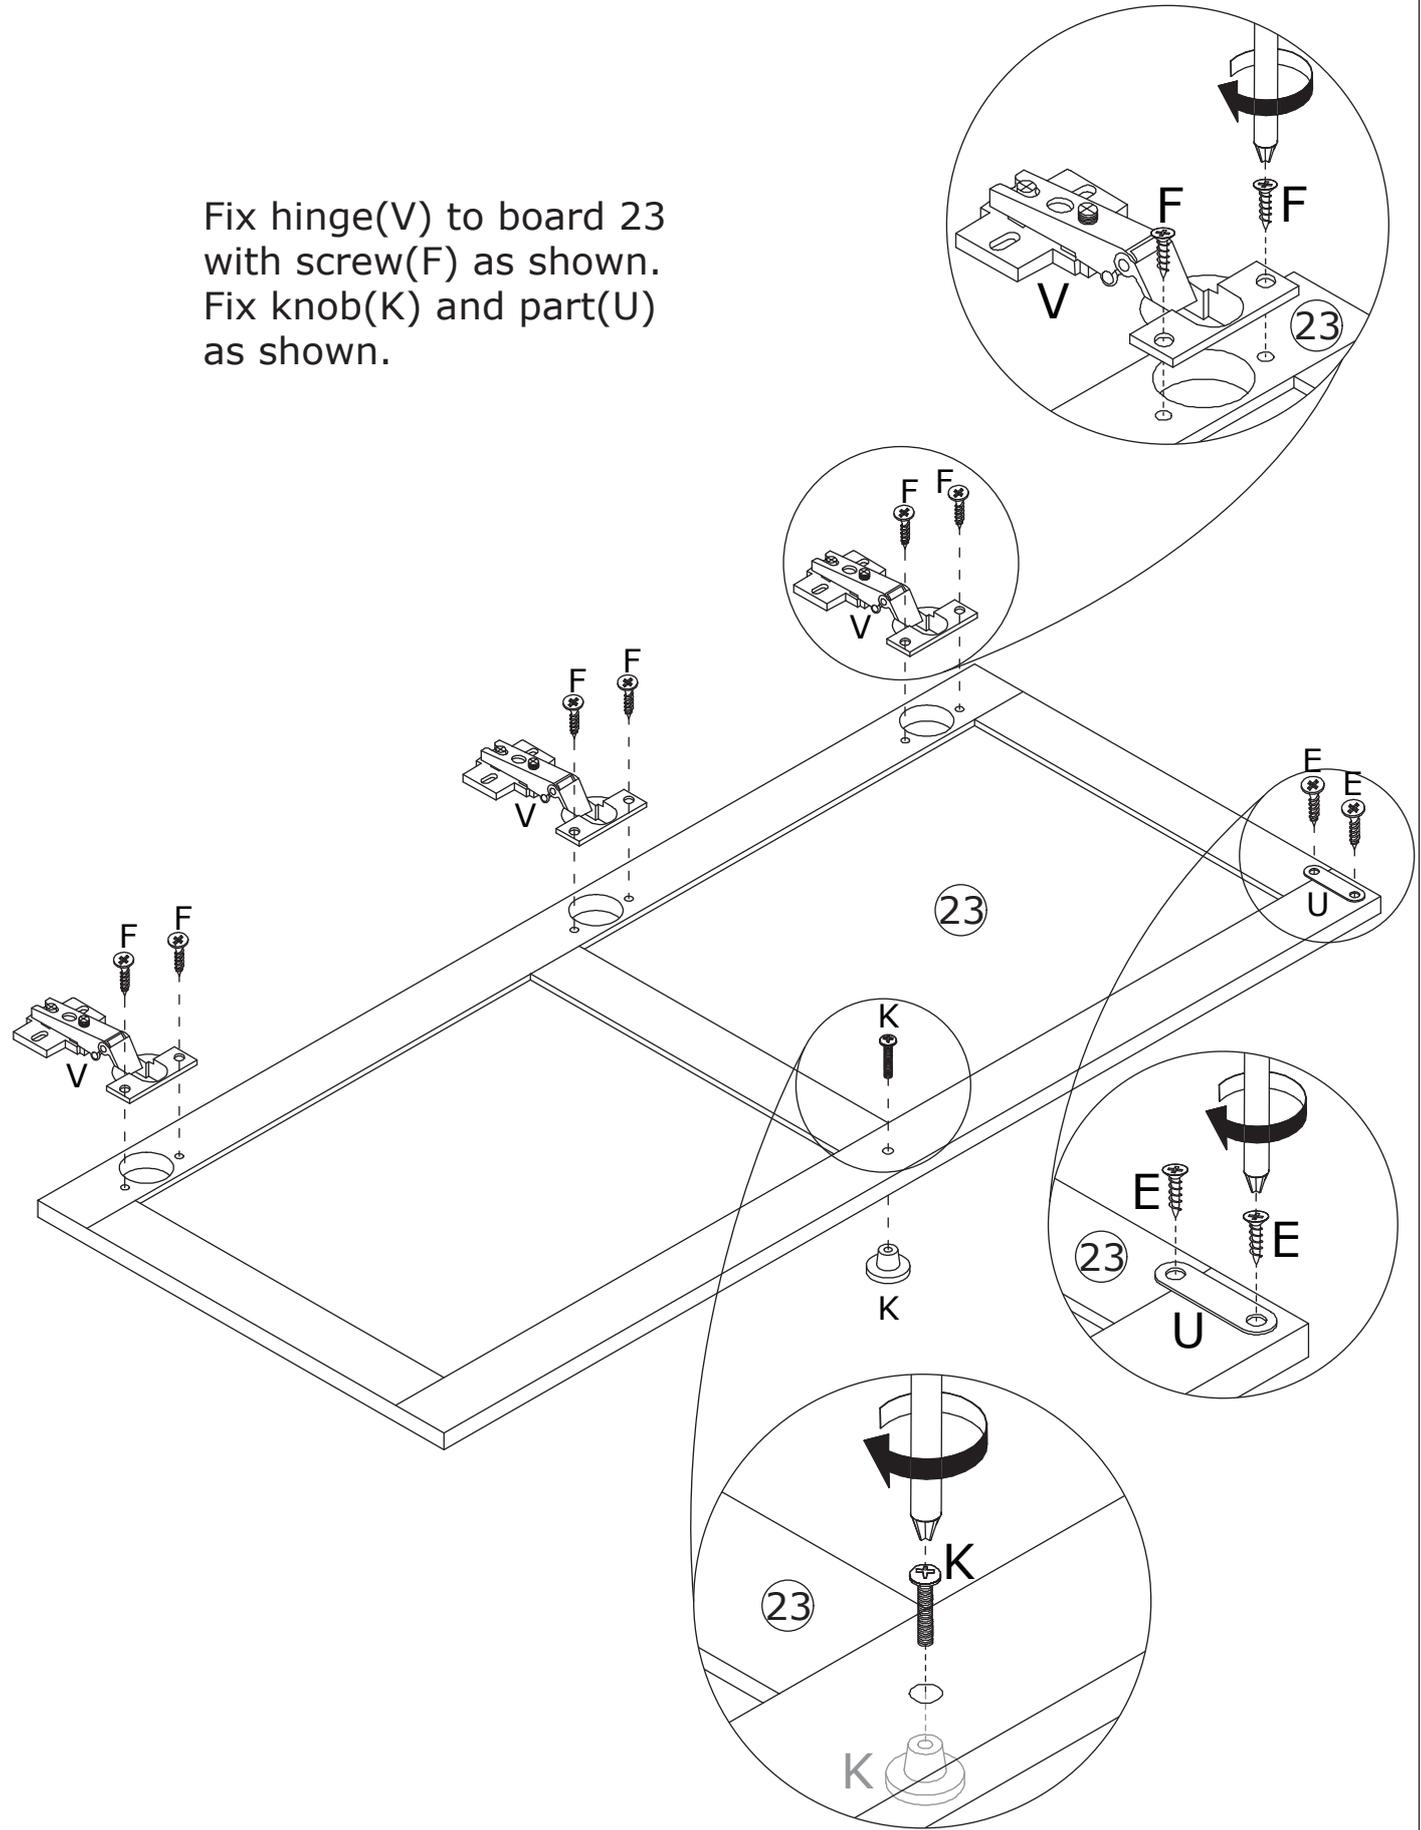

33

T x 4  
x2  
Ø3.5 x 14 mm

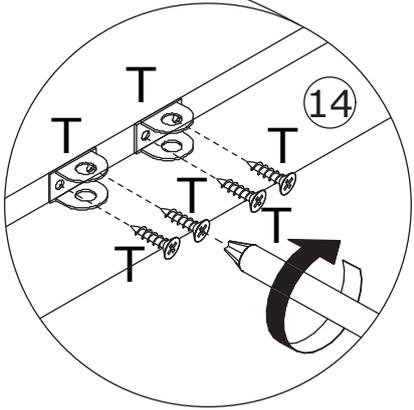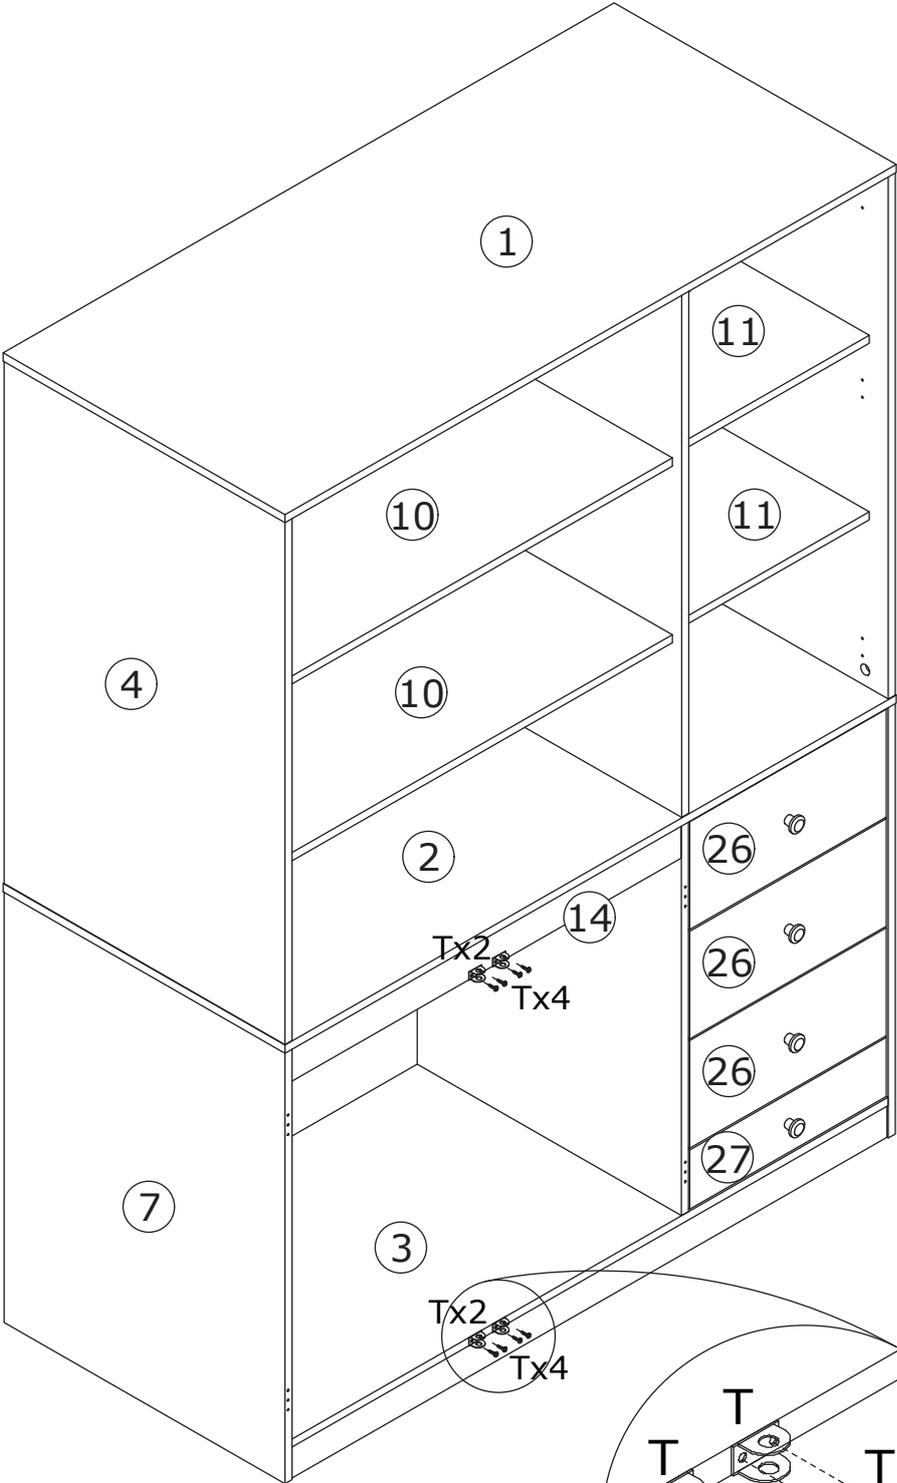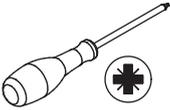


Fix part(T) to board 14 and 16 as shown.

34



R x 12



Ø3.5 x 14 mm




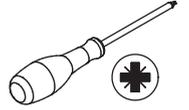


Fix door 24 and 25 to assembled hinge(R) as shown.

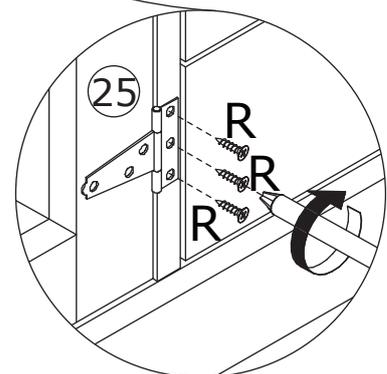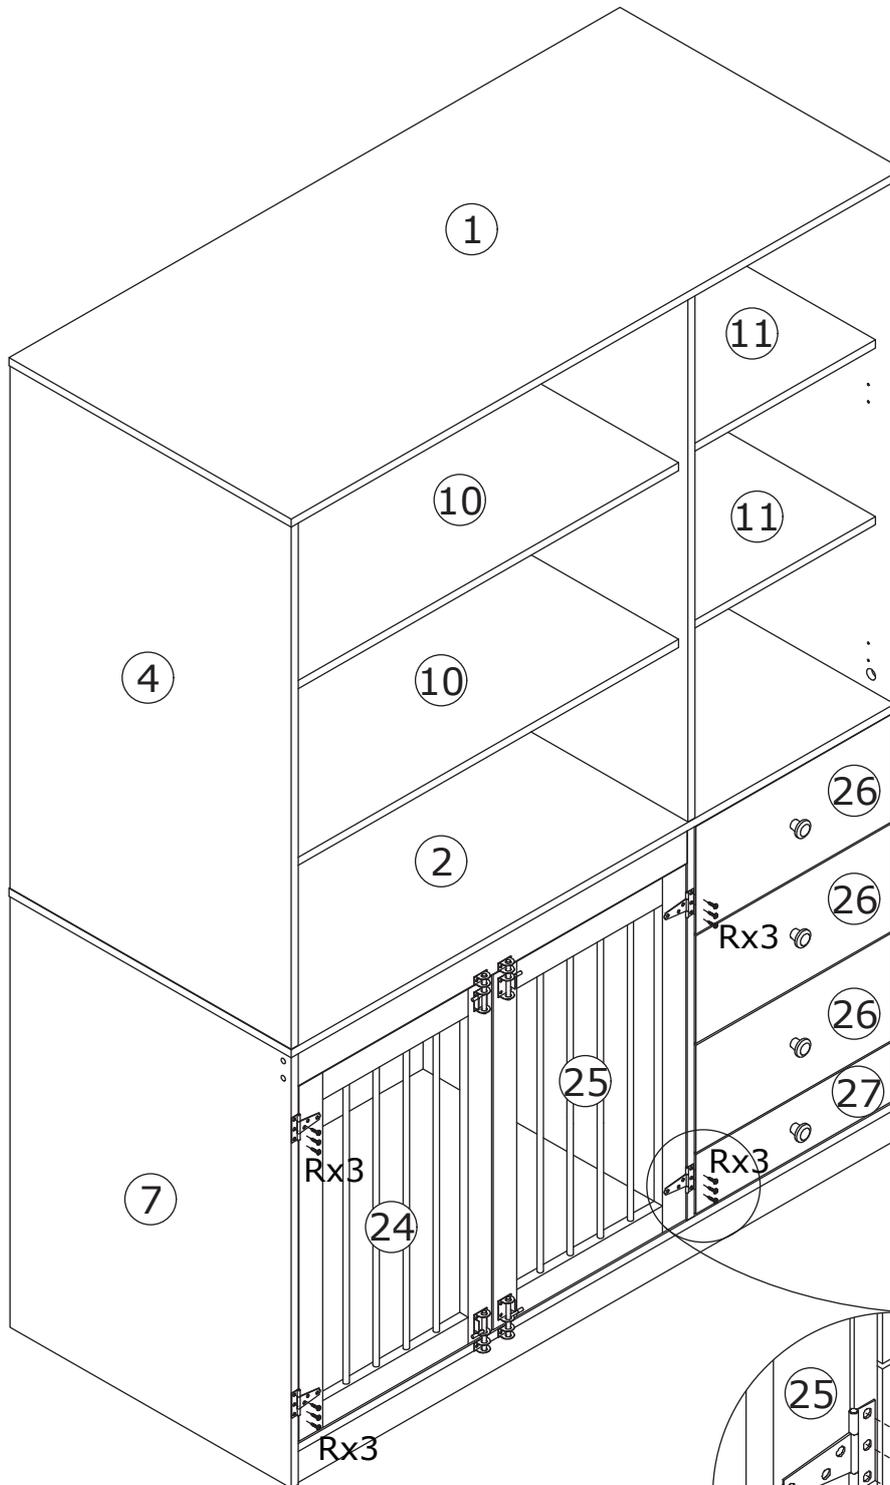


35

F x 6  
Ø3.5 x 14 mm









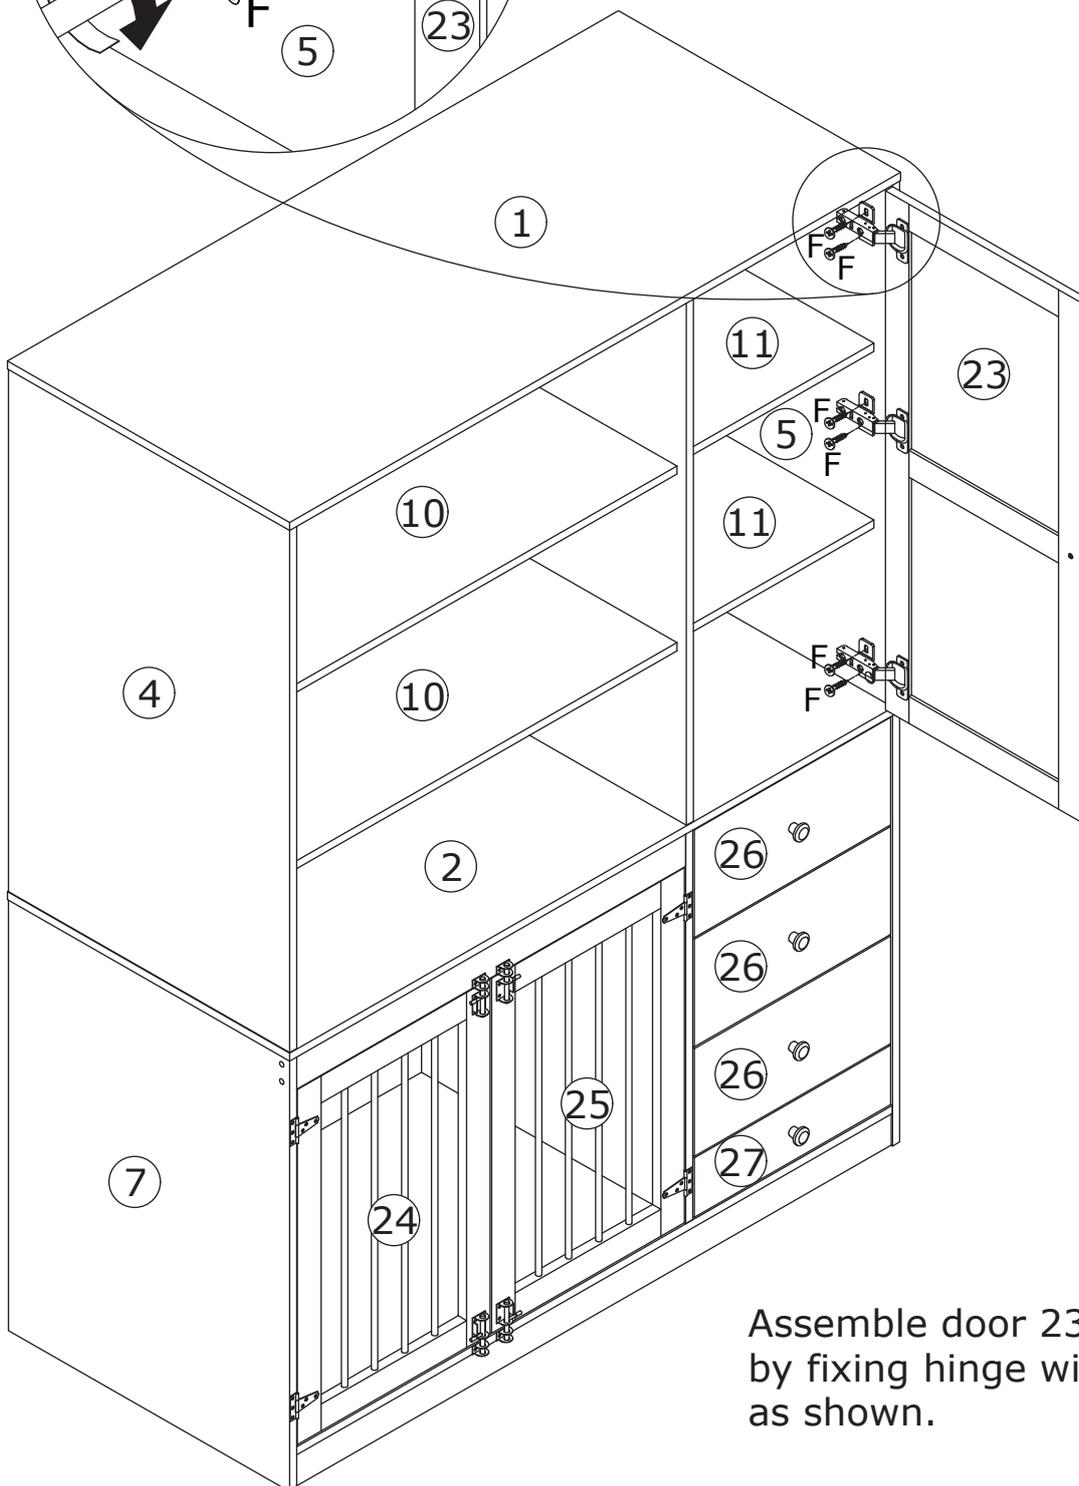
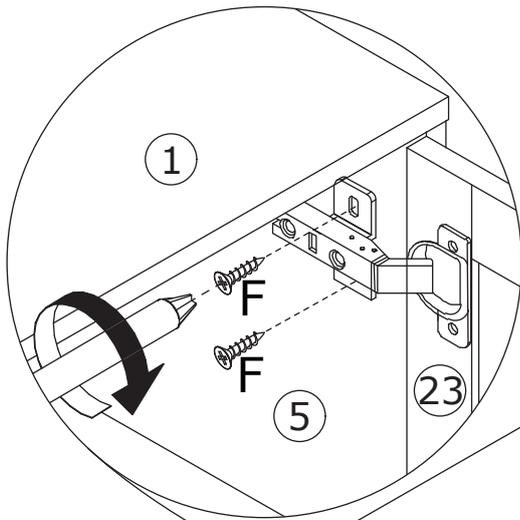
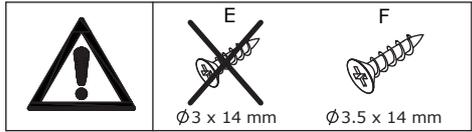
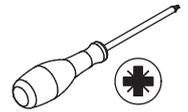


Assemble door 23 to board 5 by fixing hinge with screw(F) as shown.

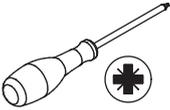


If there is misalignment after you install, adjust the screw to the best condition  
If doors are still not aligned if the hinges are properly correctly, please watch the video.


<https://youtu.be/n0Lb36SoODM>

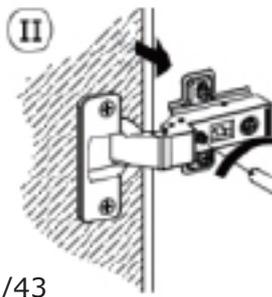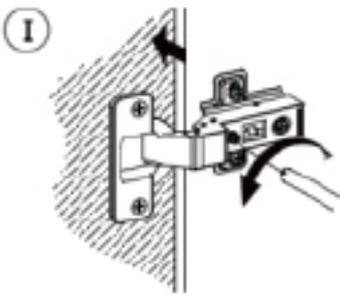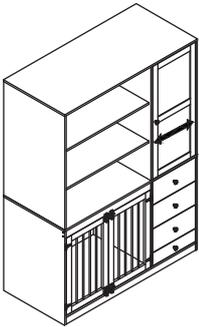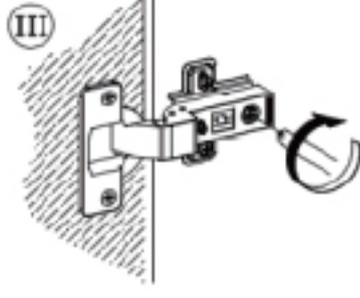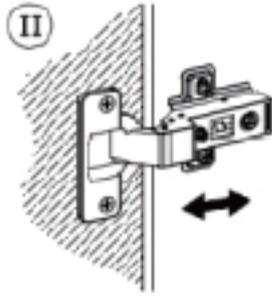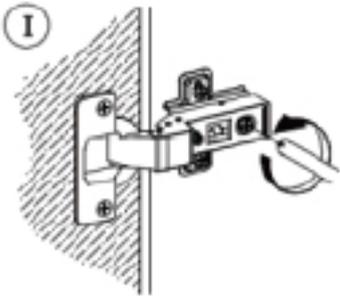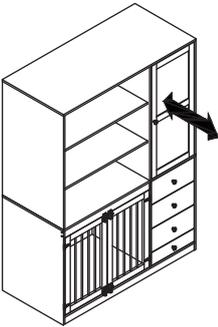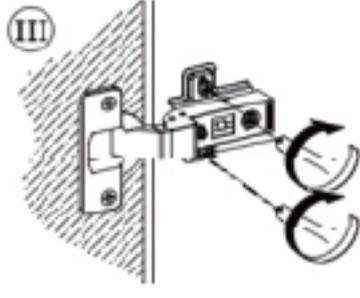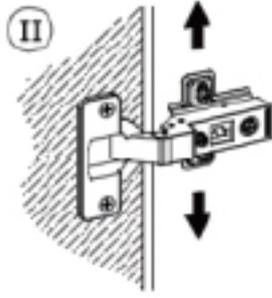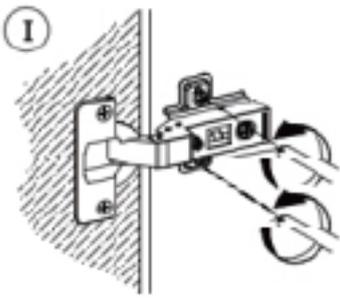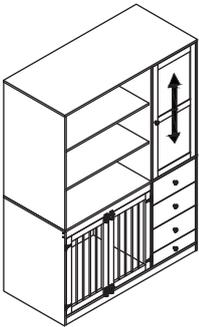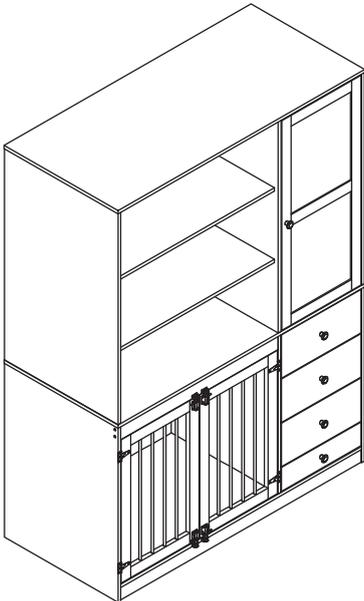


37




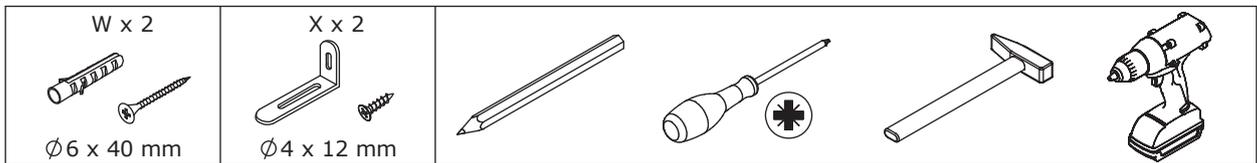


Install anti-tipping device as shown.

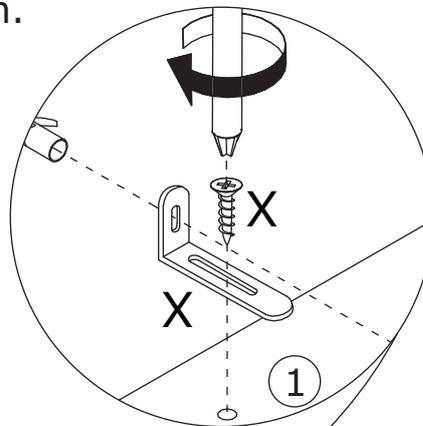

WALL

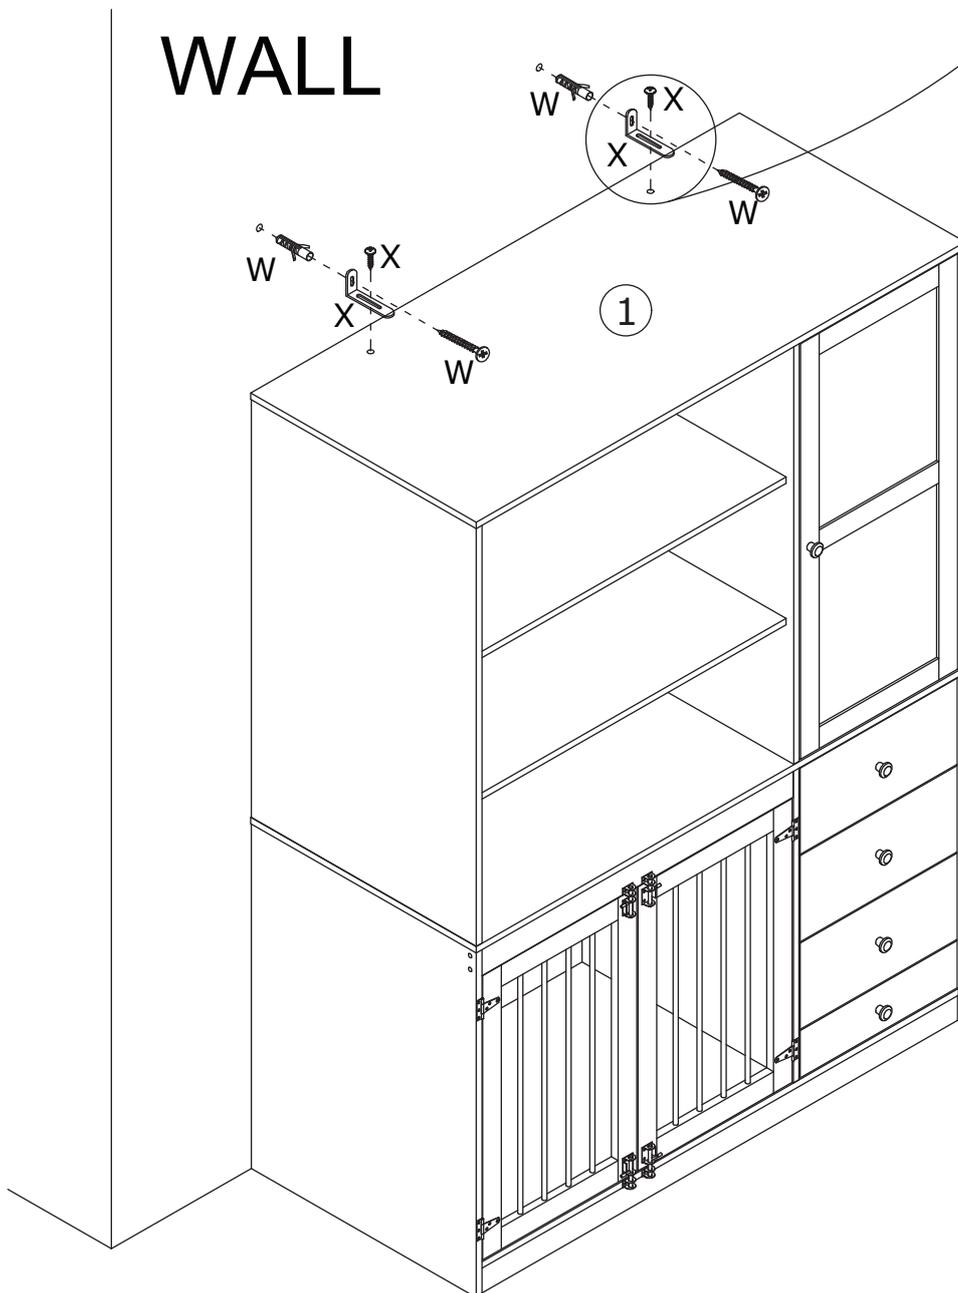

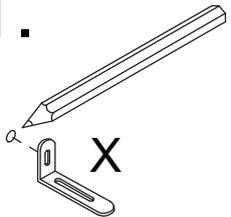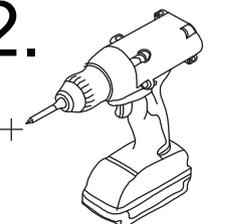
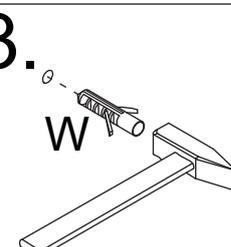
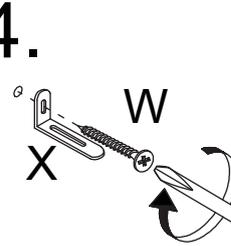
1. 
2. 
3. 
4. 

38

Y x 96



Ø 20 mm

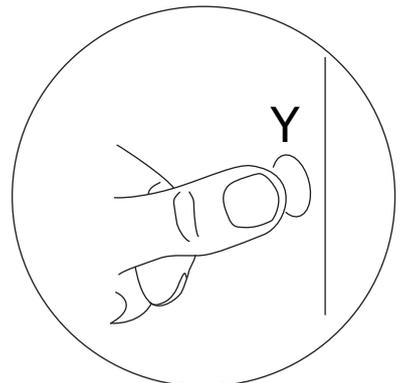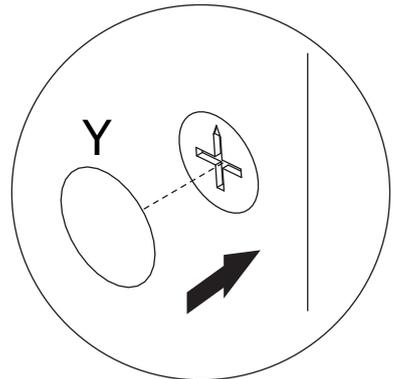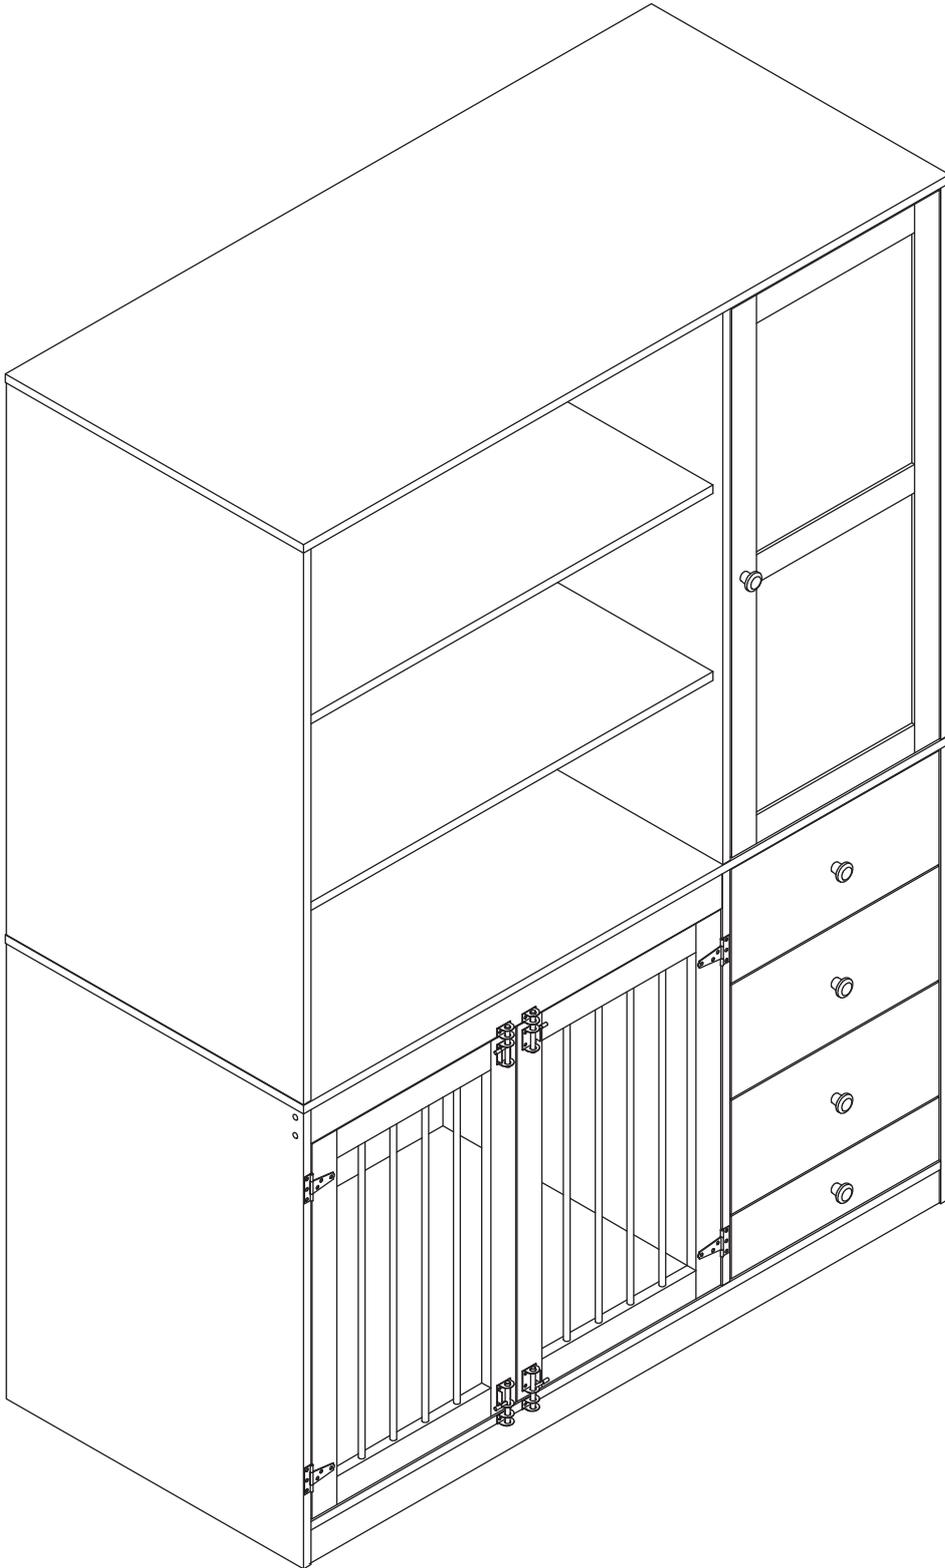

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

### AFTER-SALES CONTACT



[feedbackstation@163.com](mailto:feedbackstation@163.com)



(303)800-6387