
# **ASSEMBLY INSTRUCTION**


# WOODEN CONER SOFA SET

WF288502 WF288503 WF288504

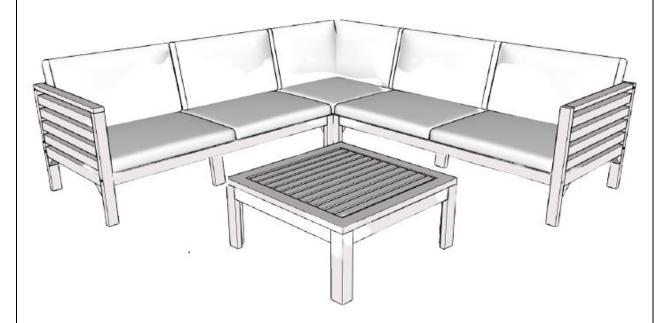


#### Return & Warranty policy:


- We strive to offer the highest quality products, and we also try our best to satisfy each and every customer that orders from us with replacement parts or service as needed.
- So, if the item damaged nor defective the buyer must take photos as evidents for returns and replacements.
- All items must be re packaged in the original box it was received in. We will not provide any additional packaging materials to return the item.

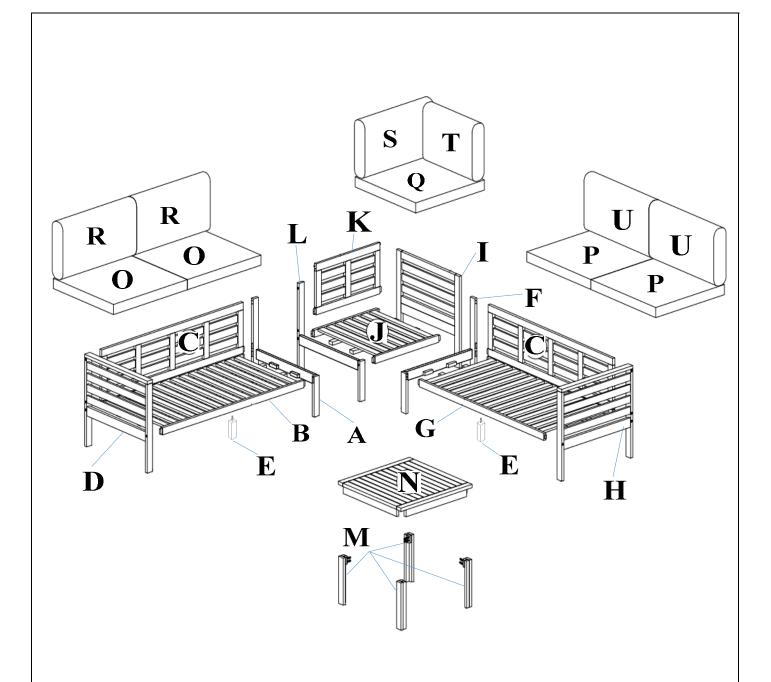



- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


#### **PART LIST**

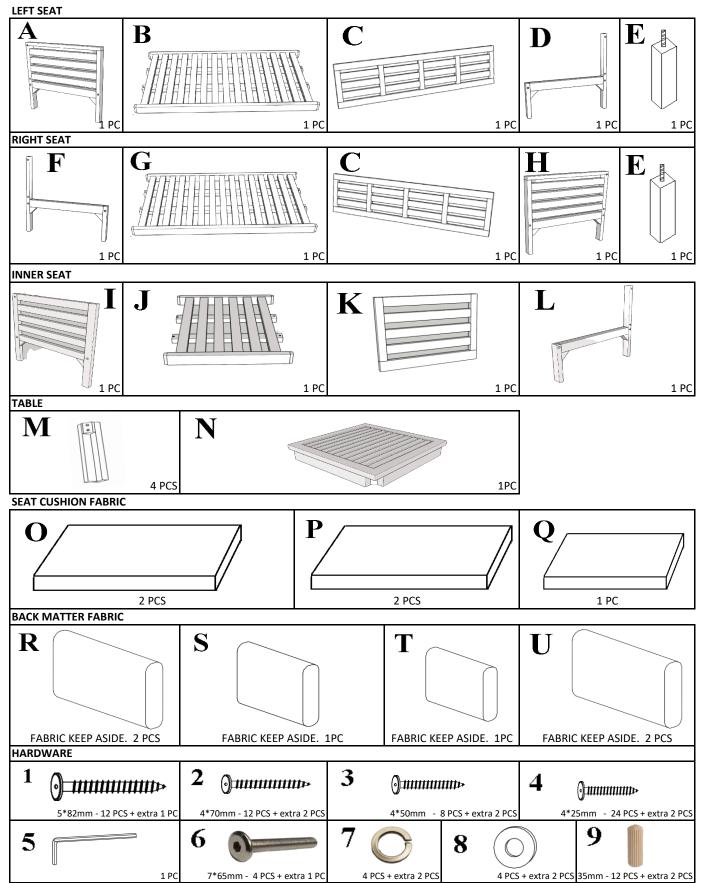


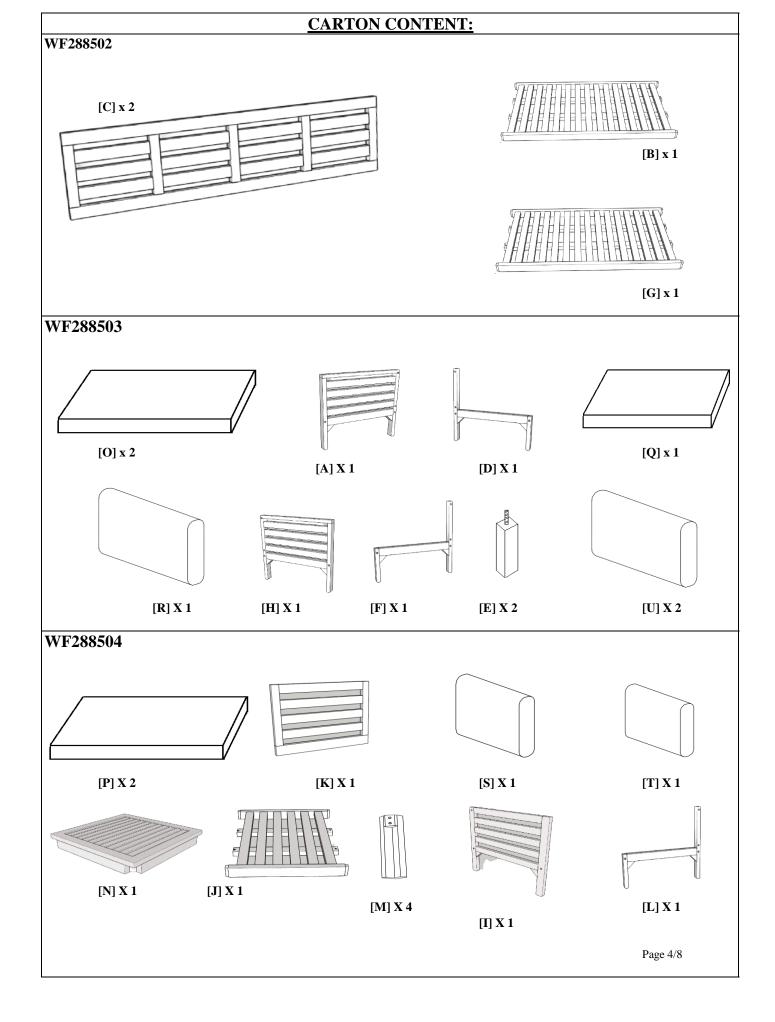

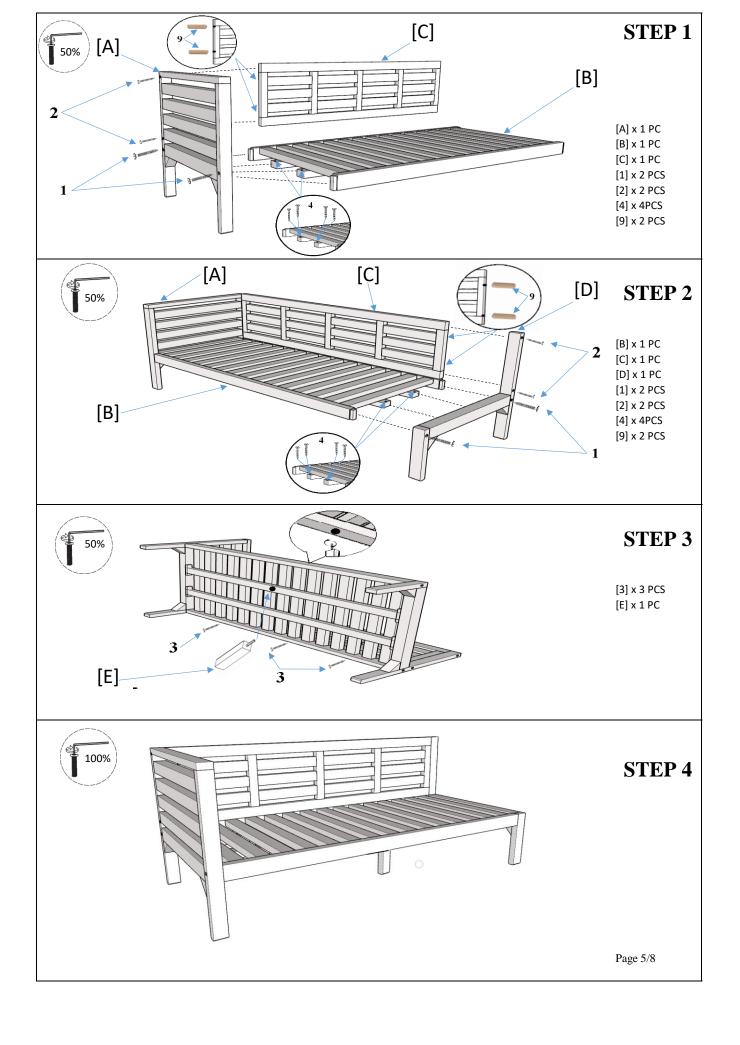


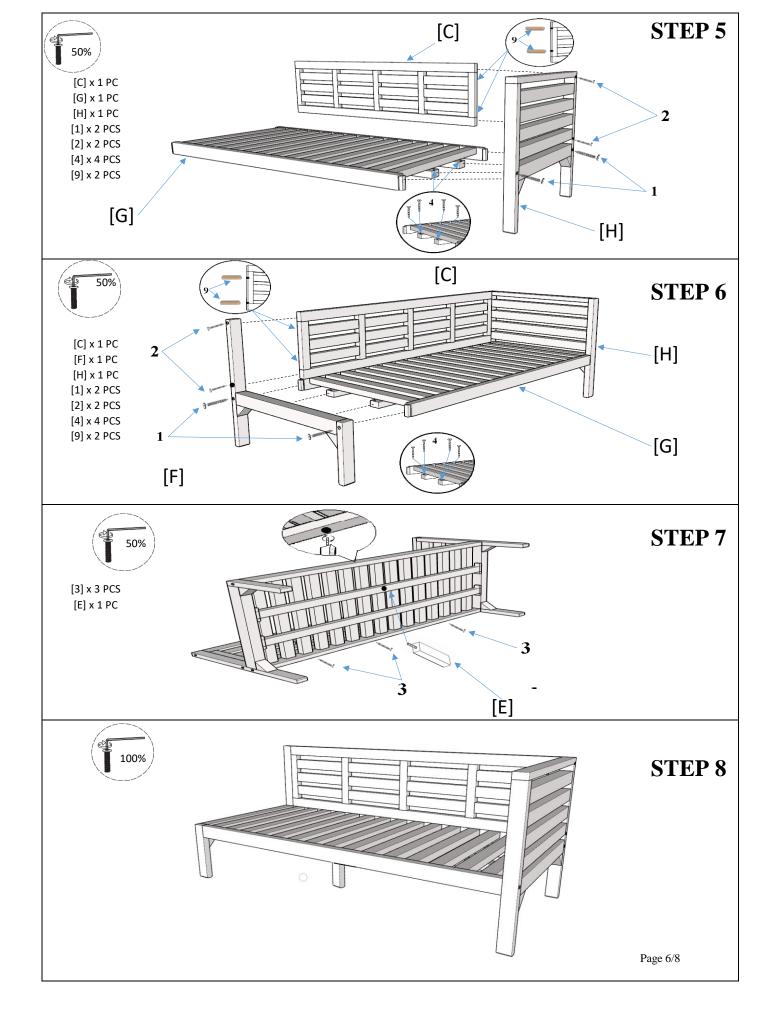

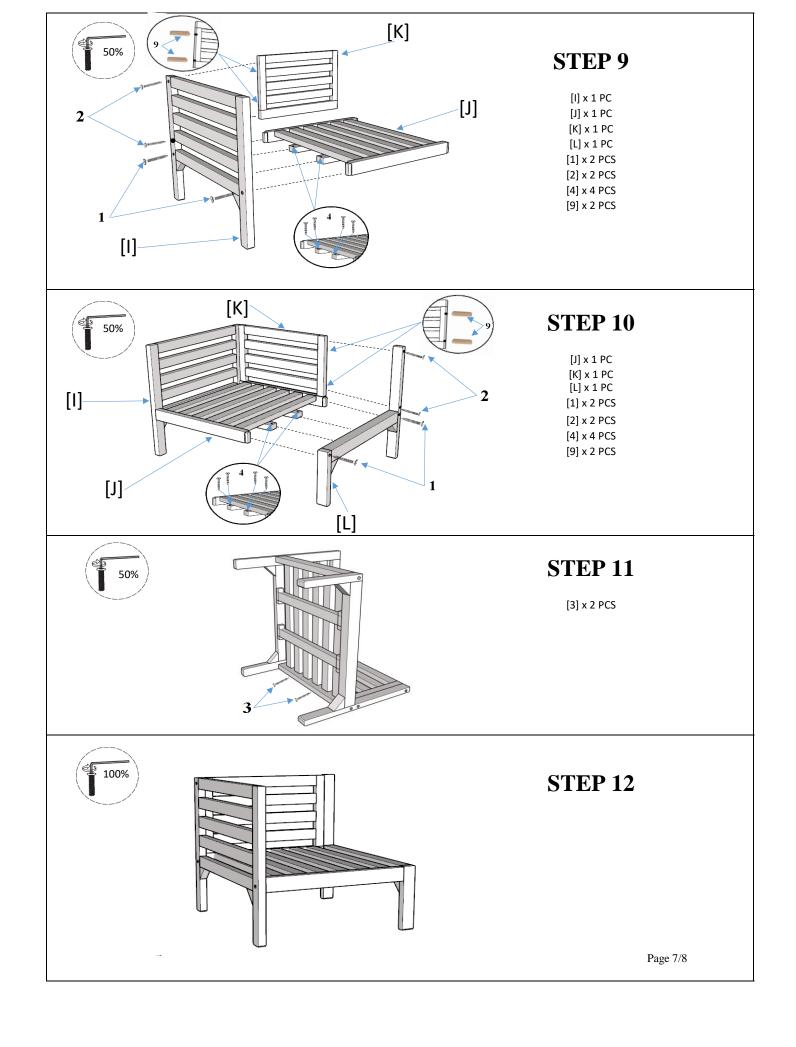


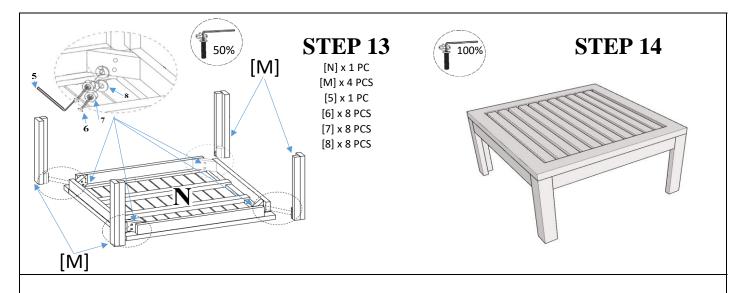

### **STEP 15**

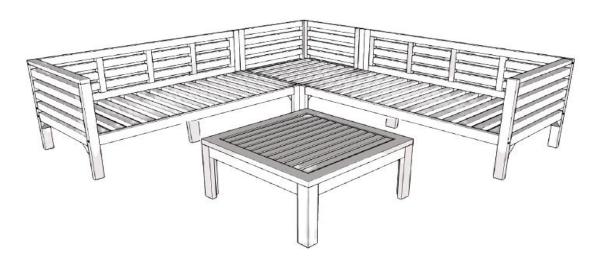

## **STEP 16**

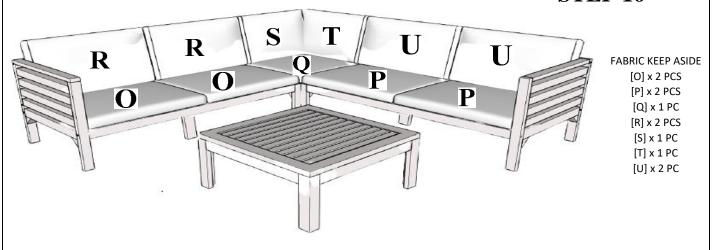

Note: fabric keep aside, will wear into the gut pillow when using.

Page 8/8