

Tools and Materials Required

- Hand or electric drill(cordless preferred)
- Adjustable wrenches
- Slotted and Phillips screwdrivers
- Utility knife or scissors
- Safety glasses
- Drill bits: 1"(for faucet hole), 1/4"(for drainpipe)
- Safety mask



NOTICE

Not all tools may be necessary for installation. Read installation procedures before starting to determine what tools are required.

3 Installation

3.1 Installation Instructions

Read all installation and operating instructions before installing and using your RO system.




NOTICE

- Please check if there is sufficient space for installing the system itself, its accessories, connection.
- Under no circumstances should the system be installed outdoors.
- The environment where the system is installed should adhere to appropriate hygiene and sanitation conditions. Avoid any external dripping liquids from pipes or drains, etc, onto the system.
- This system should be placed on a stable and at the surface.
- Keep the system away from heat. It shall not be placed in a place that may have in-inflammable gas leakage.

How to use the quick-connector fitting

To connect

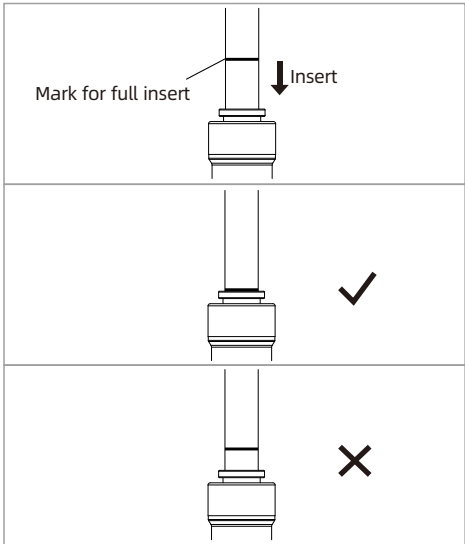

- There is an existing mark at the end of the PE pipe for you to confirm if the PE pipe is fully inserted into the fitting.
- Push the PE pipe into the fitting until you reach the mark on the pipe.



**NOTICE**

 If the PE pipe is not fully inserted, no seal will be created, and leakage will occur.

- When the PE pipe is fully inserted, put the clip on the fitting. It will lock the PE pipe in place and prevent it from falling off.

**NOTICE**

If the PE pipe is too long, cut it to a suitable length with a sharp utility knife or scissors. Cut the PE pipe squarely and cleanly. Make sure the PE pipe is fully inserted.

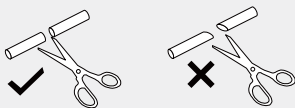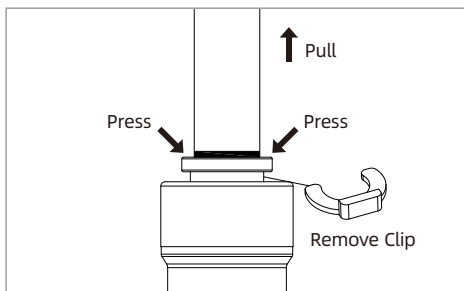**To disconnect**

- Remove the blue lock clip from the fitting;
- Use your thumb and index finger to press down the lock sleeve. Use your other hand to pull out the PE pipe from the fitting.

**NOTICE**

Please do not pull out the PE pipe directly. This will damage the fitting and cause leakage.

3.2 Selecting the Faucet Location


Most sinks have pre-drilled holes designed for spray hoses. The RO faucet may be through using one of these holes despite their larger size. If these pre-drilled holes cannot be used or are in an inconvenient location, it will be necessary to drill a 1" hole in the sink or through the countertop next to the sink.

**CAUTION**

- This procedure may generate dust, which can cause severe irritation if inhaled or come in contact with the eyes. Safety glasses and a safety mask are recommended for this procedure.
- Do not attempt to drill through an all-porcelain or porcelain-coated sink. For applications on these types of sinks, we recommend using the sprayer hole or drilling the hole through the countertop.
- When drilling through a countertop, make sure the area below the drilled area is free of wiring and piping. Make certain that you have ample room to make the proper connections to the bottom of the countertop.
- Do not drill through a countertop that is more than 1 inch thick.
- Do not attempt to drill through a tiled, marble, granite or similar countertop. Consult a plumber or the countertop manufacturer for advice or assistance.


The following instructions apply to stainless steel sinks ONLY.

- Line the bottom of the sink with newspaper to prevent shavings, parts or tools from falling down the drain.
 - Place masking tape over the area to be drilled to help prevent scratches if drill bit slips.
- © Mark the point with a center punch. Use a 1/4-inch drill bit to drill a pilot hole through the sink.
- Use a 1" hole saw to enlarge the hole. Smooth rough edges with a file.

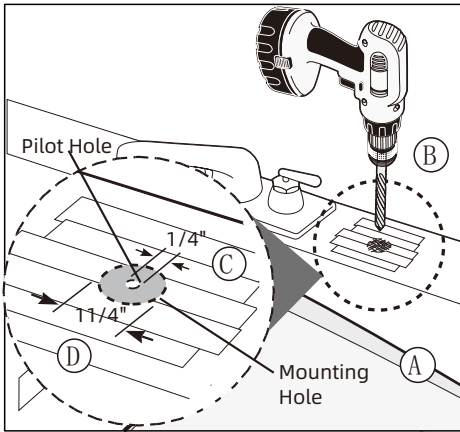


3.3 Install the Angle Stop Valve for the feed water (3/8" or 1/2")

(A) Turn off the cold water supply valve. Turn on the kitchen cold water faucet to release the pressure and allow water to drain from the line. Disconnect the cold water hose from the cold water valve.

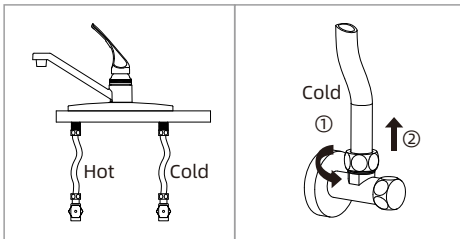

(B) Insert the 3/8" white PE pipe into the angle stop adapter's fitting. Secure the pipe with a 3/8" clip.

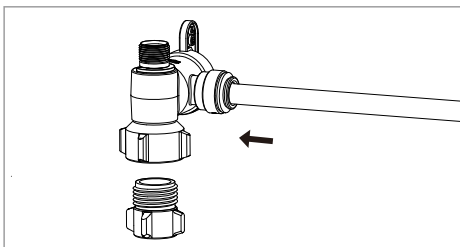


(C) Install the Angle Stop Valve on the cold water valve and tighten it with an adjustable wrench. Please don't miss the gasket inside the angle stop adapter during installation.




NOTICE

If the cold water pipe is 1/2", screw the conversion adaptor upper the Angle Stop Valve.

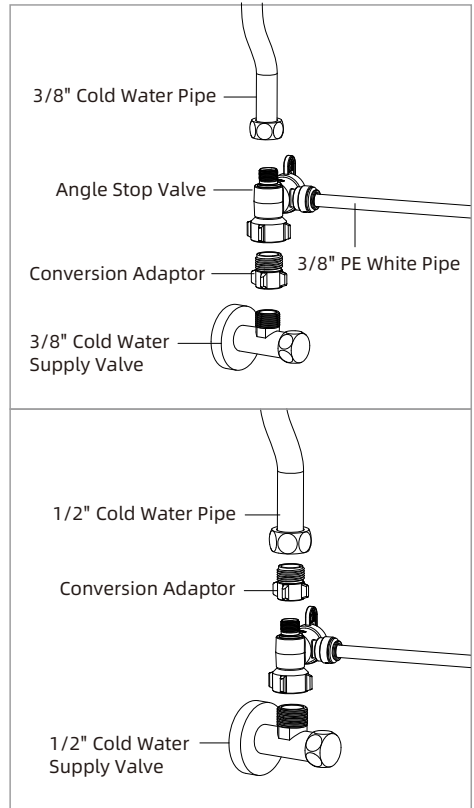

(D) Switch off the angle stop adapter. Turn on the cold water supply valve. Wipe the connections with a tissue to check for leakage. If the tissue stays dry, the angle stop valve is installed correctly.

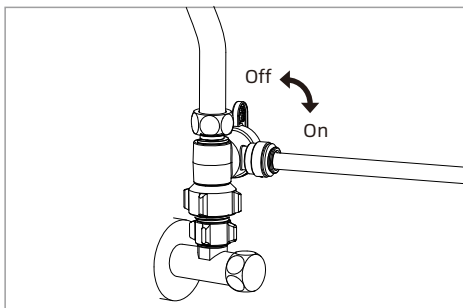


3.4 Install the RO Faucet



NOTICE

If your kitchen sink or countertop does not have an existing hole, you will have to drill one (1"). Refer to chapter 3.2.

1. Insert the faucet spout into the faucet body.
2. Insert the faucet stem, power cord, and PE pipe into the hole on the countertop.
3. Under the sink, slip on the nut and tighten it up (Do not forget the washer).
4. Insert the quick-connector fitting into the PE Pipe. Use a clip to secure the pipe.

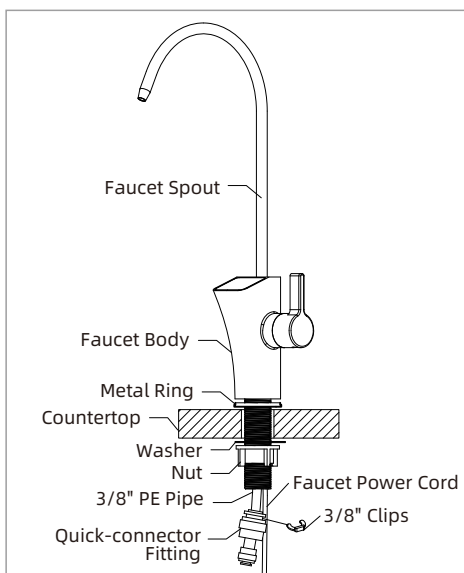


3.5 Install RO drain connector

1. Identify drain outlet location.
2. Knock out the center hole on the foam seal (④).
3. Use the hole in the foam seal (④) as a template to locate your drilling position above the drain tap. Mark the location with a pencil. Note: If you have a double sink and cross- or horizontal drain pipe, it is safe to mark the drill location on the top of the horizontal drain pipe.
4. At the marked location, drill a 1/4" hole through the wall of the drain pipe, being sure not to penetrate the opposite side of the pipe.
5. Remove the protective cover from the back of the foam seal (④) and attach it to the front plate of the drain connector (①) in alignment with the holes.
6. Begin to position the drain connector (①) on the sink drain pipe with Screws (②) and Nuts (③), using your pencil (or a thin pen) in the drain connector (①) tube hole to guide your location over your drilled hole as you securely tighten Nuts (③) and Screws (②).




NOTICE

Remove the pencil once the location is established.

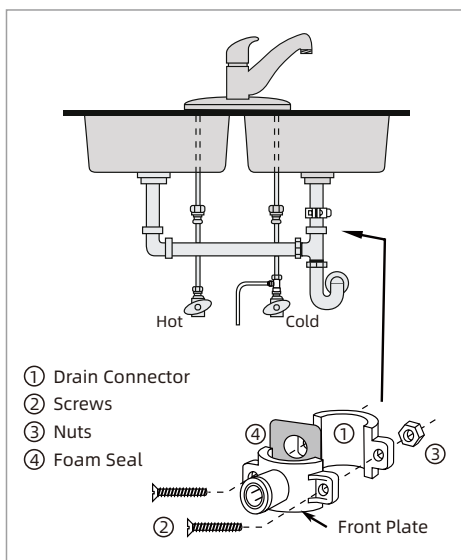



3.6 Connecting the PE Pipe to the System

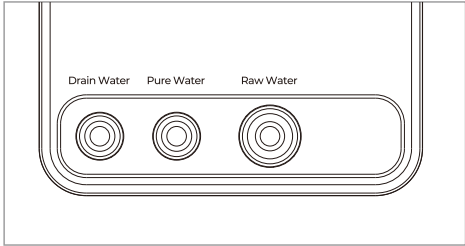

(a) Press down the collects and pull out the plugs of the water holes in the top of the system.

(b) Connect the Raw Water and the angle stop valve.




Insert the other end of the 3/8" white PE pipe connected with the angle stop valve into the Raw Water hole at the top of the system. Secure the pipe with a 3/8" clip.

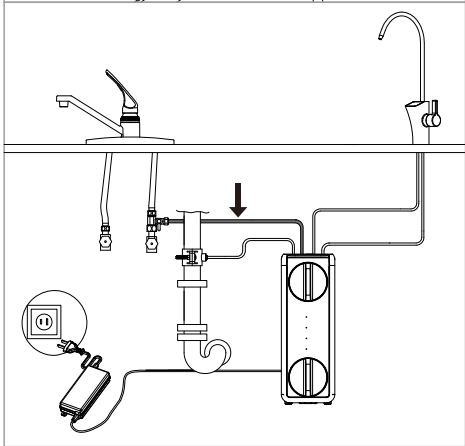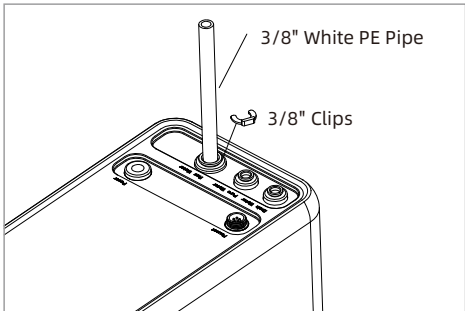

(c) Connect the Pure Water and the Faucet.

Insert one end of the 1/4" white PE pipe into the Pure Water hole. Secure the pipe with a 1/4" clip.


Insert another end of the 1/4" white PE pipe into the quick-connector fitting of the Faucet. Secure the pipe with a 1/4" clip.

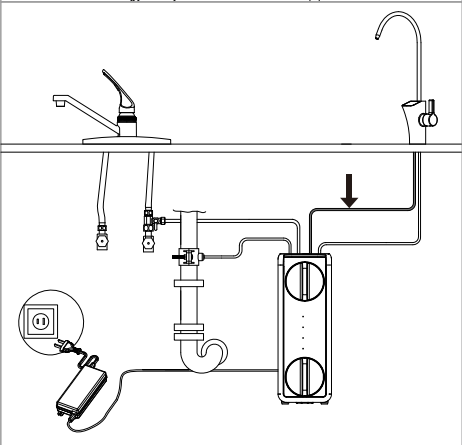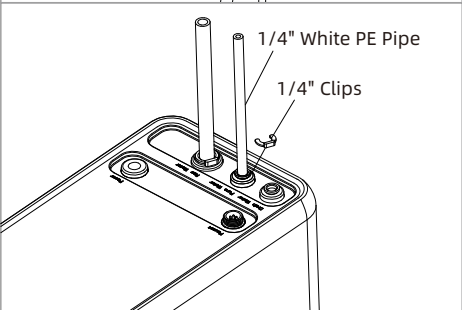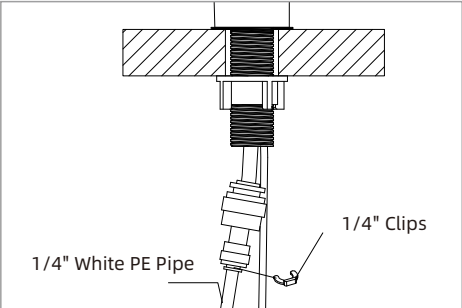


(d) Connect the Drain Water and the Drain Connector

Insert one end of the 1/4" Red PE pipe into the Drain Water hole. Use a 1/4" clip to secure the pipe.

Insert another end of the 1/4" Red PE pipe into the Drain connection. Secure the pipe with a 1/4" clip.

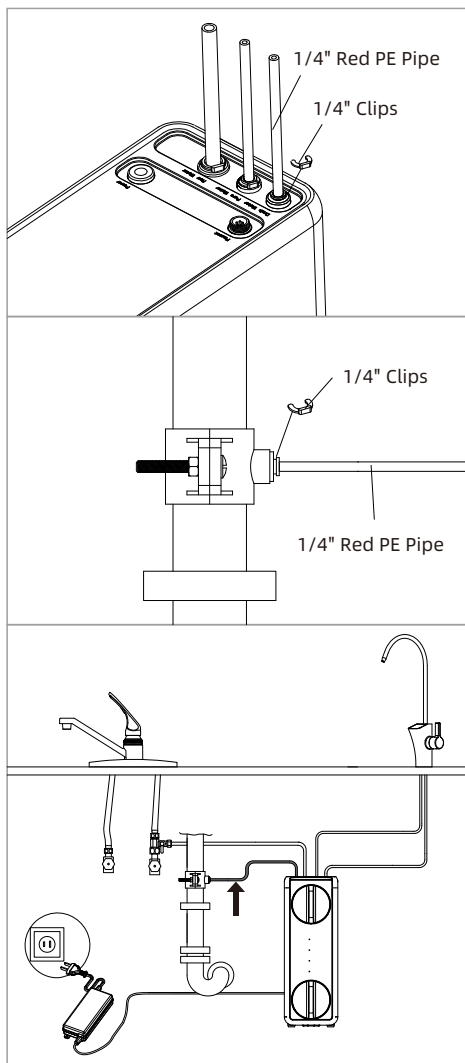

3.7 Connecting the Power Cord

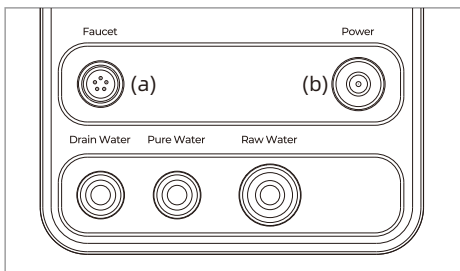

(a) Connect the faucet power cord to the system

Insert the power cord attached to the faucet into the "FAUCET" connector at the top of the system and tighten the nut.

(b) Connect Power Adapter

Insert the DC head of the power adapter into the "POWER" port at the top of the system.



NOTICE

Please do not connect the power socket now.

4 Operation

4.1 Before the first-time use

- (A) Turn on the cold water supply and ensure the supply adapter valve is open.
- (B) Connect the system with power. You will hear a long beep, and all indicators will light up for 3s. The system will automatically flush for 30s. Wipe all the joints and connections with tissue to check for leakage. If the tissue stays dry, the system is installed correctly.
- (C) After the auto-flush is completed, turn on the faucet to allow water to run for 30 minutes to flush the air and carbon fines through the filters. After that, the system is ready, and you can start to consume the pure water.