

### **Recommended settings to record successfully:**

The settings below should allow to record even whispering not from the long distance.

From the main menu, please select "Recordings" => "Recording Settings". Scroll down to the very bottom and set the following values for the last three menu options:

- Mic (line-in) sensitivity: 7
- Denoise level (settings): 3
- AGC level: 16

### **Main instructions on how to operate X100 recorder:**

- 1) To start recording, please press the "REC" button on the front side of the recorder (the one with the red dot). When recording has started, you will see the red LED in the right top corner of the recorder indicating this. To pause/resume recording, please use the same "REC" button.
- 2) When you want to stop recording and save the recorded file, please press the "MENU" button. You will see "Saved!" prompt.
- 3) To see all the saved recordings, please select the "Recordings" option from the main menu using the down/up buttons, to confirm the selection press the "Play" button. You will see two submenu options: Recordings library and Record Settings. Please select the "Recordings library" option and confirm the selection by pressing the "Play" button.
- 4) To play the recording, please select the required one using the down/up buttons and press the "Play" button.
- 5) To delete only one recording, go to "Recordings" => "Recordings library", select the file to be deleted and start to play it. When played, please press and hold the "Volume" button on the left side of the recorder for 1 second. You will see two options: "Last played" and "Delete". Please select "Delete" and confirm the selection using the "Play" button.
- 6) To erase all the recordings, go to "Recordings" => "Recordings library", select "Delete All" and confirm the selection using the "Play" button. This was all the rest data (like document, photos, etc.) stored on the recorder will be saved.
- 7) To delete all the files from the recorder, please select the "Set" option from the main menu using the down/up buttons, to confirm the selection press the "Play" button. Scroll down to the "Format device" option and confirm the selection by pressing the "Play" button. You will see a prompt: All data will be deleted. Continue? You need to select "Yes". All the files will be deleted.
- 8) To change the brightness level, please go to the "Set" option from the main menu using the down/up buttons, to confirm the selection press the "Play" button. Scroll down to the "Display settings" => "Brightness". You will see a brightness level. To adjust it, please use the up/down buttons on the right side of the recorder.
- 9) To enable the Voice Activated mode, please go to "Recordings" => "Recording Settings" => "VOR Mode" => "VOR Mode" and select VOR On. The VOR Sensitivity option defines the minimum level of dB required to start recording (0 is the less sensitive level and 17 is the most sensitive). The VOR Delay option sets the length of time for which the external sound is continuously recognized as a condition to start the recording in VOR mode.