

# radiant® Tru-Universal

## **SETUP QUICKSTART GUIDE**



### **HOW TO:**

- Run Autocalibration
- Change to Reverse Phase
- Adjust High End Trim
- Adjust Low End Trim
- Disable Autocal
- Set to MLV Mode

# AUTOCALIBRATION

TO RUN AUTO CALIBRATION FEATURE ON DIMMER:

Press Calibration Button

Dimmer will Auto Configure

Dimmer is now Calibrated

# REVERSE PHASE


TO CHANGE TO REVERSE PHASE:

Set F/R Switch to R\*

Press and Release  
Calibration Button

Dimmer will Auto Configure

Dimmer is now Calibrated

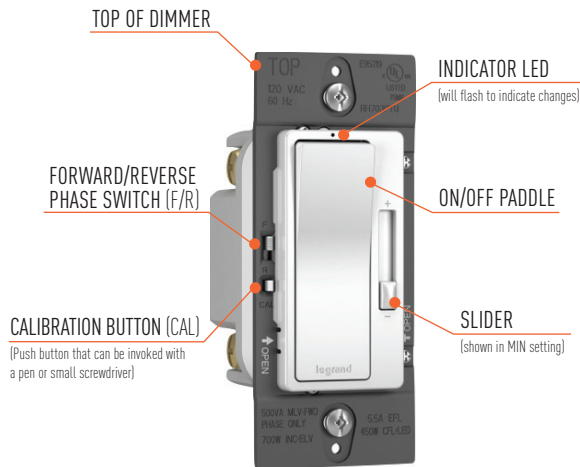

\*To switch back to forward phase move the switch to F and recalibrate.

# LOW END TRIM

## TO ADJUST LOW END TRIM:

Move Slider Down to MIN

Press and Hold CAL  
for ~ 5 Seconds

LED will Blink, Release CAL

Adjustment Saved

Move Slider Up when  
at Desired Setting

Push CAL 12x to Cycle  
through Adjustments\*

\*Some LED's should not be set at their lowest setting. While they may be able to dim to that level after being on, they may not turn on to that level.

# HIGH END TRIM

## TO ADJUST HIGH END TRIM:

Move Slider up to Full On


Press and Hold CAL  
for ~ 5 Seconds

LED will Blink, Release CAL

Adjustment Saved

Move Slider Down when  
at Desired Setting

Push CAL 12x to Cycle  
through Adjustments

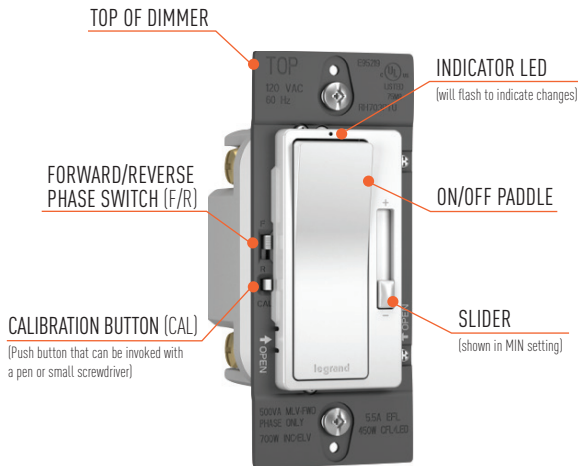

# DISABLE AUTOCAL

## TO DISABLE AUTOCAL AT POWER UP:

Move Slider Down to MIN

Press and Hold CAL  
for ~ 5 Seconds

LED will Blink, Release CAL

LED will STOP Blinking

Press and Hold CAL for ~10  
Seconds at Desired Setting\*\*

Push CAL 12x to Cycle  
through Adjustments\*

Autocal Disabled

\* See low end trim.

\*\* Low end trim adjustments must be made before disabling autocal, at least one adjustment needs to be made.

# MLV MODE

## TO PUT DIMMER INTO MLV MODE:

Move Slider up to Full On

Press and Hold CAL  
for ~ 5 Seconds

LED will Blink, Release CAL

Move Slider Down

LED Blink will Change  
to 2x per Second

Press and Hold CAL  
for ~ 10 Seconds

Dimmer now in MLV Mode\*\*\*

\*\*\*To switch out of MLV mode repeat these steps.

