 


ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED

 


(Included)

Allen Wrench



2 - People

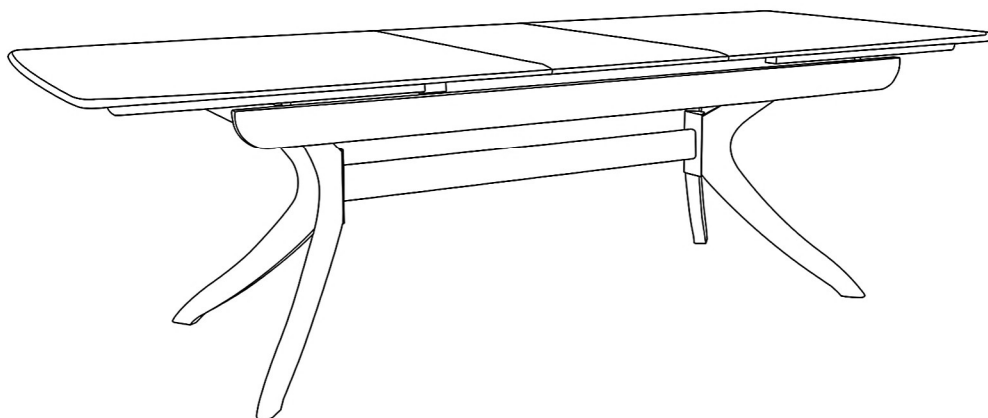

ASSEMBLY RATING



EASY ————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



 
 
Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

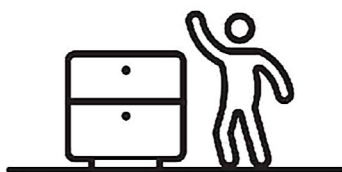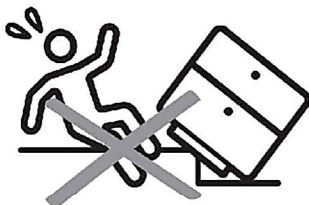

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



 
**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.




Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.

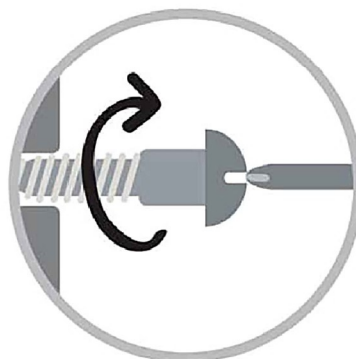

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



 Save the instructions and store
any supplied tools for later
maintenance.

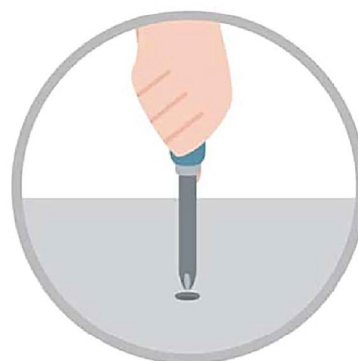

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DINING TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

PARTS

1 1pc


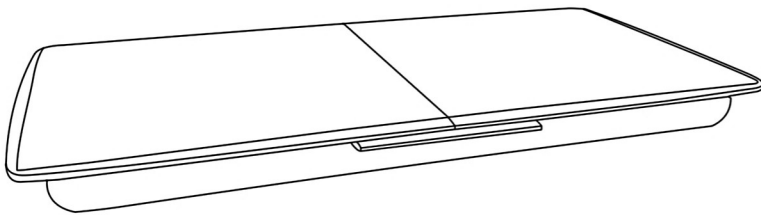 



TABLE TOP

 2 2pcs



TRIANGLE WOOD

 3 1pc



HORIZONTAL WOOD

4 4pcs


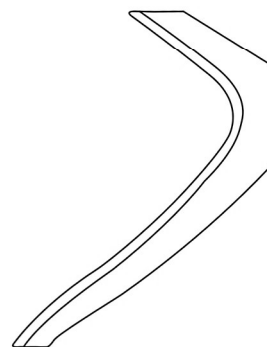 


TABLE LEG


HARDWARE

 A 12pcs




JCBB BOLT
M8 x 45MM

 B 16pcs



LOCK WASHER
M8

 C 16pcs



FLAT WASHER
M8

D 1pc



 
ALLEN KEY
M5

E 4pcs




HEX BOLT
M8 x 50MM

F 1pc



SPANNER

 G 10pcs



WOOD DOWEL
M10 x 30MM

ASSEMBLY INSTRUCTIONS

 
1

Part (3) x 1pc

Part (4) x 4pcs

Hardware (G) x 10pcs

Prepare horizontal wood (#3) and leg (#4) by inserting the dowels (#G) into the pre-drilled holes as shown in the diagram.

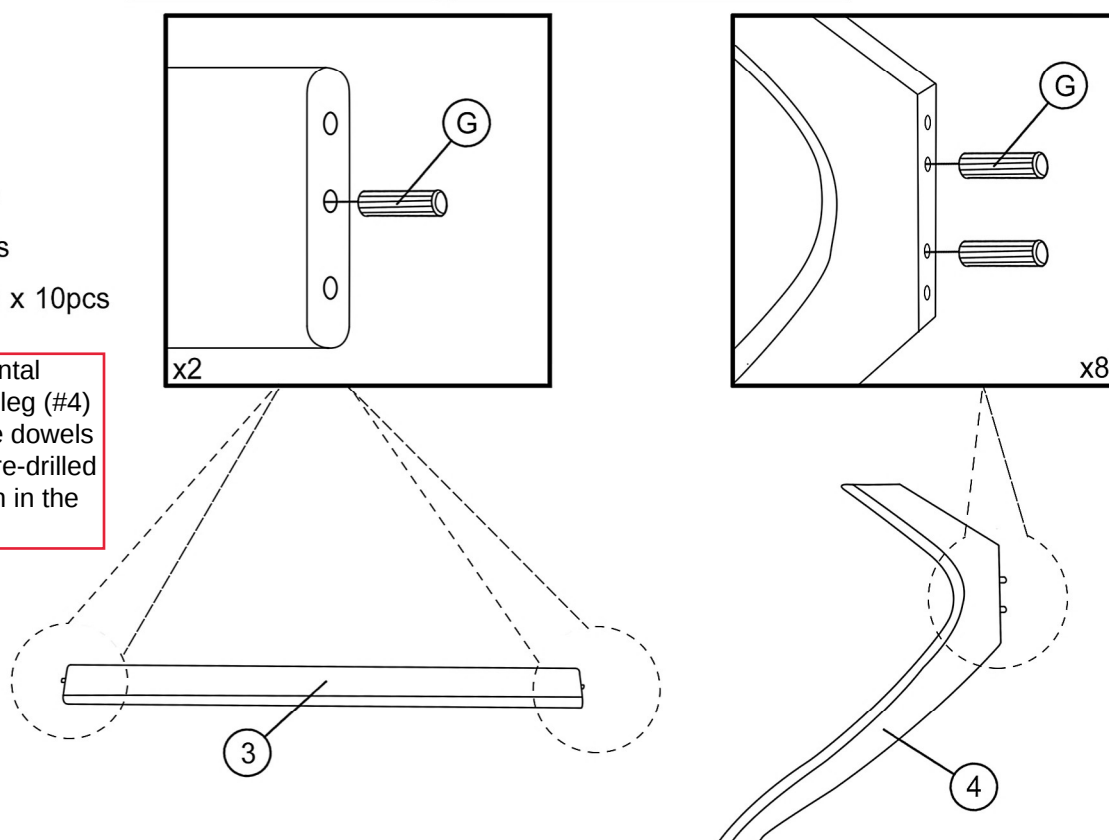

2

Part (2) x 2pcs

Part (4) x 4pcs

 
Hardware (A) x 8pcs

Hardware (B) x 8pcs

Hardware (C) x 8pcs

Hardware (D) x 1pc

Align the legs (#4) to the sides of the triangle wood (#2) and by using allen key (#D) secure using bolt (#A) with lock washer (#B and flat washer (#C).

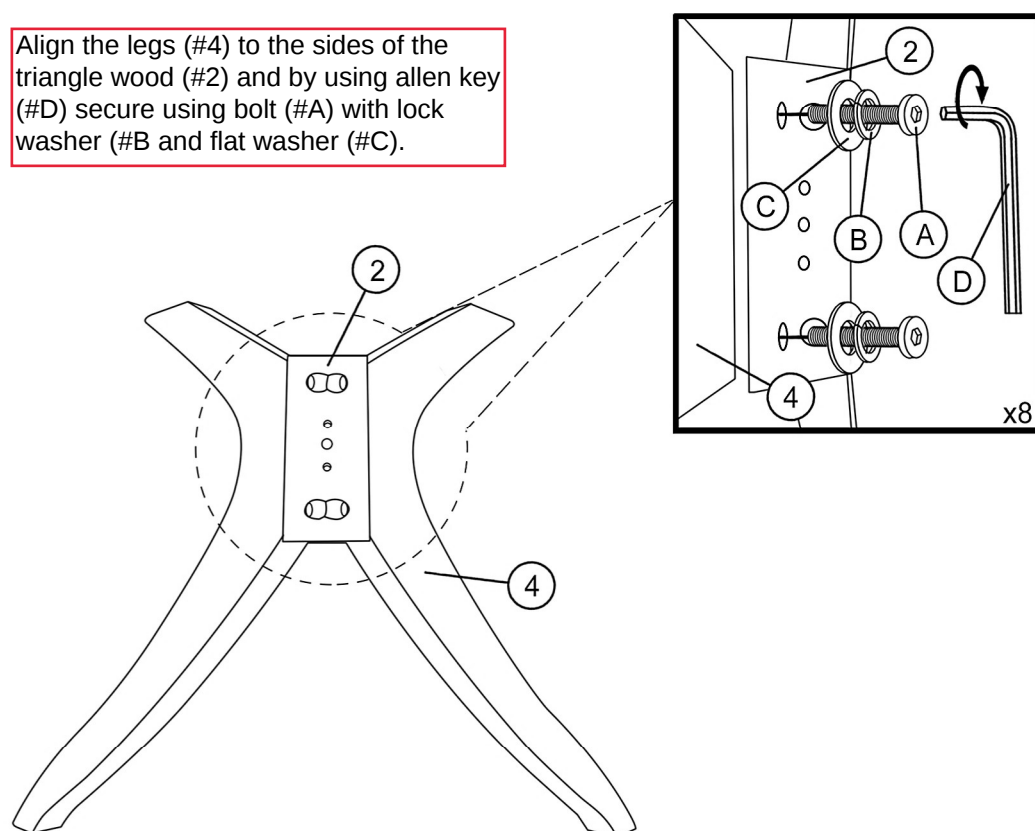

ASSEMBLY INSTRUCTIONS

3

Part ③ x 1pc

 
 
Hardware ①A x 4pcs

Hardware ①B x 4pcs

Hardware ①C x 4pcs

Hardware ①D x 1pc

Align the horizontal wood (#3) to the triangle wood (#2) and with allen key (#D) secure by using bolt (#A) with lock washer (#B) and flat washer (#C).

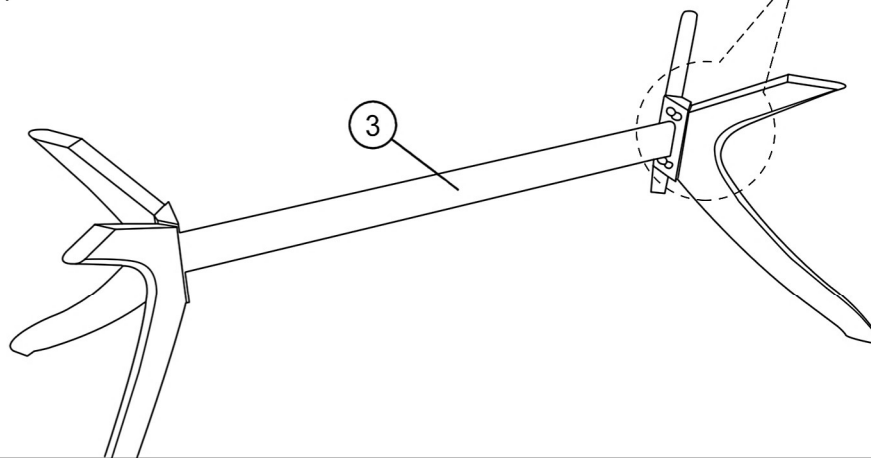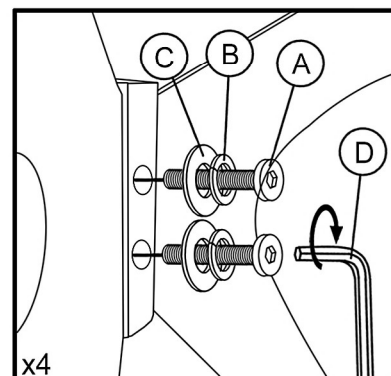

4

Part ① x 1pc

 
 
Hardware ①E x 4pcs

Hardware ①F x 4pcs

Hardware ①G x 4pcs

Hardware ①H x 1pc


Align the legs to the table top (#1) and with spanner (#H) secure using hex bolt (#E) with lock washer (#F) and flat washer (#G).

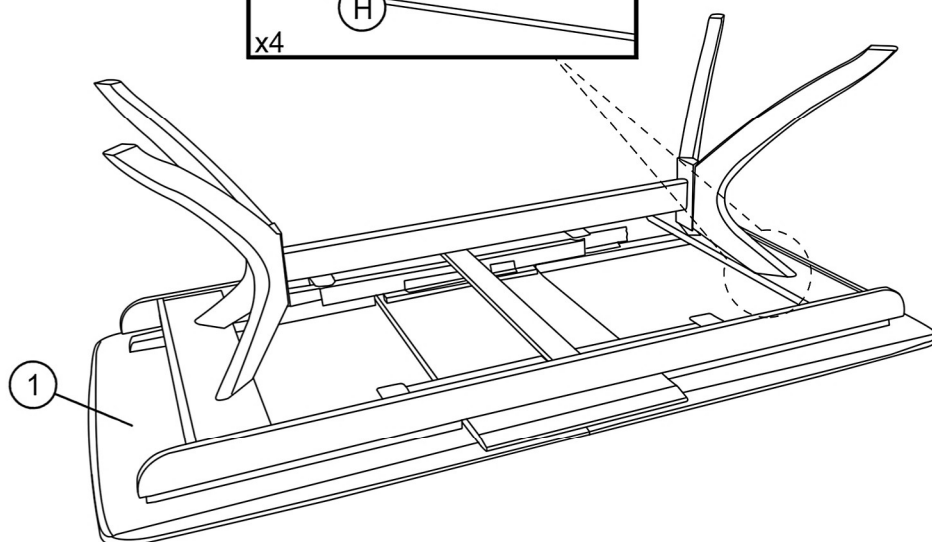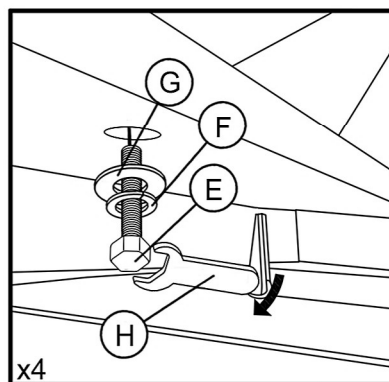

ASSEMBLY INSTRUCTIONS

5

 1 pc

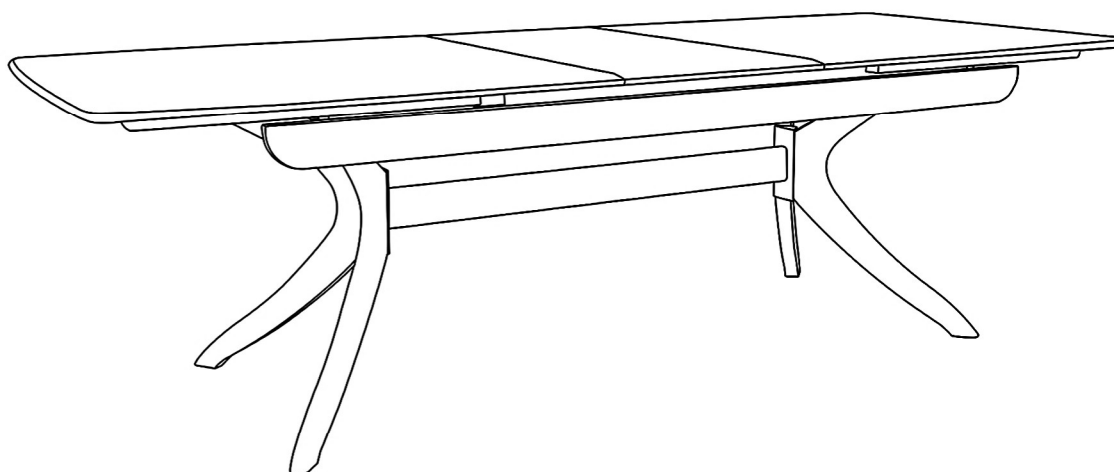

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

 


Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.


ASSEMBLY INSTRUCTIONS

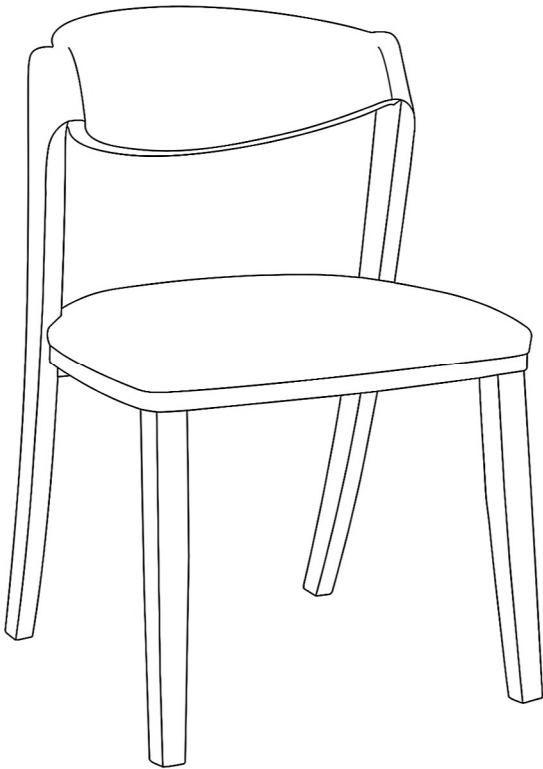

TOOLS REQUIRED



 Screwdriver
(Not Included)




(Included)
Allen Wrench



2 - People

 ASSEMBLY RATING



EASY ————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



 
 
Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

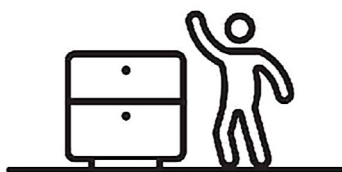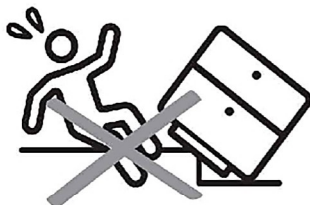

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



 
**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.




Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.

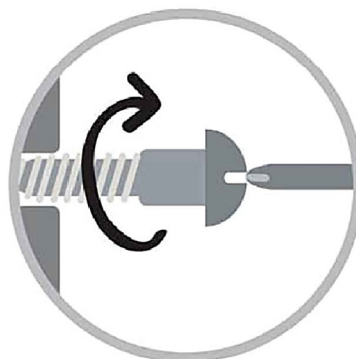

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



 Save the instructions and store
any supplied tools for later
maintenance.

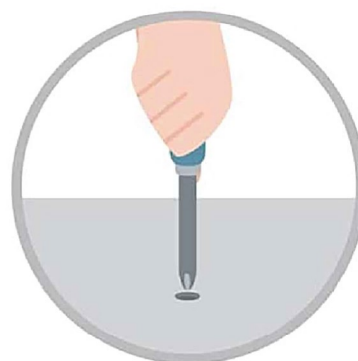

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

 
DINING SIDE CHAIR



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

PARTS

1 1pc

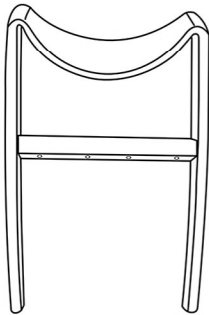

BACK PANEL

2 1pc



 
SIDE WOOD - LEFT

3 1pc




SIDE WOOD - RIGHT

4 1pc

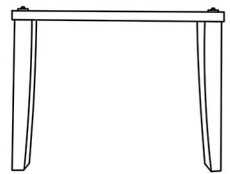

FRONT LEG

 
5 1pc

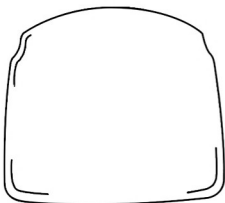

CUSHION SEAT


HARDWARE

 A 6pcs



JCBC BOLT
M6 x 35MM

 B 4pcs



JCBC BOLT
M6 x 50MM

C 10pcs



LOCK WASHER
M6

D 10pcs



FLAT WASHER
M6

E 6pcs



CSK SCREW
M4 x 32MM

F 1pc

 


ALLEN KEY
M4


ASSEMBLY INSTRUCTIONS

1

- Part (4) x 1pc
- Part (5) x 1pc
- Hardware (A) x 6pcs
- Hardware (C) x 6pcs
- Hardware (D) x 6pcs
- Hardware (F) x 6pcs

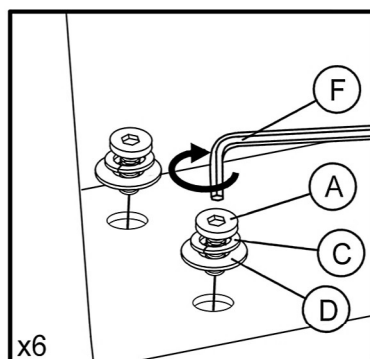


 
Align front leg (#4) to the cushion seat (#5) and with allen key (#F) secure using bolt (#A) with lock washer (#C) and flat washer (#D).

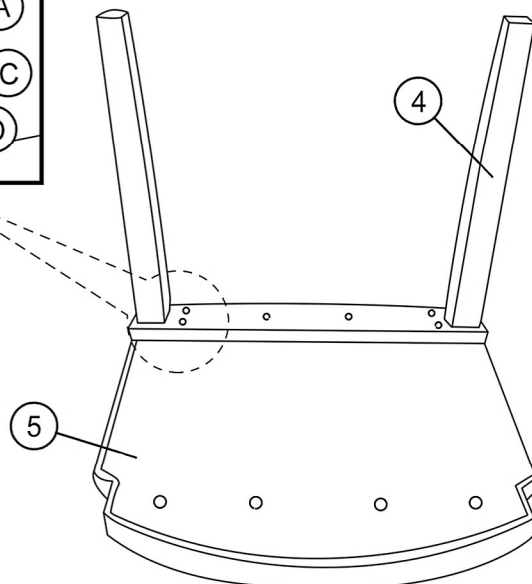

2

- Part (1) x 1pc
- Hardware (B) x 4pcs
- Hardware (C) x 4pcs
- Hardware (D) x 4pcs
- Hardware (F) x 1pc

  Align the back panel (#1) to the seat cushion (#5) and by using allen key (#F) secure by using bolt (#B) with lock washer (#C) and flat washer (#D).

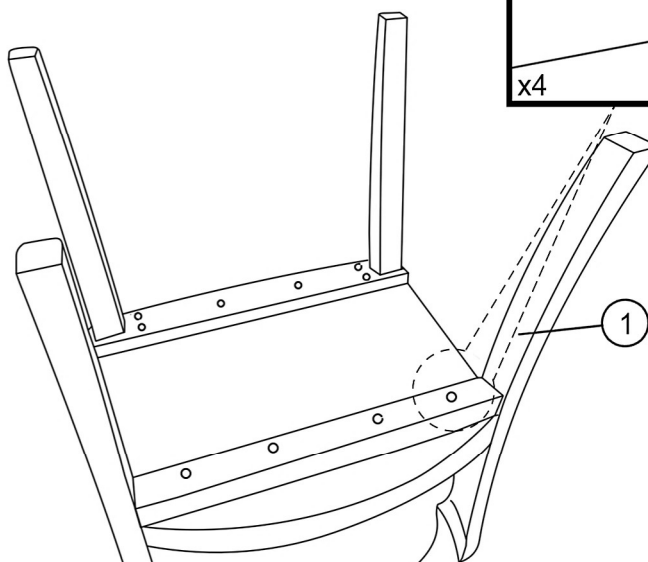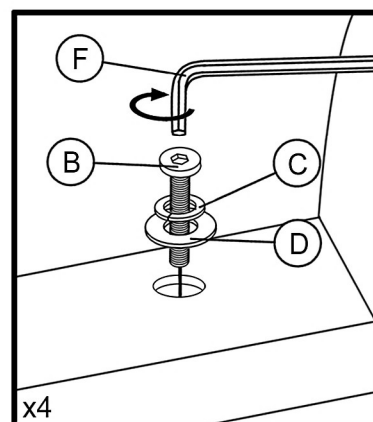


ASSEMBLY INSTRUCTIONS

3



Part ② x 1pc

Part ③ x 1pc

 
Hardware ④ x 6pcs

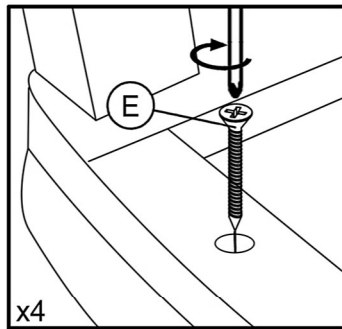

  Secure the left and right side wood (#2) and (#3) onto the seat cushion (#5) by using screw (#E).

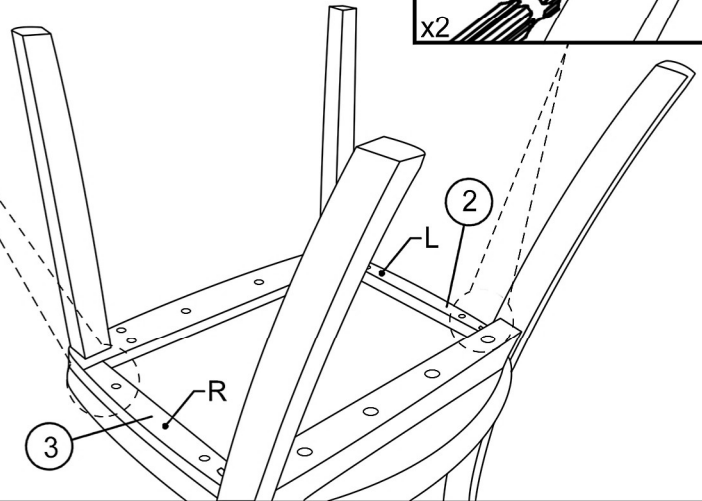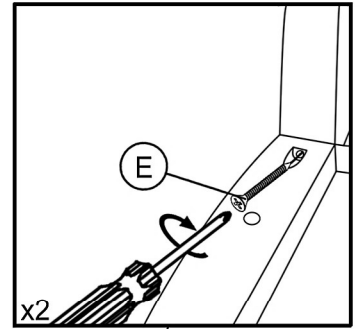

4

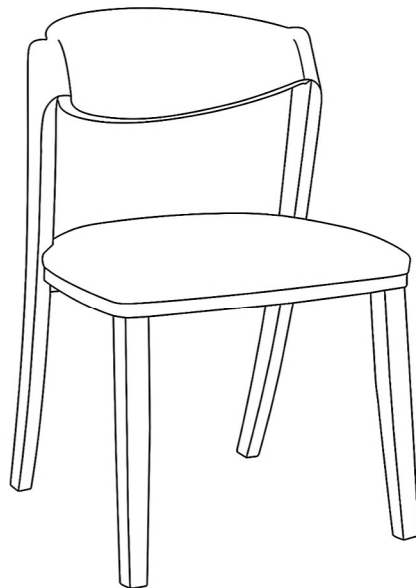 

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screw are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.