 


INSECT NET FOR 10 FT. GAZEBO

MODEL #N-577-1N

Français p. 05

Español p. 09

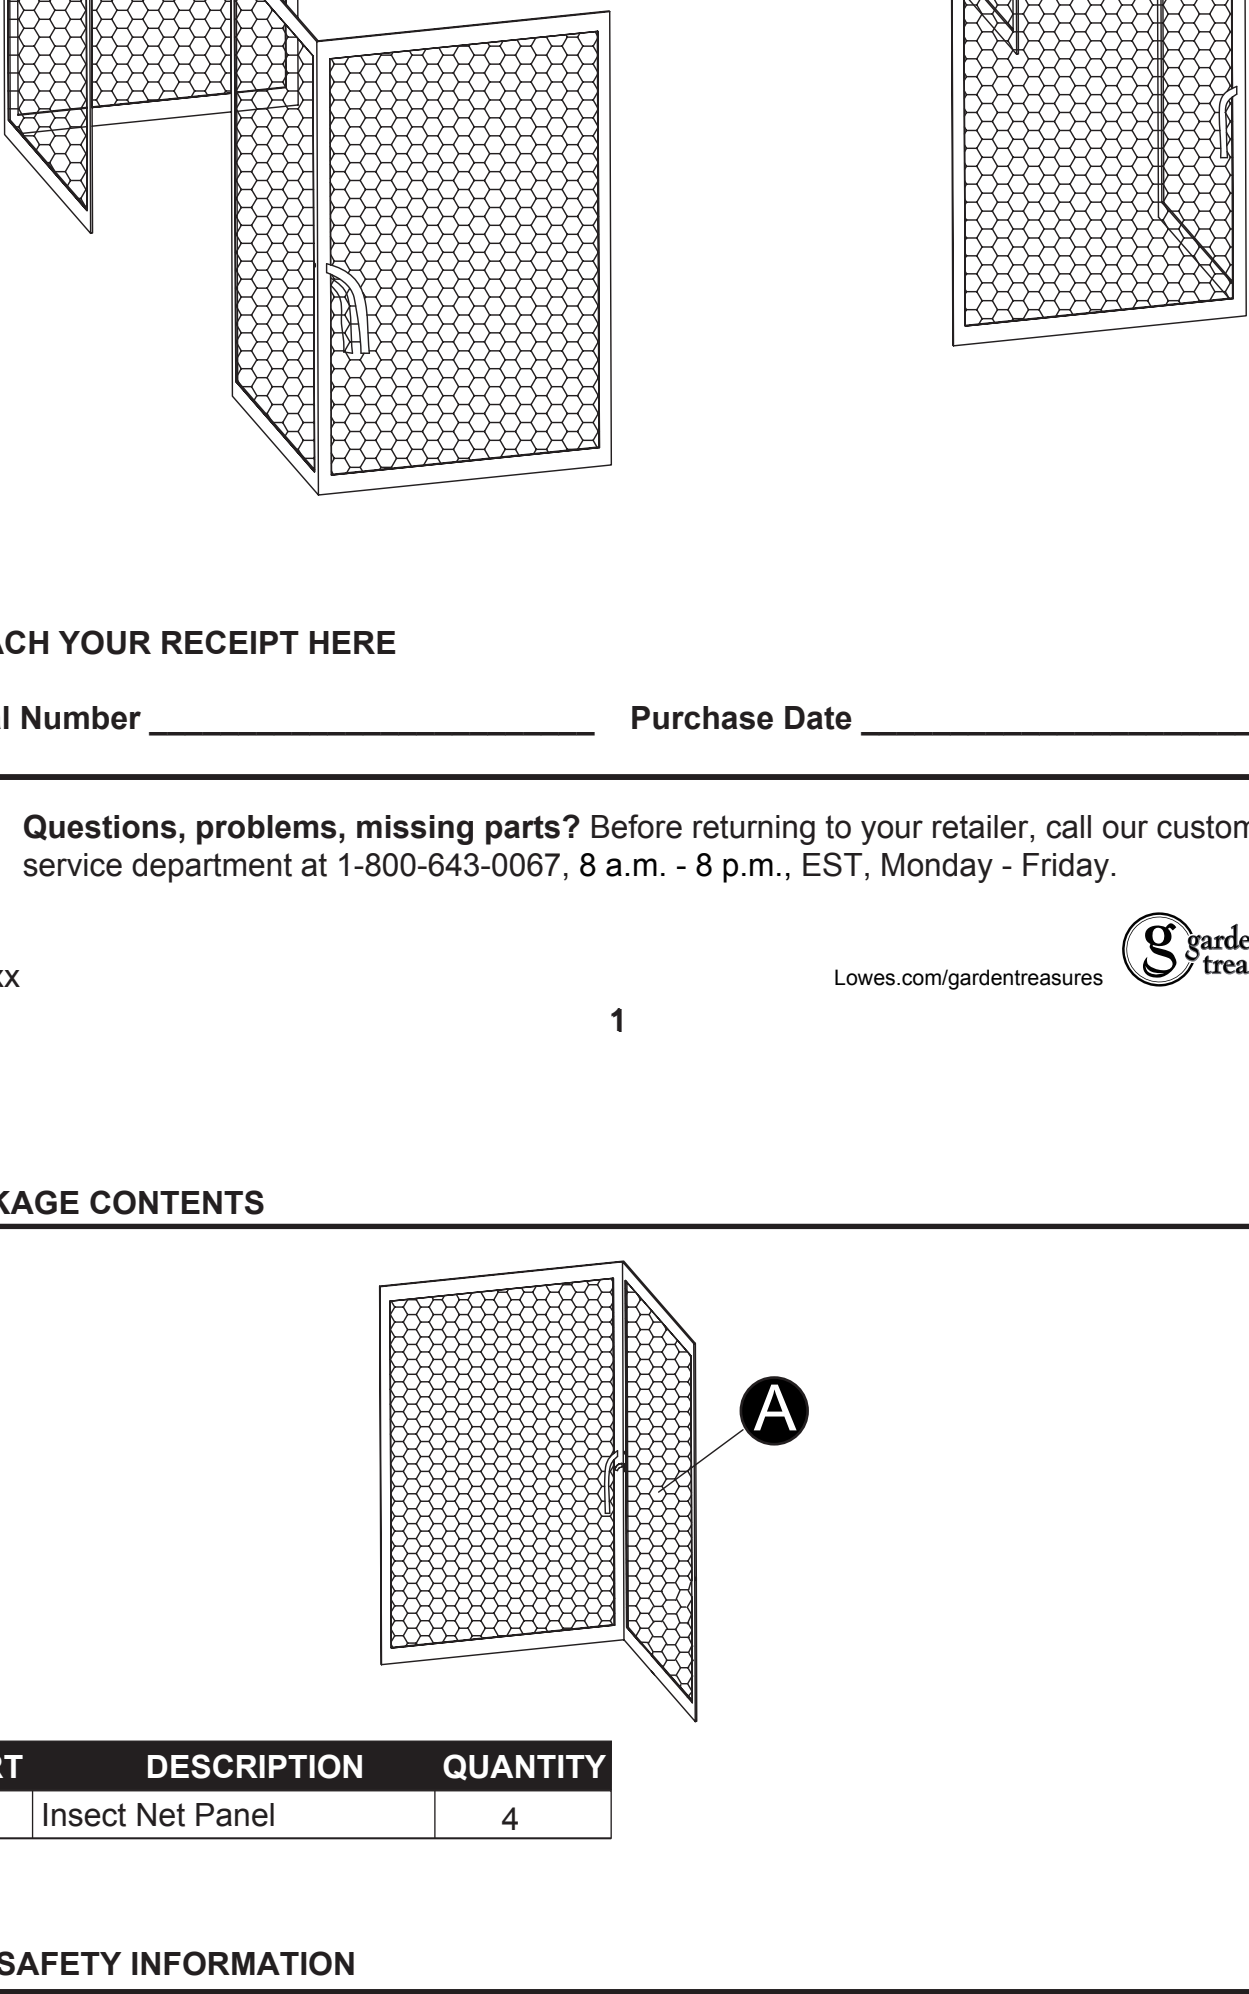

 
ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____

 **Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 8 p.m., EST, Monday - Friday.


XXXXXX

Lowes.com/gardentreasures

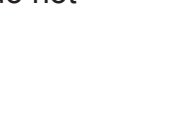

1

 PACKAGE CONTENTS

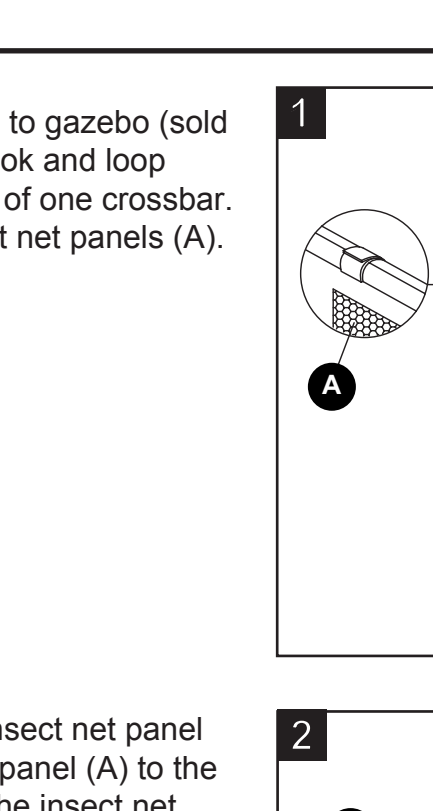

PART	DESCRIPTION	QUANTITY
A	Insect Net Panel	4

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble or install the product.

WARNING

- Assemble your insect on a soft, non-abrasive surface, such as carpeting, to avoid damage.
- Handle with care.
- Two adults may be needed to assemble.

CAUTION

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM CANOPY FABRIC.** This insect net is made with flame-resistant fabric, which meets CPAI-84 specifications. It is not fire proof. The net will burn if left in continuous contact with any flame source. The application of any foreign substance to the canopy fabric may render the flame-resistant properties ineffective.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes

No Tools Required for Assembly.


Lowes.com/gardentreasures



2

ASSEMBLY INSTRUCTIONS

 1. Attach insect net panel (A) to gazebo (sold separately) by wrapping hook and loop straps around the midpoint of one crossbar. Repeat for remaining insect net panels (A).

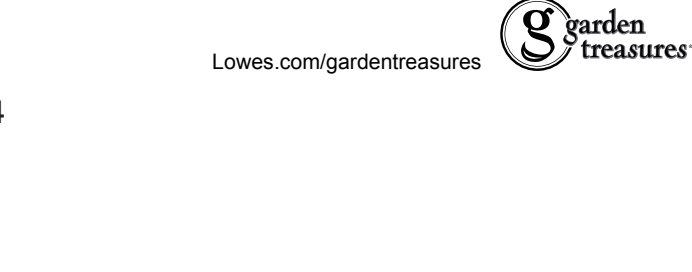

2. Thread the outside tie on insect net panel (A) to fasten the insect net panel (A) to the gazebo side panels when the insect net panels (A) are closed.



3. Thread the inside tie on insect net panel (A) to bunch up the insect net panel (A) to the gazebo side panels when the insect net panels (A) are open.



Lowes.com/gardentreasures



3

CARE AND MAINTENANCE

Wash with mild soap. Rinse with water and let air dry.

ONE-YEAR LIMITED WARRANTY

This warranty is extended to the original purchaser and applies to defects in materials and workmanship of your patio furniture provided your furniture is maintained with care and used only for personal, residential purposes.

Replacement insect may be available for purchase online if out of warranty.

Frames are warranted to be free from defects in material or workmanship for a period of one (1) year.

Cushions, Straps and/or Wicker Weaves are covered for a period of one (1) year against defects in material or workmanship. Sling fabric is covered for a period of one (1) year against defects in material or workmanship.

Exclusions: Items used for commercial, contract or other non-residential purposes; display models; items purchased "as is;" or items damaged due to acts of nature, vandalism, misuse or improper assembly are not covered.

If within the stated warranty period a product is found to be defective in material or workmanship, the purchaser must contact the manufacturer's customer service department at 1-800-643-0067. The manufacturer, at its option, will repair or replace the defective parts.

Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Printed in China

Garden Treasures® is a registered trademark of L.T.L.C. All rights reserved.

Lowes.com/gardentreasures



4

9

10

11

12