 
 
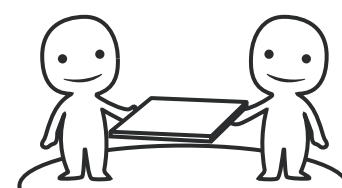 


Dog Cage

 
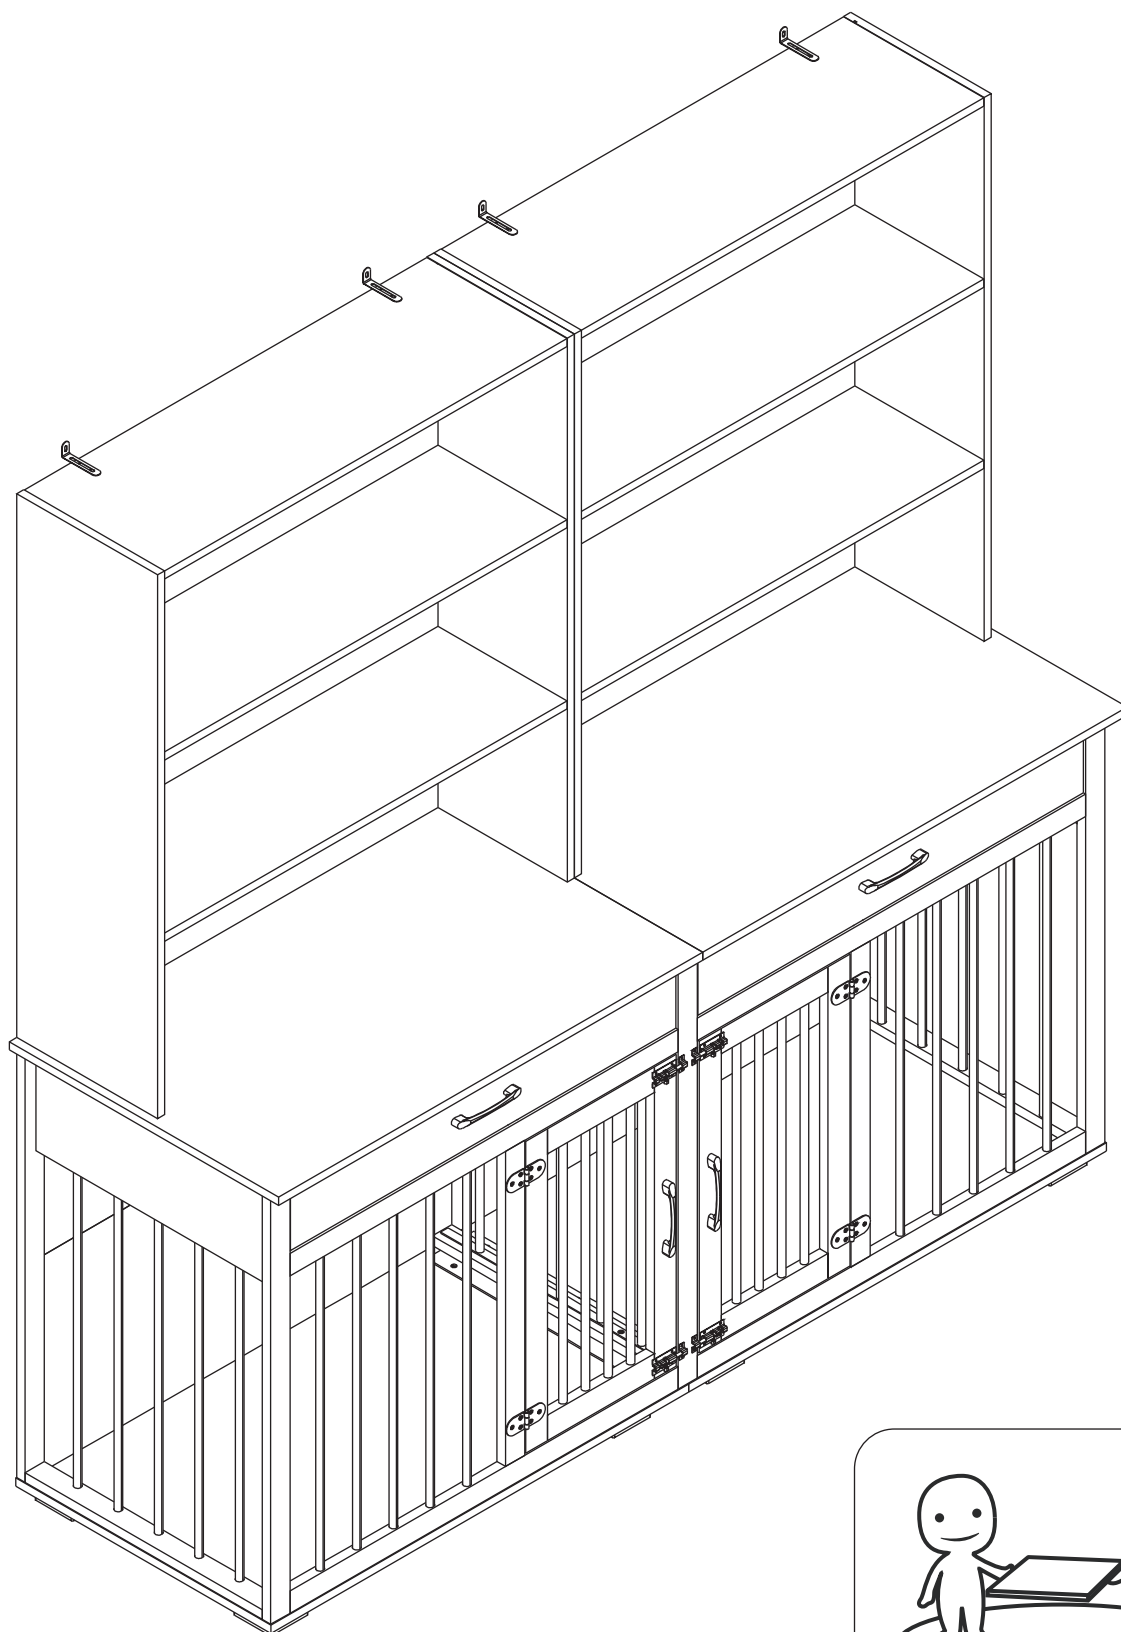 


ASSEMBLED BY 2 ADULTS

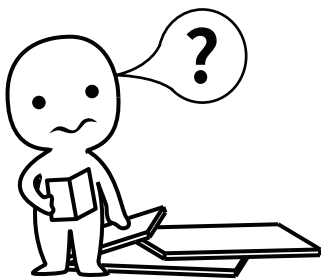


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

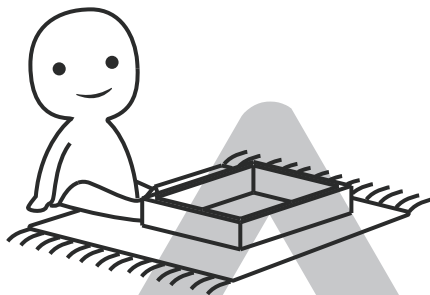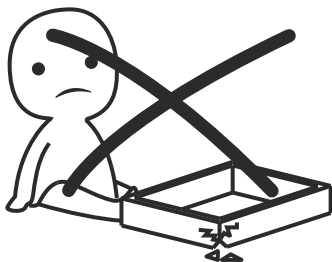



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

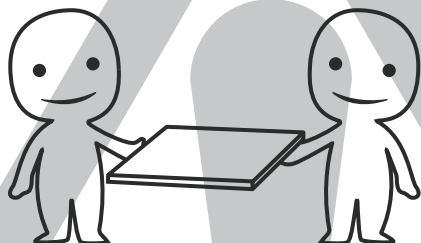

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

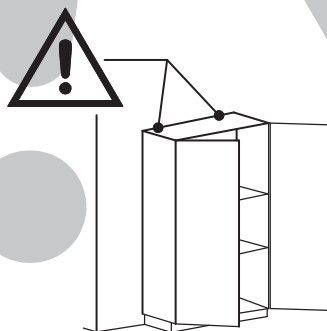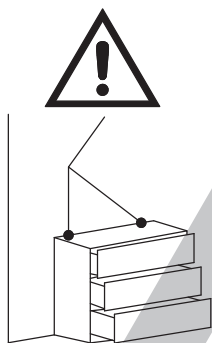

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !







It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

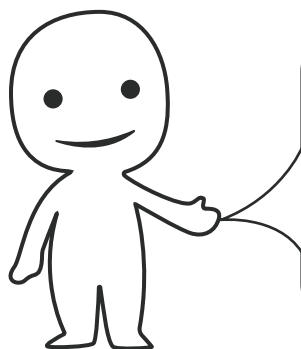


Please prepare the following tools

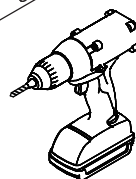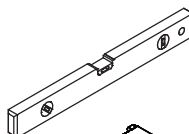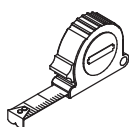      

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 71(+2)




Ø 6 x 35 mm

B x 71(+2)



Ø 15 x 10 mm

 C x 42(+2)



Ø 4 x 40 mm

D x 76(+2)



 
Ø 6 x 30 mm

E x 48(+2)



Ø 3 x 12 mm

F x 4




Ø 4 x 22 mm

G x 4




Ø 4 x 18 mm

 H x 4




96 mm

 I x 4



10 x 28 x 8 mm

 J x 4



50 x 28 x 8 mm

K x 10(+1)



 
Ø 6 x 50 mm

L x 22(+2)




Ø 6 x 12 mm

M x 12(+1)




Ø 6 x 20 mm

 N x 3




Ø 6 x 12 mm

 O x 22(+2)




Ø 20 mm






 
P x 3

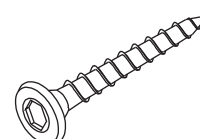

Ø 5 x 30 mm

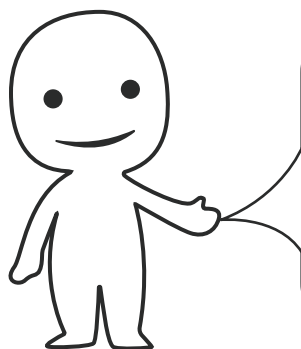 

Please prepare the following tools

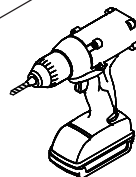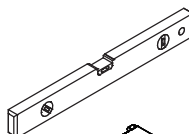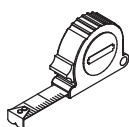      


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Q x 8(+1)



Ø 4 x 12 mm

 R x 4

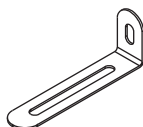


72 x 15 x 25 mm

S x 24(+2)




Ø 3 x 14 mm

 T x 24(+2)



14 x 13 x 9 mm

 U x 4



81 x 33 x 6 mm

V x 24(+2)



 
Ø 3.5 x 12 mm

W x 4




Ø 6 x 30 mm

X x 8




Ø 4 x 25 mm

 Y x 1

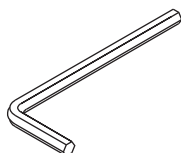


M4 mm

 CL x 2

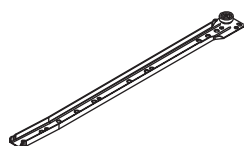


400 mm

 CR x 2

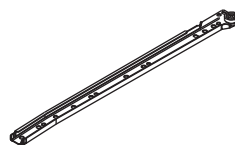


400 mm

 DL x 2

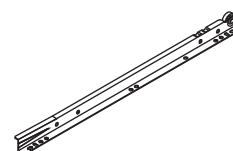


400 mm

 DR x 2

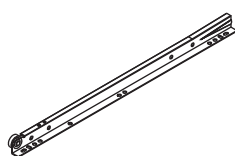

400 mm

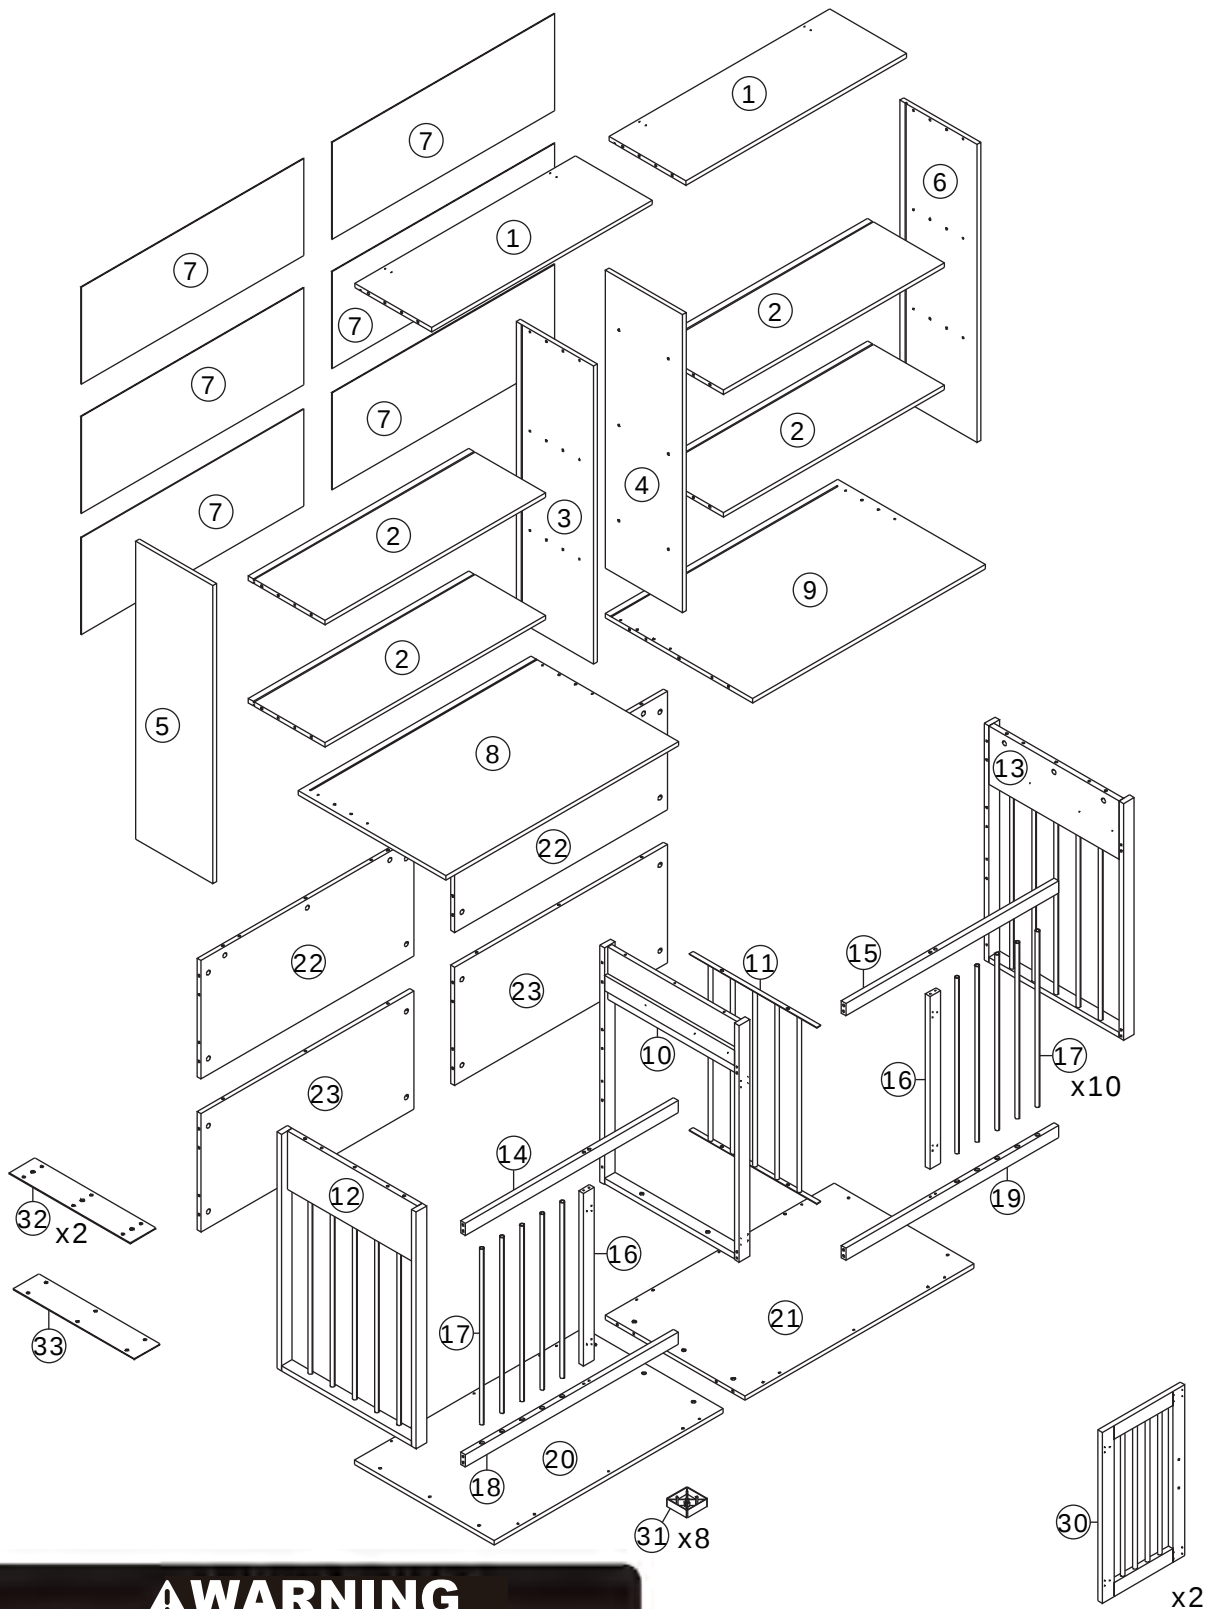 


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

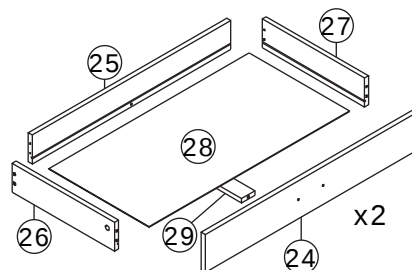

1

 Place part 11 into board 10 as shown.

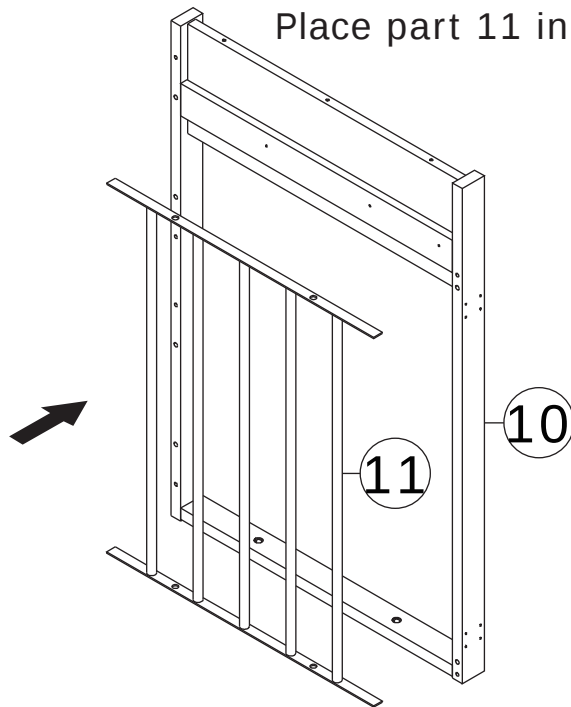


2

L x 4




Ø 6 x 12 mm

 Y x 1




M4 mm


 
Fix part 11 to board 10 with screw(L) as shown.

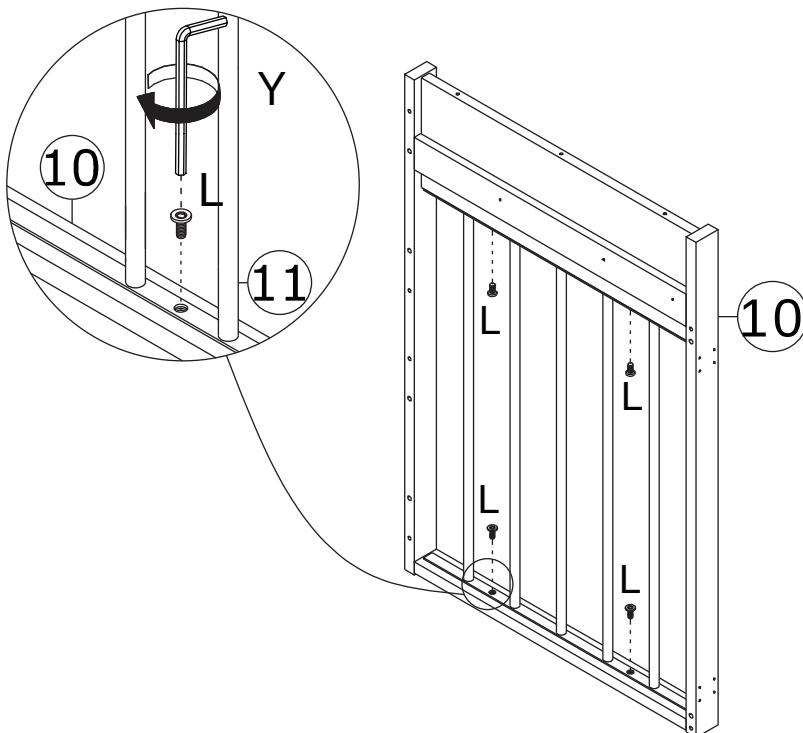


90°

 3




E x 12  Ø3 x 12 mm	CL x 2  400 mm	CR x 2  400 mm	
---	---	---	---

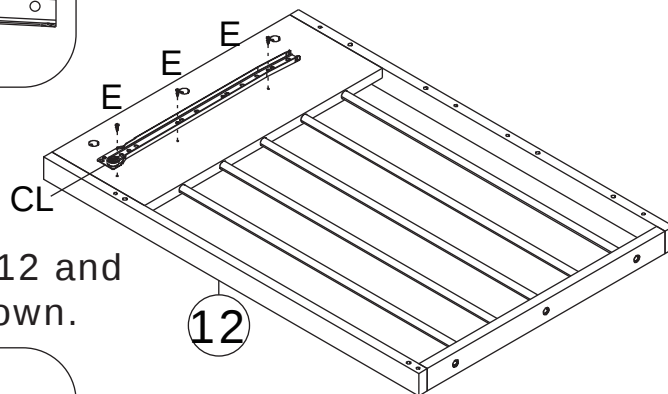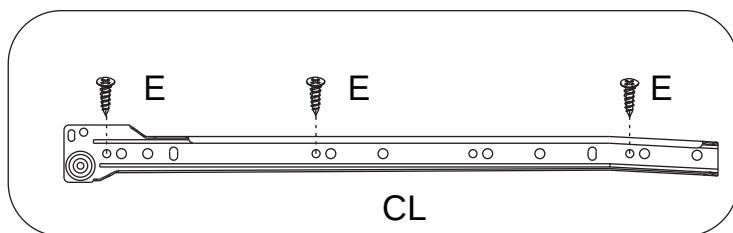  

 Fix slide rail(CL) and (CR) to board 12 and 13 respectively with screw(E) as shown.

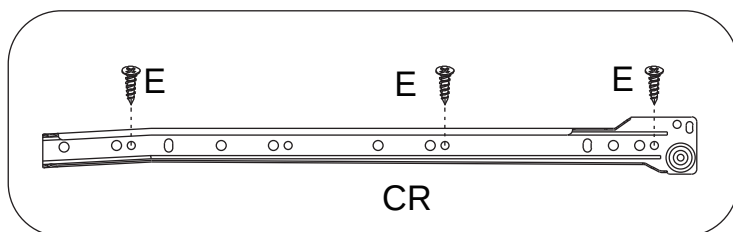



 
 
 
Fix slide rail(CR) to board 10 with screw(E) at first.

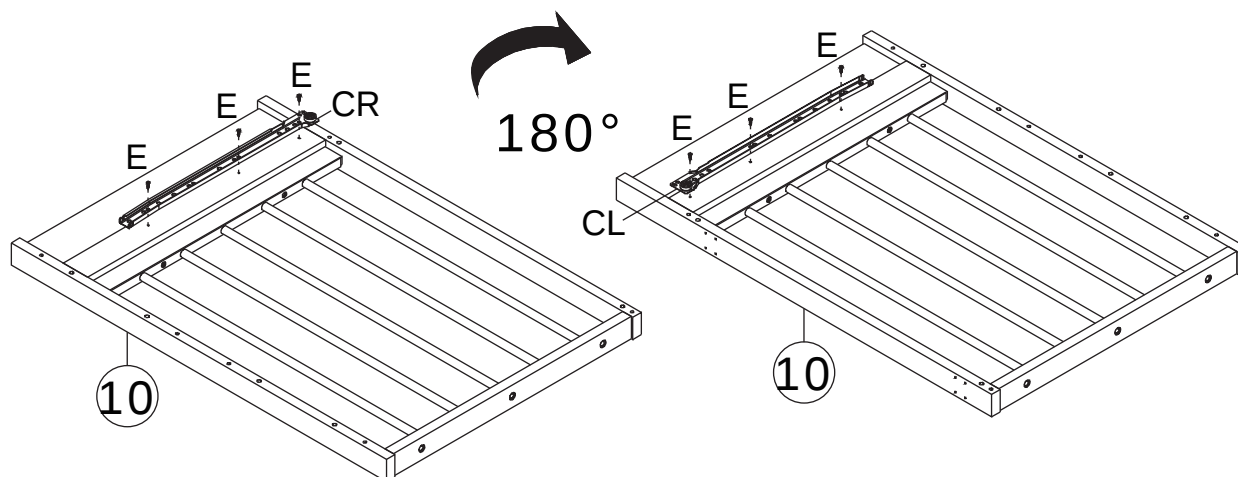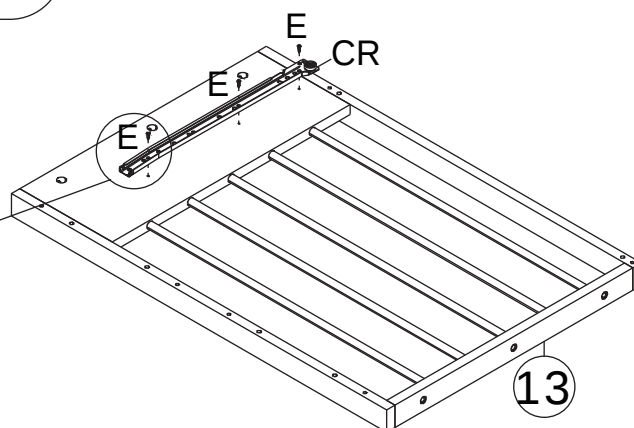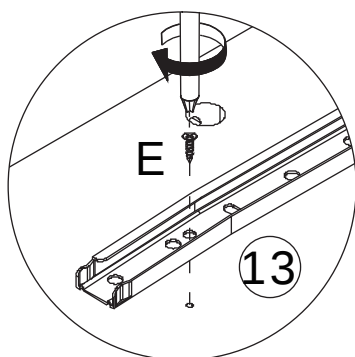

Flip the board to back, fix slide rail(CL) as well.

 4

A x 12

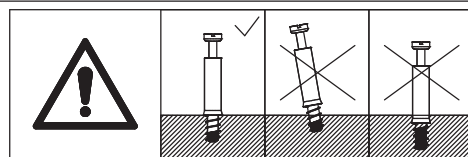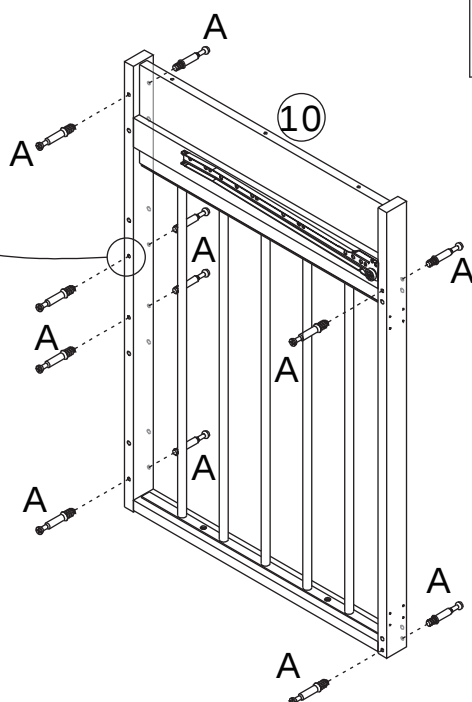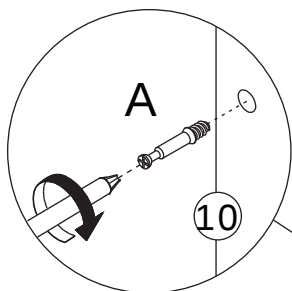     Ø6 x 35 mm

 
 
 


Screw eccentric rod(A) into board 10 as shown.

5

K x 6

 Ø6 x 50 mm

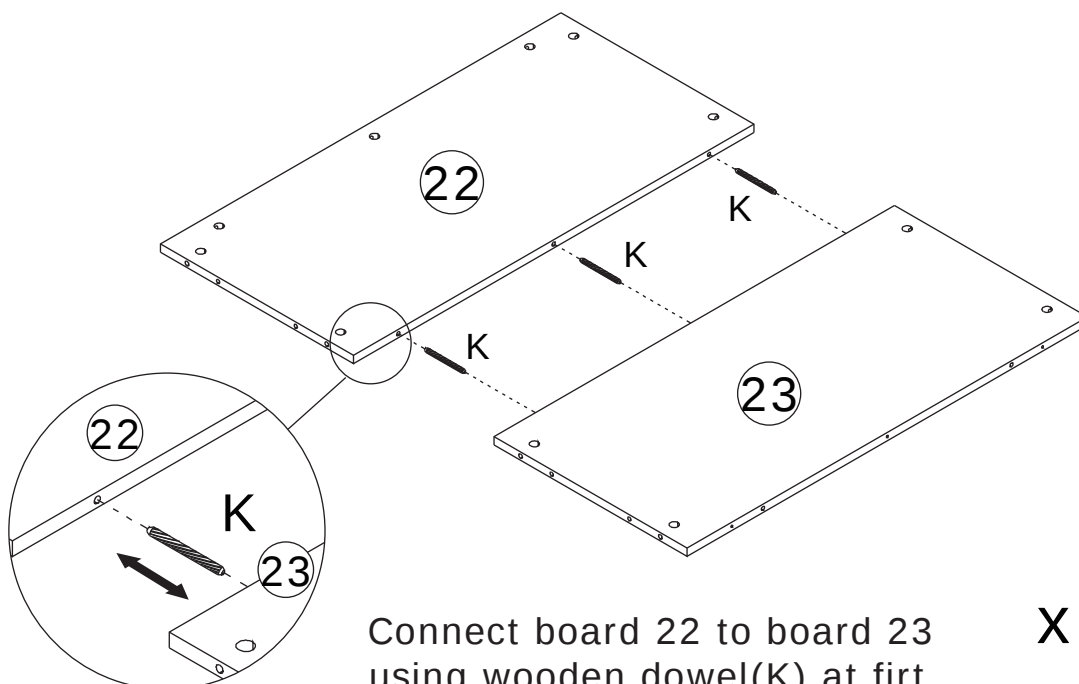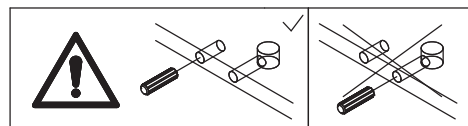


Connect board 22 to board 23
 using wooden dowel(K) at firt.






x 2

6

 D x 16



Ø 6 x 30 mm

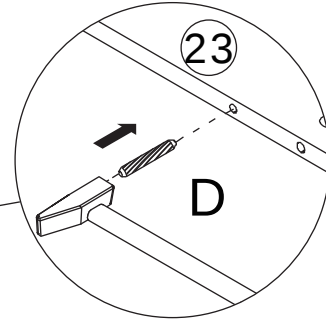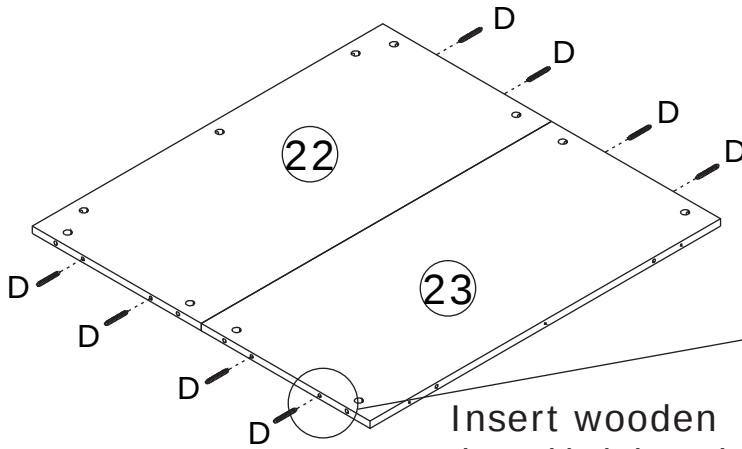     

Insert wooden dowel(D) into board 22 and 23 as shown. **x 2**

7

B x 8

 
 
 
 


Ø 15 x 10 mm





O x 8






Ø 20 mm

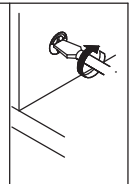

    Attach board 10 to board 22 and 23, add cam lock(B) into board 22, 23 and turn clockwise to tighten as shown.

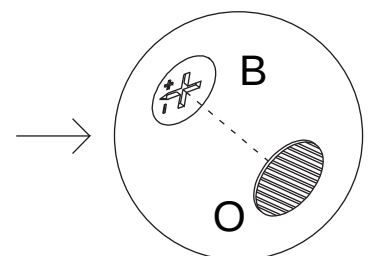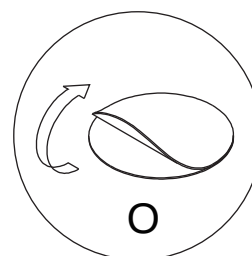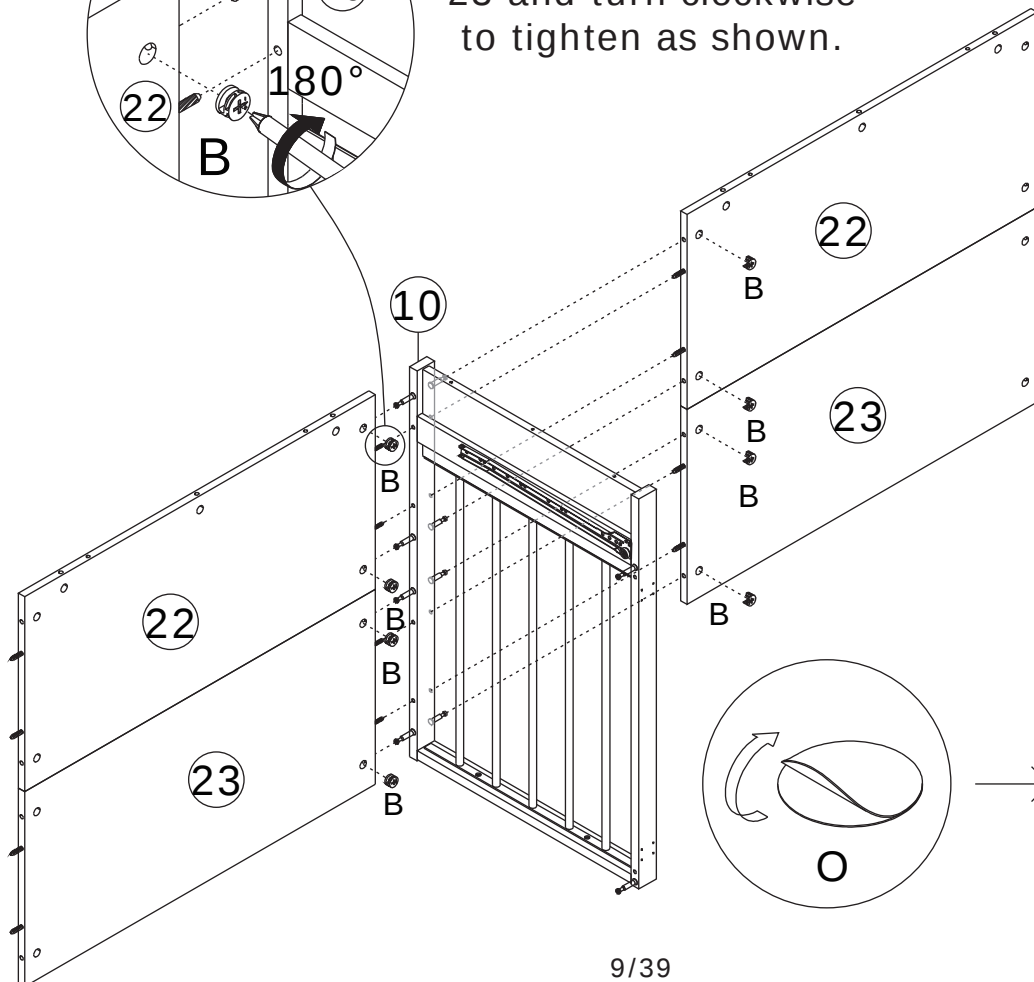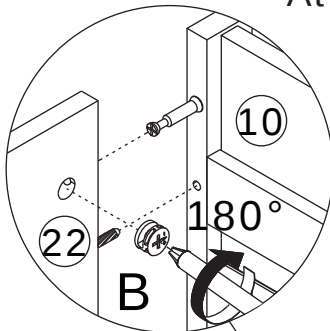


8

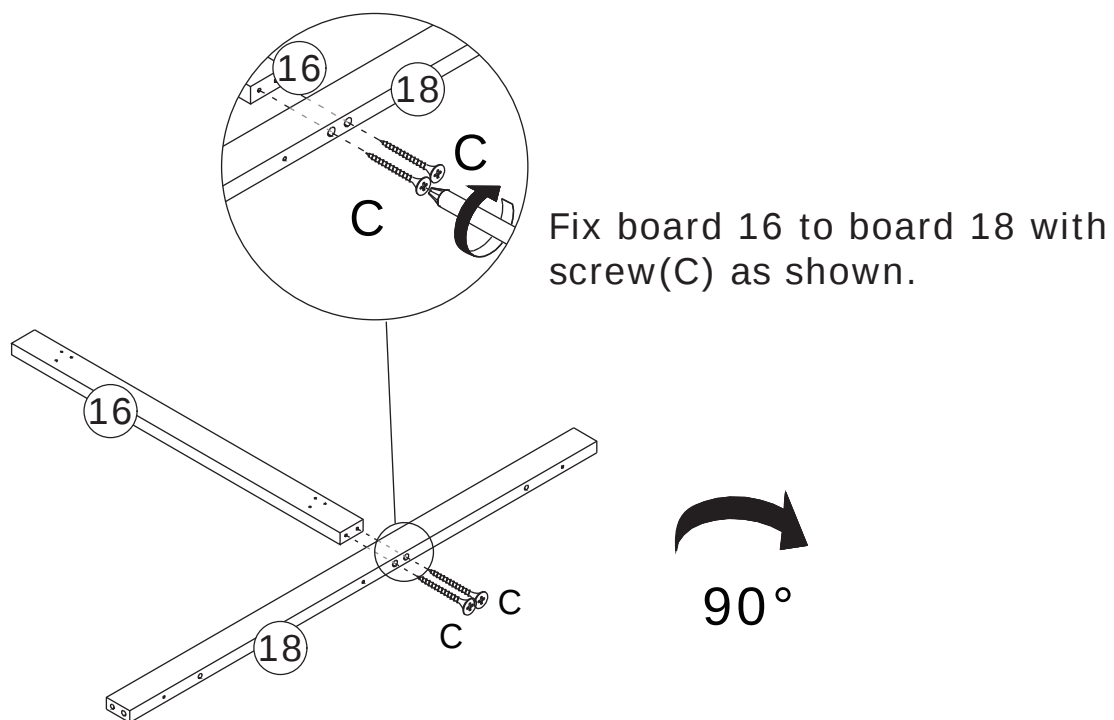 
 
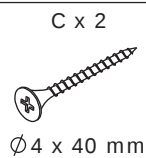 


9

 Insert rod 17 into board 18 at first.



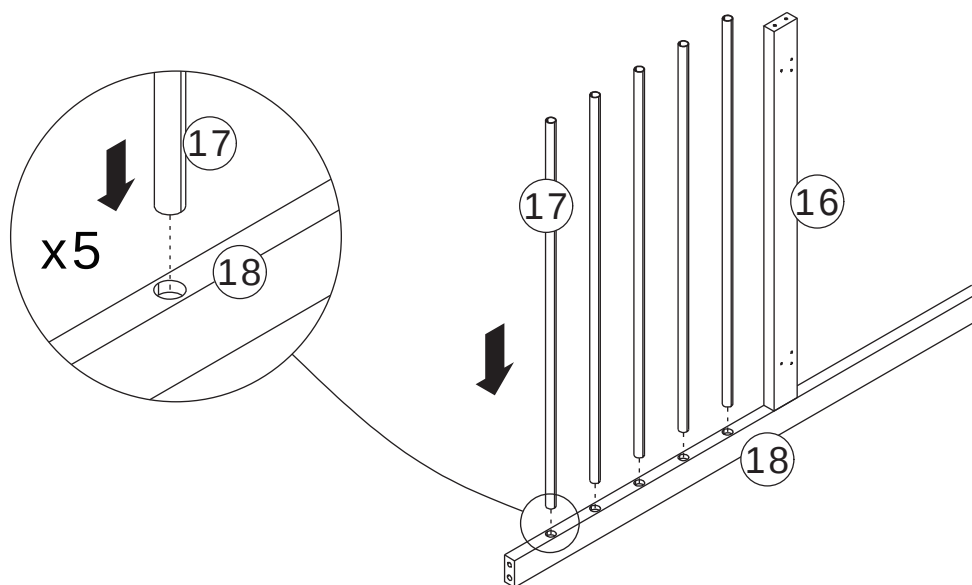


10

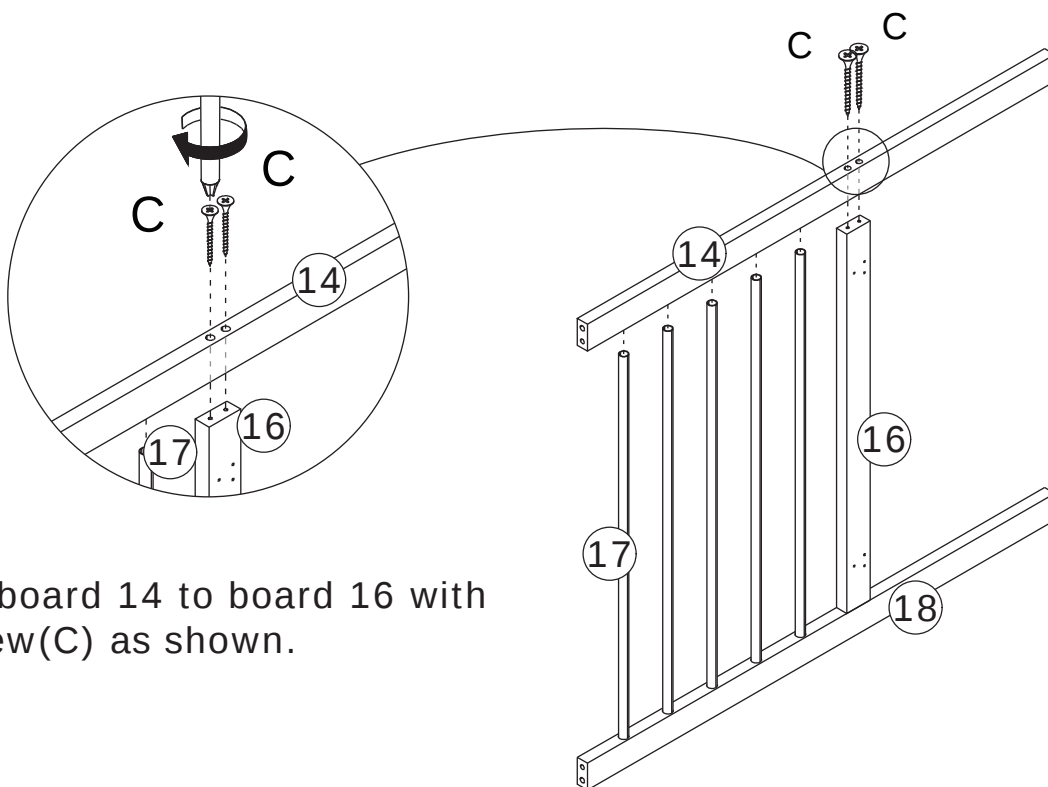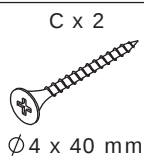   


Fix board 14 to board 16 with screw(C) as shown.

   11

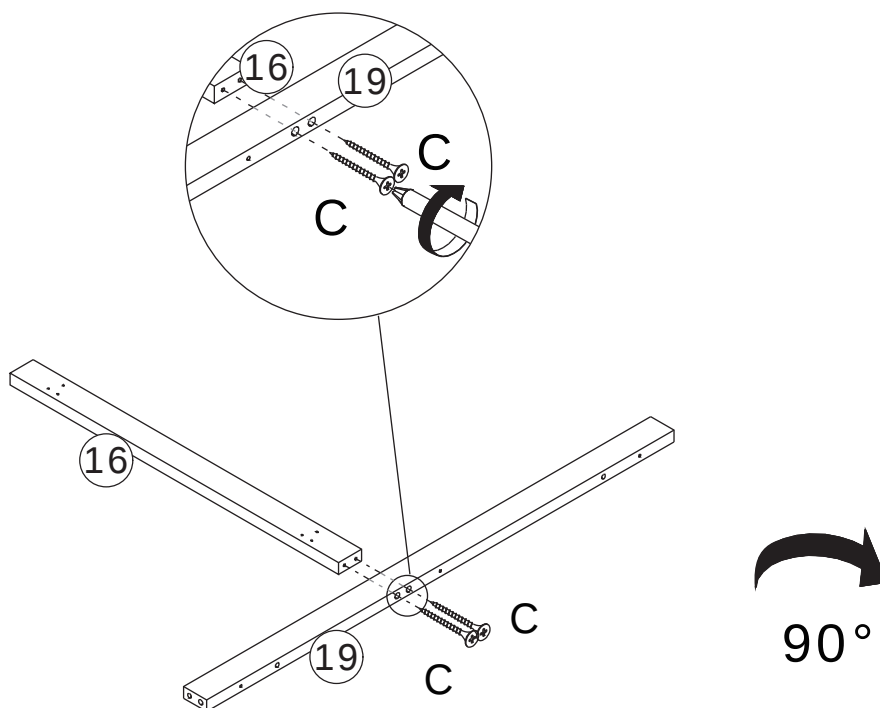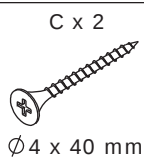

Fix board 16 to board 19 with screw(C) as shown.

 12

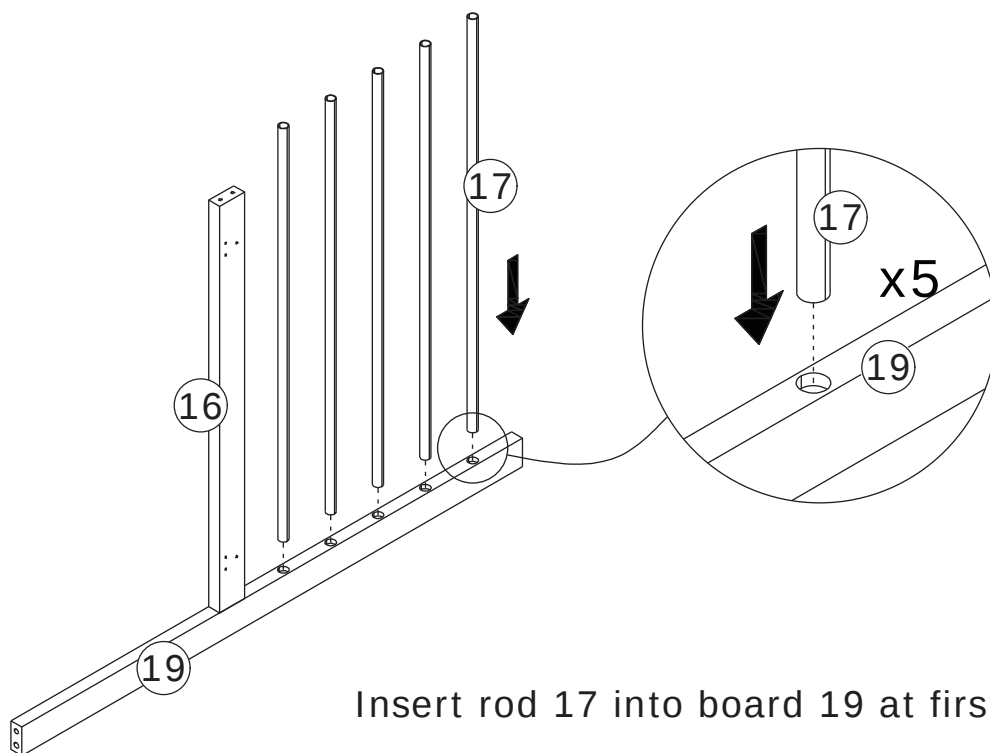


Insert rod 17 into board 19 at first.

13



 Fix board 15 to board 16 with screw(C) as shown.





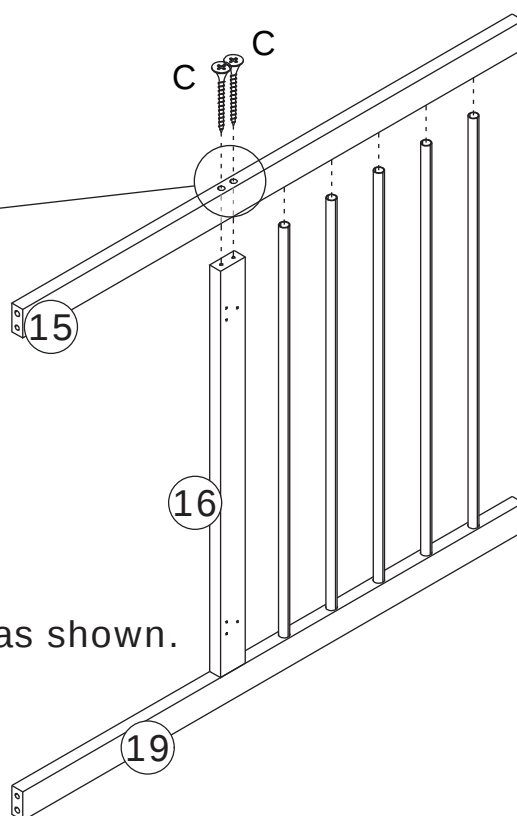


14

D x 8



     Ø6 x 30 mm

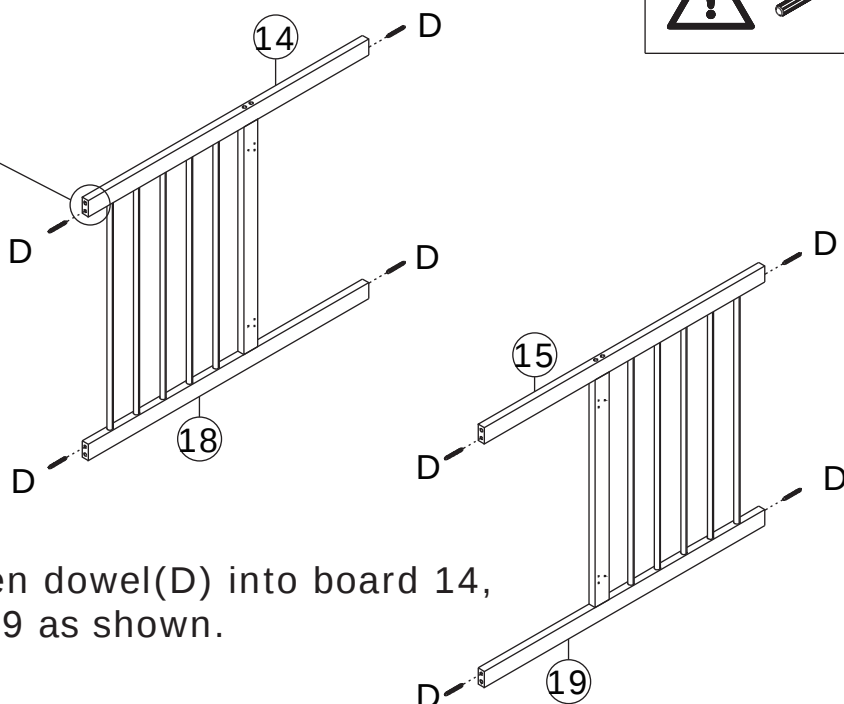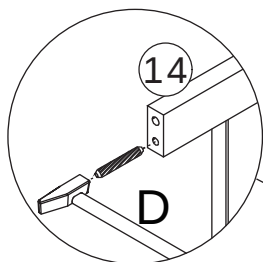






Insert wooden dowel(D) into board 14, 18, 15 and 19 as shown.

15


B x 4



     Ø15 x 10 mm

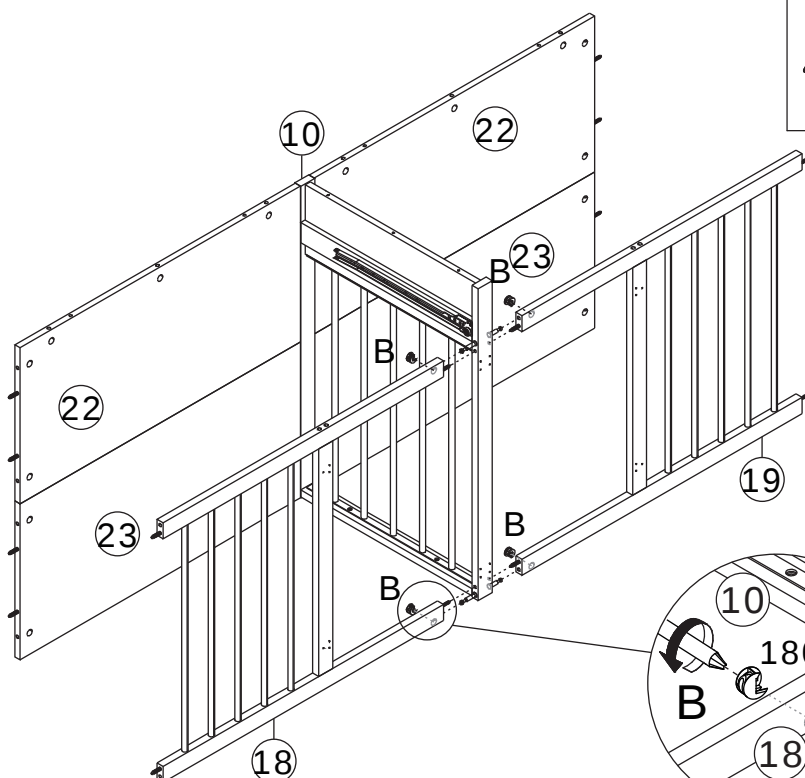





 Attach board 14, 18, 15 and 19 to board 10, add cam lock(B) into and turn clockwise to tighten as shown.

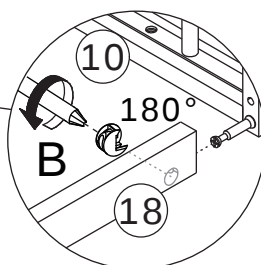


16

    A x 12

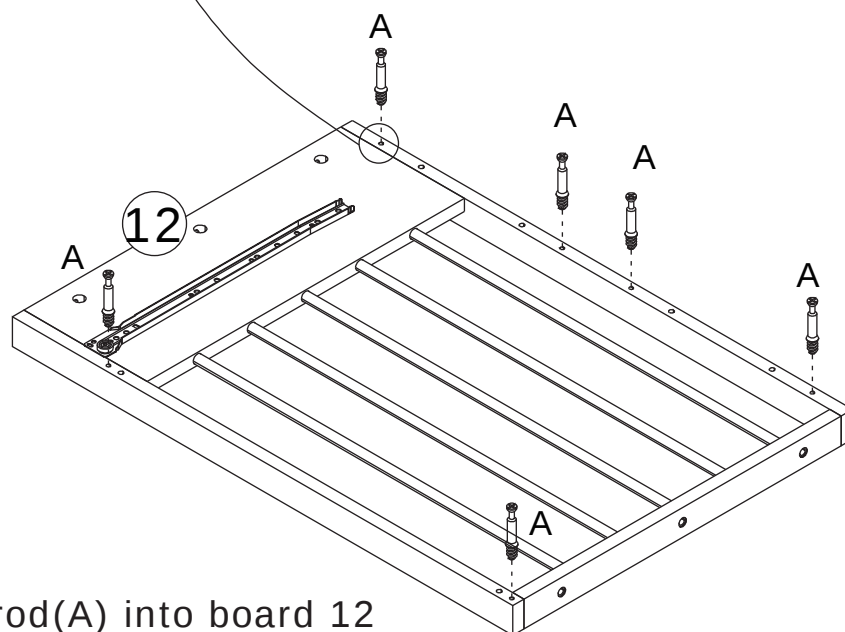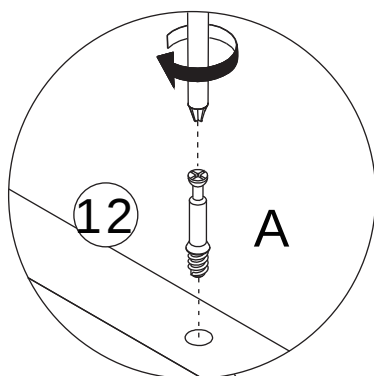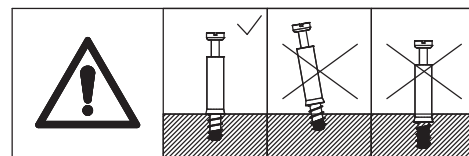

 Screw eccentric rod(A) into board 12 and 13 as shown.

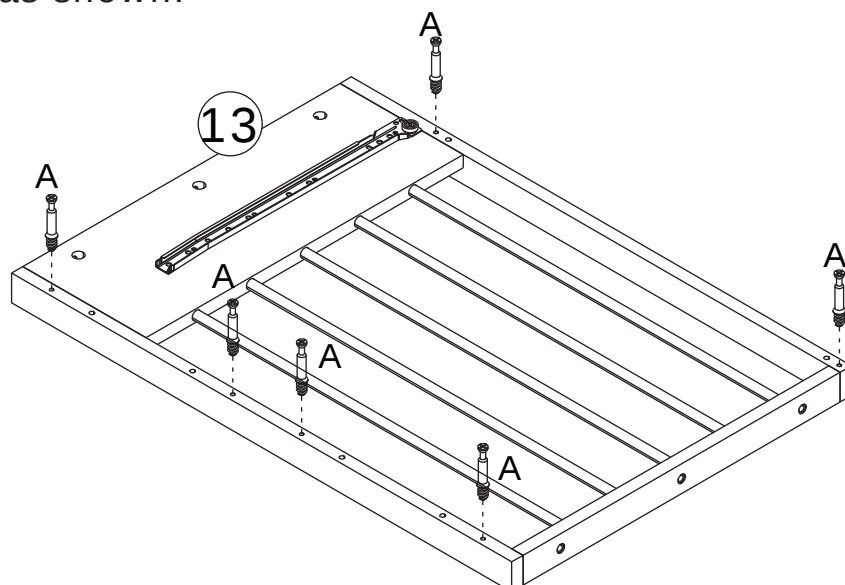

17

B x 12

 
 
 


Ø15 x 10 mm

O x 8



Ø20 mm

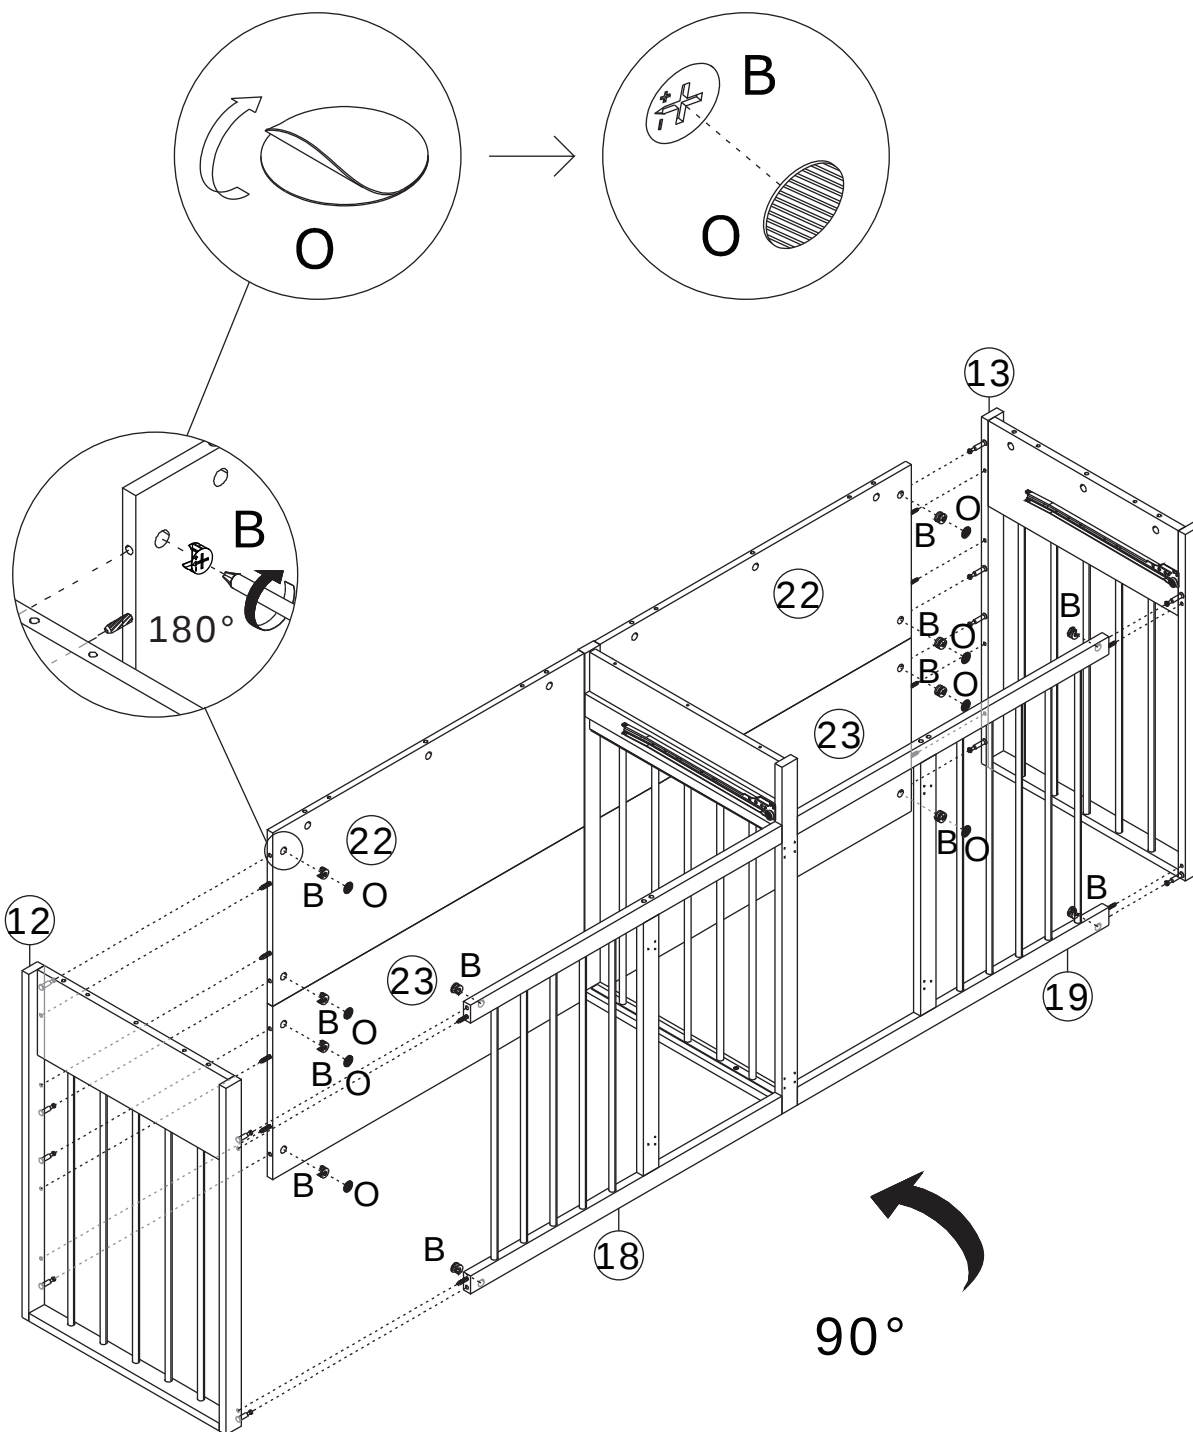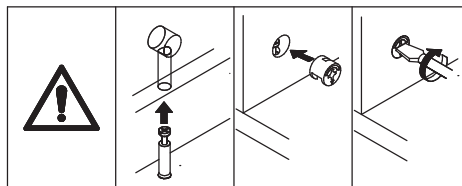

Attach board 12 and 13 to board 22, 23, 14, 18, 15 and 19, add cam lock(B) into and turn clockwise to tighten as shown.

 
18

E x 8






Ø3 x 12 mm

I x 4




10 x 28 x 8 mm

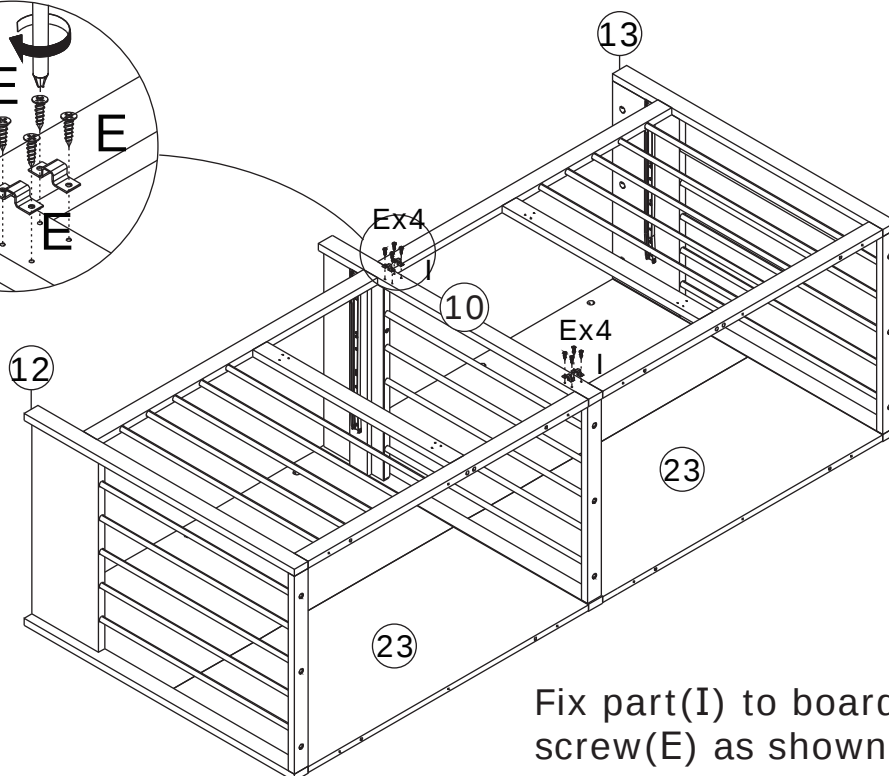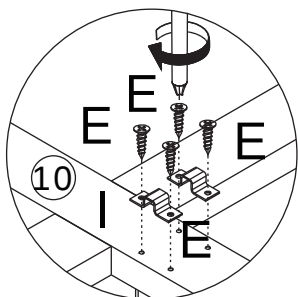   

Fix part(I) to board 10 with screw(E) as shown.

19

 D x 8



Ø6 x 30 mm

N x 3

 


Ø6 x 12 mm



Y x 1



M4 mm








  Fix board 32 to board 10 with screw(N) as shown.

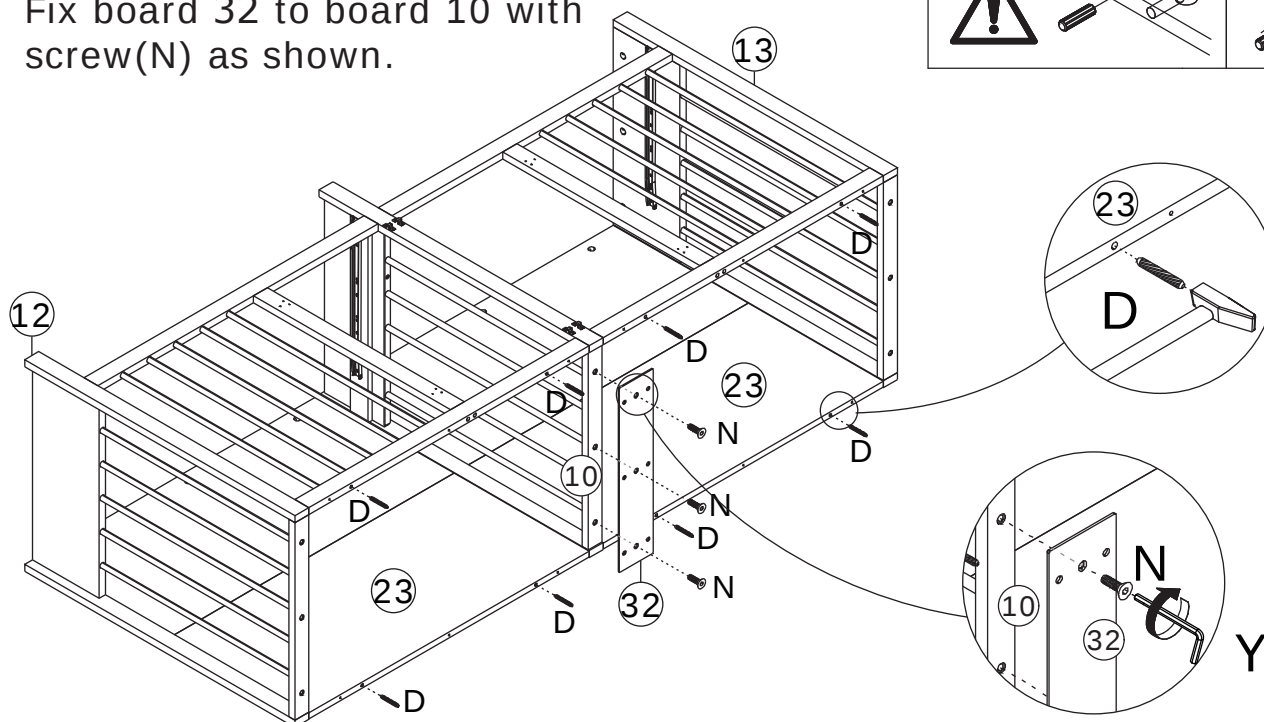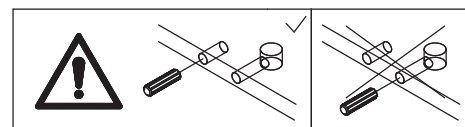




Insert wooden dowel(D) into board 18, 23 and 19 as shown. 16/39

     20

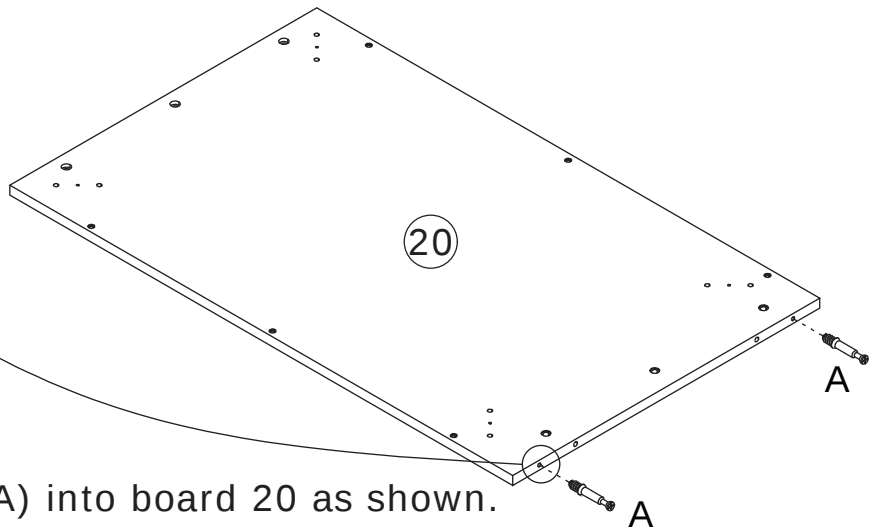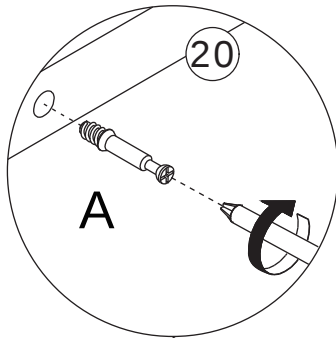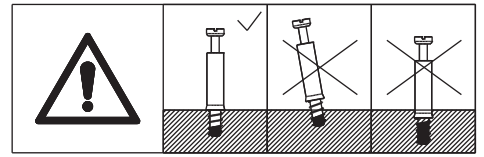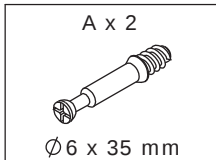


Screw eccentric rod(A) into board 20 as shown.

  
 
21

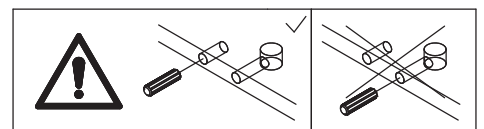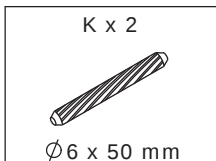



 
Insert LONG wooden dowel(K) into board 21 as shown.

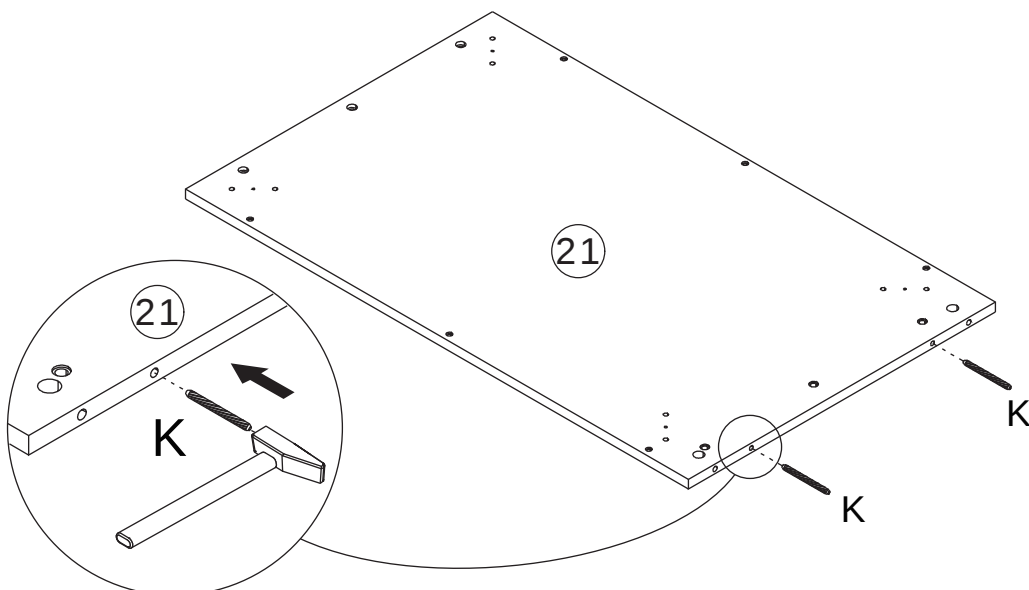

22







 
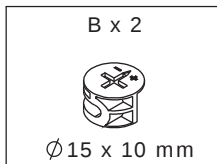 


   Attach board 20 to board 21, add cam lock(B) into and turn clockwise to tighten as shown.

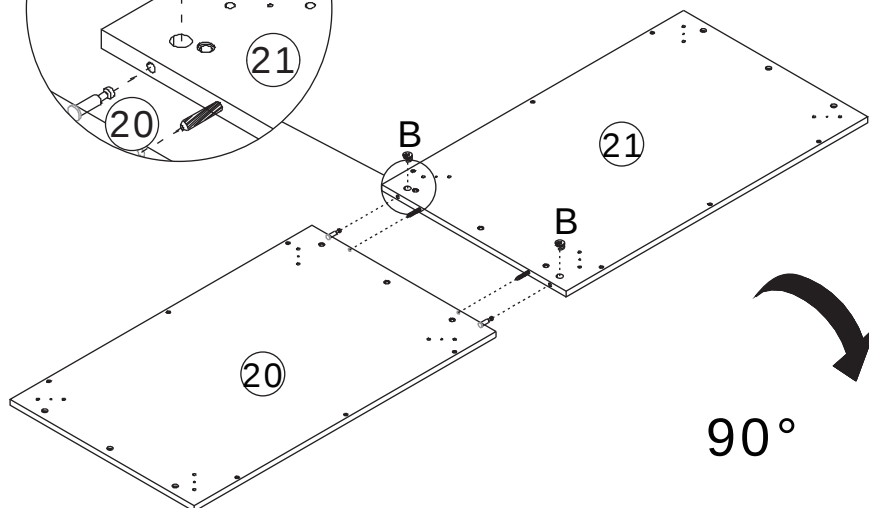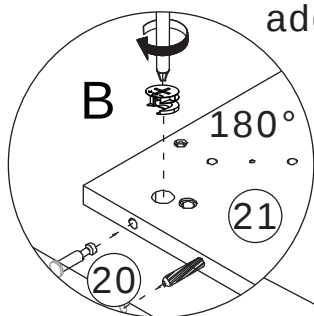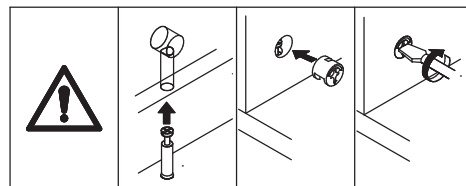


90°

        
23

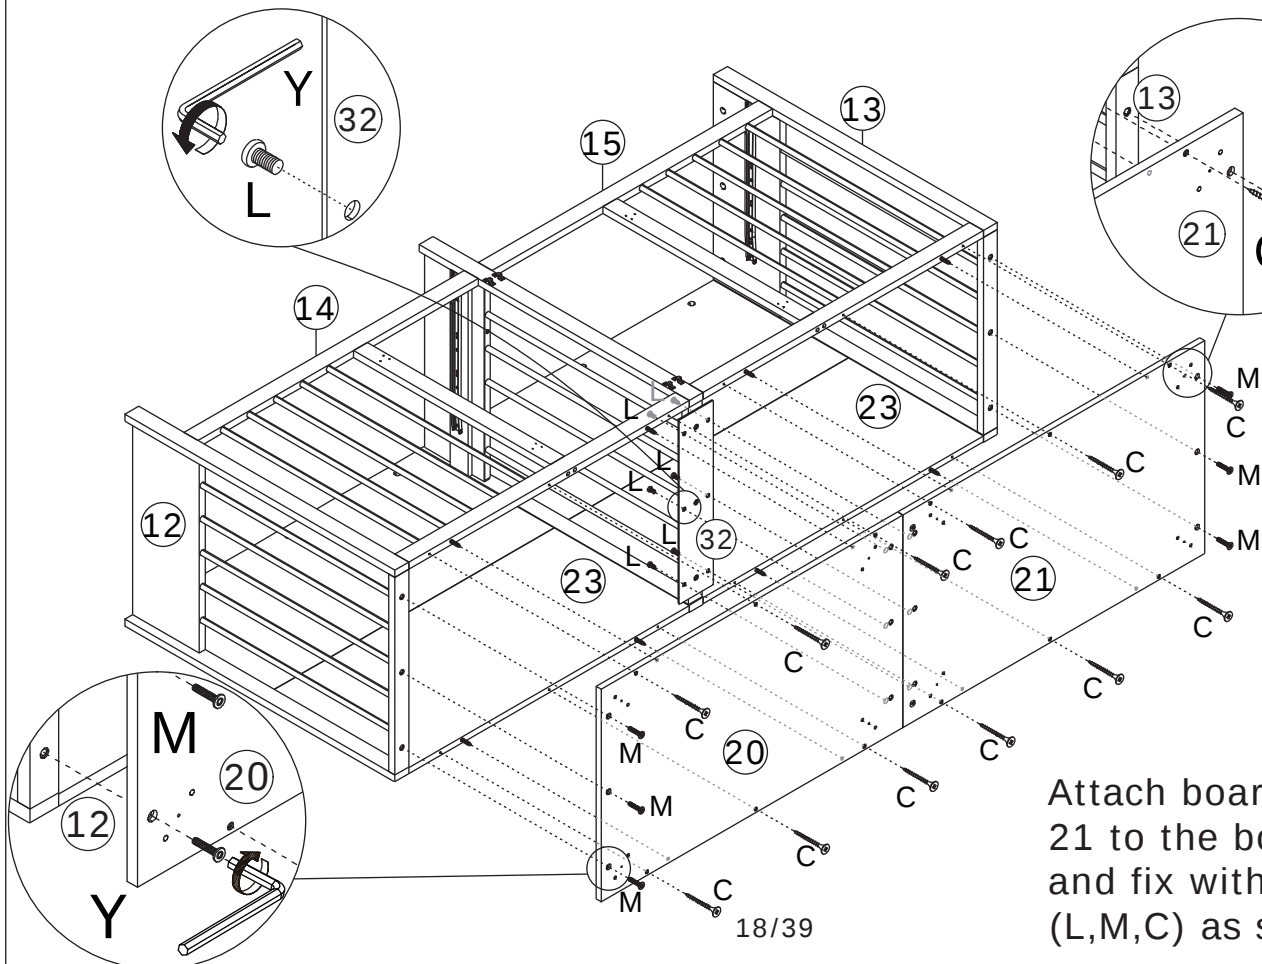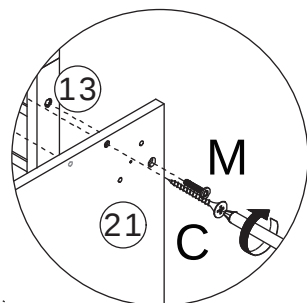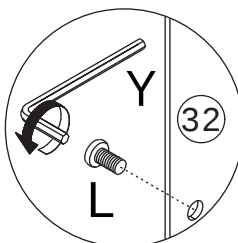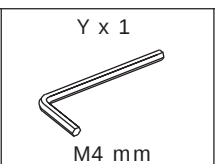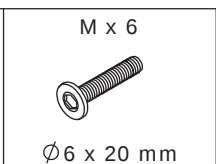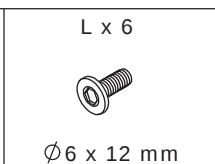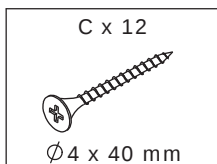


Attach board 20 and 21 to the bottom, and fix with screw (L,M,C) as shown.

 24


L x 6  Ø 6 x 12 mm	Y x 1  M4 mm	
---	---	--

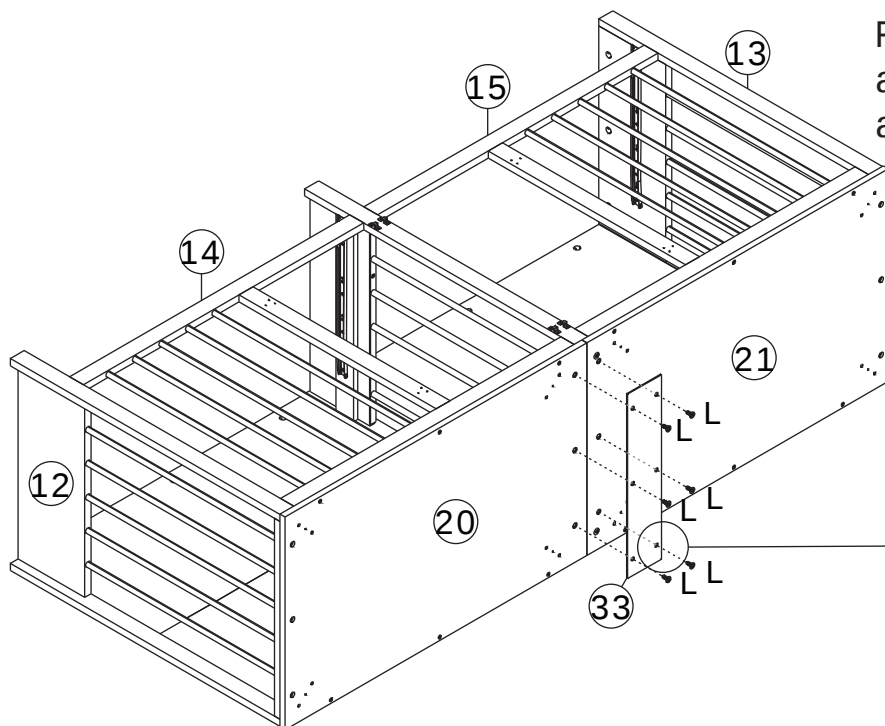 


 
Fix board 33 to board 20 and 21 with screw(L) as shown.

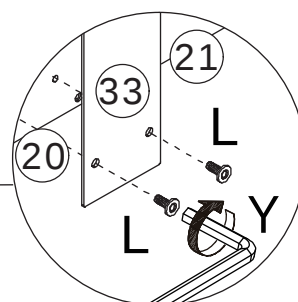

25

 X x 8  Ø 4 x 25 mm		
---	--	---

  Fix board 31 to board 20 and 21 with screw(X) as shown.

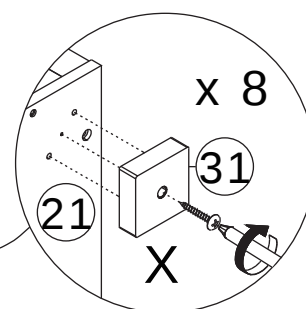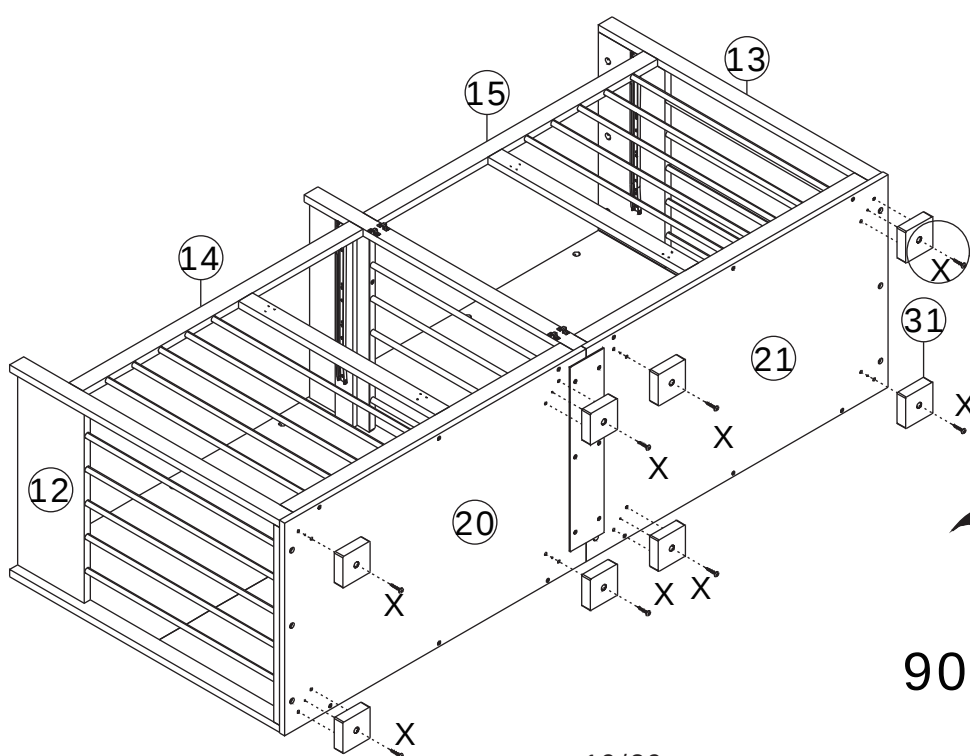

90°

 
26

D x 8




Ø6 x 30 mm

P x 3









Ø5 x 30 mm

 Y x 1

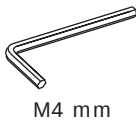

M4 mm

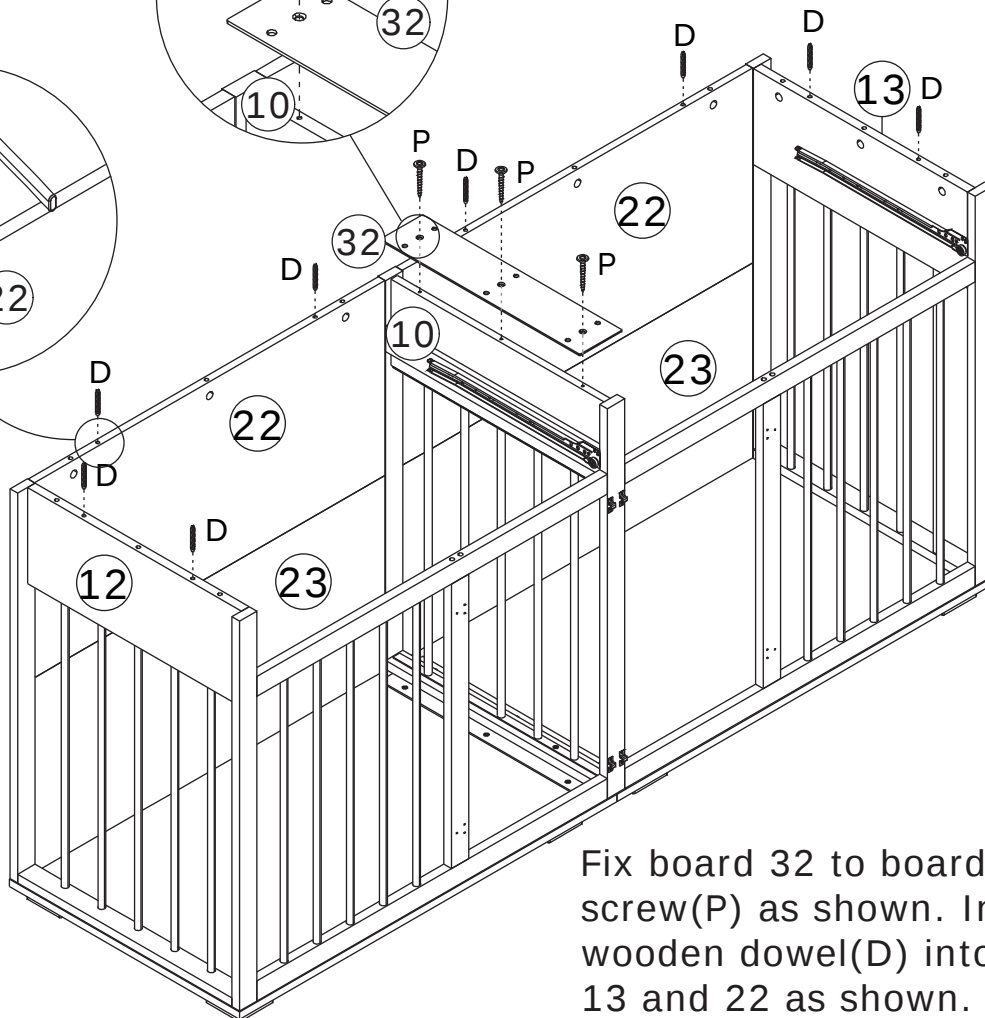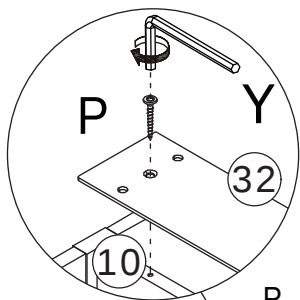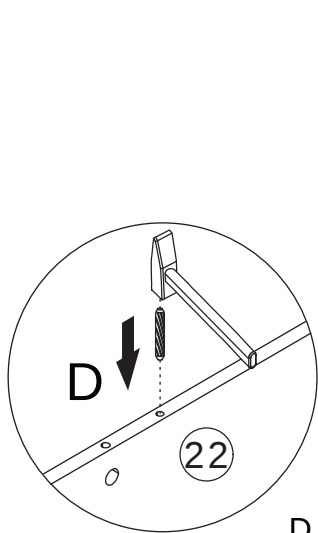      






Fix board 32 to board 10 with screw(P) as shown. Insert wooden dowel(D) into board 12, 13 and 22 as shown.

27

D x 8



 
 
 
 
 
Ø6 x 30 mm

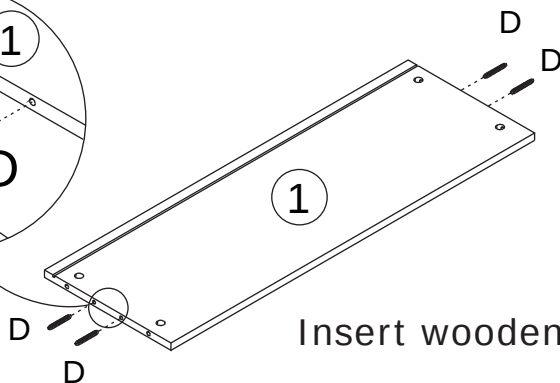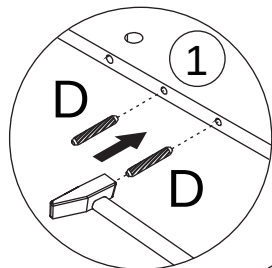

Insert wooden dowel(D) into board 1 as shown.

x 2

   
 
 
28

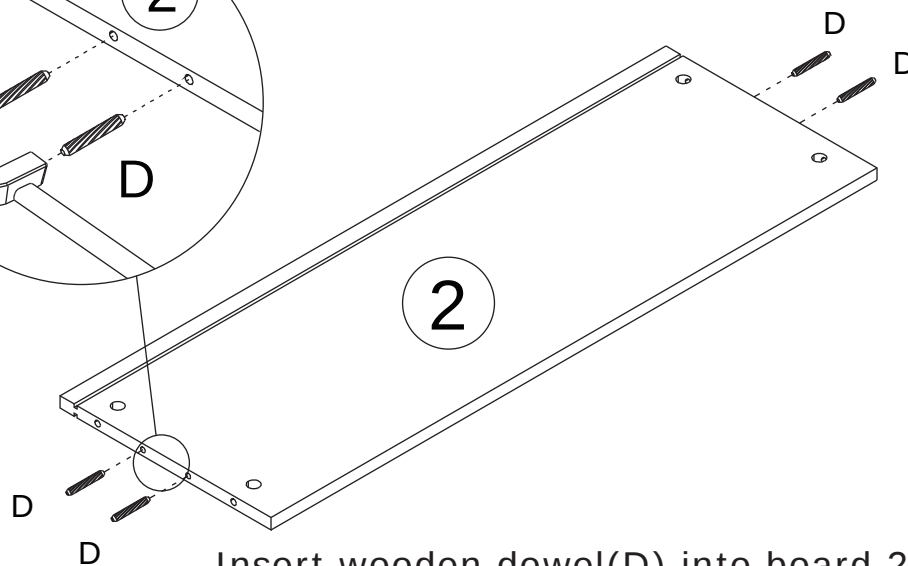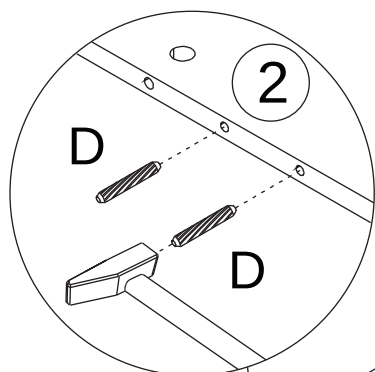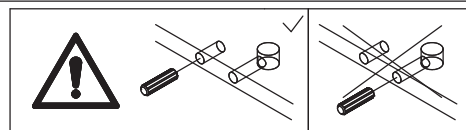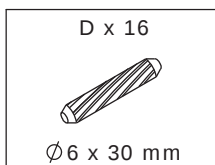


x 4

Insert wooden dowel(D) into board 2 as shown.

   29

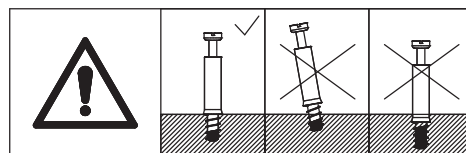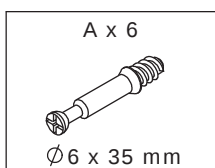

 Screw eccentric rod(A) into board 3 as shown.

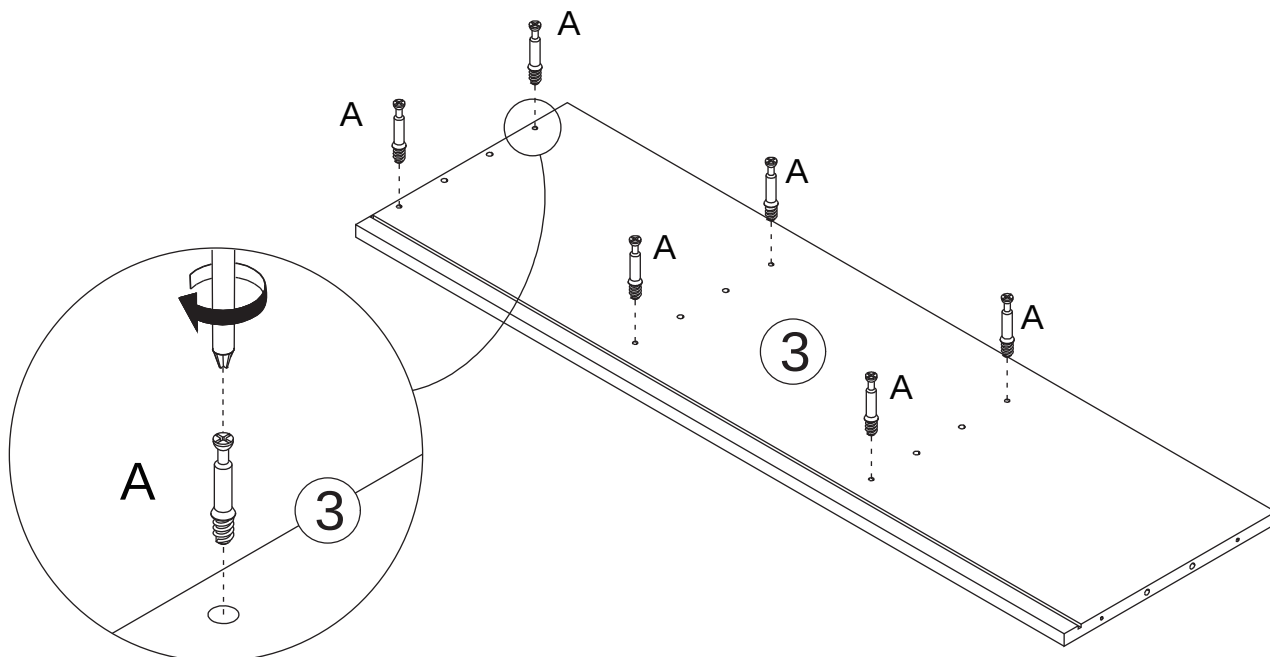





30

B x 6



    
Ø15 x 10 mm



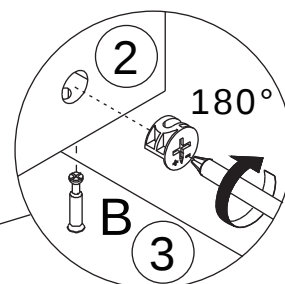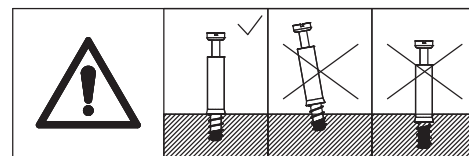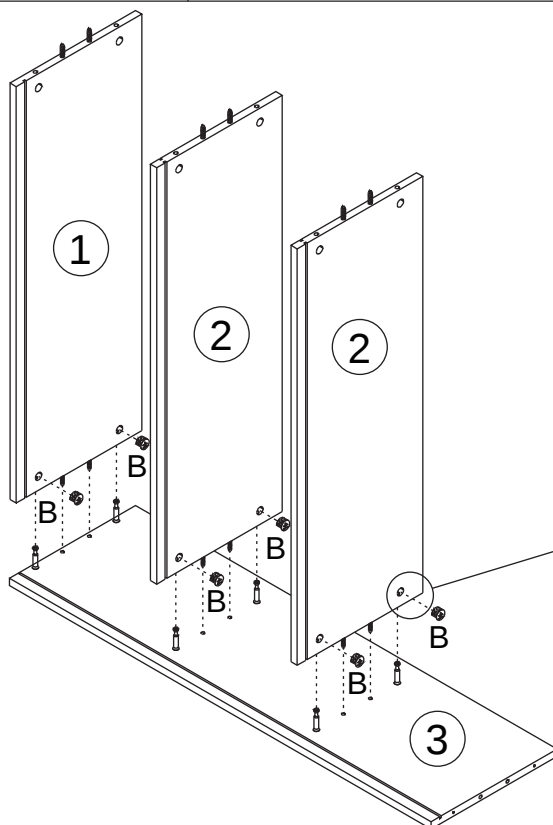





Attach board 1 and 2 to board 3, add cam lock(B) into and turn clockwise to tighten as shown.

 31

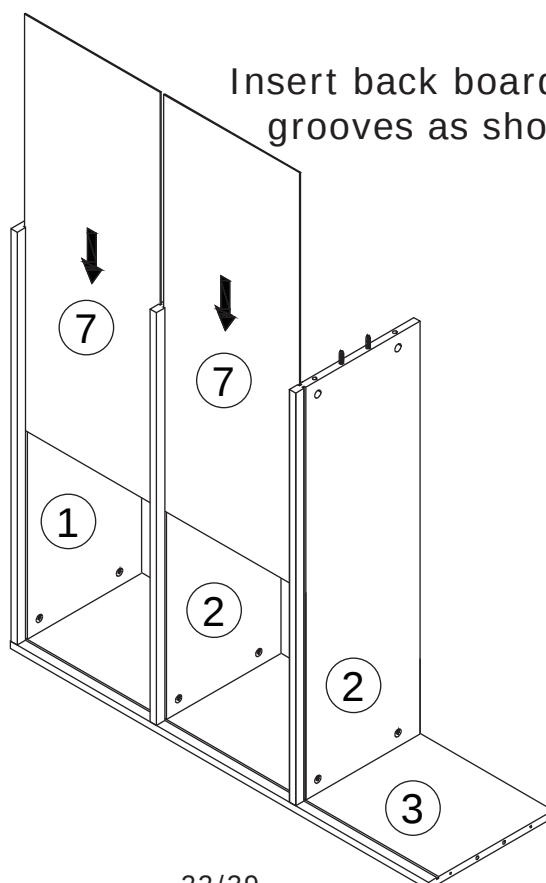





Insert back board 7 along available grooves as shown.

    32

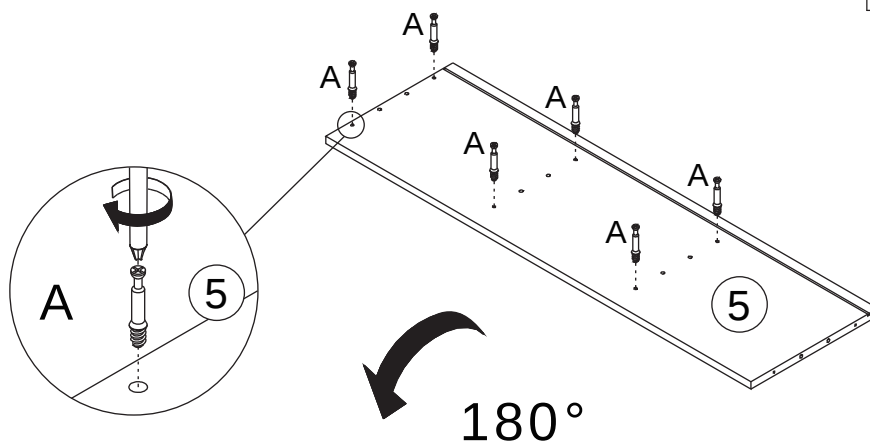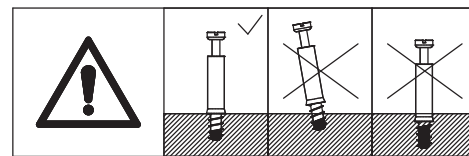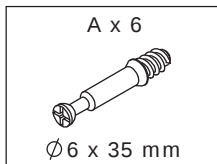


Screw eccentric rod(A) into board 5 as shown.

 
 
 
 
33

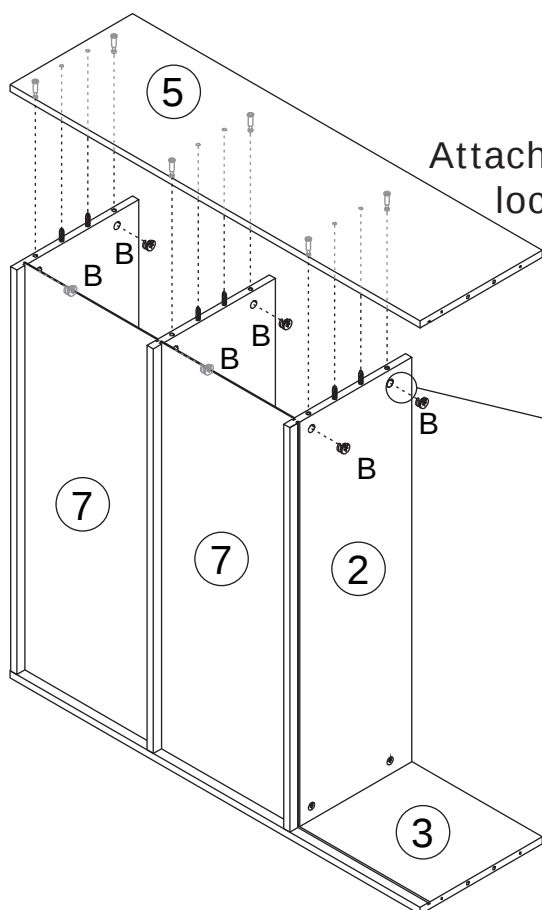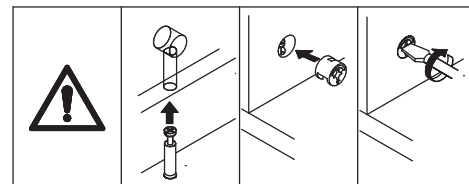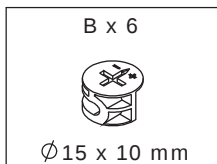

 Attach board 5 to board 1 and 2, add cam lock(B) into and turn clockwise to tighten as shown.




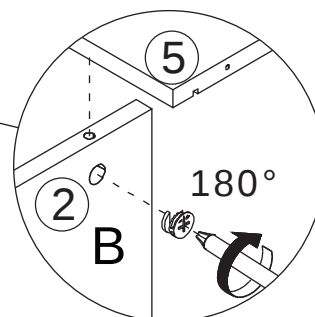


34

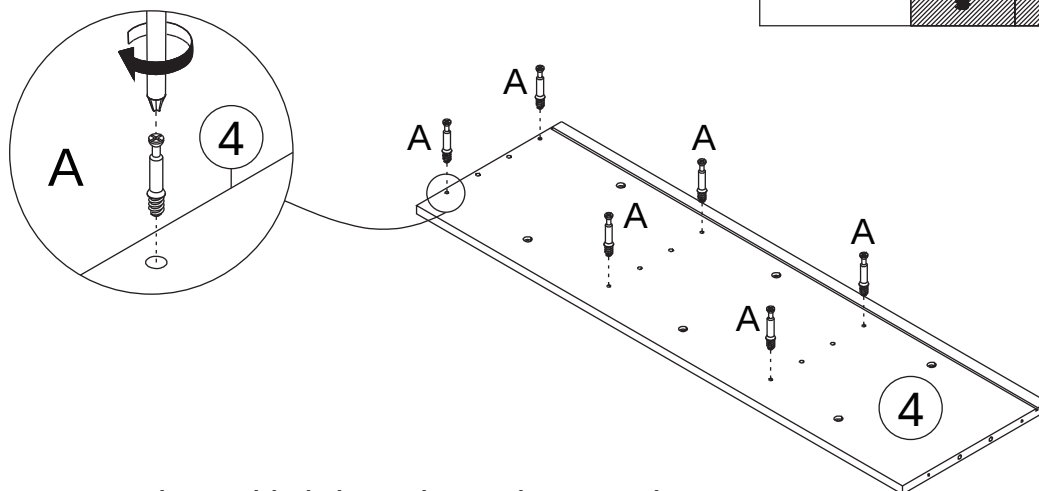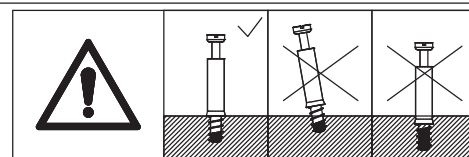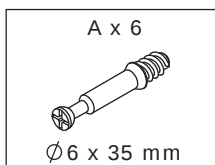    


Screw eccentric rod(A) into board 4 as shown.

    35

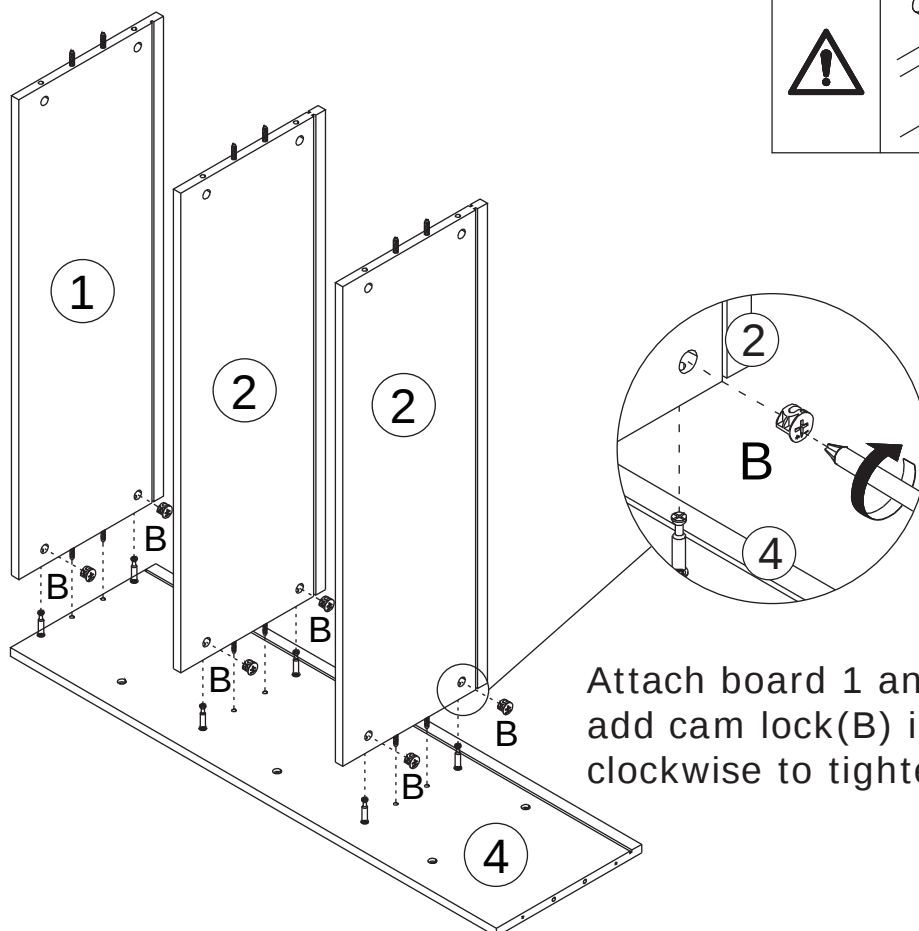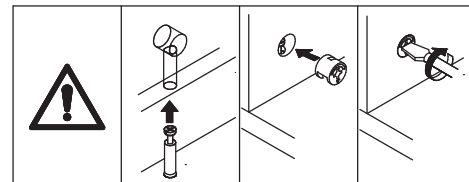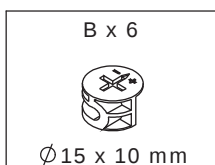




Attach board 1 and 2 to board 4, add cam lock(B) into and turn clockwise to tighten as shown.

 36

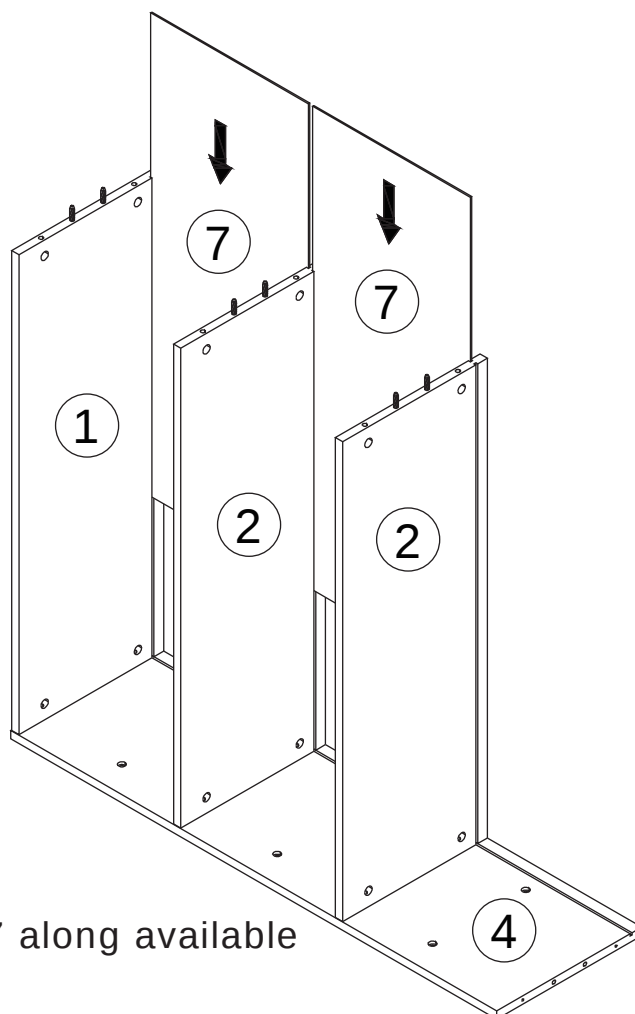


Insert back board 7 along available grooves as shown.

   37

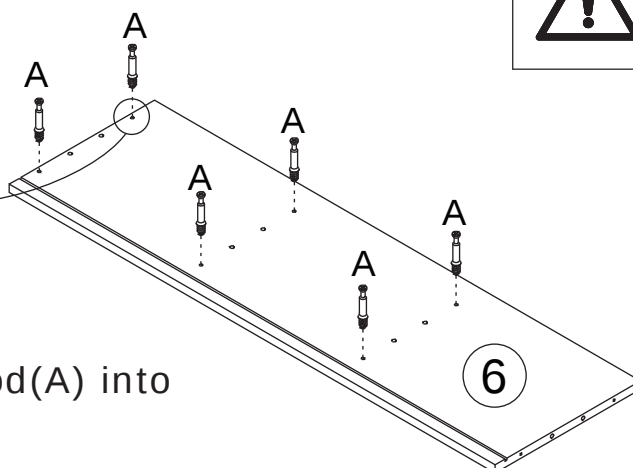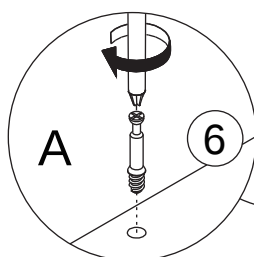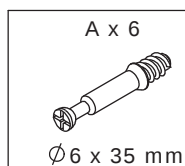

 Screw eccentric rod(A) into board 6 as shown.


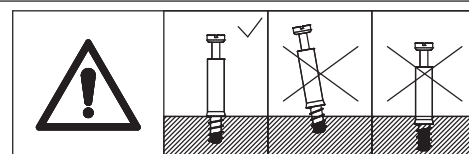


180°


38

B x 6

  
 Ø15 x 10 mm

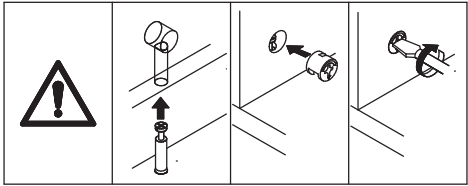


 Attach board 6 to board 1 and 2, add cam lock(B) into and turn clockwise to tighten as shown.

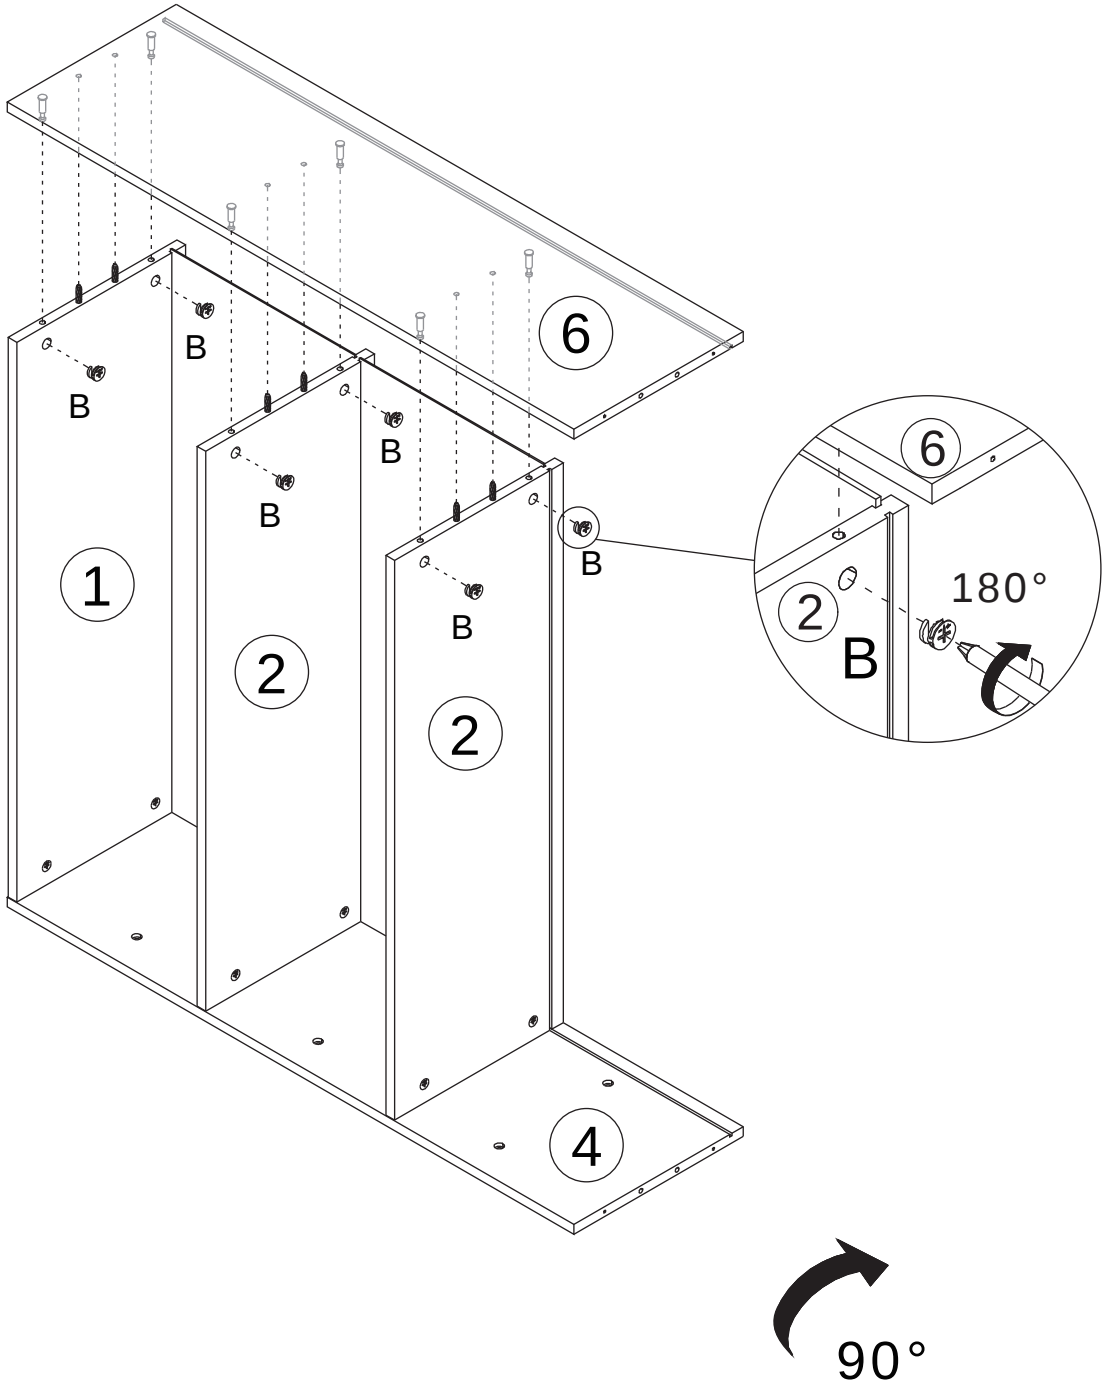


39

 M x 6  Ø 6 x 20 mm	O x 6  Ø 20 mm	Y x 1  M4 mm	
---	---	---	--

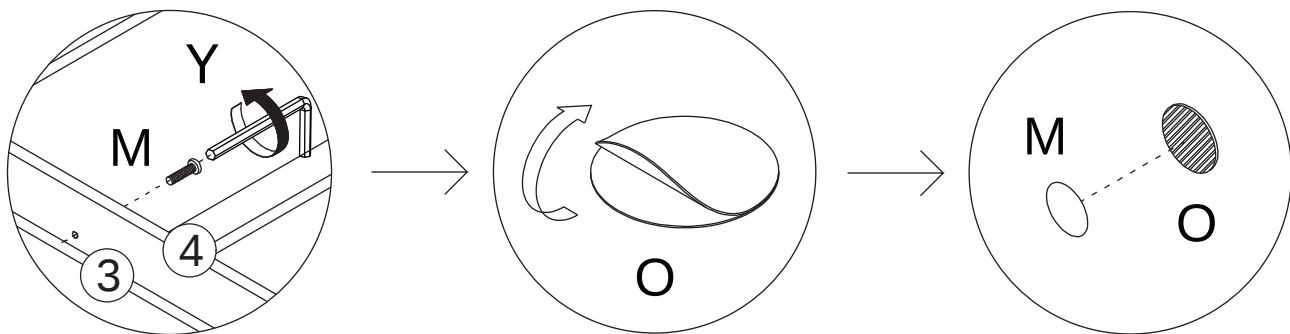 

 
Fix the two components with screw(M) as shown.

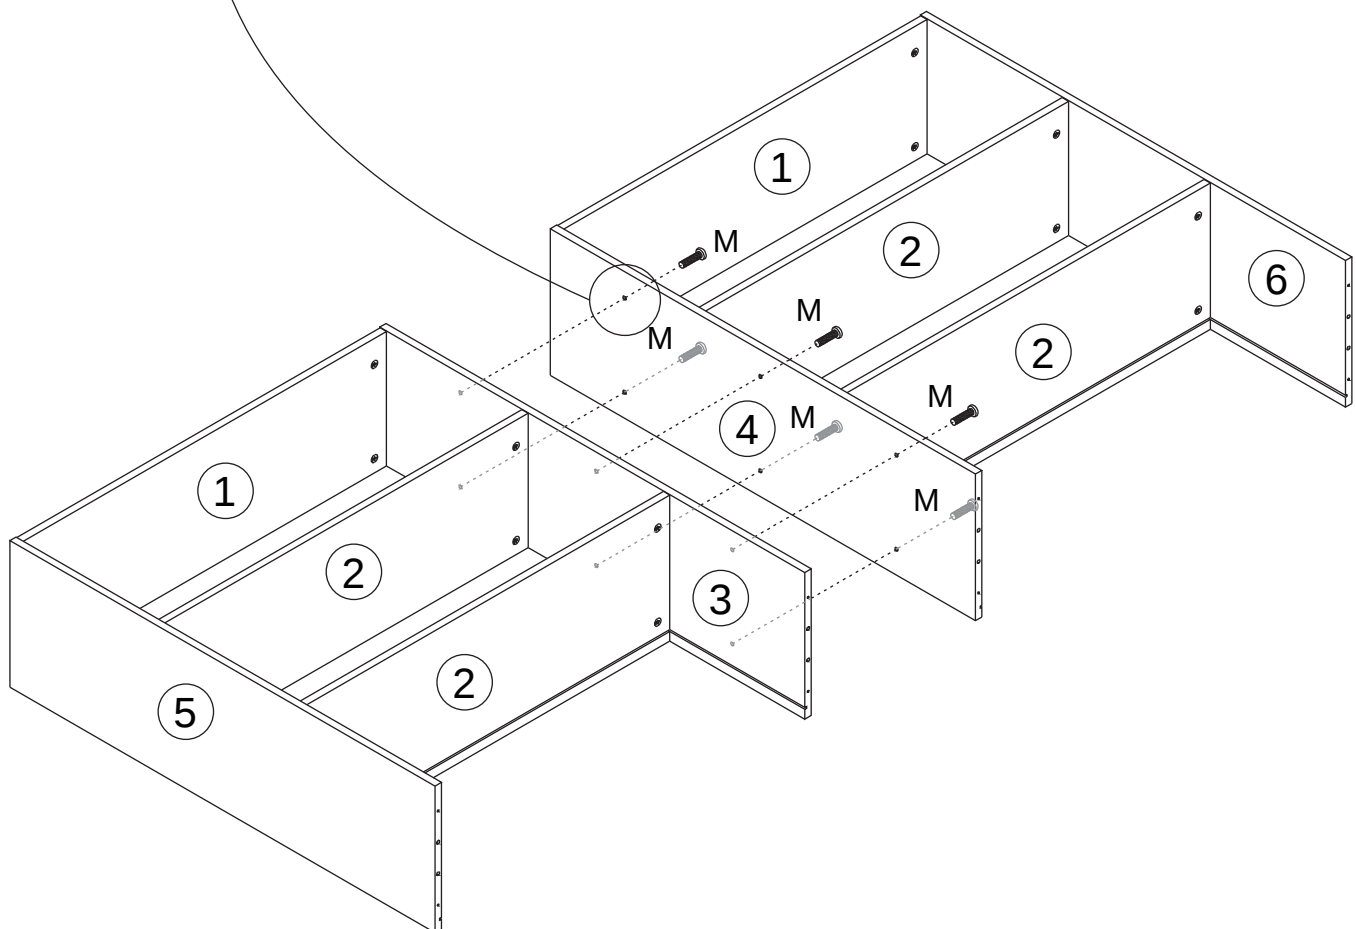






90°

40

 D x 8




Ø6 x 30 mm

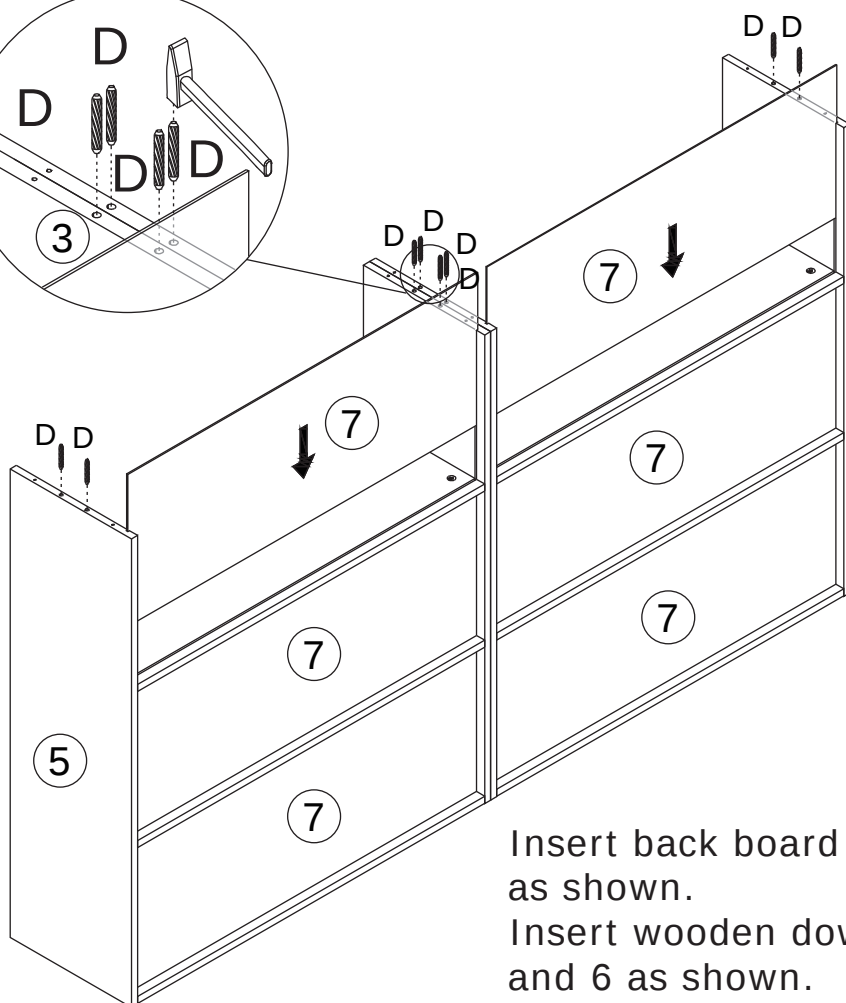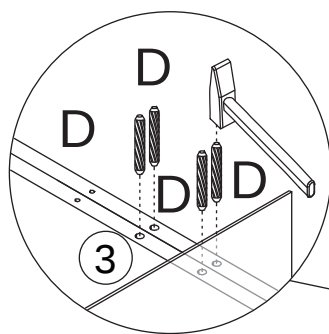     





Insert back board 7 along available grooves as shown.
Insert wooden dowel(D) into board 3, 5, 4 and 6 as shown.

41


 
A x 3



Ø6 x 35 mm

    

  Screw eccentric rod(A) into board 8 as shown.

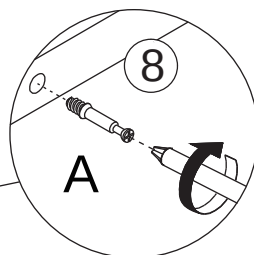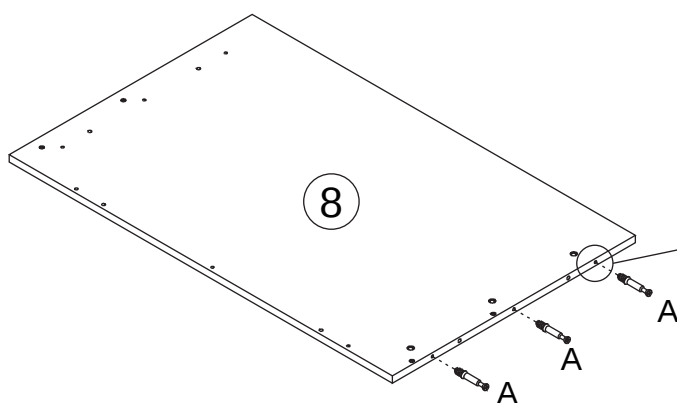


42





K x 2



 Ø6 x 50 mm



    Insert LONG wooden dowel(K) into board 9 as shown.


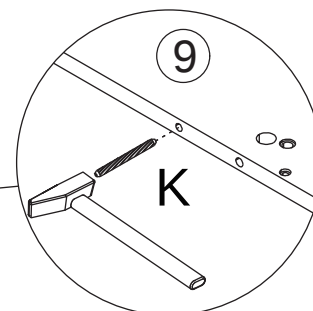
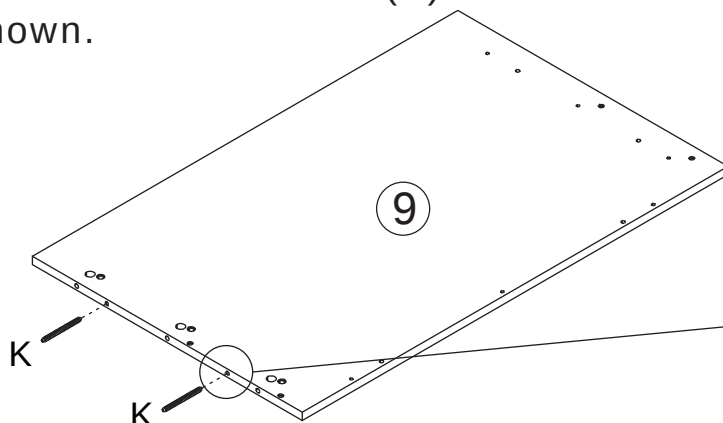




43

B x 3





     Ø15 x 10 mm

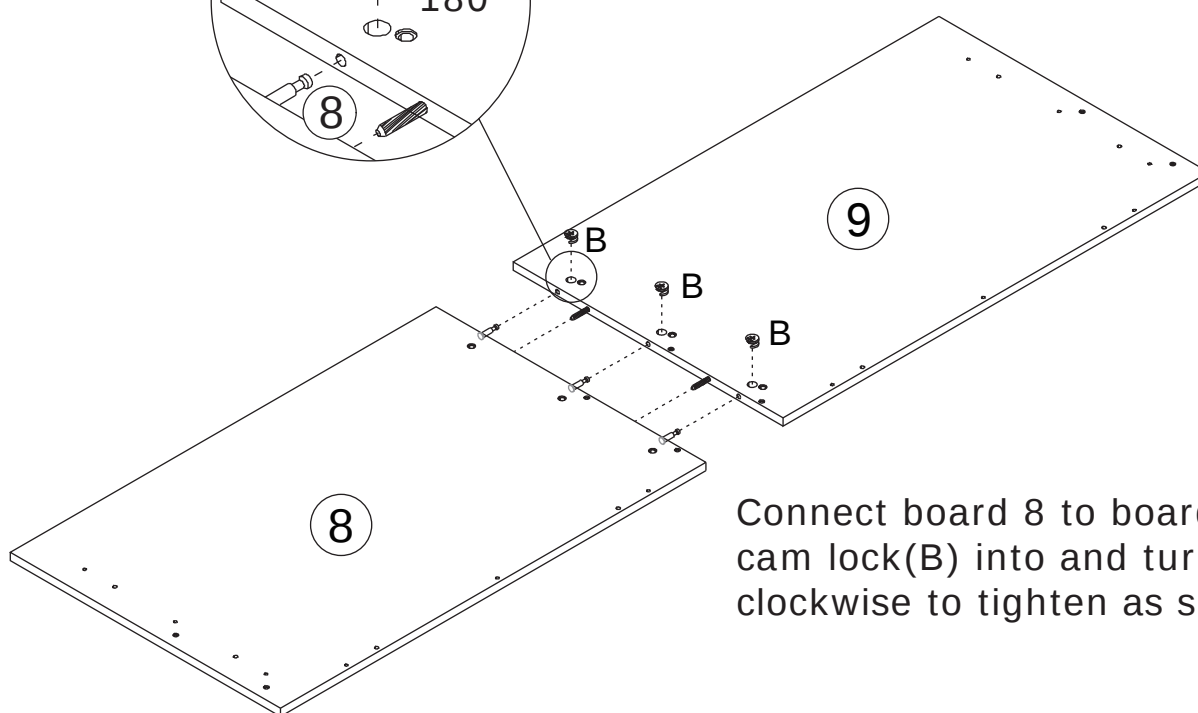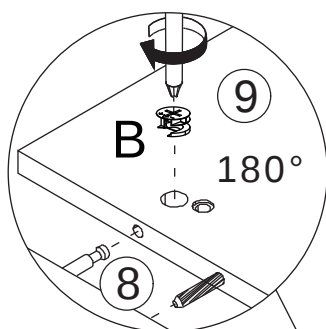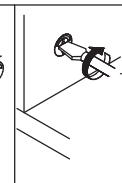


Connect board 8 to board 9, add cam lock(B) into and turn clockwise to tighten as shown.

  
44

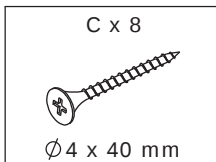

 
Fix board 8 and 9 to the top using screw(C) as shown.

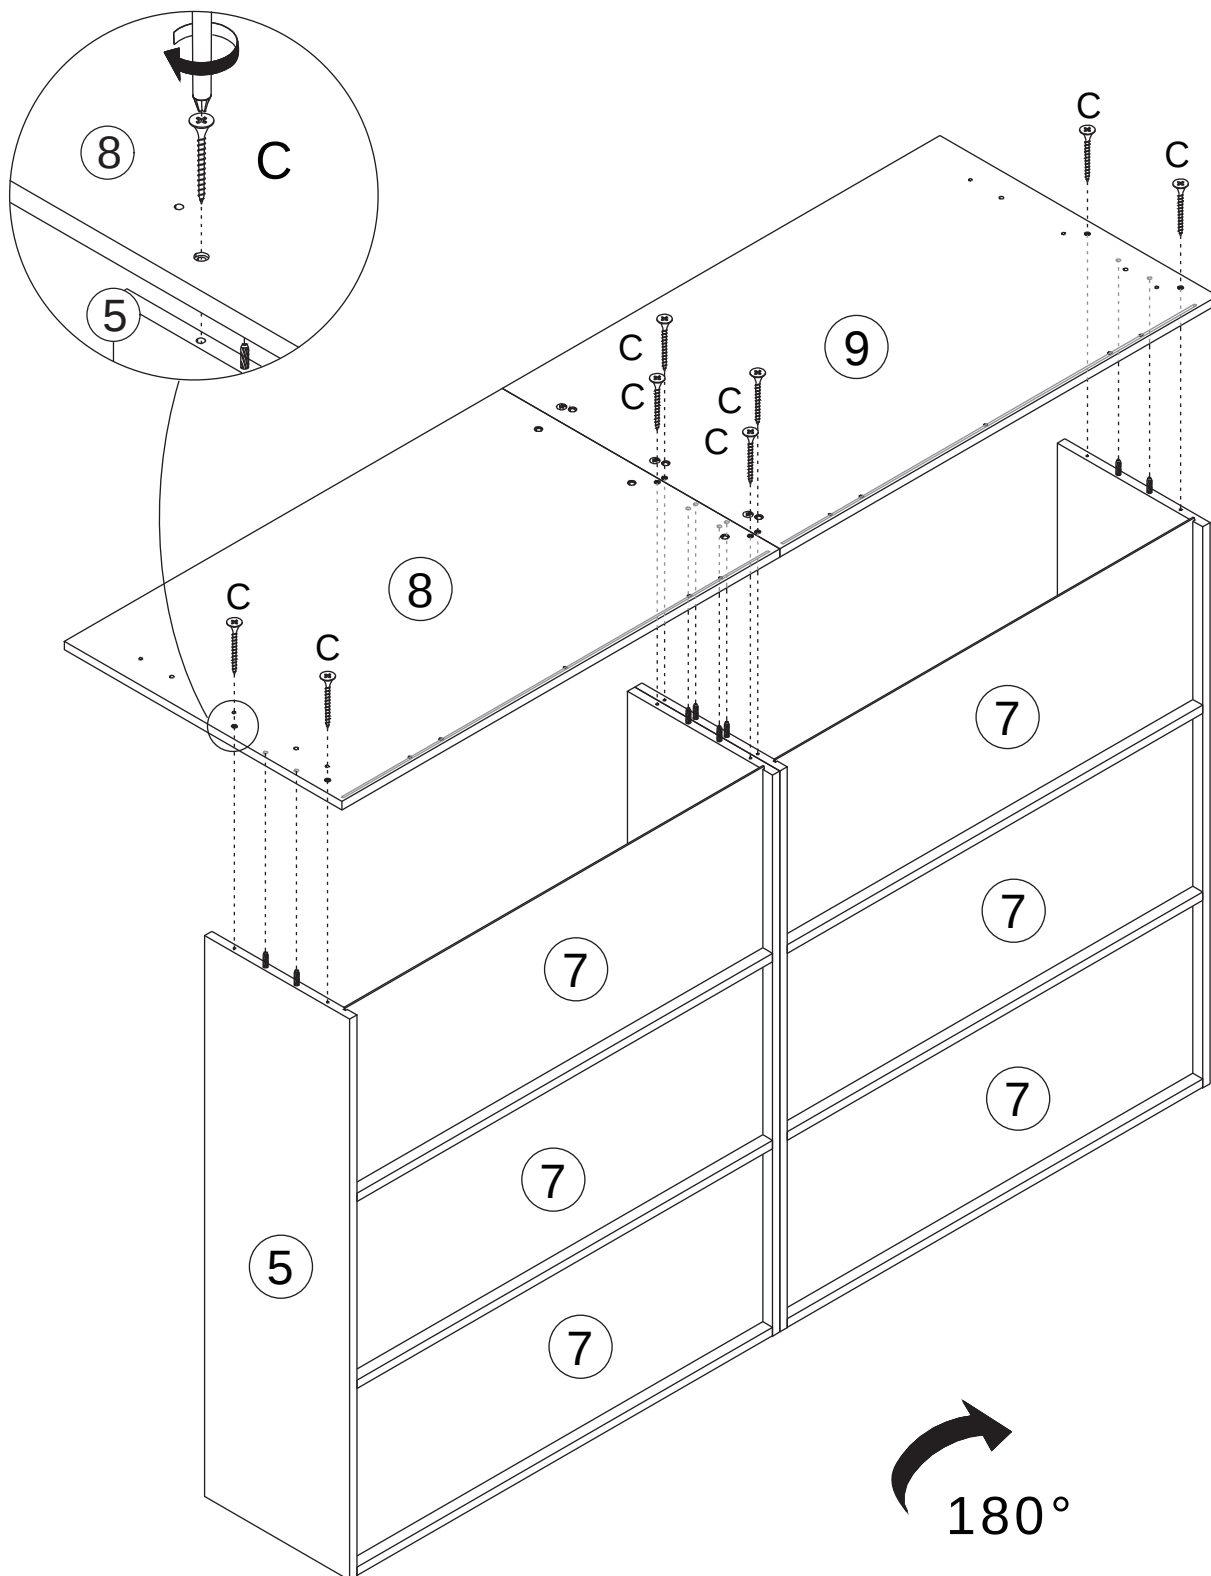



45

 Q x 8  Ø 4 x 12 mm	R x 4  72 x 15 x 25 mm	S x 24  Ø 3 x 14 mm	T x 24  14 x 13 x 9 mm	
---	---	--	--	---


 
Fix part(R) to board 1 with screw(Q) as shown.

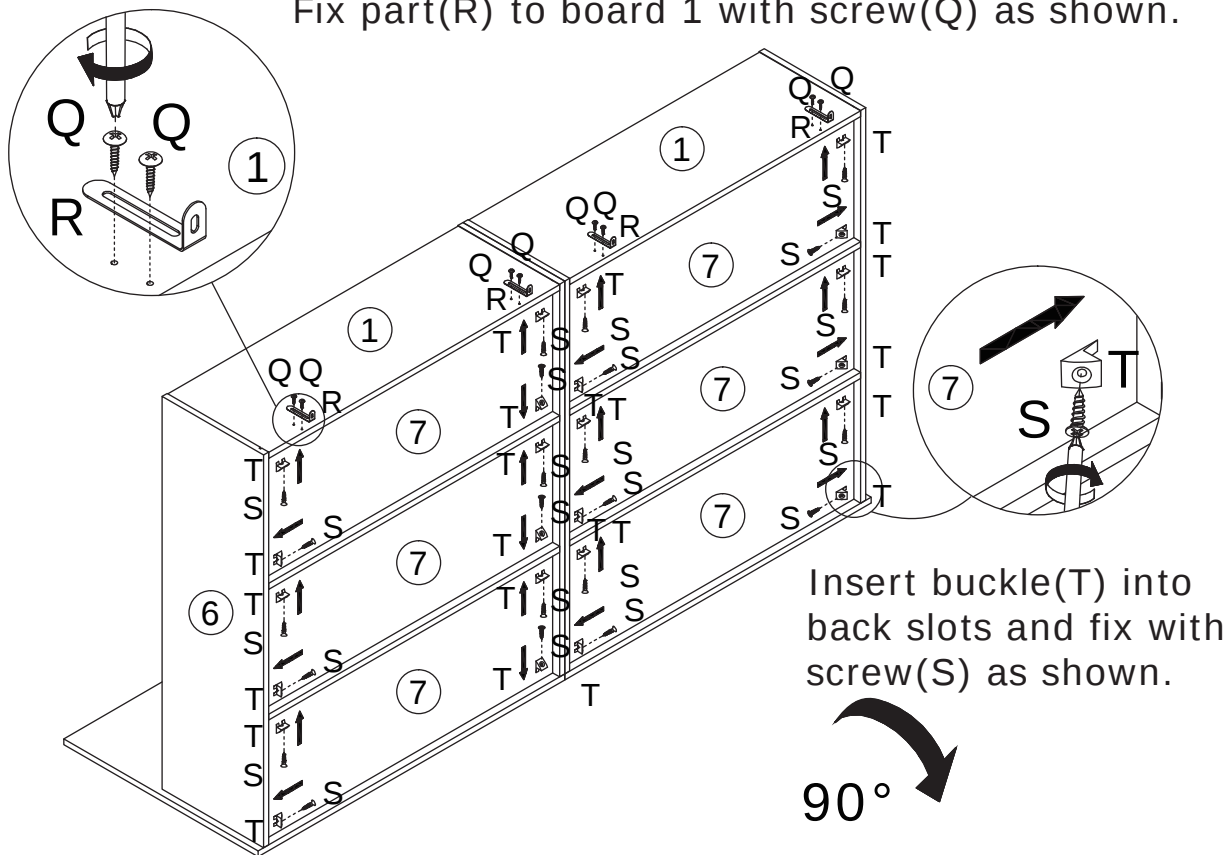



46

  A x 12  Ø 6 x 35 mm	
--	---

  
Screw eccentric rod(A) into board 8 and 9 as shown.

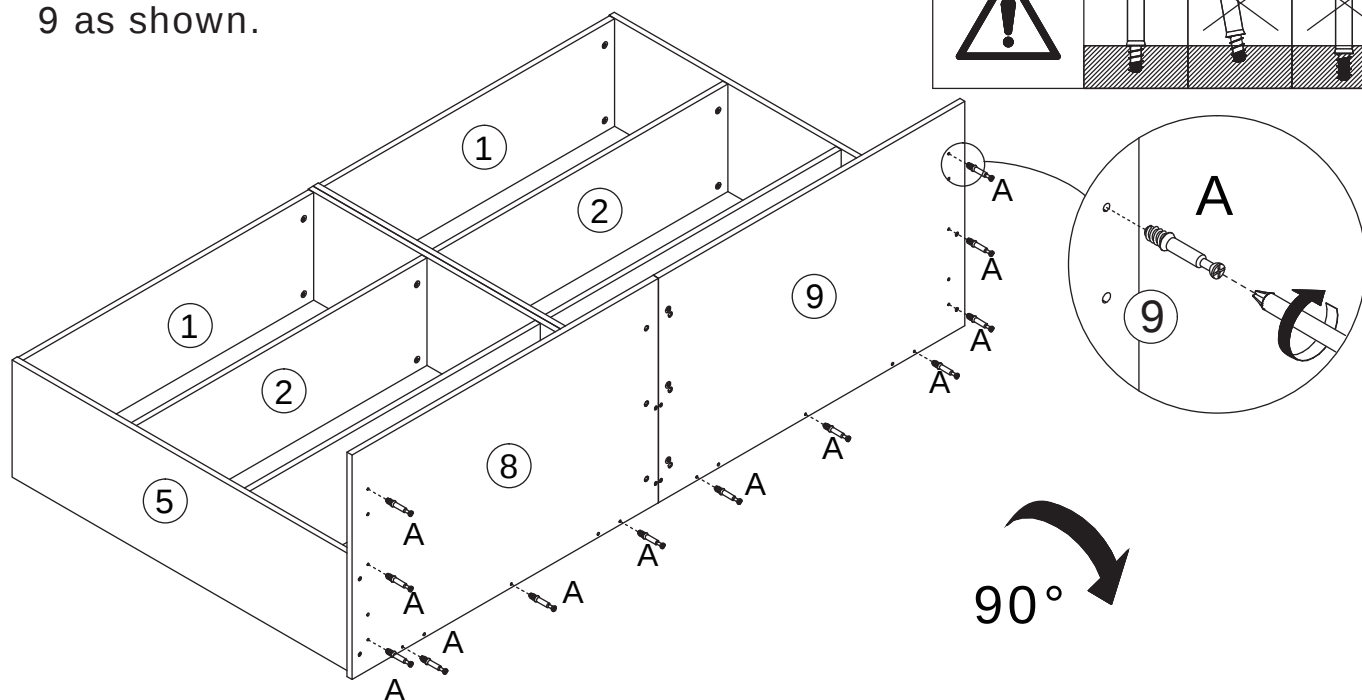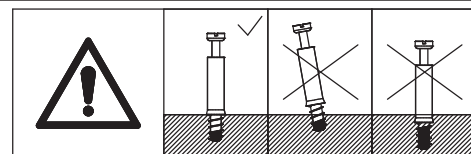




47

  B x 12  Ø 15 x 10 mm	L x 6  Ø 6 x 12 mm	Y x 1  M4 mm	
---	---	---	---


 
Connect the two components, add cam lock(B) into and turn clockwise to tighten as shown.

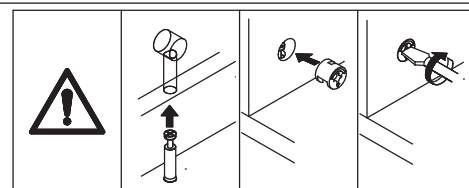

  
 
Fix board 8 and 9 to board 32 with screw(L) as shown.

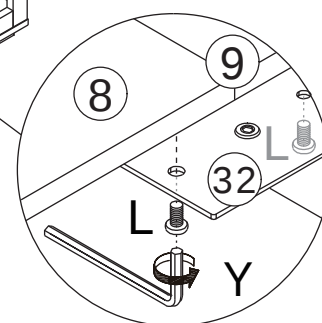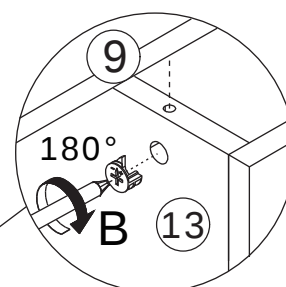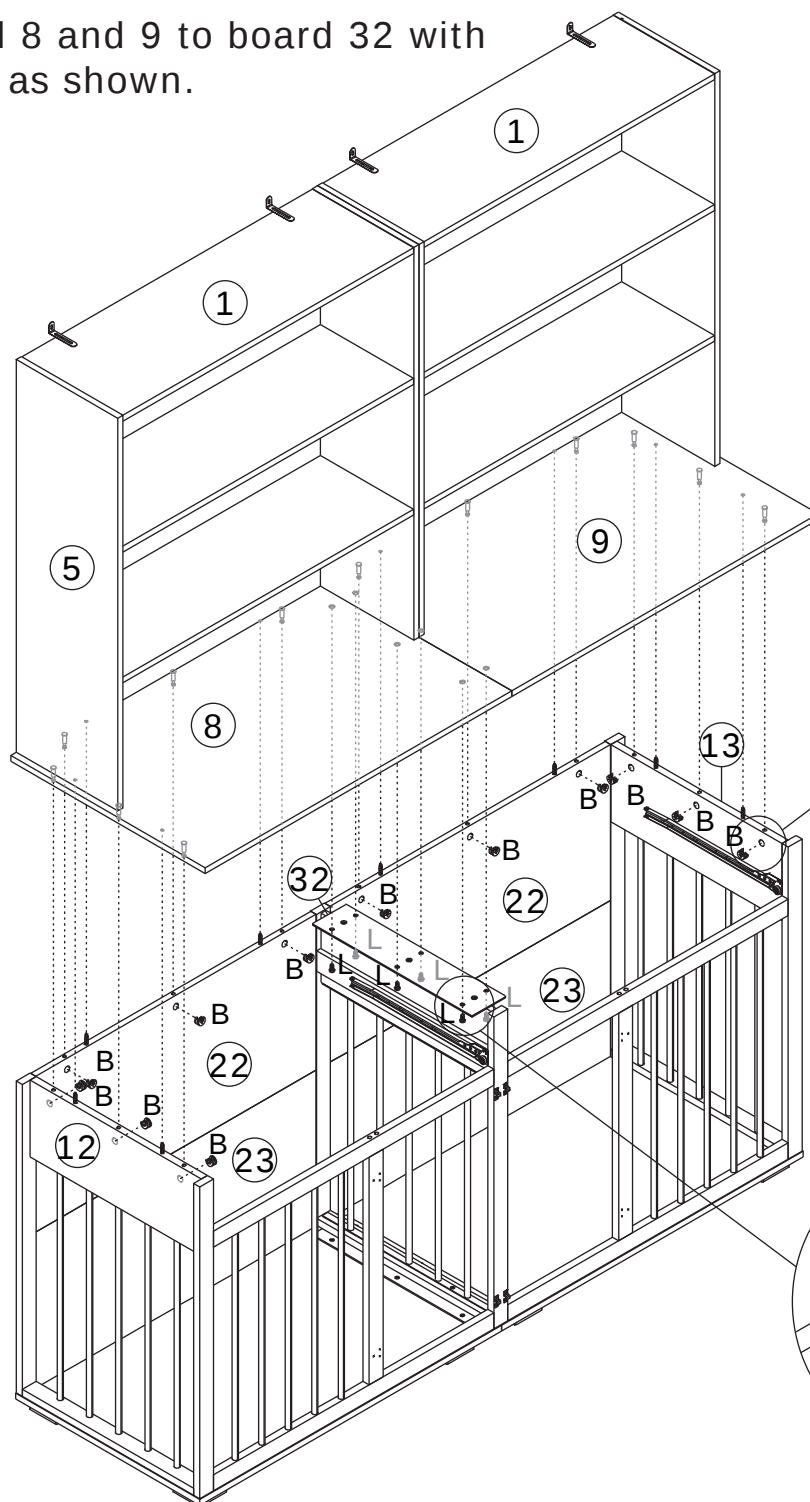

48




 
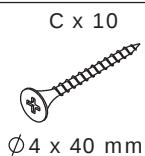 


  Fix board 26, 29 and 27 to board 25 with screw(C) as shown.

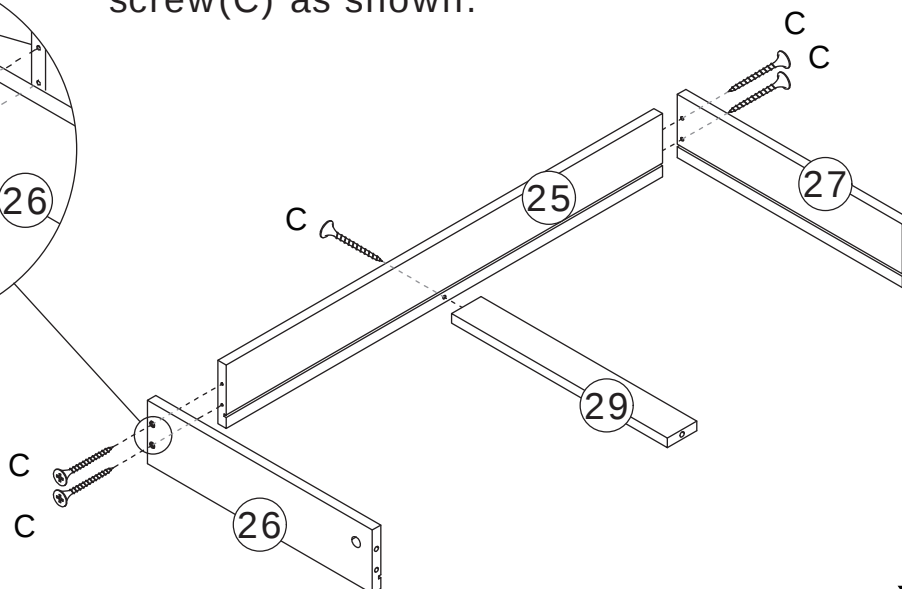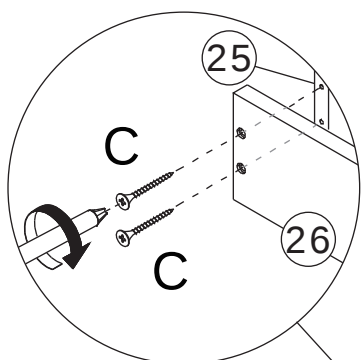

x 2

     
49

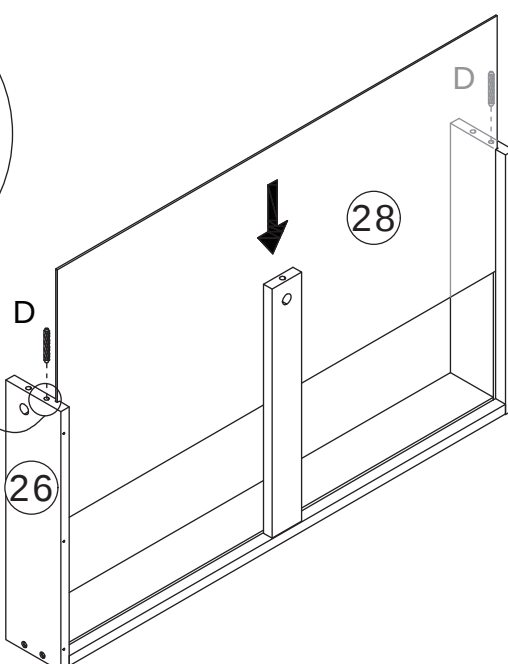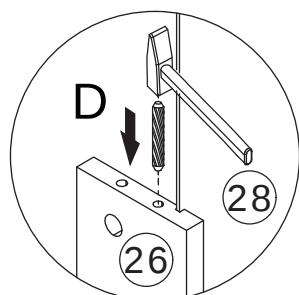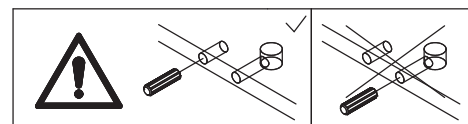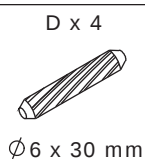

Insert wooden dowel(D) into board 26 and 27 as shown. Insert bottom board 28 along available grooves as shown.


x 2

 
50



A x 6

 Ø 6 x 35 mm

 G x 4

 Ø 4 x 18 mm

 H x 2

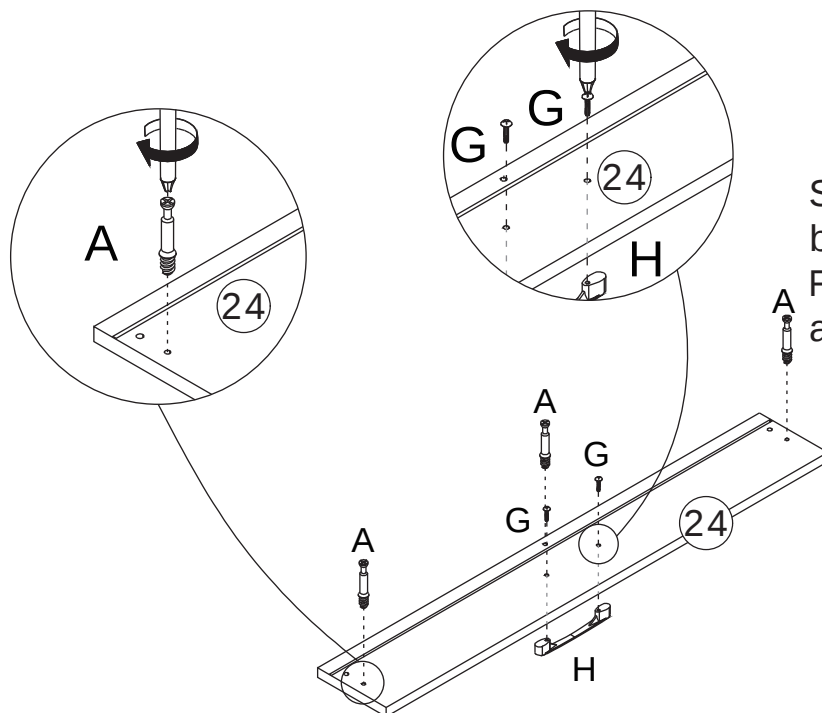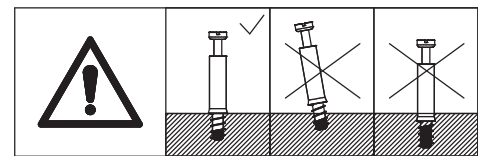   96 mm





 
Screw eccentric rod(A) into board 24 as shown.
Fix handle(H) with screw(G) as shown.

180°
x 2



51

B x 6

 Ø 15 x 10 mm



  
Attach board 24 to board 26, 29 and 27, add cam lock(B) into and turn clockwise to tighten as shown.

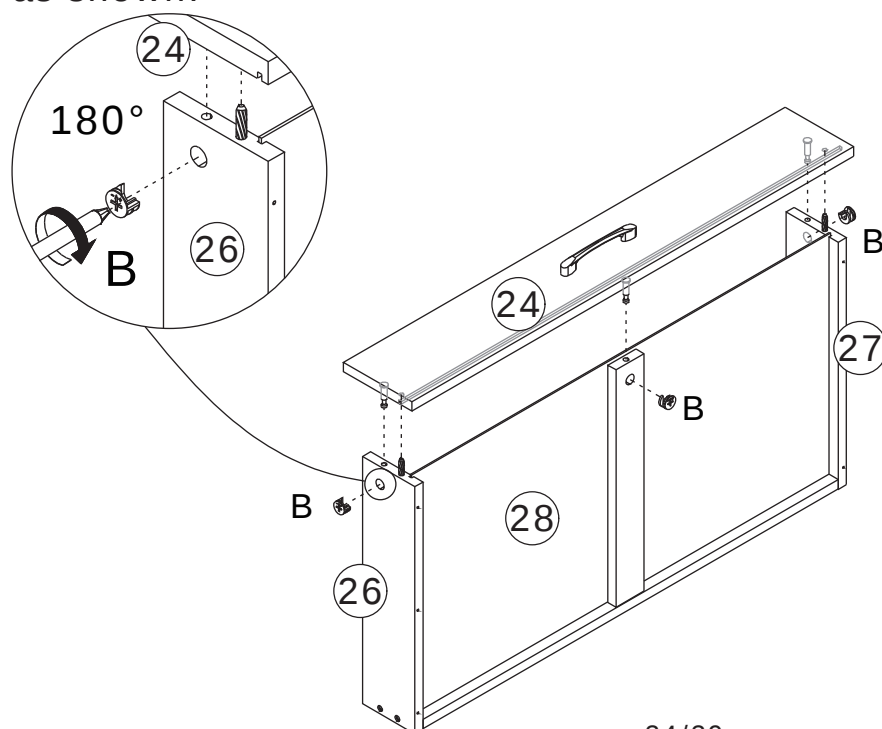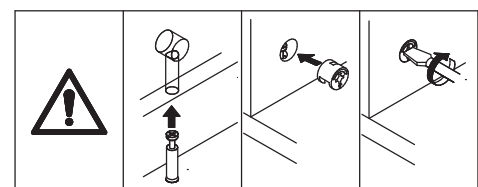


x 2

52




 
E x 12




DL x 2

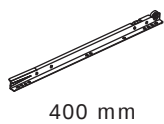 


DR x 2

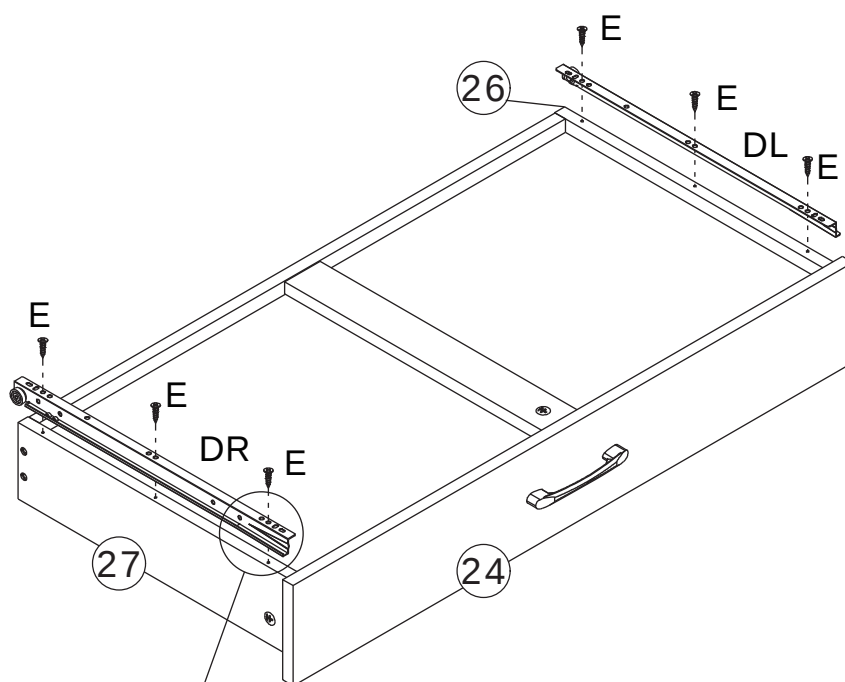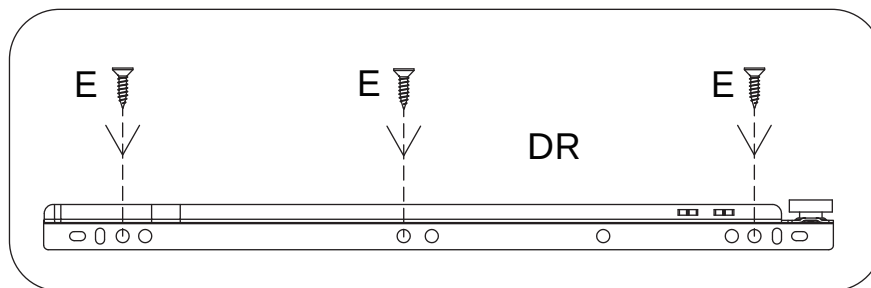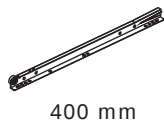    


x 2

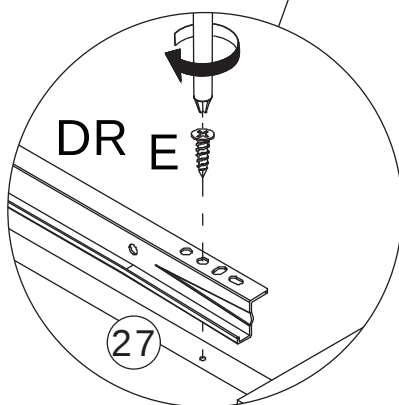 


 
Fix runner(DL) and (DR) to board 26 and 27 with screw(E) as shown.

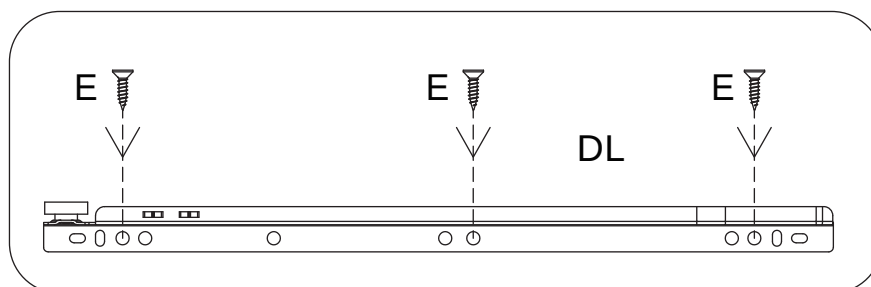

53

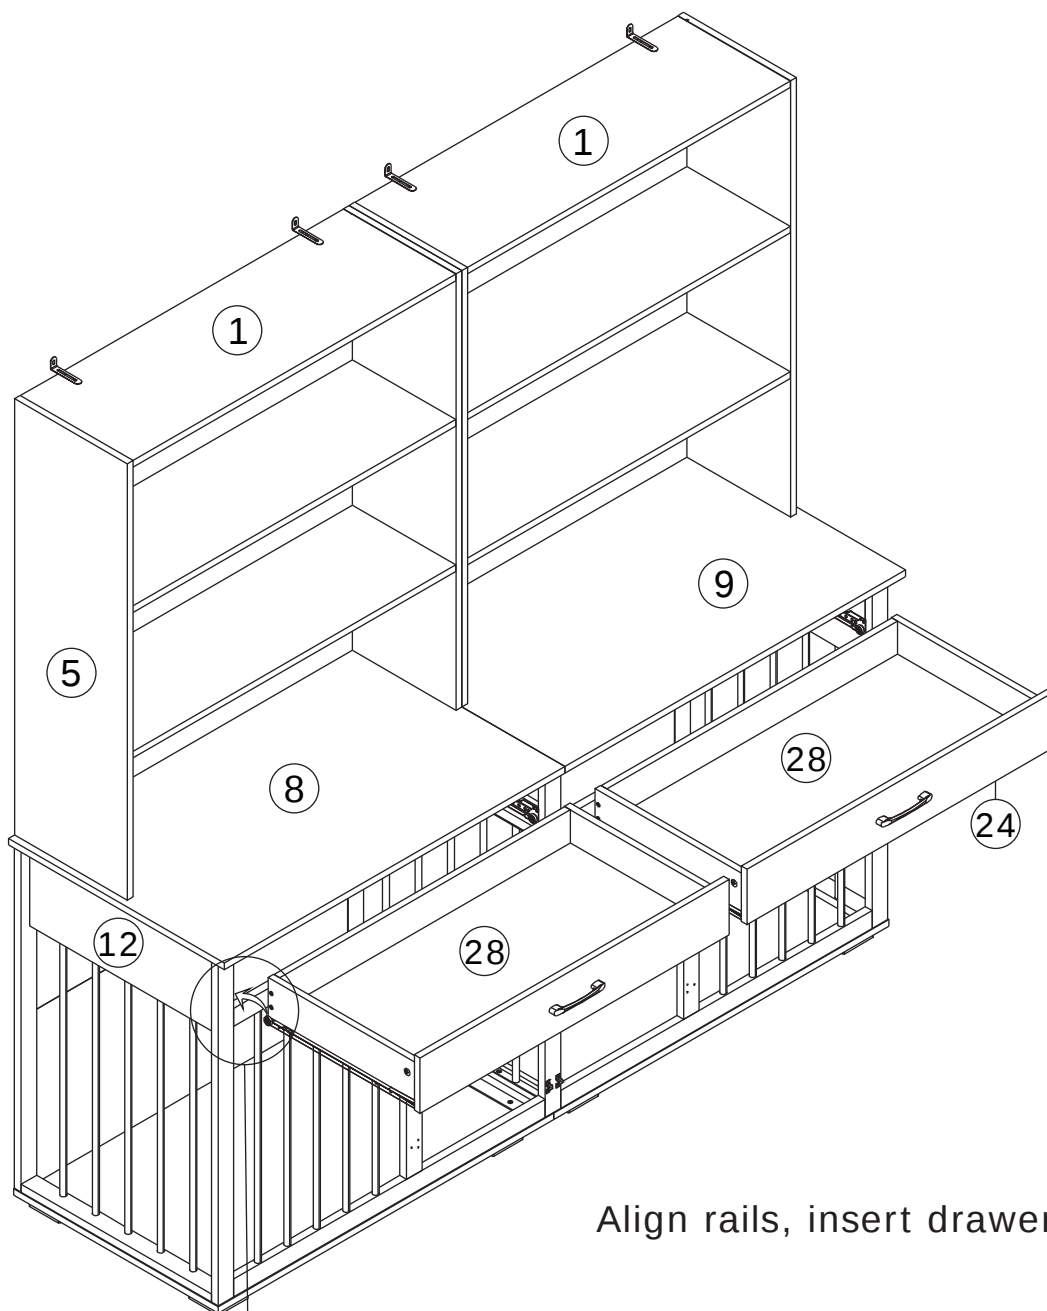 


Align rails, insert drawers in.

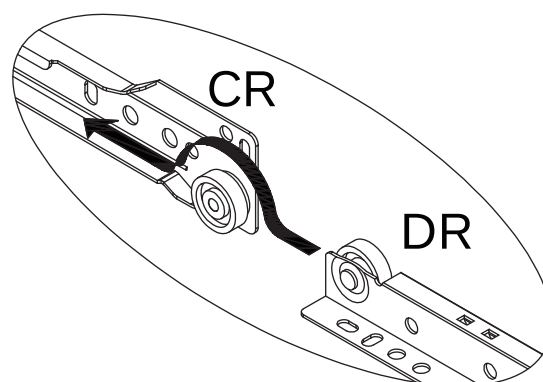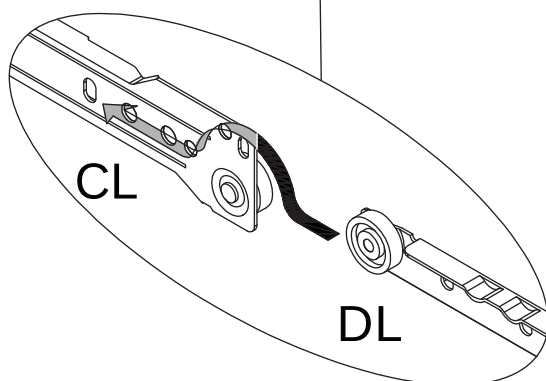  

54




 Fix handle(H) with screw(F) as shown.

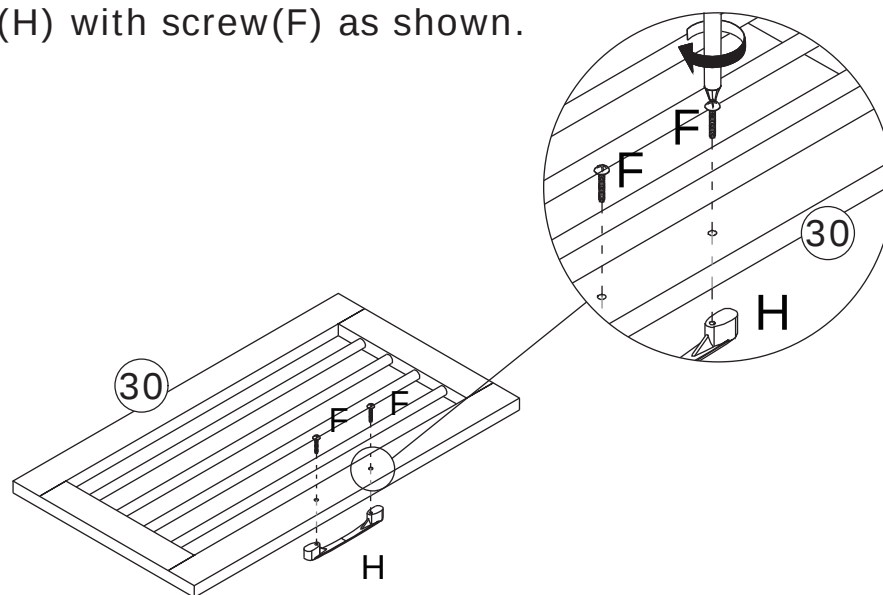


x 2

 55

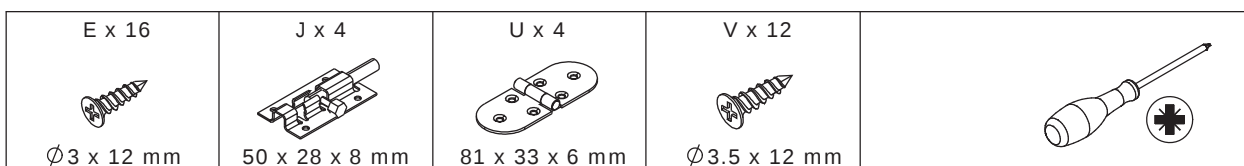

 Fix part(U) to board 30 as shown.
Fix bolt(J) with screw(E) as shown.

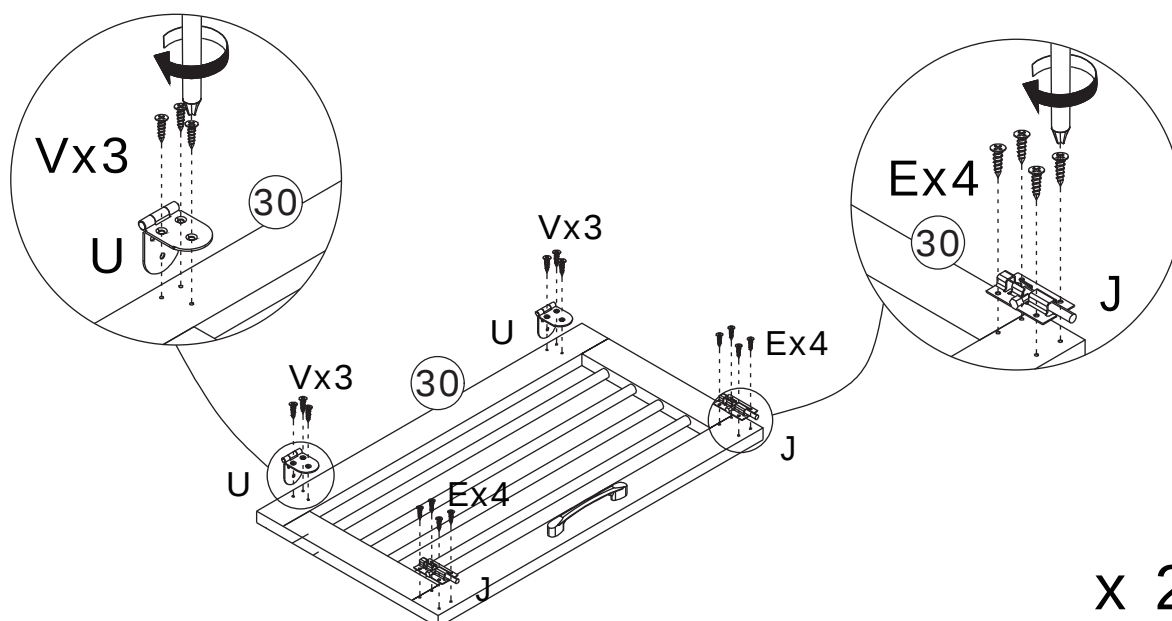


x 2

56


V x 12



 
Ø3.5 x 12 mm




 
Assemble door 30 to the item by fixing hinge(U) with screw(V) as shown.

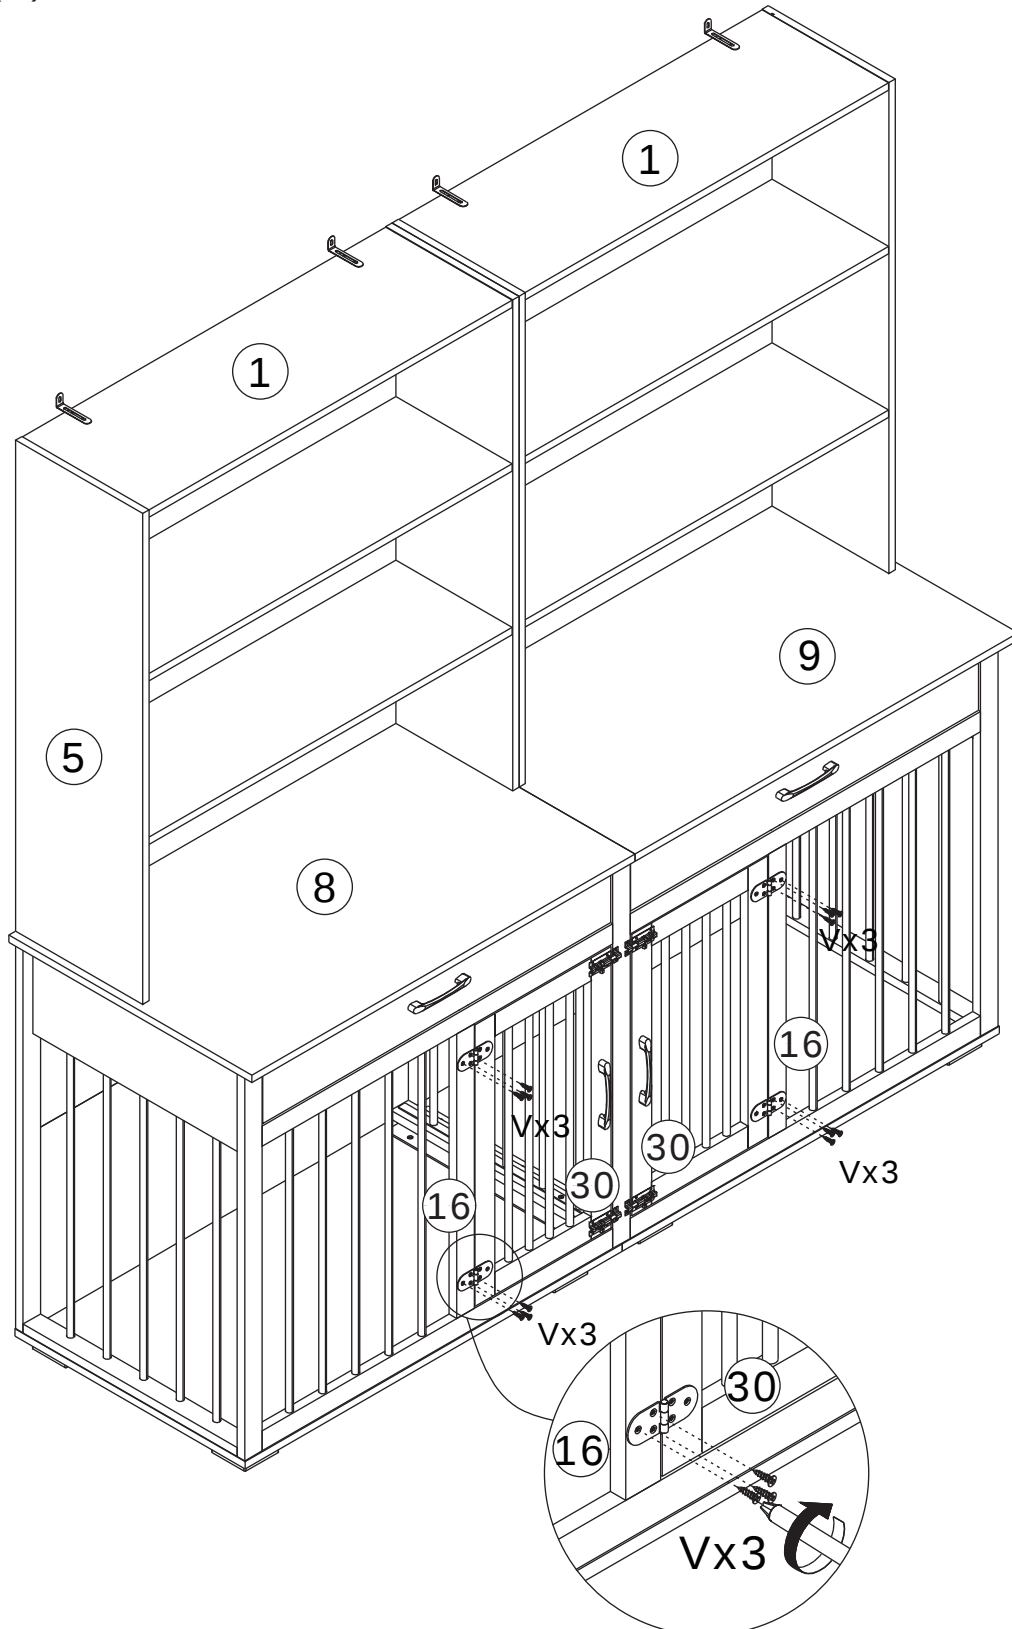

57

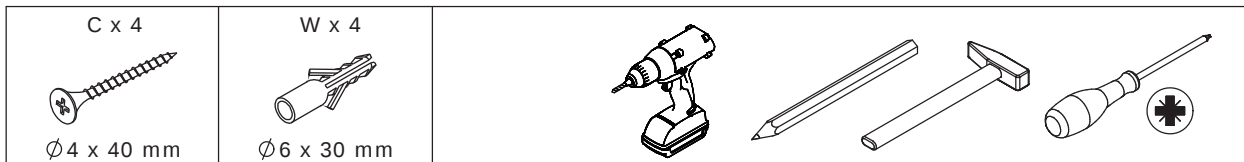 

Install anti-tipping device as shown.

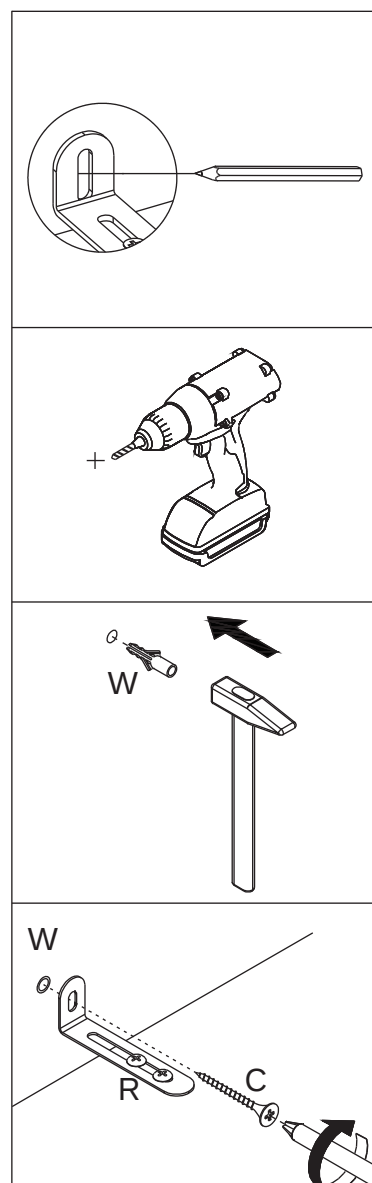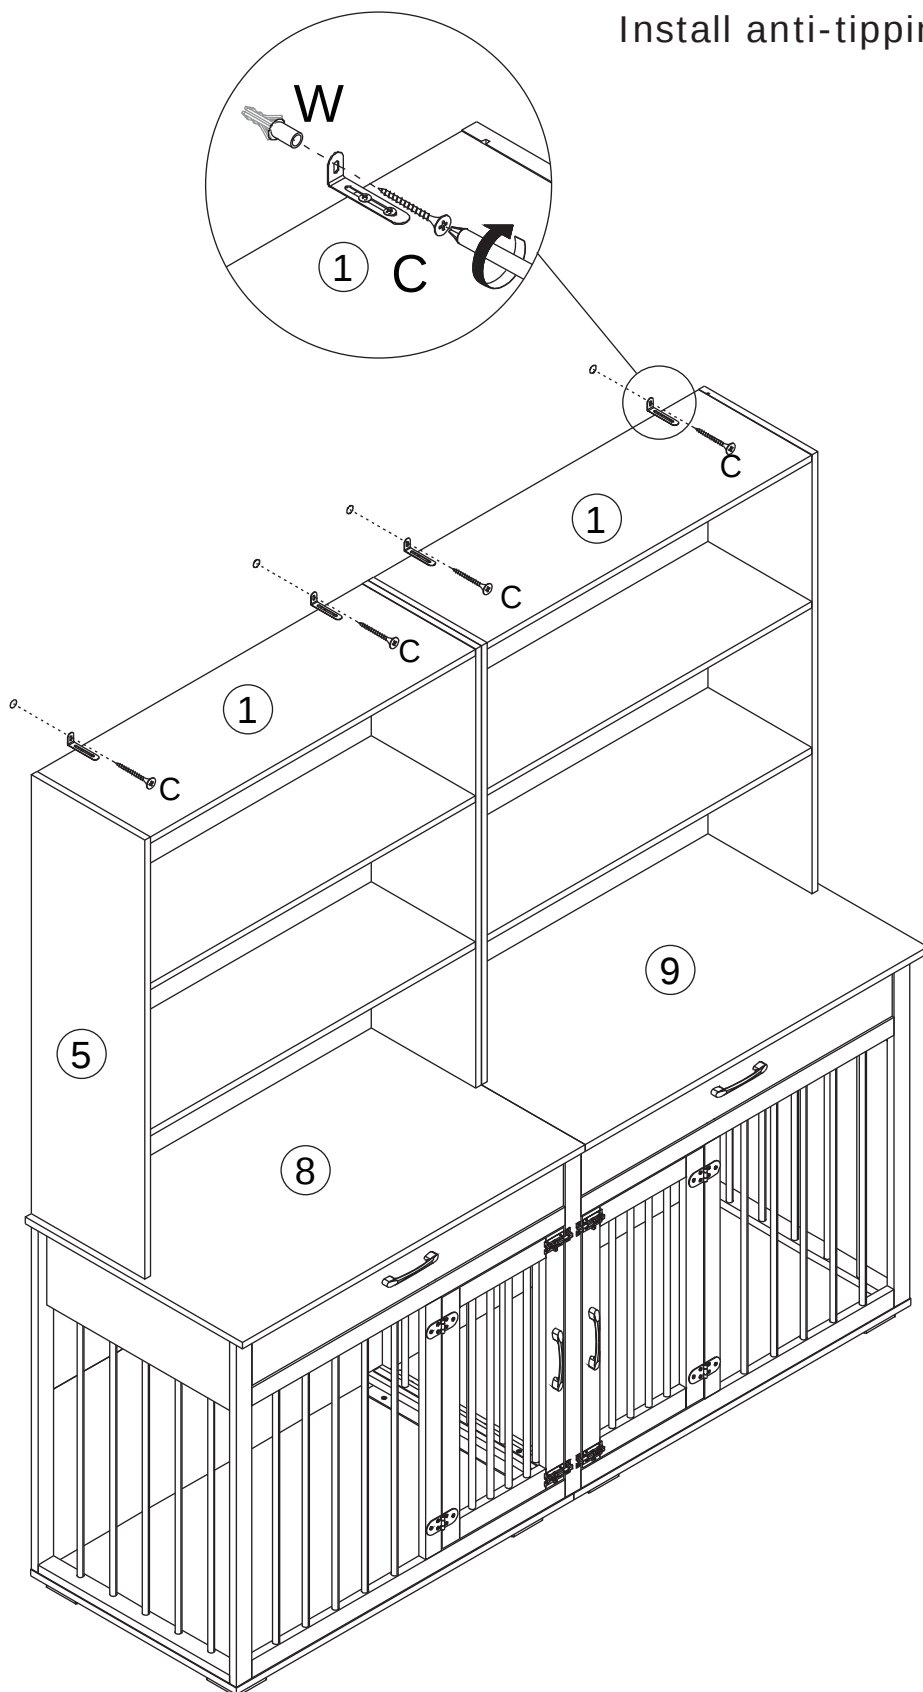  

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



0000 0000000000 0 0 00000 0



00000000000000