




ITEM #4134948/4115494/4115495
MODEL #TPGAZ9116D/TPGAZ9126B/TPGAZ9126A

SOFT-TOP GAZEBO

Español p.14

STYLE SELECTIONS and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

 ATTACH YOUR RECEIPT HERE

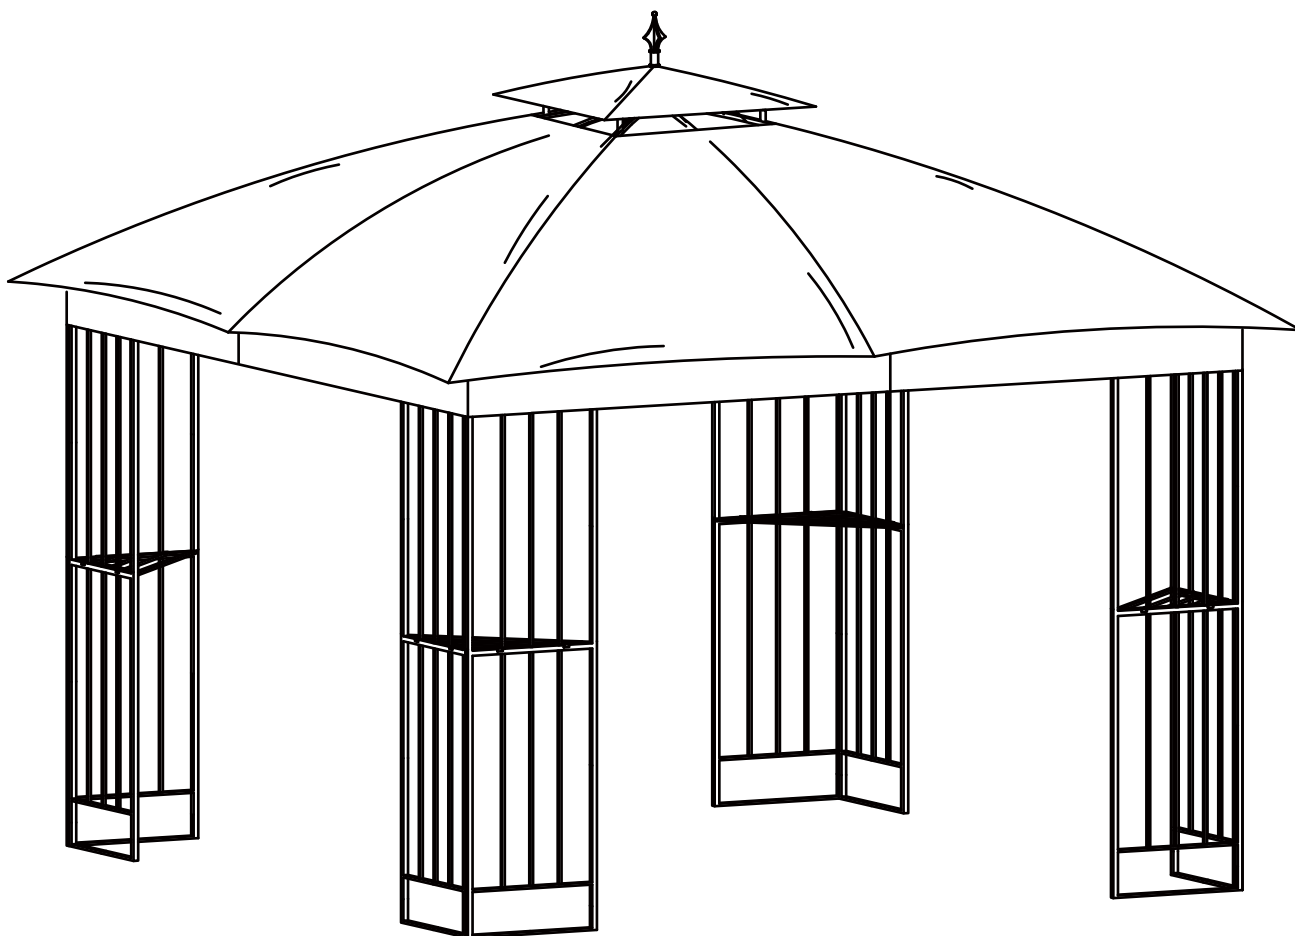

Serial Number _____

Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at **877-888-8225**, 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at **ascs@lowes.com**.

TABLE OF CONTENTS

Package Contents 3

Hardware Contents 4

Safety Information 5

Preparation 5


Installation Instructions 6

Care and Maintenance13

Warranty13

Replacement Parts List13

 PACKAGE CONTENTS

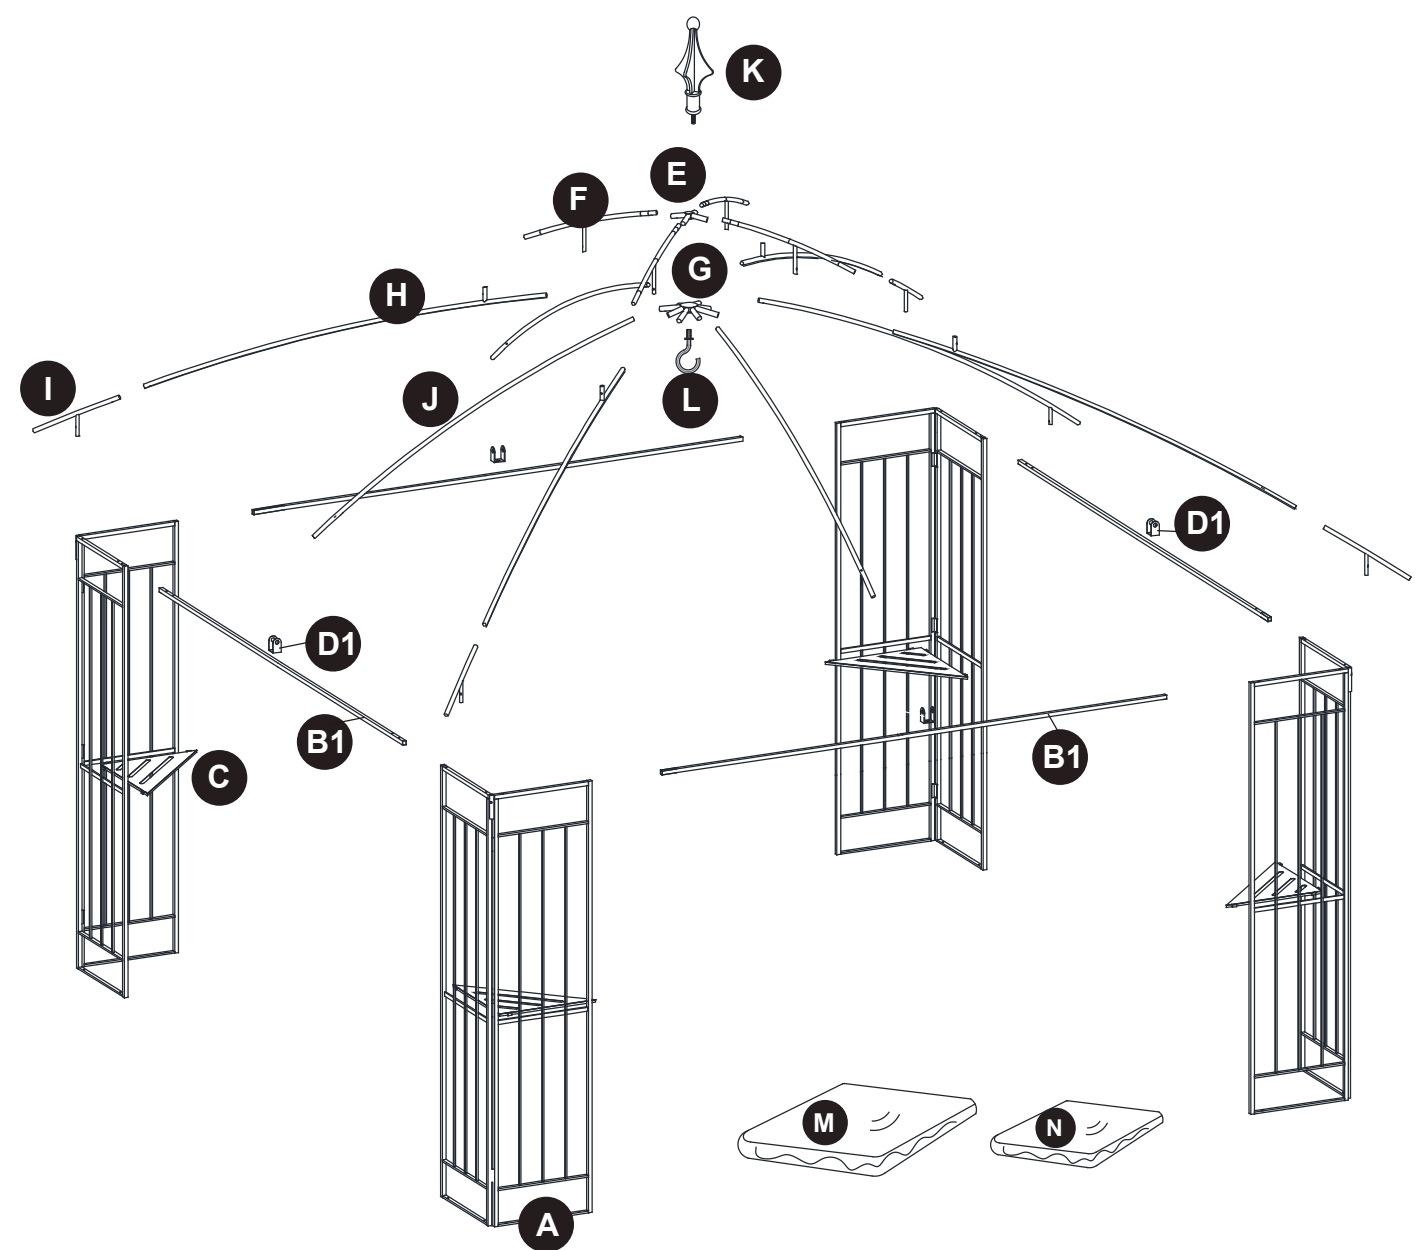


PART	DESCRIPTION	QUANTITY
A	Corner Panel	4
B1	Crossbeam	4
C	Shelf	4
D1	Connector	4
E	Small Top Connector	1
F	Small Top Beam	4
G	Top Connector	1

PART	DESCRIPTION	QUANTITY
H	Long Corner Bar	4
I	Short Corner Bar	4
J	Middle Bar	4
K	Finial	1
L	Hook	1
M	Large Canopy	1
N	Small Canopy	1


HARDWARE CONTENTS (shown actual size)

 AA




M6 × 30 mm Bolt
Qty. 8 + 1 Extra

 BB



M6 × 45 mm Bolt
Qty. 16 + 2 Extra

 CC



Allen Wrench
Qty. 1
(NOT TO SCALE)

DD



Flat Washer
Qty. 48 + 4 Extra

EE



 
Nut
Qty. 24 + 2 Extra

FF




Stake
Qty. 16
(NOT TO SCALE)

GG



Cap
Qty. 24 + 2 Extra

 HH



Wrench
Qty. 1
(NOT TO SCALE)

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- Maximum load for the roof hook: 26 lbs.
- If high winds, heavy rains or any snow occurs, remove roof, and check for damage before continued use.

CAUTION

SET UP YOUR GAZEBO PROPERLY

- 2 people are recommended for safe assembly.
- Keep all children, pets and other obstructions away from assembly area.
- If any part is missing or damaged, do not attempt to assemble the product.
- In order to avoid damage to the gazebo and its components please use appropriate tools.
- Do not use the structure as support.
- Check all bolts on a regular basis to maintain the solidity of the structure.
- Keep instructions for future use.
- Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.

EXAMINE YOUR GAZEBO

- Examine occasionally to ensure there are no loose parts.
If loose parts are found, they should be retightened immediately.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes

Tools Required for Assembly (not included): Safety goggles, Gloves, Hardhat, Stepladder.



Safety goggles



Gloves



 
Hard hat







Stepladder

INSTALLATION INSTRUCTIONS




1 Hardware Used

AA		x4
BB		x16
DD		x40

EE		x20
GG		x20

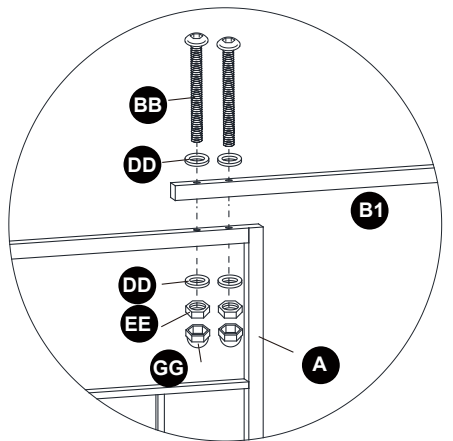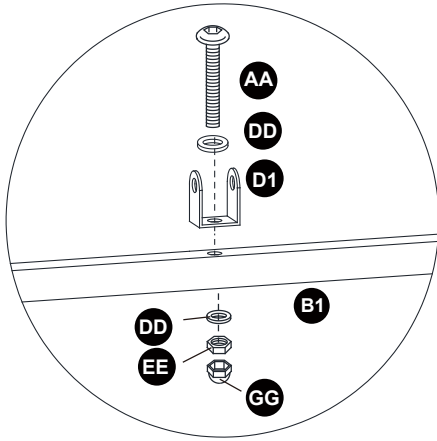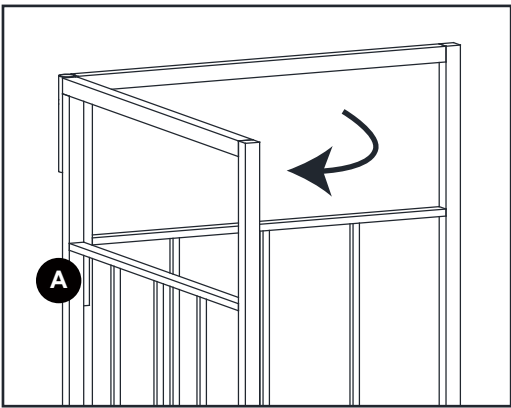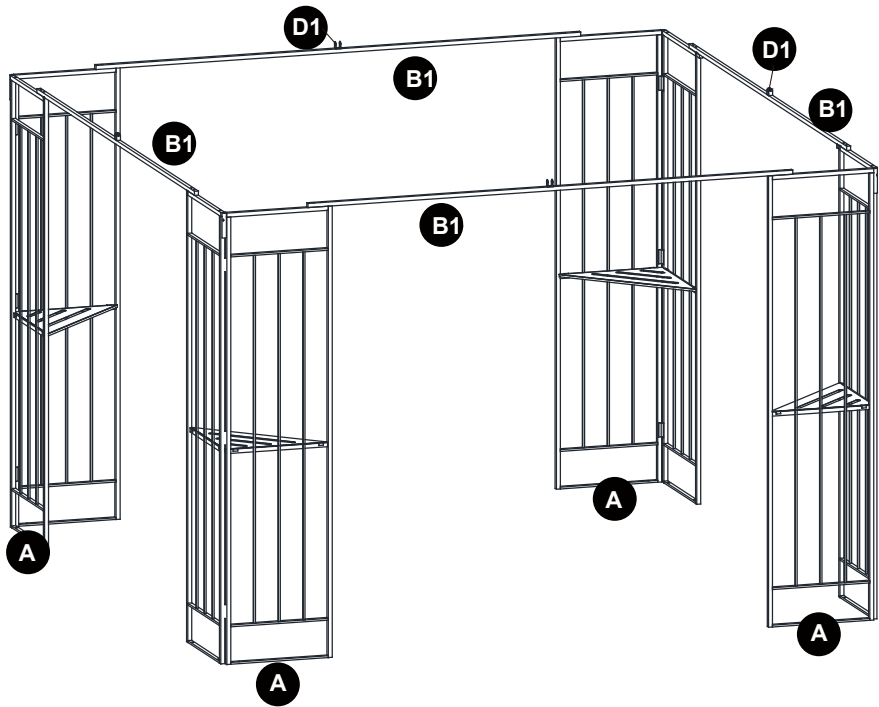    

   - 1.1. Unfold two corner panels (A).
- 1.2. Connect the connector (D1) onto the crossbeam (B1) by bolt (AA) and flat washers (DD), then connect the crossbeam (B1) onto the corner panel (A) by bolt (BB), flat washers (DD), nut (EE). Place cap (GG) on the nut (EE).

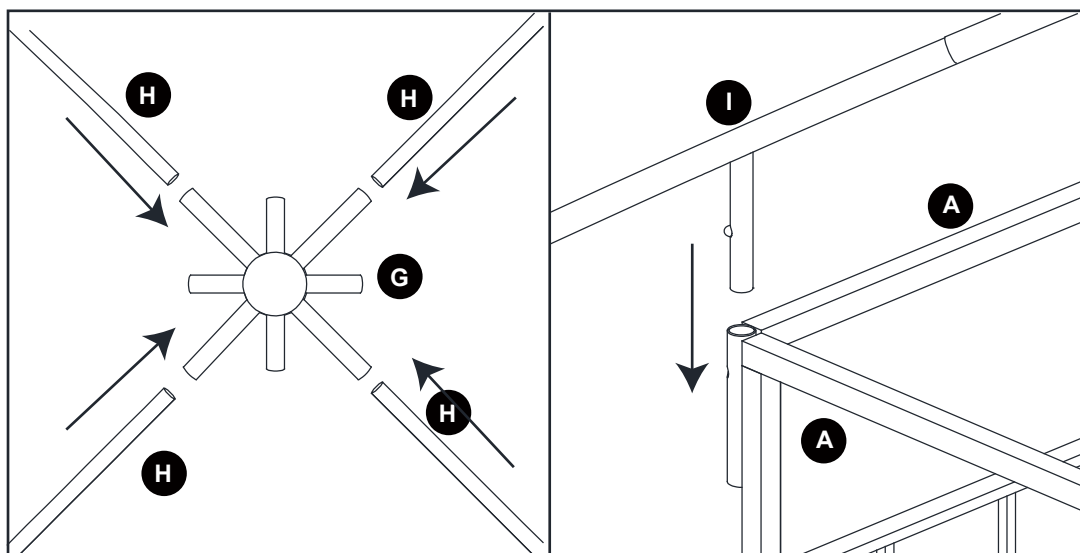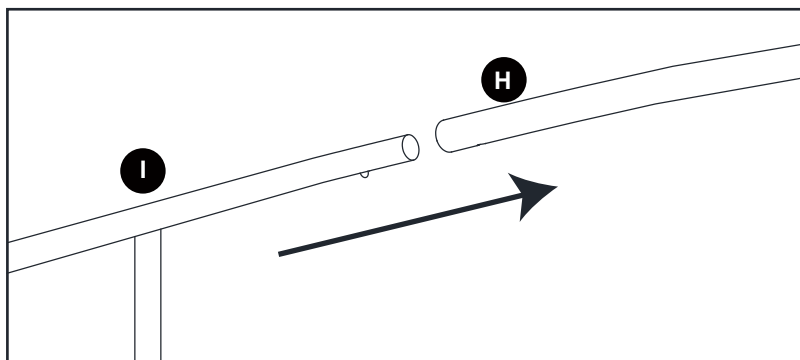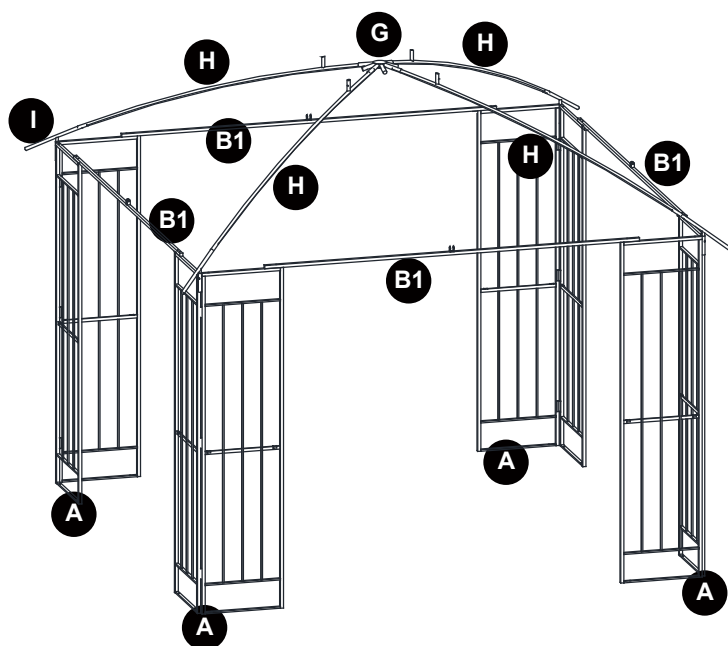


2.1. Insert short corner bar (I) into long corner bar (H). Repeat for remaining long corner bars (H) and short corner bars (I).

2.2. Insert the bottom part of long corner bar (H) into top connector (G).





Repeat for remaining long corner bars (H). Insert short corner (I) bar into corner panel (A).

INSTALLATION INSTRUCTIONS

 
3 Hardware Used

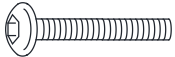AA		x4
DD		x8


EE		x4
GG		x4

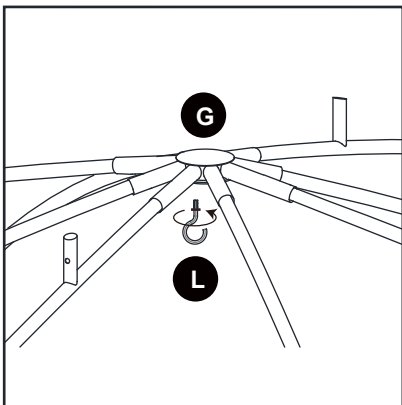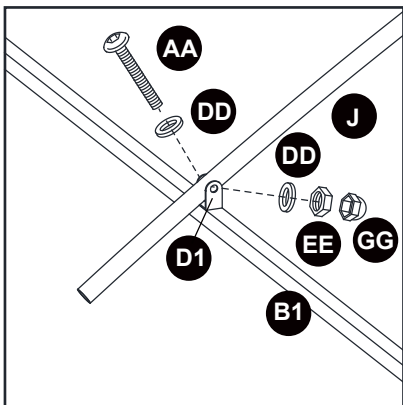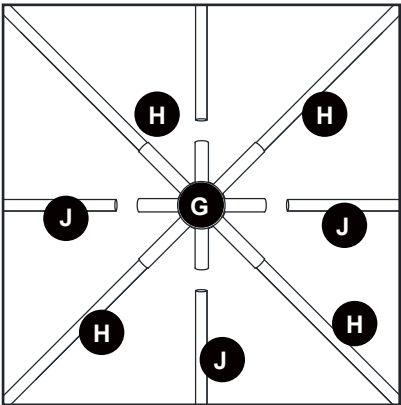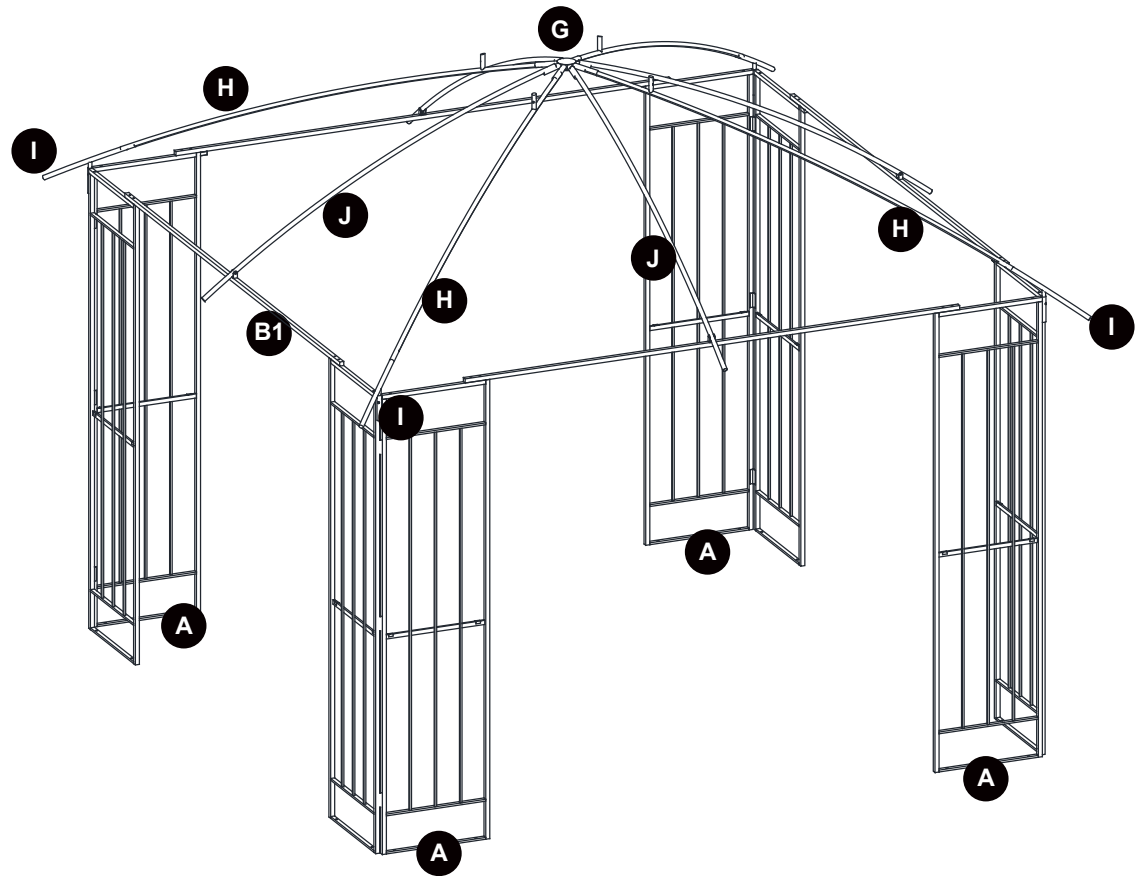    

 - 3.1. Insert the top part of middle bar (J) into top connector (G). Repeat for all middle bars (J).
- 3.2. Connect the middle bar (J) onto the connector (D1) by bolt (AA), Flat washers (DD), Nut (EE). Place cap (GG) on the nut (EE).
- 3.3. Attach hook (L) to top connector (G).



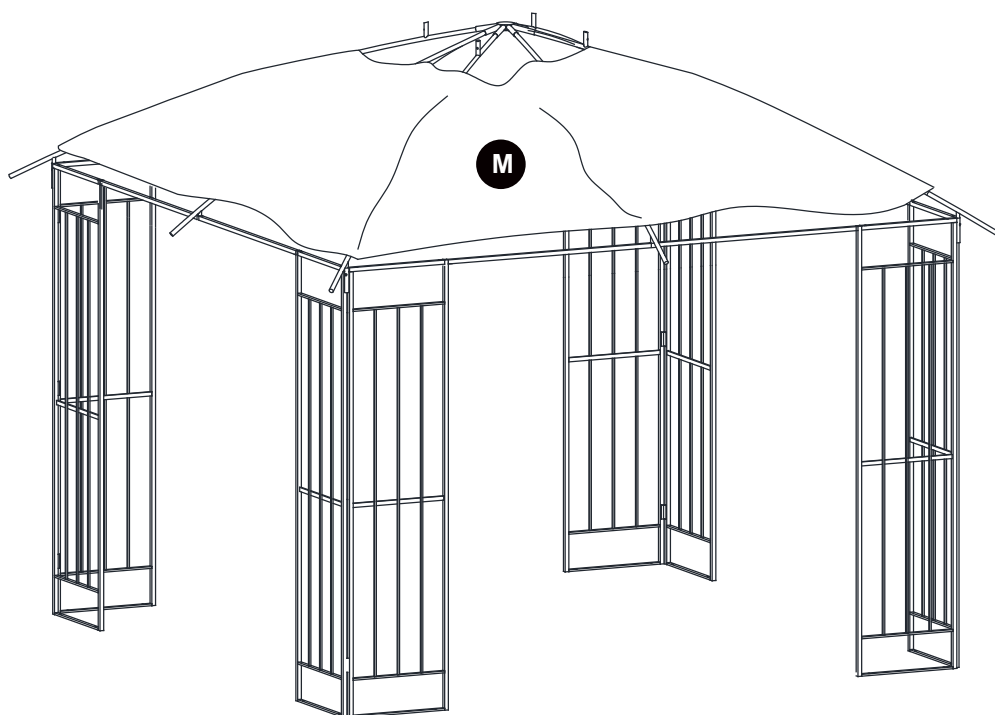


 4. Place large canopy (M) on top of gazebo assembly. Do not spread canopy yet.

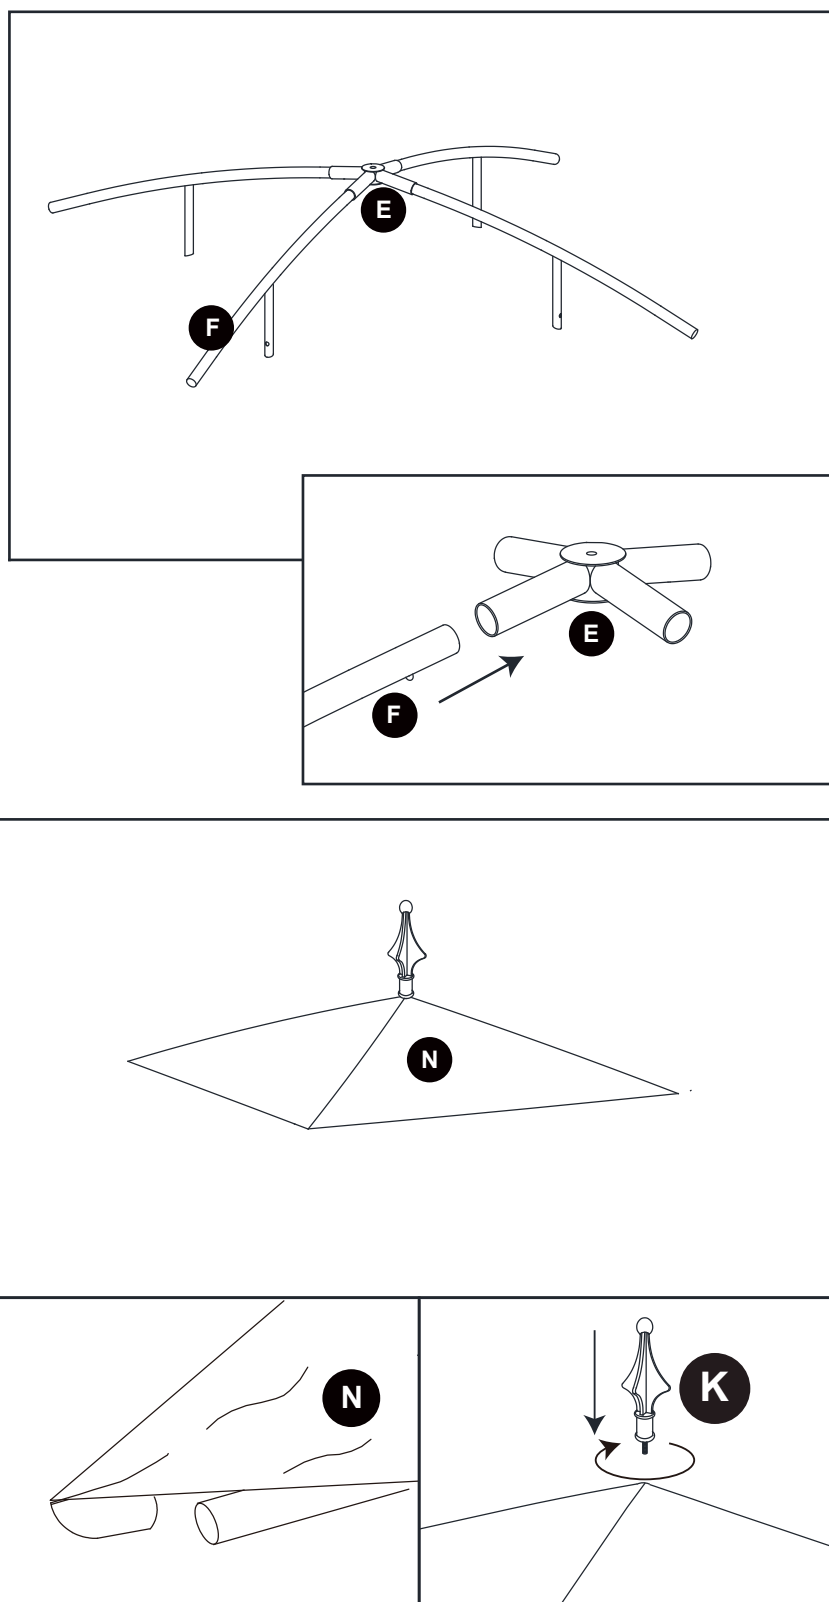

5.1. Insert small top beam (F) into small top connector (E).

   5.2. Attach small canopy (N) to small top beam (F), aligning the corners and stretching it to fit. Attach finial (K) to small top connector (E).

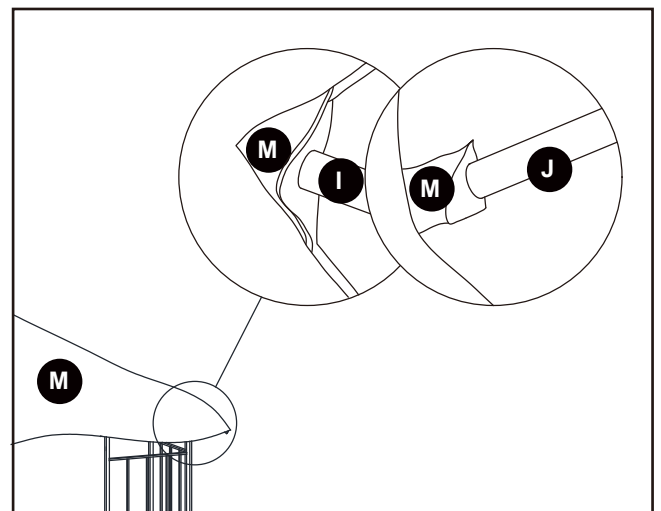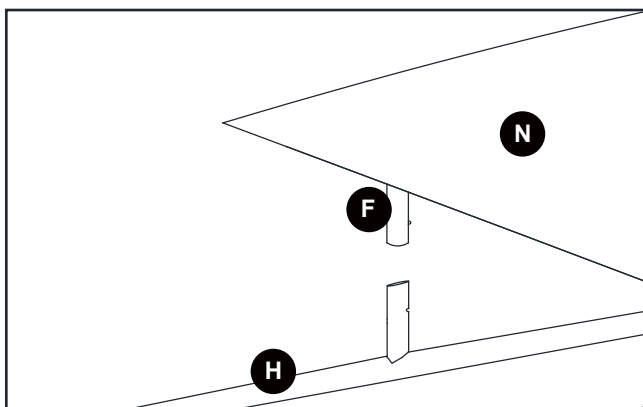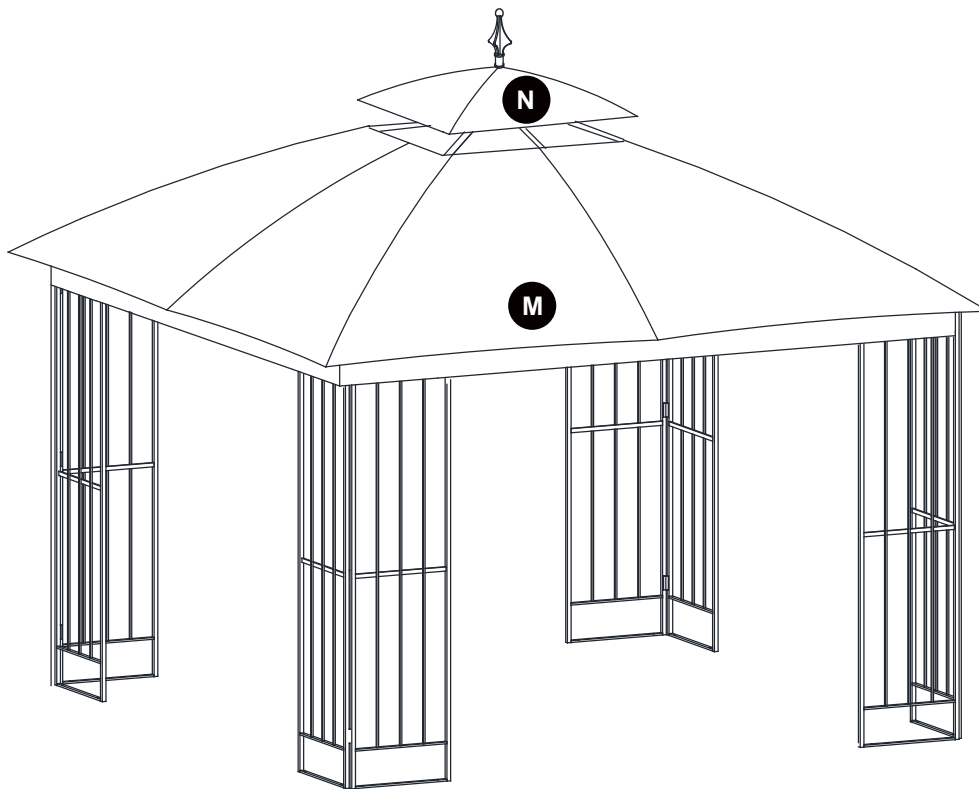

6.1. Insert small top beam (F) into long corner bar (H),
Repeat for all small top beams.




Note: Put each small top beam (F) loosely on each long top connector bar (H) first, then insert together, otherwise the last one won't insert correctly.

6.2. Attach large canopy (M) to the roof along the short corner bars (I) and middle bar (J), aligning the corners and stretching it to fit.

INSTALLATION INSTRUCTIONS

7 Hardware Used

JJ		x16
----	---	-----

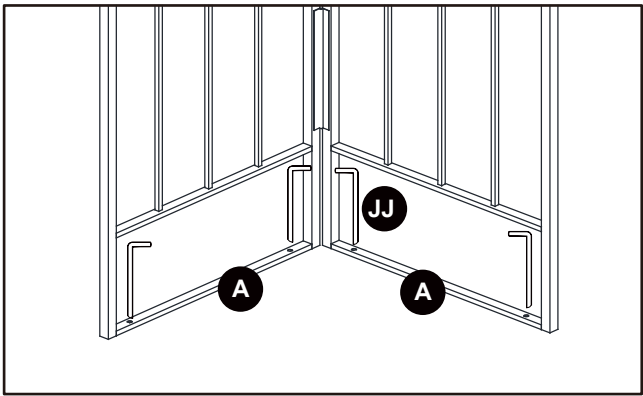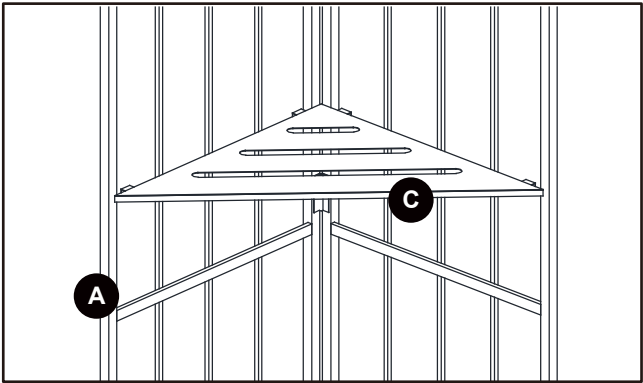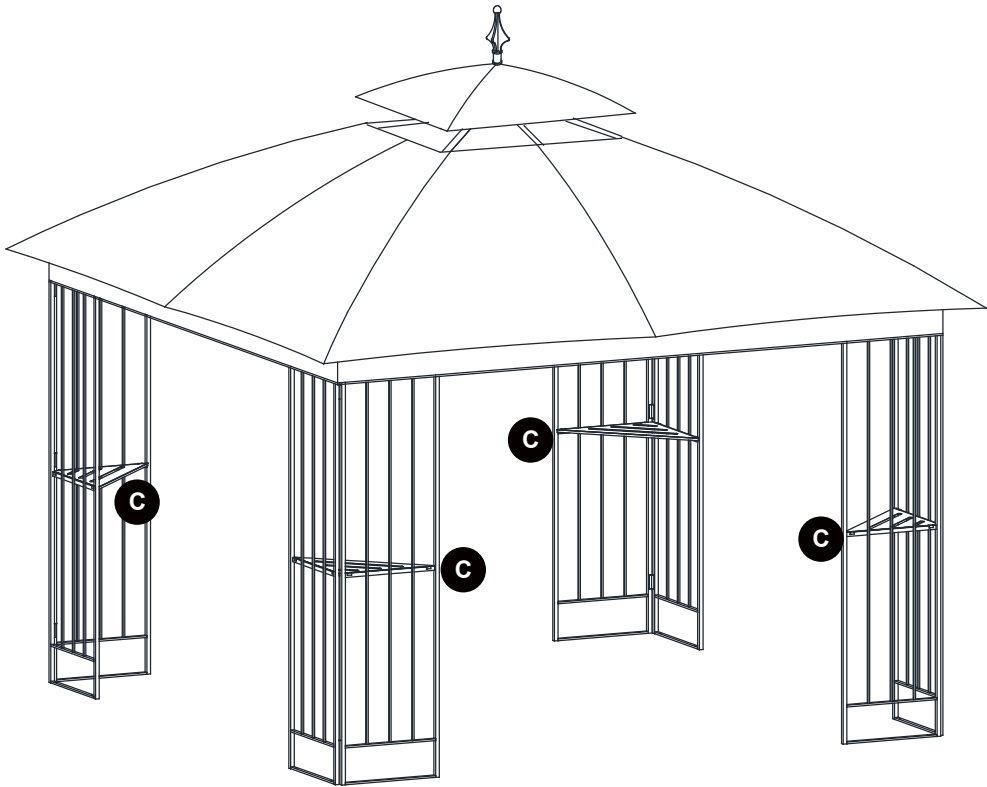   

- 7.1. Place shelves (C) onto corner panels (A) as desired.
- 7.2. Secure gazebo assembly to the ground with stakes (JJ) through the bottom of corner panels (A).

CARE AND MAINTENANCE

- For cleaning, use a mild detergent solution, rinse with water, and allow to air dry.
Do not use acetone, abrasive, or other special detergents as they would be harmful to the product's finish.
- Due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched.
This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

WARRANTY

1 YEAR WARRANTY FOR FRAME AND FABRIC.

• WHAT IS COVERED

We provide warranty to the original purchase for 1 year for frame and fabric from the date of purchase, and the fabric and frame will be replaced at no charge due to manufacturing defects.

 
• WHAT IS NOT COVERED

We do not reimburse for transportation costs. This warranty does not cover the damage caused by commercial use, acts of nature, fire, freezing, and abusive use. Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.
Contact the Customer Service Team at 877-888-8225.

REPLACEMENT PARTS LIST


For replacement parts, call our customer service department at **877-888-8225**, 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at **ascs@lowes.com**.

AA

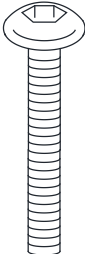

M6 × 30 mm Bolt

 BB



M6 × 45 mm Bolt

DD



 
Flat Washer

EE



Nut

GG



Cap


PART	DESCRIPTION	PART #
AA	M6 x 30 mm Bolt	1
BB	M6 x 45 mm Bolt	2
DD	Flat Washer	4

PART	DESCRIPTION	PART #
EE	Nut	2
GG	Cap	2



ARTÍCULO #4134948/ 4115494/ 4115495
MODELO #TPGAZ9116D/ TPGAZ9126B/ TPGAZ9126A
GAZEBO DE CUBIERTA SUAVE
ADJUNTE EL RECIBO AQUÍ

 STYLE SELECTIONS y el diseño del logotipo son marcas comerciales o marcas registradas de LF, LLC. Todos los derechos reservados.

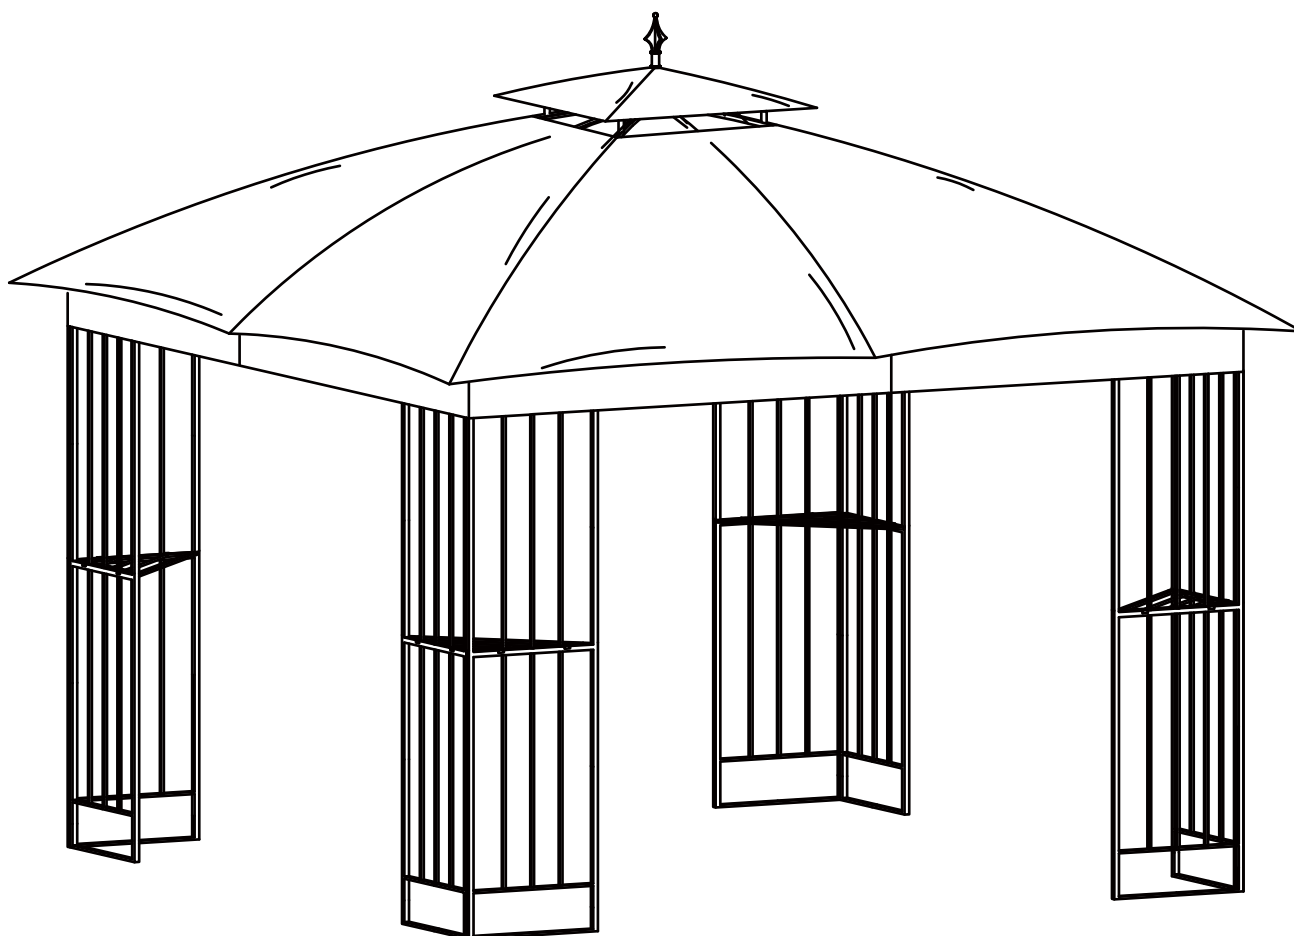

Número de serie _____

Fecha de compra _____



¿Preguntas, problemas, piezas faltantes? Antes de volver a la tienda, llame a nuestro Departamento de Servicio al Cliente al **877-888-8225**, de lunes a domingo de 8 a.m. a 8 p.m., hora estándar del Este. También puede ponerse en contacto con nosotros en **ascs@lowes.com**.

ÍNDICE

Contenido del paquete	16
Aditamentos	17
Información de seguridad	18
Preparación	18
Instrucciones de ensamblaje	19
Cuidado y mantenimiento	26
Garantía	26
Lista de piezas de repuesto	26

This exploded view diagram illustrates the assembly of a birdhouse. The components are labeled as follows:


- A**: The main body of the birdhouse, shown in three different orientations.
- B1**: A horizontal bar that fits into the side of the main body.
- C**: A small rectangular piece that fits into the side of the main body.
- D1**: A small rectangular piece that fits into the side of the main body.
- E**: A small rectangular piece that fits into the top of the main body.
- F**: A small rectangular piece that fits into the top of the main body.
- G**: A small rectangular piece that fits into the top of the main body.
- H**: A small rectangular piece that fits into the top of the main body.
- I**: A small rectangular piece that fits into the top of the main body.
- J**: A small rectangular piece that fits into the top of the main body.
- K**: A small rectangular piece that fits into the top of the main body.
- L**: A small rectangular piece that fits into the top of the main body.
- M**: A small rectangular piece that fits into the top of the main body.
- N**: A small rectangular piece that fits into the top of the main body.

PIEZA	DESCRIPCIÓN	CANTIDAD
A	Panel de esquina	4
B1	Viga transversal	4
C	Estante	4
D1	Conector	4
E	Conector superior pequeño	1
F	Viga superior pequeña	4
G	Conector superior	1

PIEZA	DESCRIPCIÓN	CANTIDAD
H	Barra de esquina larga	4
I	Barra de esquina corta	4
J	Barra central	4
K	Remate	1
L	Gancho	1
M	Toldo grande	1
N	Toldo pequeño	1


ADITAMENTOS (se muestran en tamaño real)

 AA

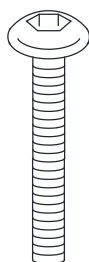


Perno M6 x 30 mm
Cant. 8 + 1 adicional

 BB



Perno M6 x 45 mm
Cant. 16 + 2 adicionales

 CC



Llave Allen
Cant. 1
(NO ESTÁ A ESCALA)

DD



 
Arandela plana
Cant. 48 + 4 adicionales

EE




Tuerca
Cant. 24
+ 2 adicionales

FF



Estaca
Cant. 16
(NO ESTÁ A ESCALA)

 GG



Tapa
Cant. 24
+ 2 adicionales

HH



Llave
Cant. 1
(NO ESTÁ A ESCALA)



INFORMACIÓN DE SEGURIDAD

Lea y comprenda por completo este manual antes de intentar ensamblar, usar o instalar el producto.

ADVERTENCIA

- Carga máxima para el gancho del techo: 26 lb.
- Si el viento es fuerte, hay lluvia torrencial o si cae nieve, quite el techo y compruebe si hay daños antes de continuar usando el producto.

PRECAUCIÓN

ENSAMBLE EL GAZEBO ADECUADAMENTE

- Se recomienda que haya 2 personas para un ensamblaje seguro.
- Mantenga a niños, mascotas y otras obstrucciones alejados del área de ensamblaje.
- No intente ensamblar el producto si falta alguna pieza o si estas están dañadas.
- Para evitar que se produzcan daños en el gazebo y sus componentes, use las herramientas correspondientes.
- No utilice la estructura como soporte.
- Revise todos los pernos regularmente para mantener la solidez de la estructura.
- Conserve las instrucciones para usarlas en el futuro.
- No trepe a la parte superior del gazebo. Las caídas desde el gazebo podrían provocar lesiones graves o incluso la muerte.

EXAMINE EL GAZEBO

- De vez en cuando, examínelo para asegurarse de que no haya piezas sueltas.
Si encuentra piezas sueltas, ajústelas de inmediato.

PREPARACIÓN

Antes de comenzar a ensamblar el producto, asegúrese de tener todas las piezas. Compare las piezas con la lista del contenido del paquete y la lista de aditamentos. No intente ensamblar el producto si falta alguna pieza o si estas están dañadas.

Tiempo estimado de ensamblaje: 30 minutos

Herramientas necesarias para el ensamblaje (no se incluyen): gafas de seguridad, guantes, casco, escalera de tijera.



Gafas de seguridad



Guantes



 
Casco







Escalera de tijera

INSTRUCCIONES DE ENSAMBLAJE




1 Aditamentos utilizados

AA		x4
BB		x16
DD		x40

EE		x20
GG		x20

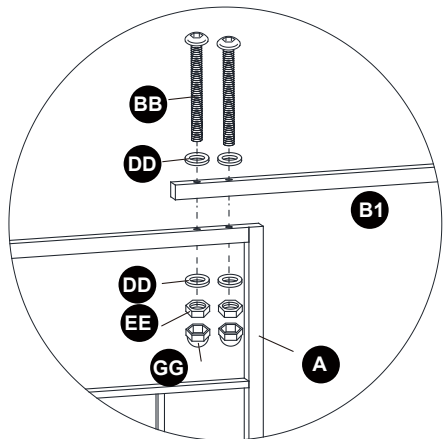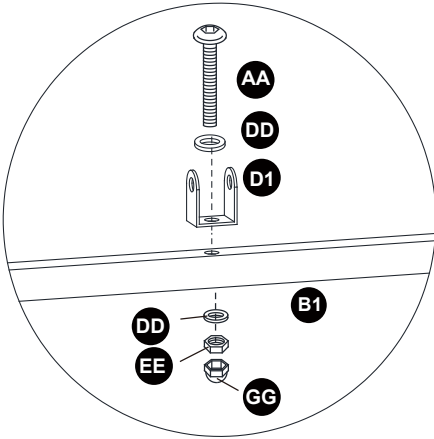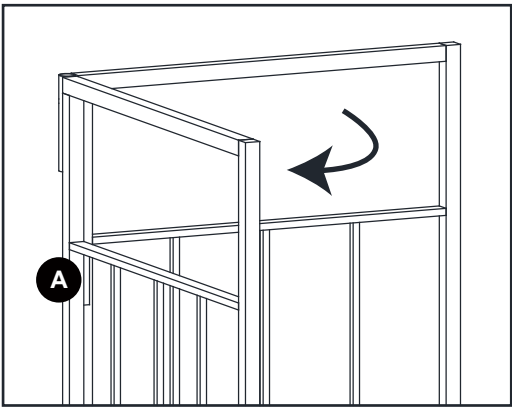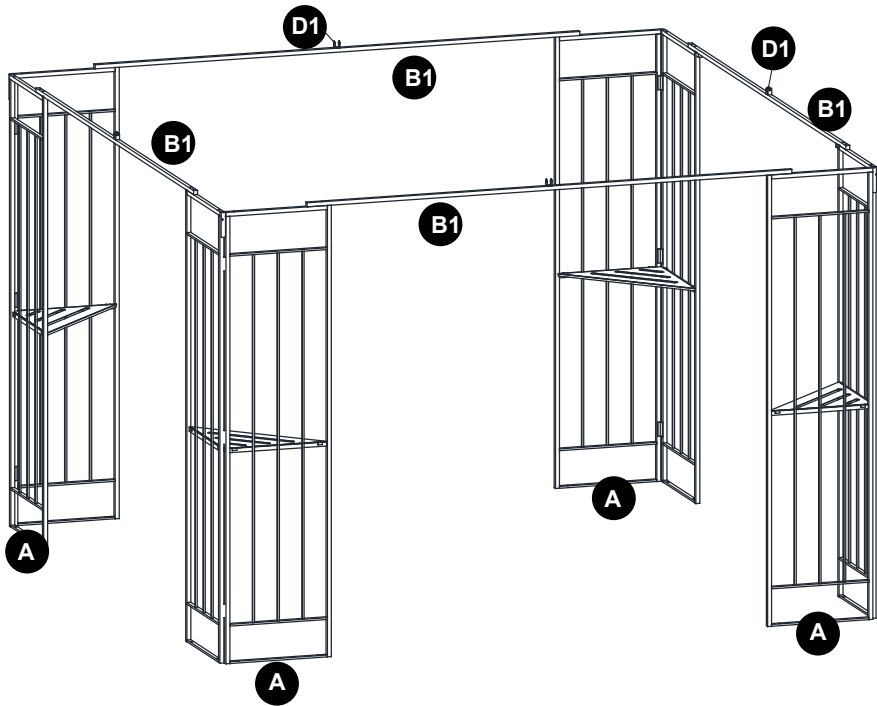    

   - 1.1. Despliegue dos paneles de esquina (A).
- 1.2. Una el conector (D1) al travesaño (B1) con un perno (AA) y arandelas planas (DD), luego conecte el travesaño (B1) con el panel de esquina (A) con un perno (BB), arandelas planas (DD) y una tuerca (EE). Coloque la tapa (GG) en la tuerca (EE).

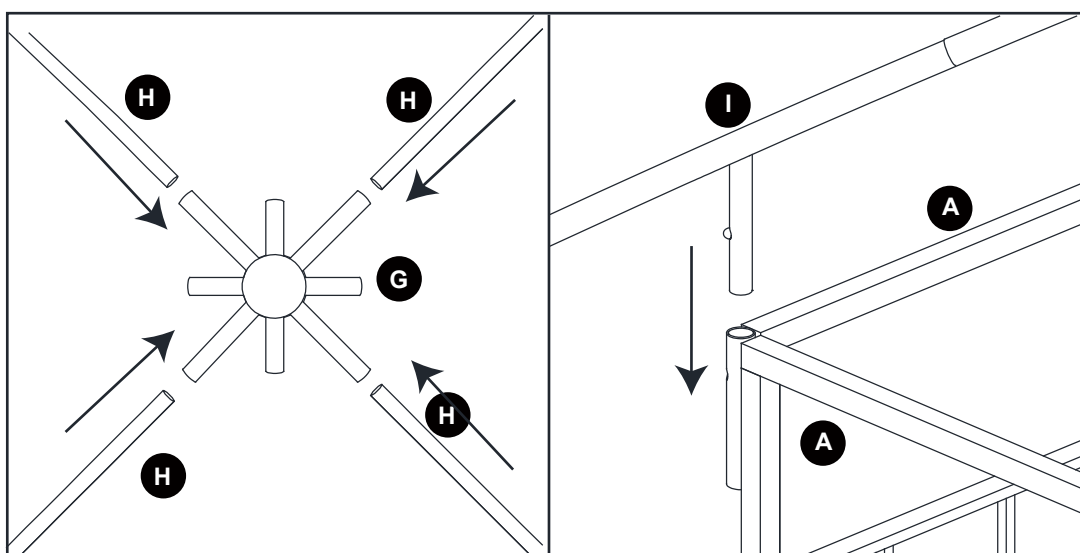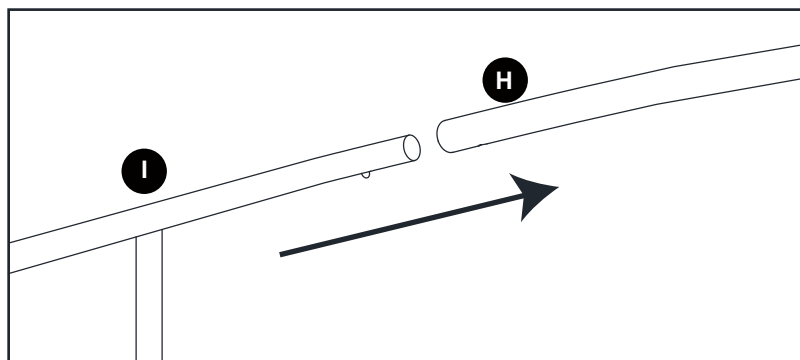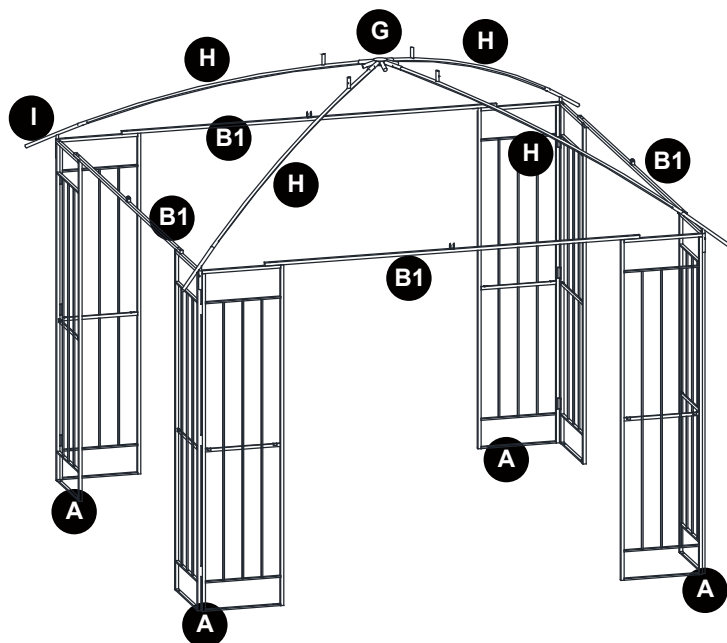


2.1. Inserte la barra de esquina corta (I) en la barra de esquina larga (H). Repita el procedimiento con las barras de esquina largas (H) y cortas (I) restantes.





2.2. Inserte la parte inferior de la barra de esquina larga (H) en el conector superior (G). Repita el procedimiento con las barras de esquina largas (H) restantes. Inserte la barra de esquina corta (I) en el panel de esquina (A).

INSTRUCCIONES DE ENSAMBLAJE

 
3 Aditamentos utilizados

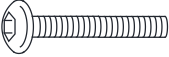AA		x4
DD		x8


EE		x4
GG		x4

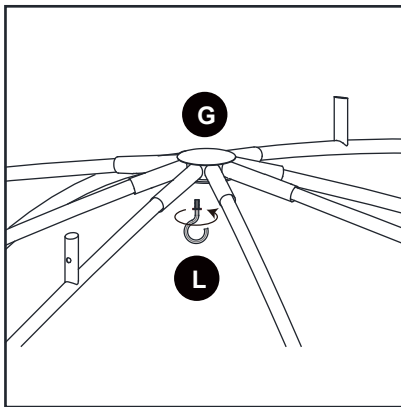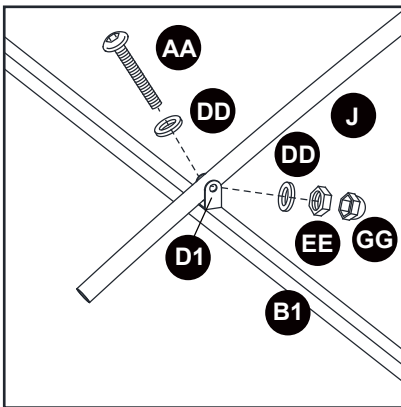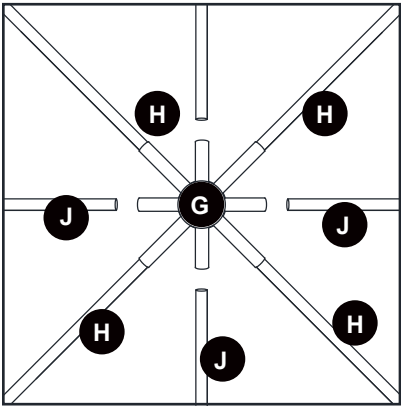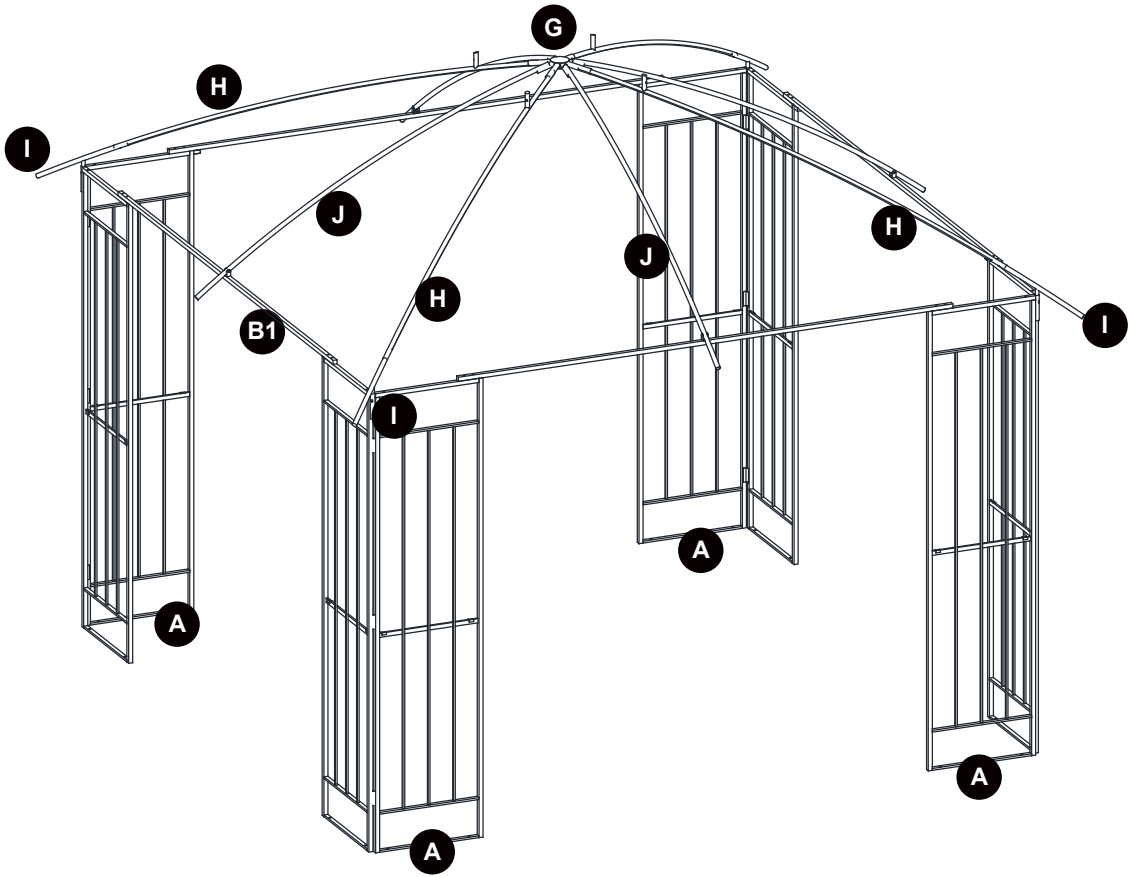    

 - 3.1. Inserte la parte superior de la barra central (J) en el conector superior (G). Repita el procedimiento para todas las barras centrales (J).
- 3.2. Conecte la barra central (J) al conector (D1) con un perno (AA), arandelas planas (DD) y una tuerca (EE). Coloque la tapa (GG) en la tuerca (EE).
- 3.3. Fije el gancho (L) al conector superior (G).



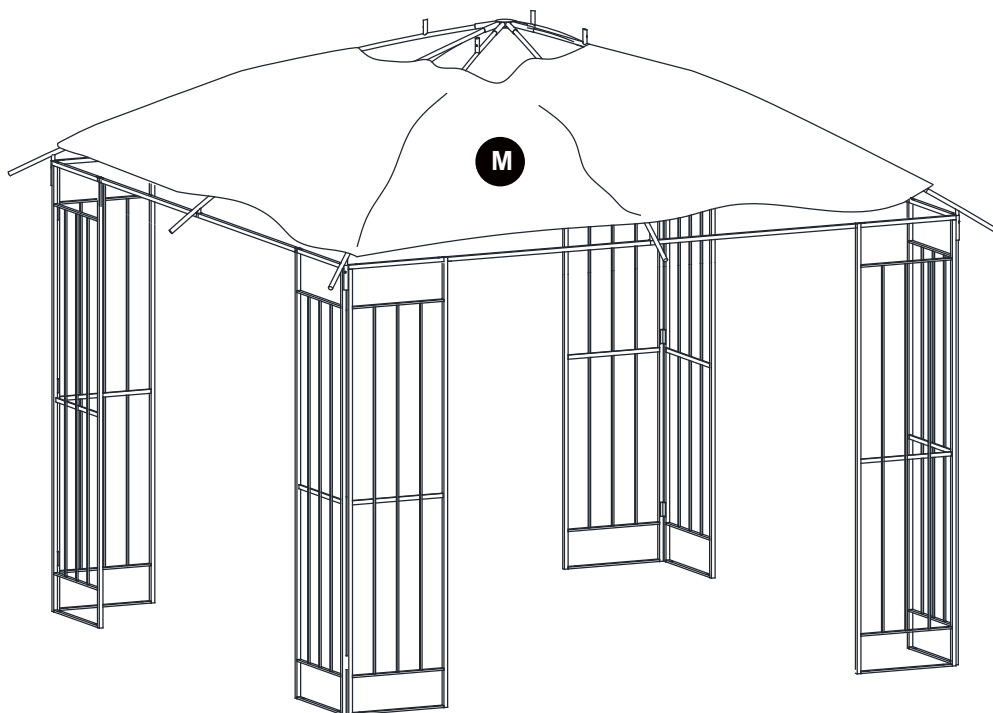


 4. Coloque el toldo grande (M) en la parte superior del ensamble del gazebo. No extienda el toldo aún.

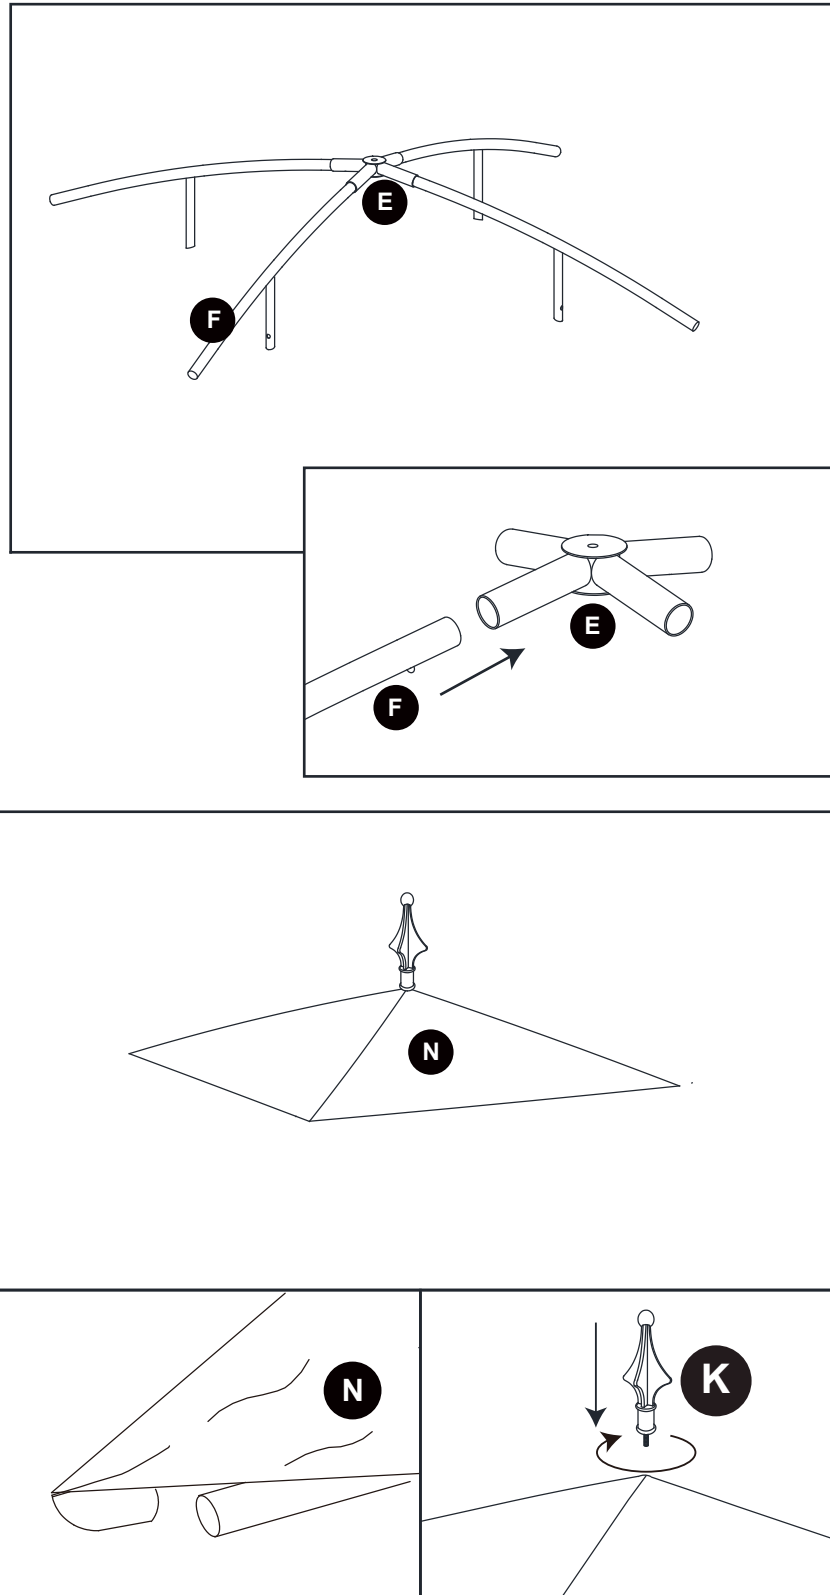

5.1. Inserte la viga superior pequeña (F) en el conector superior pequeño (E).

   5.2. Coloque el toldo pequeño (N) en la viga superior pequeña (F), alineando las esquinas y estirándolo para que encaje. Fije el remate (K) al conector superior pequeño (E).

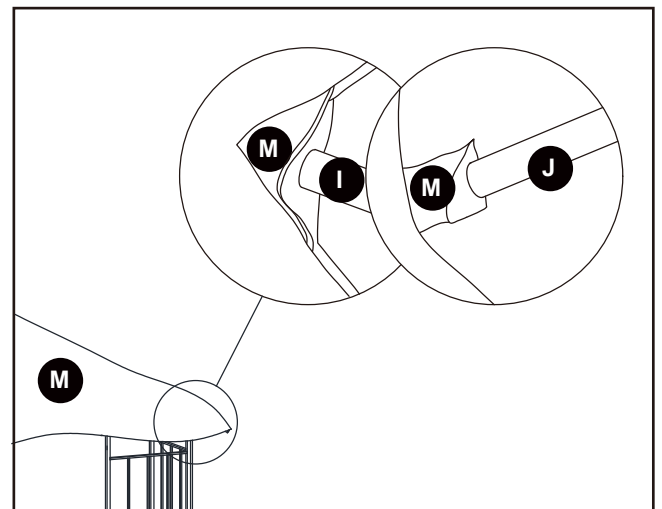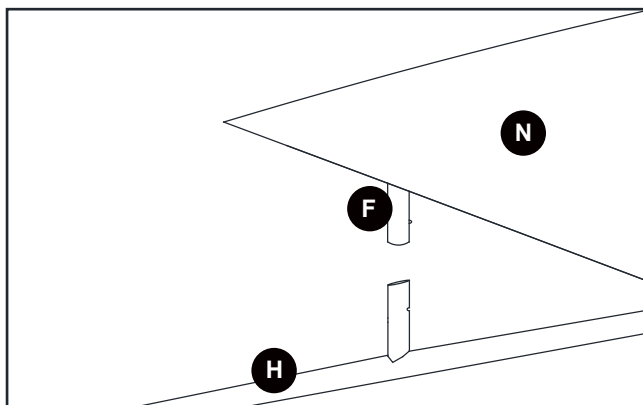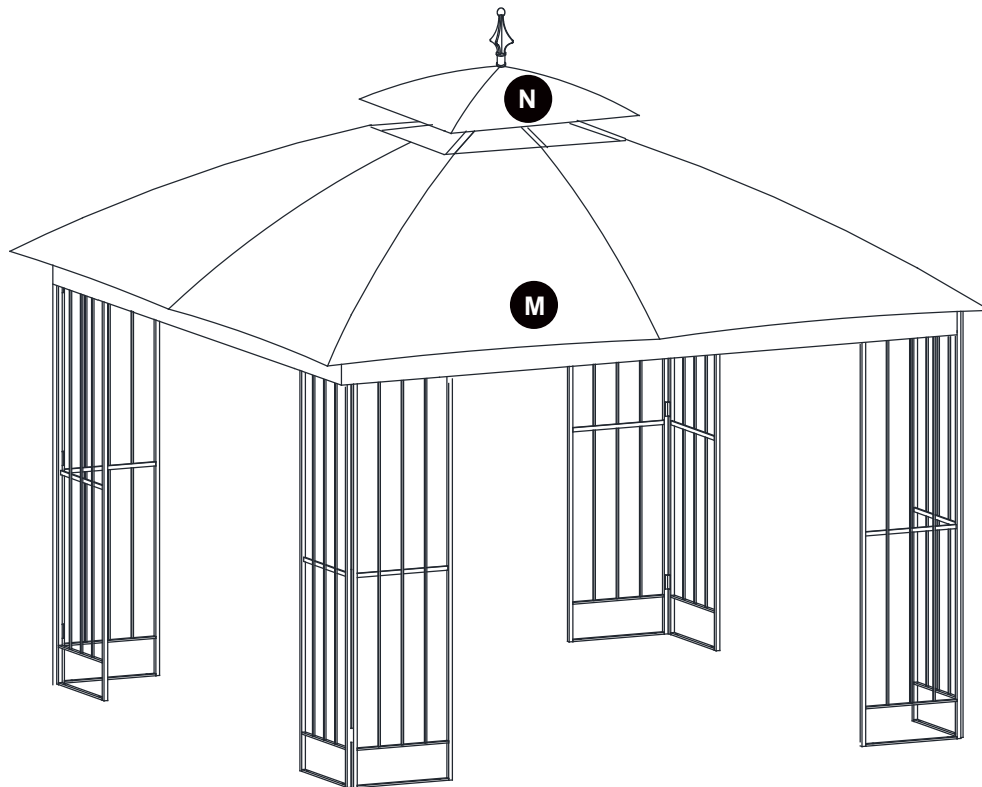





6.1. Inserte la viga superior pequeña (F) en la barra de esquina larga (H). Repita el procedimiento para todas las vigas superiores pequeñas.

Nota: coloque primero cada viga superior pequeña (F) sin apretar en cada barra conectora superior larga (H), luego insértelas juntas; de lo contrario, la última no se insertará correctamente.

6.2. Fije el toldo grande (M) al techo a lo largo de las barras de esquina cortas (I) y la barra central (J), alinee las esquinas y estírelas hasta lograr el ajuste correcto.

 7 Aditamentos utilizados

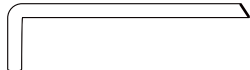JJ		x16
----	---	-----

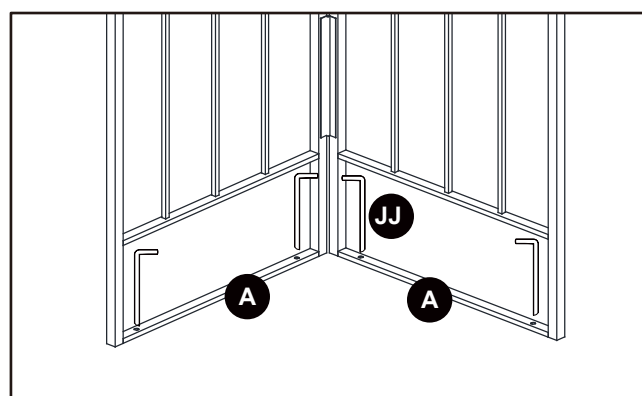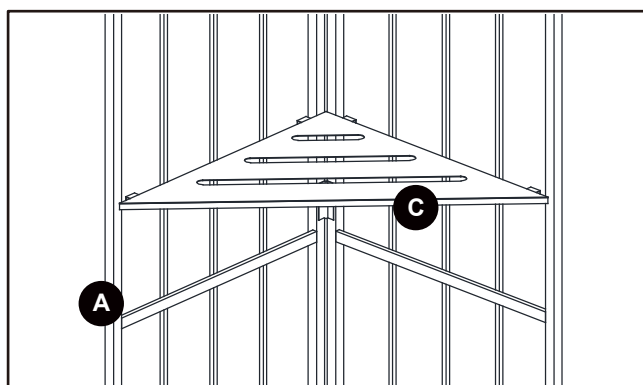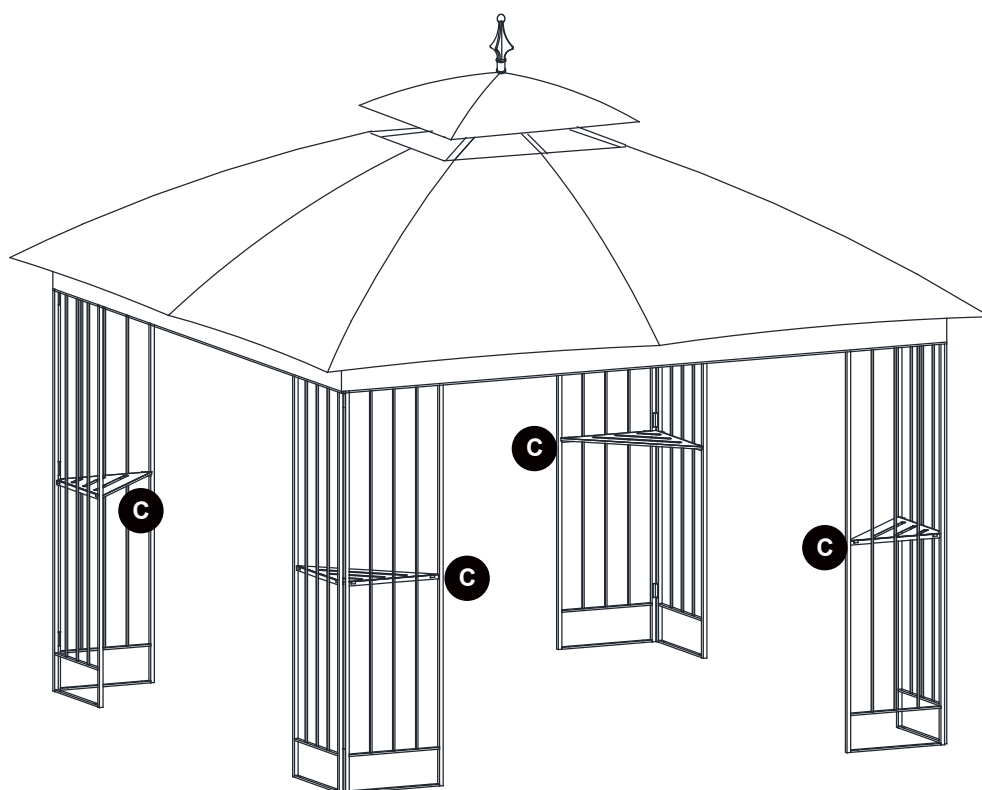   

7.1. Coloque los estantes (C) en los paneles de esquina (A) según lo desee.

7.2. Fije el ensamble del gazebo al suelo con estacas (JJ) en la parte inferior de los paneles de esquina (A).

CUIDADO Y MANTENIMIENTO

- Para limpiar, use una solución de detergente suave, enjuáguelo con agua y deje que se seque al aire. No use acetona, productos abrasivos u otros detergentes especiales porque dañarían el acabado del producto.
- Debido a la naturaleza del acero, puede oxidarse la superficie si este recubrimiento protector se raya. Este es un proceso natural. Para minimizar este problema, se recomienda que tenga cuidado cuando ensamble y manipule el producto, para evitar que la pintura se raye.

GARANTÍA

1 AÑO DE GARANTÍA PARA LA ESTRUCTURA Y LA TELA.

• LO QUE CUBRE LA GARANTÍA

Ofrecemos una garantía de 1 año por la compra original para la estructura y la tela desde la fecha de compra, estas se reemplazarán sin costo debido a defectos de fabricación.

• LO QUE NO CUBRE LA GARANTÍA

 
No realizamos reembolsos por los costos de transporte. Esta garantía no cubre daños provocados por el uso comercial, los desastres naturales, los incendios, el congelamiento ni el abuso del producto. La decoloración o el desteñido en el acabado o las telas como resultado de la exposición a productos químicos o derrames no están cubiertos.

Póngase en contacto con el equipo de Servicio al Cliente al 877-888-8225.

LISTA DE PIEZAS DE REPUESTO


Para obtener piezas de repuesto, llame a nuestro Departamento de Servicio al Cliente al **877-888-8225**, de lunes a domingo de 8 a.m. a 8 p.m., hora estándar del Este. También puede ponerse en contacto con nosotros en **ascs@lowes.com**

AA

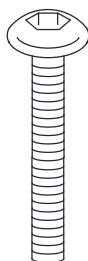

Perno M6 x 30 mm

 BB

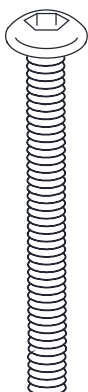

Perno M6 x 45 mm

DD



 
Arandela plana

EE



Tuerca

GG

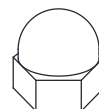

Tapa

PIEZA	DESCRIPCIÓN	PIEZA #
AA	Perno M6 x 30 mm	1
BB	Perno M6 x 45 mm	2
DD	Arandela plana	4

PIEZA	DESCRIPCIÓN	PIEZA #
EE	Tuerca	2
GG	Tapa	2