





AERO-FLEX® UNIVERSAL TRIMMER UPGRADE KIT


Page 1

CONVERSION, ASSEMBLY, SAFE USE, & METHODS


- 1** Remove existing head, may be a right or left thread. This will tell you which type of fastener to use. (step 3)

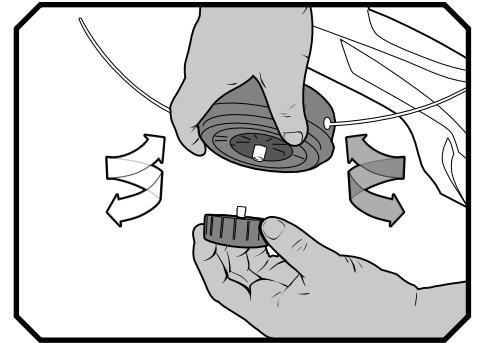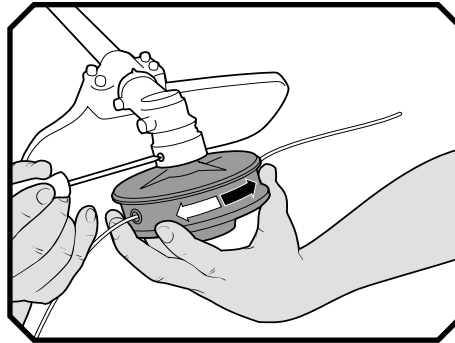


- 2** Select the proper receiver head. Short or long arbor, based on trimmer type.

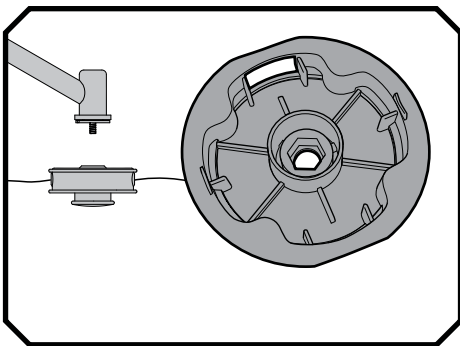

Short arbor trimmers: refer to page 2


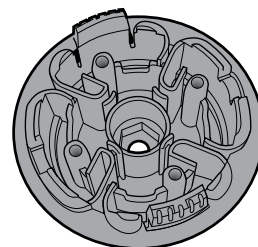



(Line blade cap)

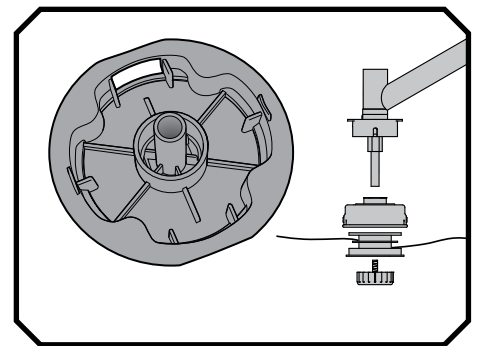

Long arbor trimmers: refer to page 3





- 3** Chose a fastener that fits your trimmer arbor and threads in the correct direction. Black hardware tightens left, and silver tightens right.

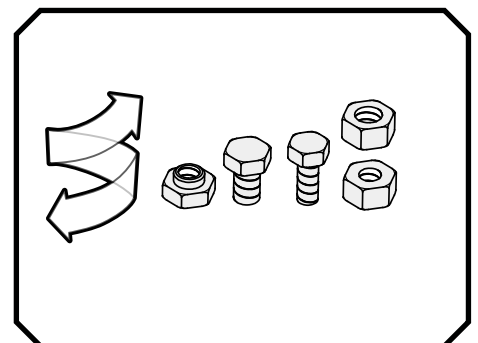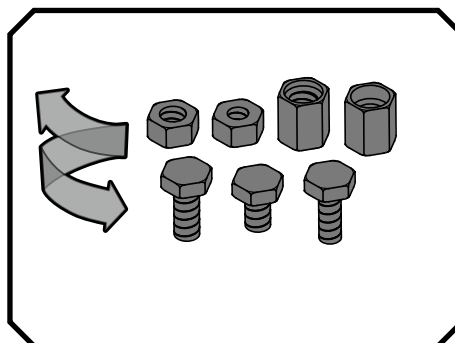


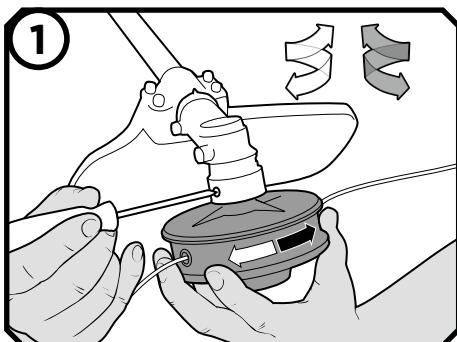


Lock the shaft and remove the original head.



Alternate ways to lock the shaft:

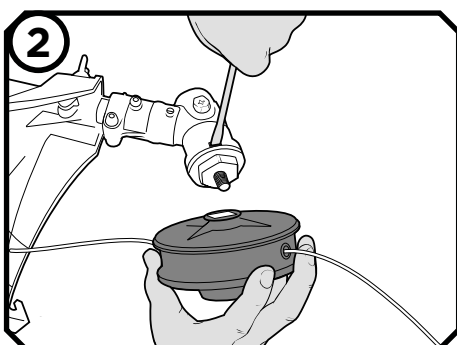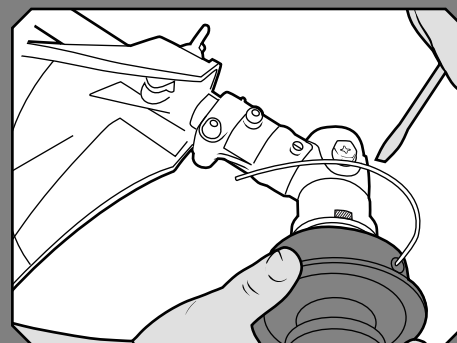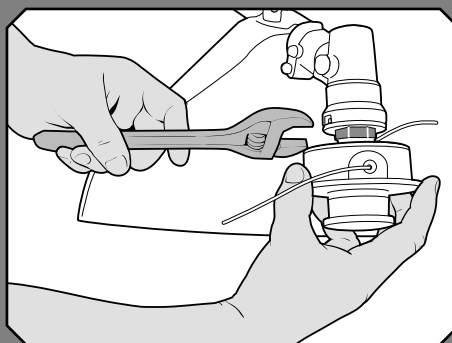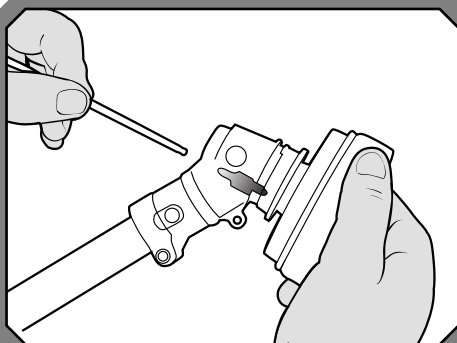



Short arbor heads remove in one piece.

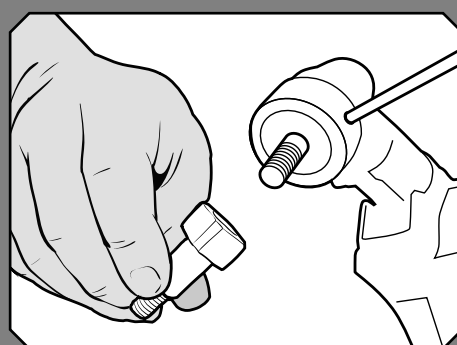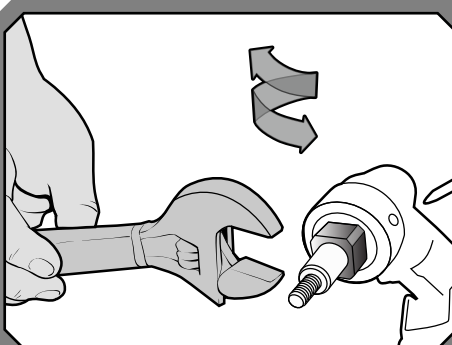






Remove any arbor adapter if found.

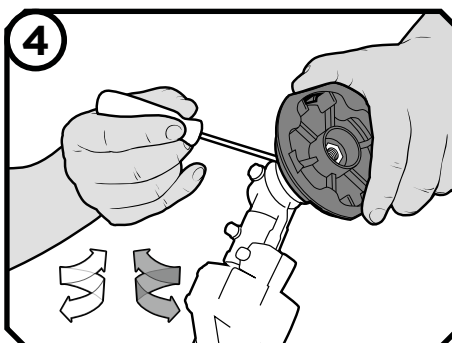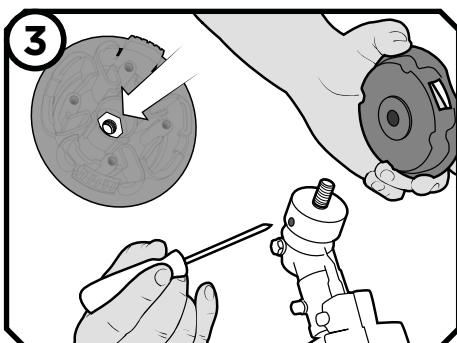


Ensure the correct fastener is in the receiver head's nut pocket and tighten onto the arbor.

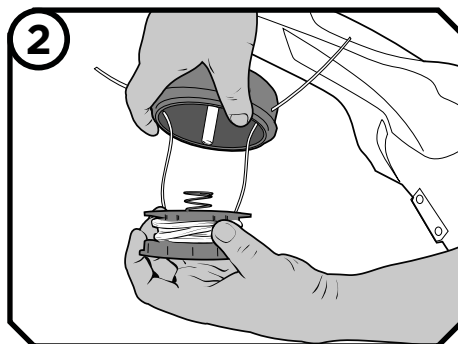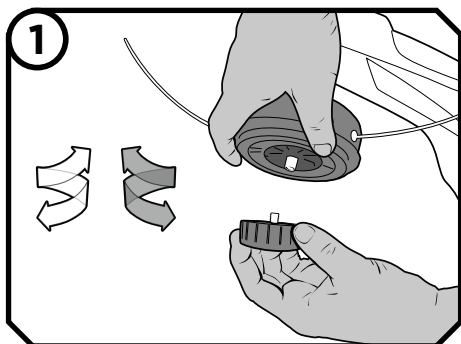




If there is a retaining washer, split it with a sharp chisel and knock it out.

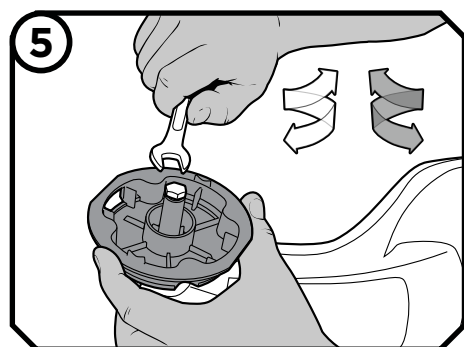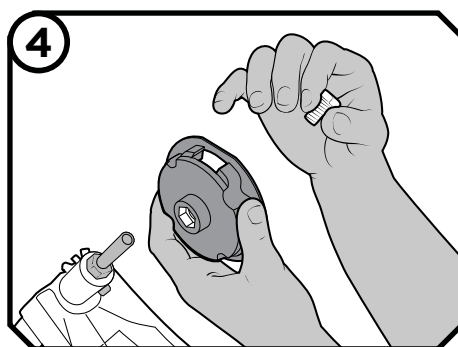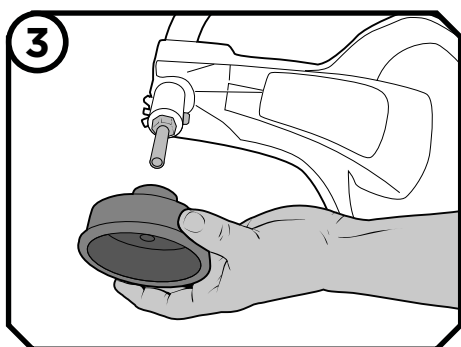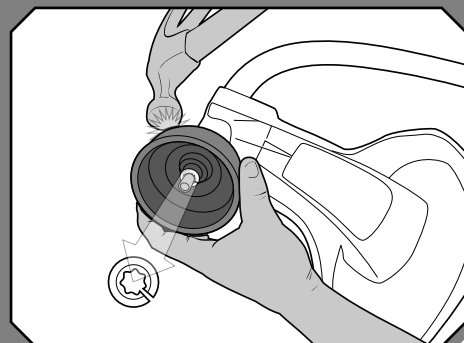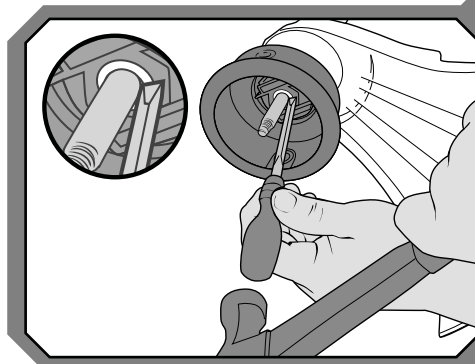

Secure with
40-60 in-lbs of torque.

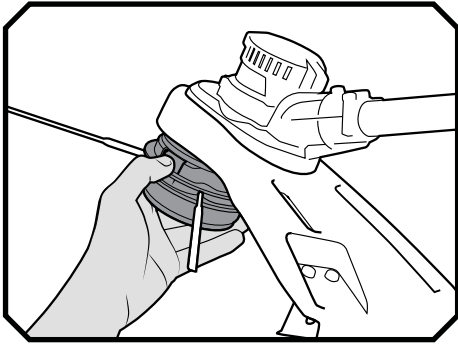

Remove cap: squeeze the finger tabs and pull (screwdriver in slot if needed.)

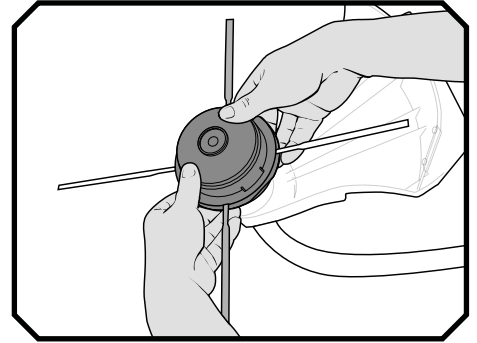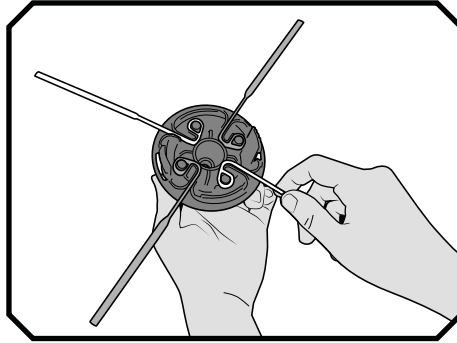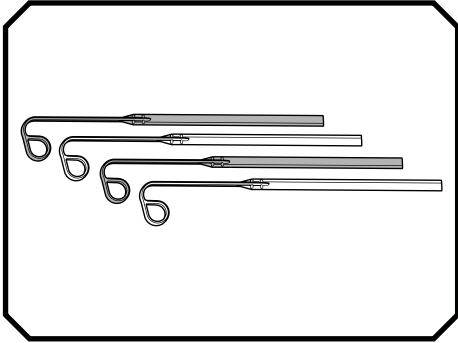

Alternately assemble two orange and two yellow line blades.

SAFE OPERATION



WARNING
ALERT



Read/follow
instructions



Flying debris &
blade contact




Protect eyes
and ears



Protect
bystanders







Do not use
without a shield

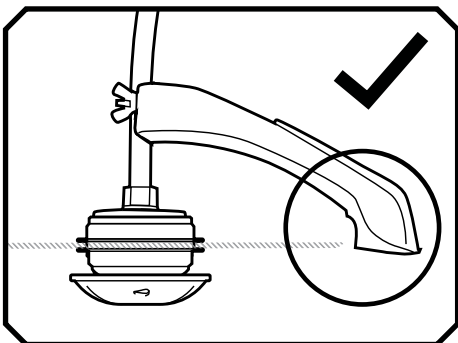


To reduce thrown objects, ensure proper shield alignment.

Never install an uneven number of line blades.

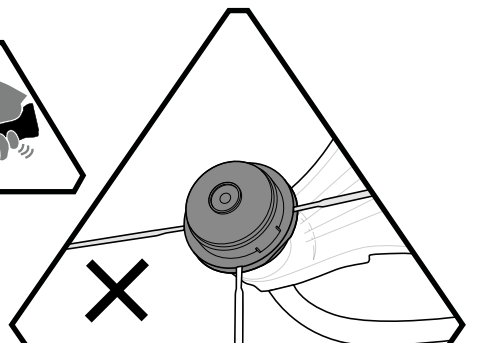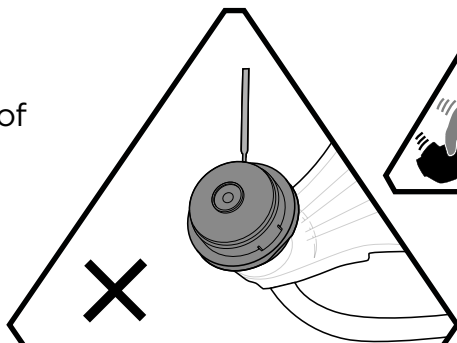


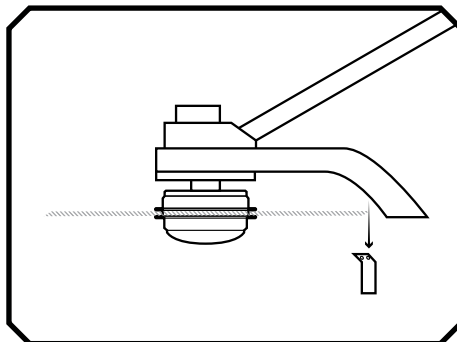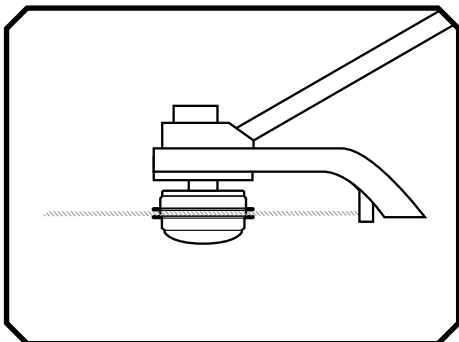

Remove line length limiter (knife) if line blades make contact.

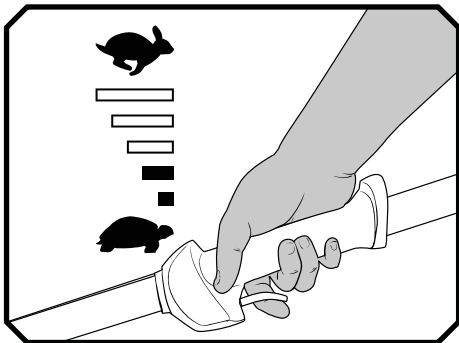


Run trimmer at lower speed to maximize run time.

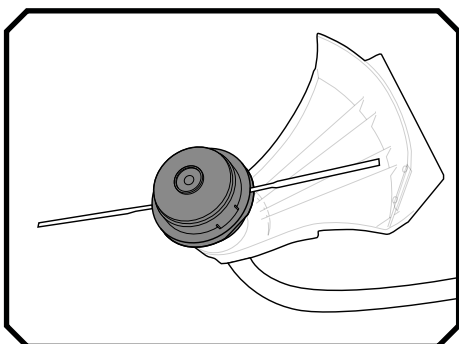


If motor trips with 4 line blades, use 2 loaded opposite each other.




Cut grass from top down.

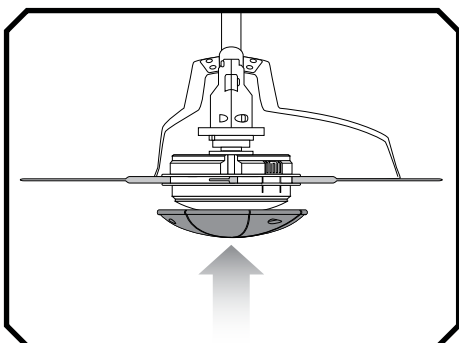



Use GC™ Glider to extend battery.

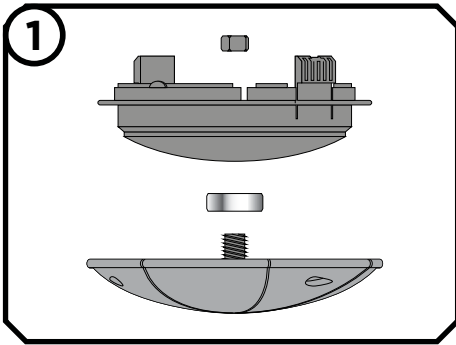

If you have a GC™ Glider to fit onto your Aero-Flex® Universal Upgrade Kit, adding it is a breeze.

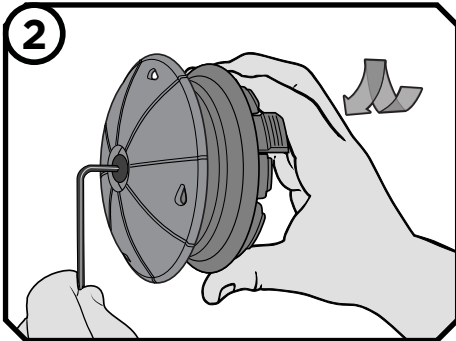

With bearing and bolt, install Glider to nut in cap pocket with hex allen wrench. Hand tighten to 40 in-lbs counter-clockwise.

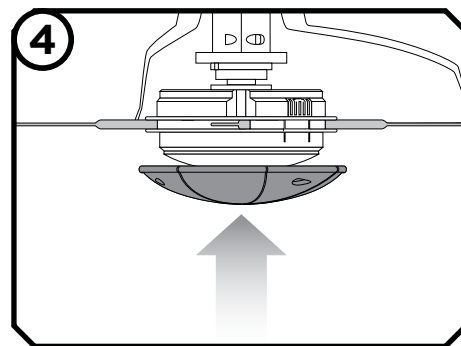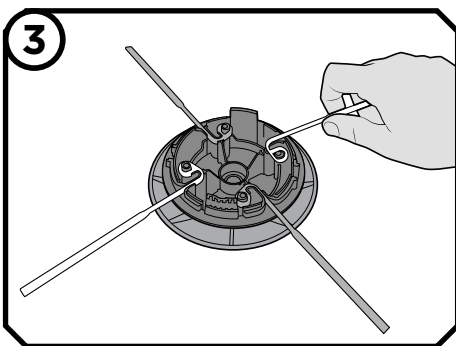

Replace the line blades and snap cap back into the receiver.