


# INSTALLATION INSTRUCTIONS

For Item No. 1400-04

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**

Fig. 1

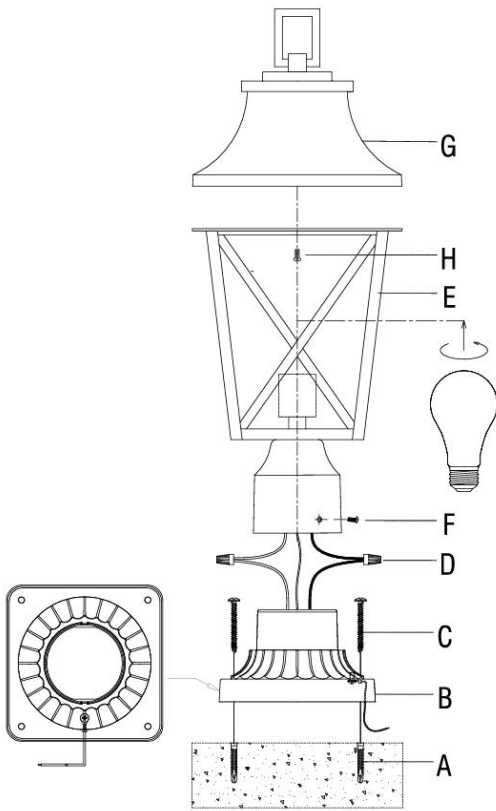

## HANGING THE FIXTURE (Fig. 1)

1. Shut off the power at the circuit breaker and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.

## CONNECTING THE WIRES (Fig.2)


3. While supporting the fixture, connect the electrical wires as shown in figure 2. If your post has a ground wire (green or bare copper), connect the fixture ground wire to it. If not, consult your electrician for proper grounding. After the wires are connected, tuck them carefully inside the pier mount base (B).

## COMPLETING THE INSTALLATION (Fig. 1)

4. Install the bulb (E26 Medium base, not supplied) in accordance with the fixture's specification. Attach the roof (G) back to the fixture (E) by set screws (H)  
**DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**
5. Place the fixture onto pier mount base (B), and secure with the 3 mounting screws (F)

Your installation is now completed. Return power to the junction box and test the fixture

Fig. 2

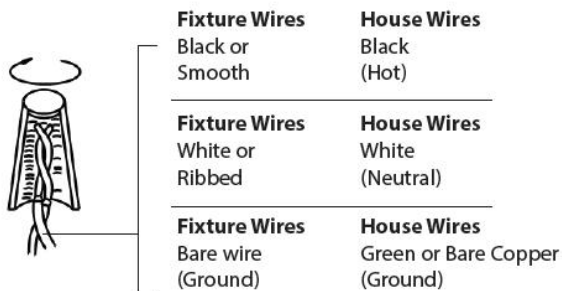

This authorizes the application of the Certification Mark(s) shown below to the models described in the Product(s) Covered section when made in accordance with the conditions set forth in the Certification Agreement and Listing Report. This authorization also applies to multiple listee model(s) identified on the correlation page of the Listing Report.

This document is the property of Intertek Testing Services and is not transferable. The certification mark(s) may be applied only at the location of the Party Authorized To Apply Mark.

<b>Applicant:</b>	Foshan Nanhai Grand Lighting Co.,Ltd.	<b>Manufacturer:</b>	Foshan Nanhai Grand Lighting Co., Ltd.
<b>Address:</b>	District C, Shishan Technological and Industrial Zone, Nanhai. Foshan, Guangdong 528226	<b>Address:</b>	District C, Shishan Technological and Industrial Zone, Nanhai. Foshan, Guangdong 528226
<b>Country:</b>	China	<b>Country:</b>	China
<b>Party Authorized To Apply Mark:</b>	Same as Manufacturer		
<b>Report Issuing Office:</b>	Intertek Testing Services (Shanghai FTZ) Co., Ltd		
<b>Control Number:</b>	<u>4004698</u>	<b>Authorized by:</b>	 _____ for L. Matthew Snyder, Certification Manager



This document supersedes all previous Authorizations to Mark for the noted Report Number.

This Authorization to Mark is for the exclusive use of Intertek's Client and is provided pursuant to the Certification agreement between Intertek and its Client. Intertek's responsibility and liability are limited to the terms and conditions of the agreement. Intertek assumes no liability to any party, other than to the Client in accordance with the agreement, for any loss, expense or damage occasioned by the use of this Authorization to Mark. Only the Client is authorized to permit copying or distribution of this Authorization to Mark and then only in its entirety. Use of Intertek's Certification mark is restricted to the conditions laid out in the agreement and in this Authorization to Mark. Any further use of the Intertek name for the sale or advertisement of the tested material, product or service must first be approved in writing by Intertek. Initial Factory Assessments and Follow up Services are for the purpose of assuring appropriate usage of the Certification mark in accordance with the agreement, they are not for the purposes of production quality control and do not relieve the Client of their obligations in this respect.

Intertek Testing Services NA Inc.  
545 East Algonquin Road, Arlington Heights, IL 60005  
Telephone 800-345-3851 or 847-439-5667 Fax 312-283-1672

<b>Standard(s):</b>	Luminaires [UL 1598:2021 Ed.5+R:31Jan2024]
	Luminaires [CSA C22.2#250.0:2021 Ed.5+U1;U2]
<b>Product:</b>	Fixed Luminaires
<b>Brand Name:</b>	Millennium Lighting

**Models:**

PHEL4300, PHEL4301, PHEL4302, PHEL4500, PHEL4501, PHEL4502, PHEL4503, PHEL4800, PHEL4801, PHEL4802, PHEL4803, PHEL4805, PHEL5100, PHEL5110, PHEL5101, PHEL5102, PHEL5103, PHEL5200, PHEL5201, PHEL5500, PHEL5501, AC8220, AC8221, AC8230, AC8231, AC8240, AC9140, AC9141, AC9150, PHEL4200, PHEL4201, PHEL4202, PHEL4204, OC901, OC902, OD101, OD102, OD103, OD201, OD202, OD301, OD302, OD303, 44A58, 44A63, 44A59, 44A64, 44A60, 42F98.  
8001 or 8002; followed by up to five characters.  
V8155, V8335, LC005507, LC005508, LC005509, LC005511, 73341-66, V8156, 8681F, 8682F, 8689F, 8693F, LC005515, LC005516, 19239, 9017384, 2294815.  
RALWHS14, RALWHS17, RALWHS20, RWCS13, RWCS17, RCS13, RCS17, RWDBS18, RCLWS14, RCLWS17, RGCS13, 85101, 87101, 85102, 85103, 85105, 86101, 86102, 82101, 88101, 82102, 82103, 82104, 88102, 88103 or 88105 followed by -; followed by up to seven characters.  
P81401, V81391, P81051, P81061, RWHCGS17, P560372, P560373, P560374, P560384; maybe followed by -; followed by up to seven characters.  
1100-02, 1200-01, 1200-04, 1300-01, 1300-04, 1400-01, 1400-04, 1500-01, 1500-04; followed by up to three characters.