

USE AND CARE GUIDE

KBS-66K002SMTY

KBS-52K138SMTY



01 Table of Contents

Safety information	1
Warranty	2
Three ceiling installation methods	3
Accessory drawing	4
Installation procedure	5

Remote control manual	12
Match code	14
Fans Balance	15
Care and cleaning	15
Trouble shooting	15
Connecting Smart Systems	17

02 Safety Information

READ ALL SAFETY INFORMATION AND INSTALLATION INSTRUCTIONS BEFORE YOU BEGIN INSTALLING THE FAN AND SAME INSTRUCTIONS.



Warning:
Kindly turn off the power
when connecting cables.



OFF!!

1. To reduce the risk of electric shock, ensure this electricity has been turned off at the circuit breaker or fuse box before you begin.
2. All wiring must be in accordance with the National Electrical Code (ANSI/NFPA 70-1999) and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
3. The outlet box and support structure must be securely mounted and capable of reliably supporting 35 lbs. (15.9 kg). Use only UL Listed outlet boxes marked "Acceptable for Fan Support of 35 lbs. (15.9 kg) or less".
4. The fan must be mounted with a minimum of 7 ft. (2.1 m) clearance from the trailing edge of the blades to the floor.
5. Do not place objects in the path of the blades.
6. To avoid personal injury or damage to the fan and other items, use caution when working around or cleaning the fan.
7. Electrical diagrams are for reference only. Light kits that are not packed with the fan must be UL-listed and marked suitable for use with the model fan you are installing. Switches must be UL General Use Switches. Refer to the instructions packaged with the light kits and switches for proper assembly.
8. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box.
9. All set screws must be checked and re-tightened where necessary before installation.



WARNING: To reduce the risk of personal injury, do not touch the blades or parts of the fan referred to as "moving" during assembly or other operation. Do not stand directly in the path of the blades.



WARNING: To reduce the risk of fire or electric shock, this fan is NOT suitable for use with wall-wired speed controls.



WARNING: To avoid possible personal injury, make sure that the electricity is turned off at the main power box before starting work. If you feel you do not have enough electrical wiring knowledge or experience, contact a licensed electrician.



WARNING: Electrical diagrams are for reference only. Electrical work at any time must be UL-listed and marked suitable for use with this fan.



WARNING: To reduce the risk of fire, electrical shock or personal injury, ensure that the fan mounting bracket is supported directly from the building structure or the outlet box marked "Acceptable for Fan Support of 35 lbs. (15.9 kg) or less". Use only the screws provided with the outlet box.

03 Warranty

The supplier warrants the fan motor to be free from defects in workmanship and material present at time of shipment from the factory for a lifetime after the date of purchase by the original purchaser. The supplier also warrants that all other fan parts, excluding any glass or acrylic blades, to be free from defects in workmanship and material at the time

of shipment from the factory for a period of two years after the date of purchase by the original purchaser. We agree to correct such defects without charge or at our option replace with a comparable or superior model if the product is returned.

To obtain warranty service, you must present a copy of the receipt as proof of purchase. All costs of removing and re-installing the product are your responsibility. Damage to any part such as by accident, misuse, improper installation, or by affixing any accessories, is not covered by this warranty.



Because of varying climatic conditions this warranty does not cover any changes in brass finish, including rusting, pitting, corroding, tarnishing, or peeling. Brass finishes of this type give their longest useful life when protected from varying weather conditions. A certain amount of "wobble" is normal and should not be considered a defect.

Servicing performed by unauthorized persons shall render this warranty invalid. There is no other express warranty. hereby disclaims any and all warranties, including but not limited to those of merchant ability and fitness for a particular purpose to the extent permitted by law. The duration of any implied warranty which cannot be disclaimed is limited to the time period as specified in the express warranty. Some states do not allow a limitation on how long an implied warranty lasts, so the above limitation may not apply to you.



The retailer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives specific legal rights, and you may also have other rights which vary from state to state. This warranty supersedes all prior warranties. Shipping costs for any return of product as part of a claim on the warranty must be paid by the customer.

04 Three ceiling installation methods

Concrete Ceiling Mounting Bracket

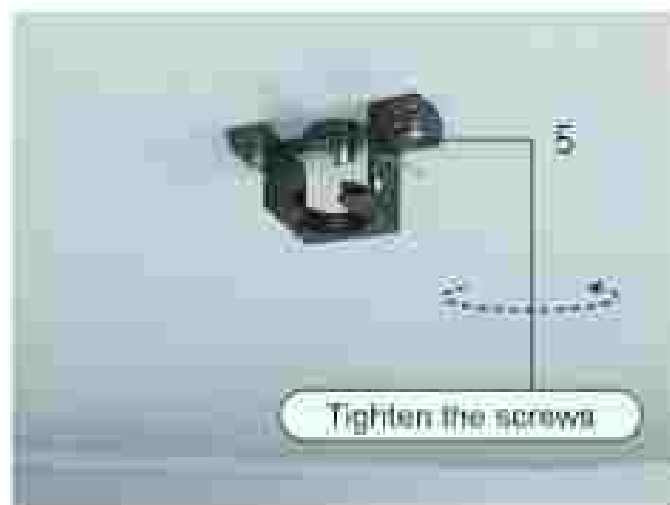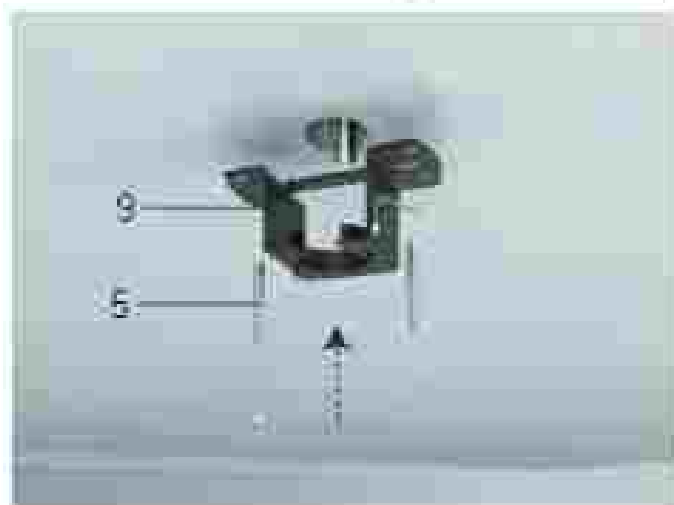


Hanger for Junction Box Mounting Bracket

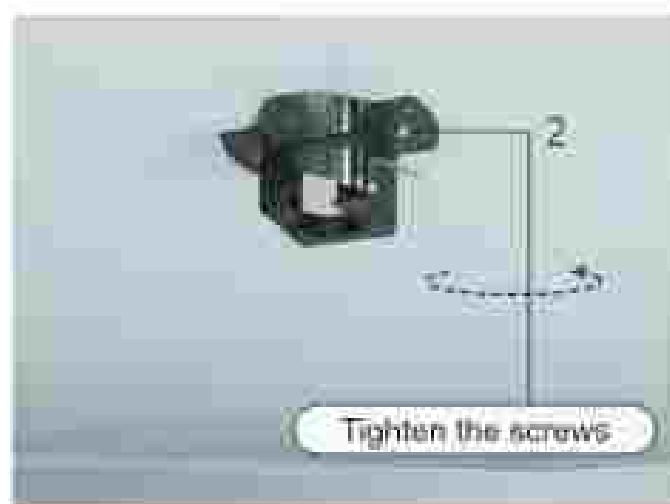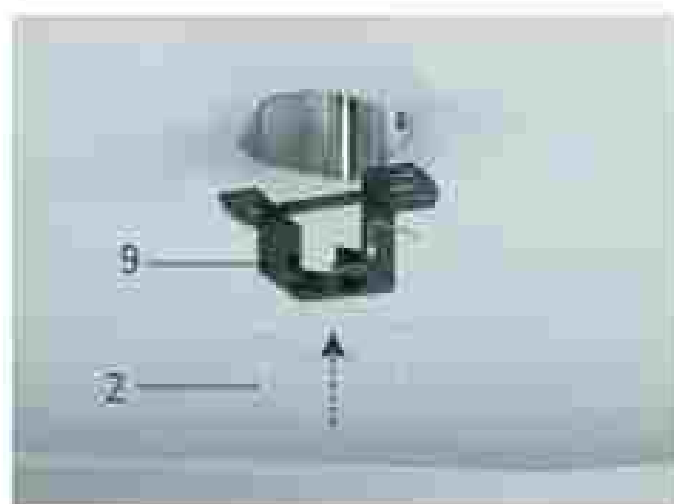

Wooden ceiling Mounting Bracket



05 Accessory drawing

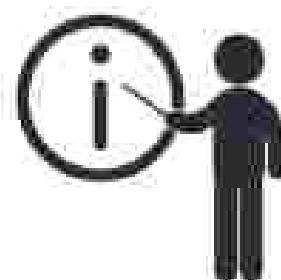

06 Installation procedure

Install the blades

1. Connect the blades and spokes



2. Pay attention to the front and back



3. Take out the screws




4. Install the blades. Retighten the screws




06 Installation procedure

Install the light plate

5. Loosen two screws, take out one

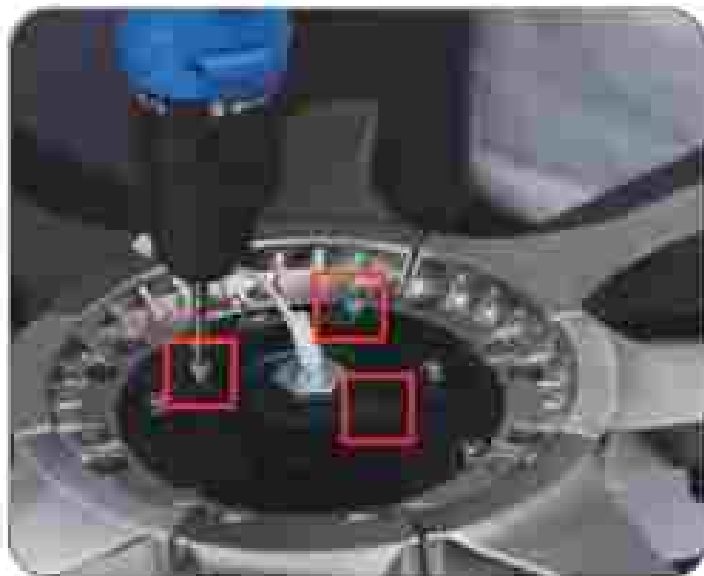

6. Install lamp plate. Retighten the three screws

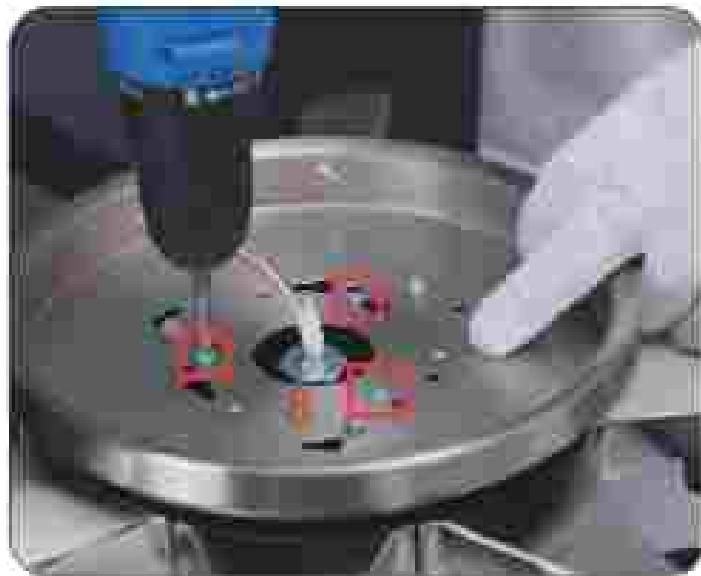

7. Loosen the original screws on the light plate



8. Connect the light source with the wires from the motor



06 Installation procedure

Install the downrod

9. Retighten the three screws



10. Disassemble the downrod(No.15)



11. Thread the motor wires into the rod



12. Fastened with screws and fixing clips



06 Installation procedure

Install the coverage

13. Tighten the screws



14. Put the decorative cover(No.1) through the downrod



15. Put the canopy cover(No.10) through the downrod



16. Put the canopy(No.3) through the downrod



06 Installation procedure

Install the rod ball

17. Put the rod ball through the downrod



18. Put the lock washer to the hole of the downrod and push the rod ball to the top of the downrod



19. Find the green ground wire to the hole of the rod ball and the down rods.
Tighten the screw



06 Installation procedure



OFF!!




WARNING: Remove the rubber safety stops on the bottom of fan before installing the blades or testing the motor.



WARNING: Turn off the electric power during installation and making wire connection.

1. Connect the wire which from ceiling fan into the receiver.
2. Connect the wire from receiver with the wire from house.

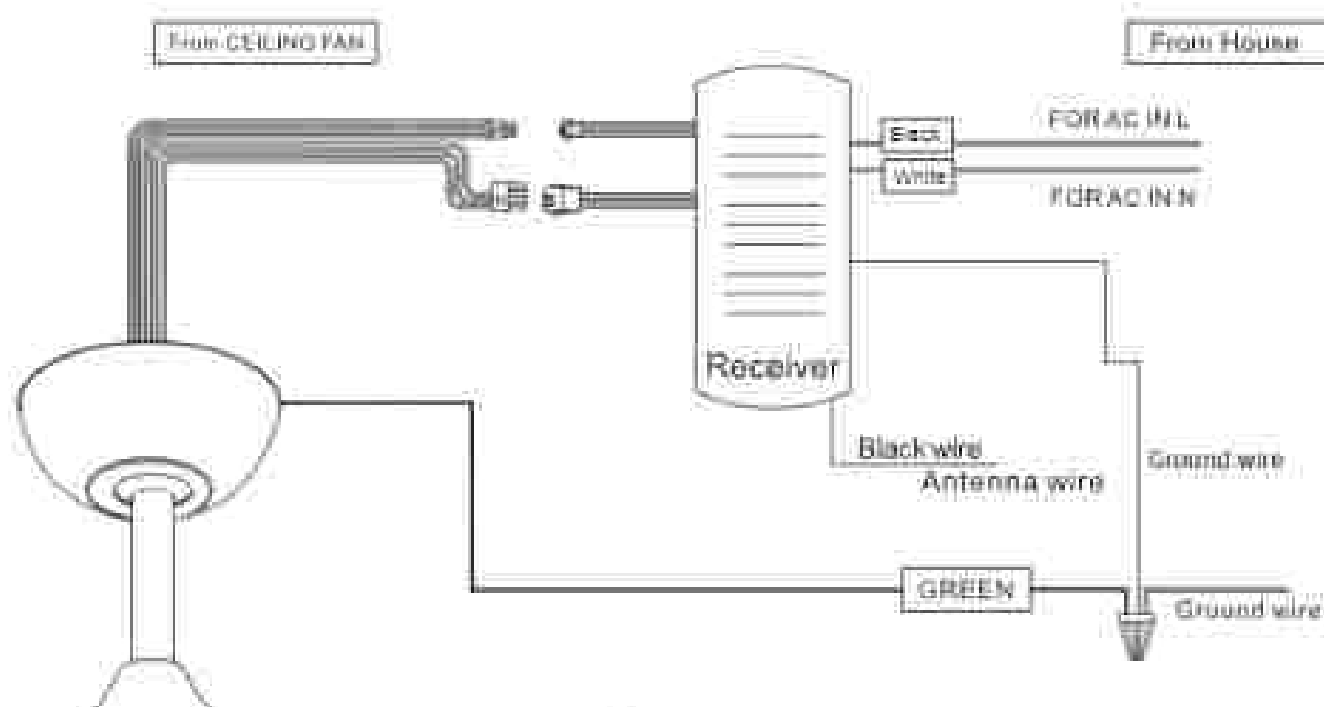

06 Installation procedure

Wiring and installation

20. Connect the wire from the ceiling fan to the receiver (No.1-Red, White and Black wires) (No.2-Red, White and Yellow wires)



21. Install the mounting bracket, tighten the screw



22. Install to ceiling mounting bracket



23. Install the receiver, connect the black and white wire, and put it into the slide-on mounting bracket



06 Installation procedure

Fixed coverage

24. Cover the canopy.



25. Tighten the screw.




26. Push the canopy cover to the canopy.



27. Installing the light cover.



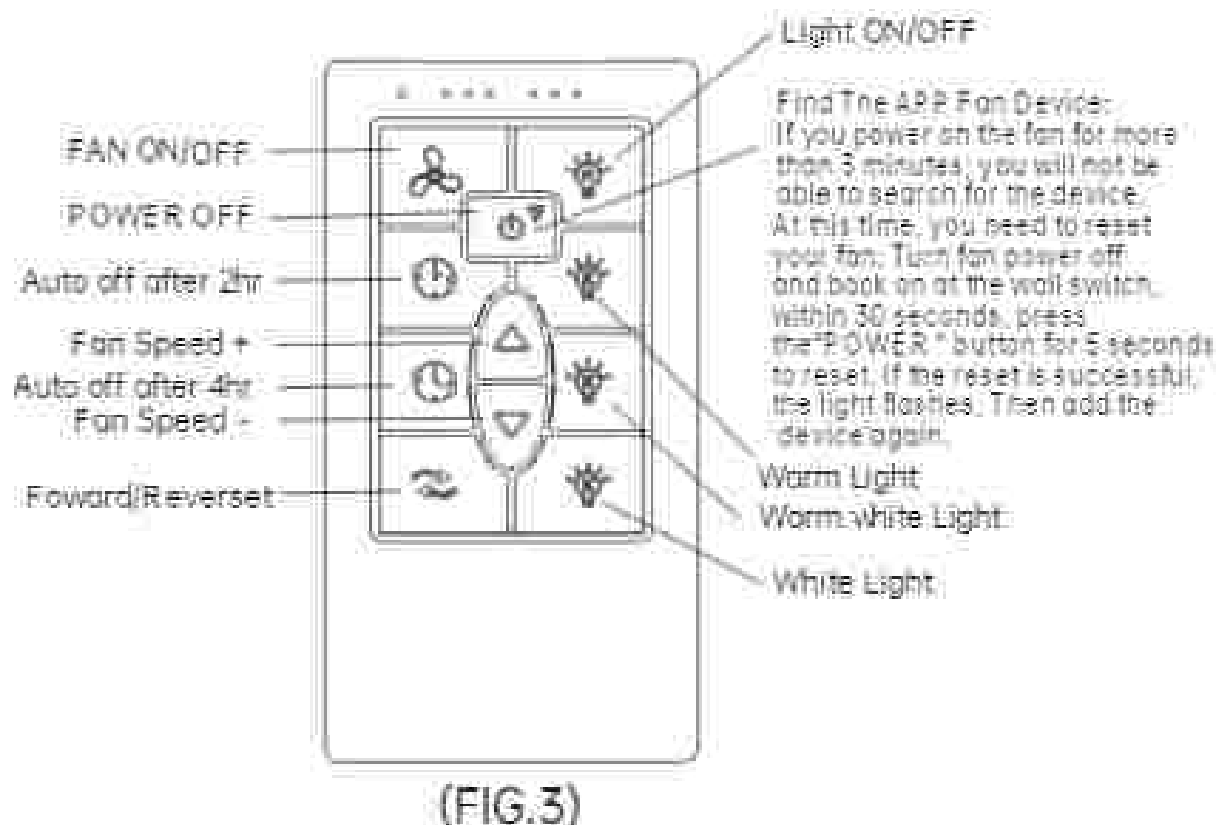

2. OPERATING TRANSMITTER:

A. Install AAA 2 PCS 1.5volt battery.

(To prevent damage to transmitter, remove the battery if not used for a long time).

B. Store the transmitter away from excessive heat or humidity.

C. Operating the buttons on the panel of the transmitter

D. Keep pressing the light button  in excess of 0.7 second and it becomes a dimmer.

(FIG.3)




After the reversible button is pressed, the fan slowly slows down to a stop. And then it started to reverse.

08 Match code



1. Turn on the main switch.

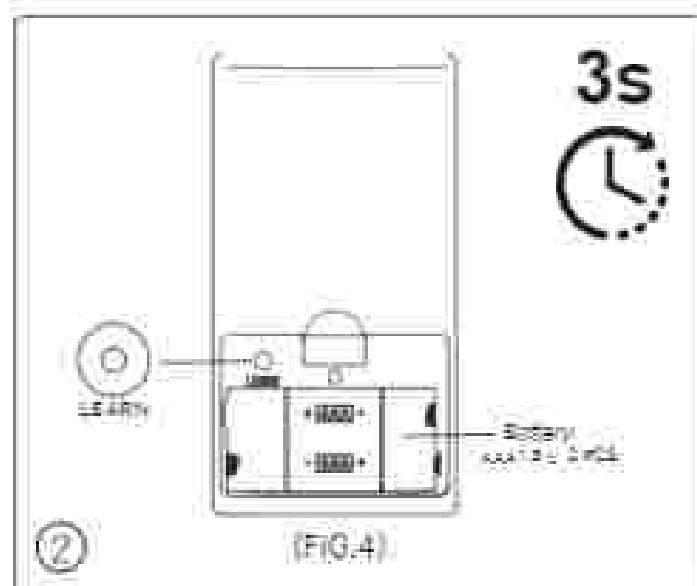


2. Setting the codes on the receiver:
The Learn Key must be pressed with in 5 seconds
after pressing the Power button.
If not, please press the Power button to restart.
Keep pressing the button LEARN key in excess of 3 second
it becomes a LEARN status.
The receiver can remember the last codes status.
The ceiling fan light flash two times.

(FIG.4)




3. The receiver Can remember the
last codes status
The ceiling fan light flash two times.

09 Fans Balance

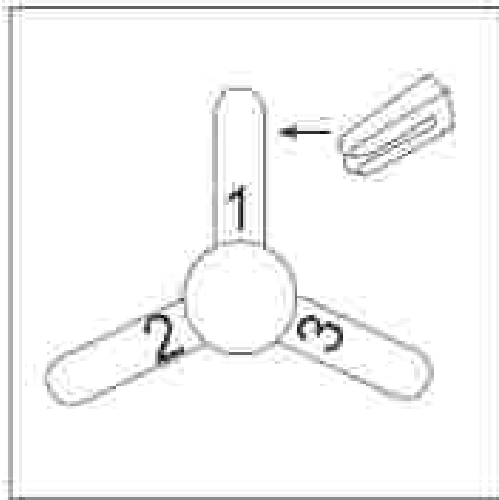

Slide the balancing clip on the trailing edge of any blade, halfway between the holder and tip. Run the fan to check the wobble. If the wobble persists, repeat with each blade, noting which one most reduced the wobble.

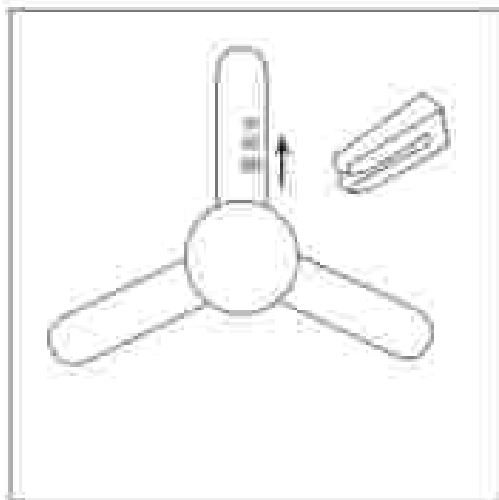

Slide the clip in small increments away from the center of that blade. Move the clip, operate the fan, then move it again until you eliminate as much wobble as possible.



Stick the adhesive-backed balancing weight on the top center of the blade directly in line with the balancing clip. Add more weight if needed to get a smooth-running fan.

10 Care and Cleaning



WARNING: Make sure the power is off before working on the fan.

- Because of the fan's natural movement, some connections may become loose. Check the support connections, brackets, and blade attachments twice a year. Make sure they are secure. It is not necessary to remove the fan from the ceiling.
- Clean your fan periodically to help maintain its new appearance over the years. Do not use water when cleaning, as this could damage the motor, or the wood, or possibly cause an electrical shock. Use only a soft brush or lint-free cloth to avoid scratching the finish. The plastic is sealed with a lacquer to minimize discoloration or tarnishing.
- You can apply a light coat of furniture polish to the wood for additional protection and enhanced beauty. Cover small scratches with a light application (if shoe polish).
- You do not need to oil your fan. The motor has permanently-lubricated sealed ball bearings.

11 Trouble shooting

Problem	Solution
The fan will not start.	• ☐ Check the main and branch circuit fuses or breakers. • ☐ Check the line wire connections to the fan and make sure they conform to all the code requirements.
The fan is noisy.	• ☐ Ensure all motor mounting screws are snug. • ☐ Ensure the screws that attach the fan blade bracket to the motor housing are tight. • ☐ Ensure the wire nut connections are not rattling against each other or the upper side of the outlet housing. • ☐ After a 24-hour "breaking in" period, most noise associated with a new fan disappears during this time. • ☐ If you are using the Ceiling Fan light kit, ensure the screws securing the glassware are tight. Check that the light bulbs are also secure. • ☐ Ensure the ceiling is a solid surface from the ceiling. It should not touch the ceiling. • ☐ Ensure your cable box or antenna and other ceiling plate accessories between the mounting plate and cable box.
The fan wobbles.	• ☐ Please check and follow the instructions "Chapter No. 12 Fan balance" on page 12.

Connecting Smart Systems User Manual

1. Connecting with Mobile Phone APP

Search for "Smart Life" in the App store or scan the QR code to download the "Smart Life" app.



2. Register and log in APP

After downloading and opening the APP, register and log in the APP according to the options.



3. Add smart devices

Add smart devices, and ensure WIFI 2.4GHz and Bluetooth are stably connected in subsequent scanning and connection. 5GHz and 5.8GHz are not supported.



4. Initial automatic scan for connected devices

If you power on the fan for more than 3 minutes, you will not be able to search for this device. At this time, you need to reset your fan: turn fan power OFF and back on at the wall switch within 30 seconds, press the "POWER" button for 5 seconds to reset. If the reset is successful, the light flashes, then add the Device again.



5. Select the scanned fan

Select the fan to be connected.




6. APP connection to WIFI

Enter the connected WIFI name and password.




7. The fan is paired with the APP

- 1) After pairing is complete, you can customize the fan name.
- 2) If pairing fails, first check whether the connected WIFI name and password are correct. If the connection fails for many times, you can try to manually find the fan and select 8 to start.

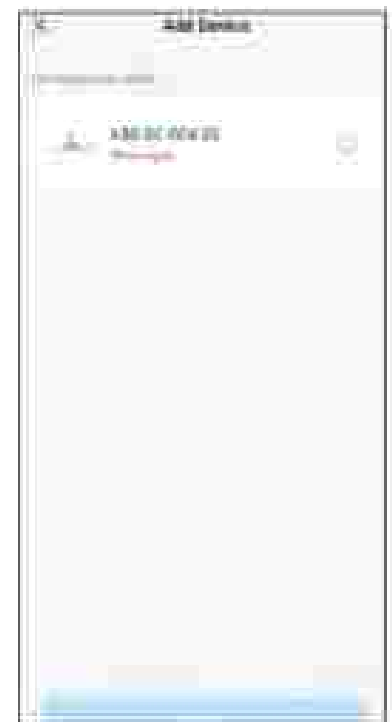


5. Open the fan connection manually

Select "Fan" in "Lighting" (Bluetooth+WiFi).

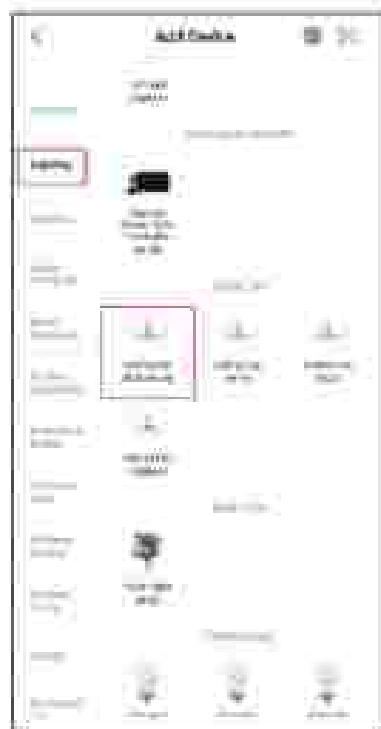

5-1. Follow the prompt

- ① Confirm the indicator is blinking or breathing.
- ② Select the status of the indicator light.

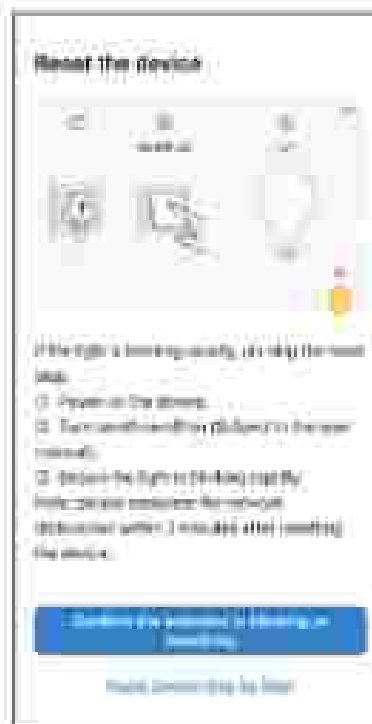


5-1. Follow the prompt

- ① Select 2.4 GHz Wi-Fi Network and enter password.
- ② Connect your mobile phone to the device's hotspot.
- ③ Device Adding Timeout, Check device points and retry.
- ④ Follow the picture instructions to set up the device.




8-2 Manually finding a fan is complete

Manually find the fan successfully, start the connection (refer to 7).

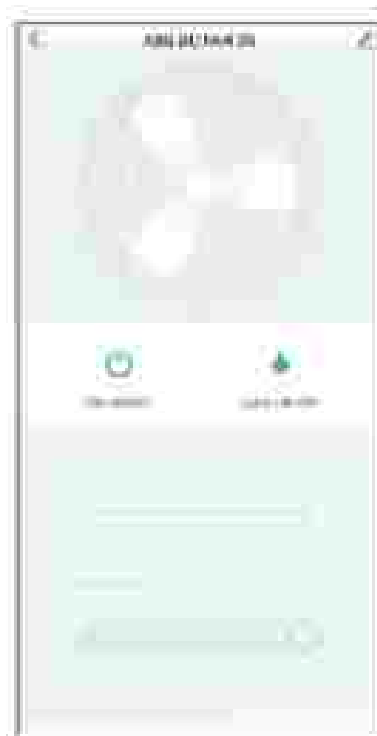

9 Connect successfully and enter the control interface

According to the interface, fans adjustment.

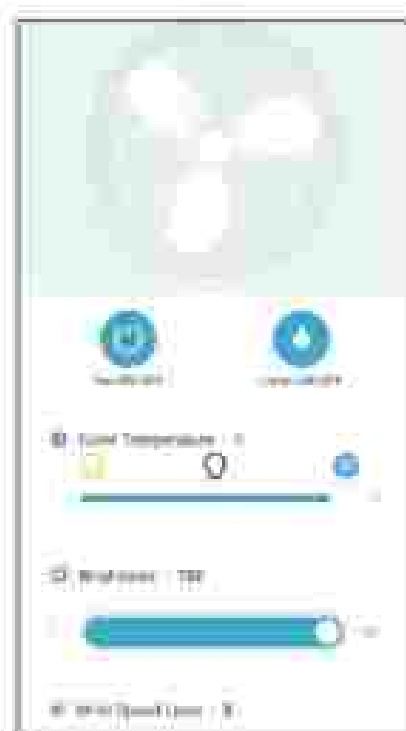

Link skill to the Amazon Echo or Google Assistant



In the App, change the name of the device to an easily identifiable name such as bedroom light, bedroom fan.

Make sure your Amazon Echo device is powered on and connecting to your home Wi-Fi network.

Common commands

- ▲ Fan <DEVICE NAME>
- Alexa, turn on/off <DEVICE NAME>
- Alexa, what is the <DEVICE NAME> speed?
- Alexa, set the <DEVICE NAME> speed to 1/2/3/4/5/6.
- Alexa, set the bedroom <DEVICE NAME> speed to max.
- Alexa, turn up/decrease the bedroom <DEVICE NAME> speed
- Alexa, set the <DEVICE NAME> to forward/reverse.
- Alexa, is <DEVICE NAME> on on?
- Alexa, set the mode on the <DEVICE NAME> to fresh/nature.
- Alexa, set the count down on the <DEVICE NAME> to cancel/1 hour/2 hour/4 hour/8 hour.
- ▲ Light <device name>
- Alexa, turn on/off <device name>
- Alexa, set the <device name> to fifty percent.
- Alexa, make the <device name> warm/white/white/cool/white
- Alexa, brighten/dim <device name>

