

QUICK START GUIDE

4870 Series



Thank you for purchasing your new Eureka vacuum!



Before returning, call
Eureka Customer Service

HELPLINE


1-800-282-2886

8 a.m. to 7:30 p.m. (CST), Monday - Friday
10 a.m. to 6:30 p.m. (CST), Saturday - Sunday


www.eureka.com

STEP 1

What's in the carton

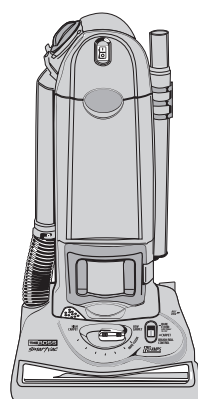


Vacuum Body

 

Handle & 3 Screws



 
Important Safeguards




Dust Bag Style RR



 
Crevice Tool



Extension Wand

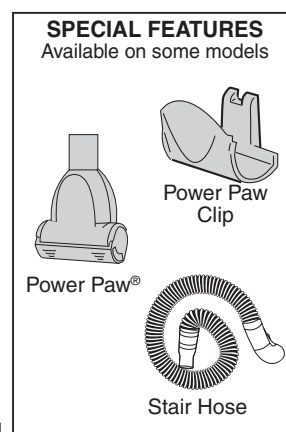

 SPECIAL FEATURES
Available on some models



Power Paw®



Power Paw Clip




Stair Hose

STEP 2


Easy assembly




READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.
Moving parts. Make sure power switch is in OFF (O) position before plugging in power cord. Assemble the vacuum cleaner before using.

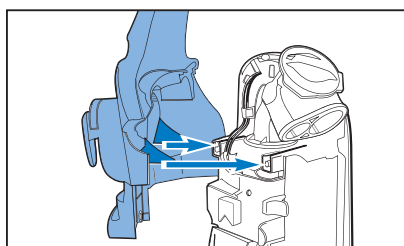

Slide handle onto vacuum body.

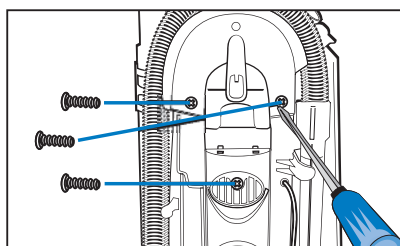


Tighten 3 screws.

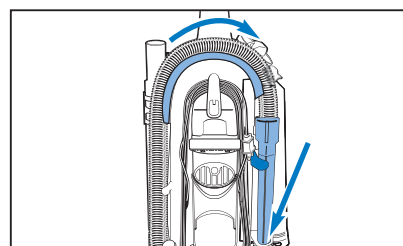


Loop hose around hose retainer.
Clip hose nozzle into place.




Use a phillips screw driver.

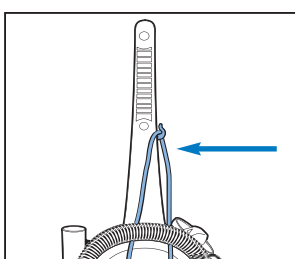


Push cord into cord retainer.

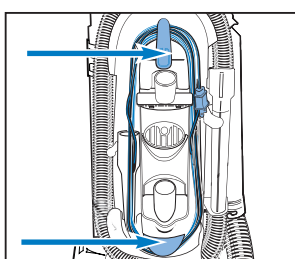


Wrap cord on upper and lower hooks.

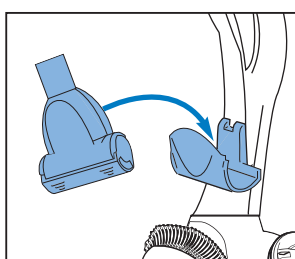


Some models: Slide clip onto back of handle and store Power Paw®.

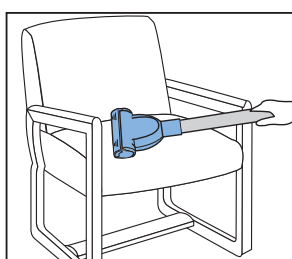


Some models: Attach tool to end of wand or hose for furniture and stairs.

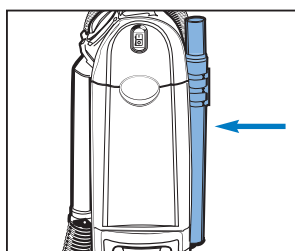


Store nested extension wands on side.

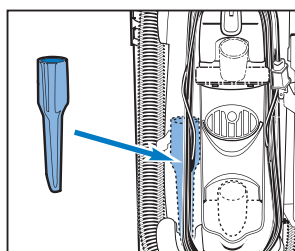

Store crevice tool in slot on back of vacuum.

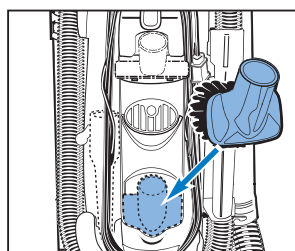


Store dusting brush in cup on back of vacuum.

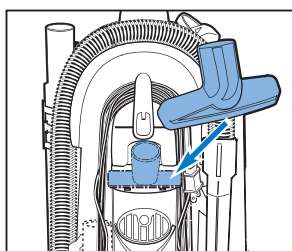


Store upholstery brush below top cord wrap.

STEP 3


Get ready to vacuum

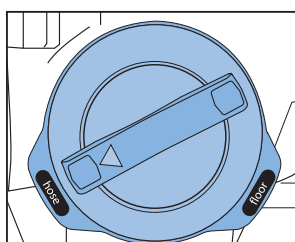


Turn selector knob to "hose" for using attachments or "floor" for vacuuming floors.

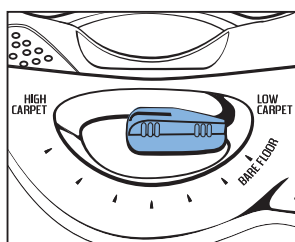


Adjust height for carpet or bare floor. If hard to push, raise carpet setting.

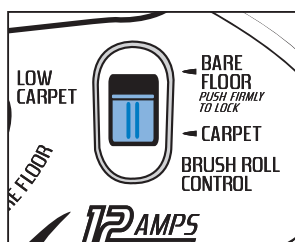


Push brush roll control to bare floor to stop brush roll. Push firmly to lock.

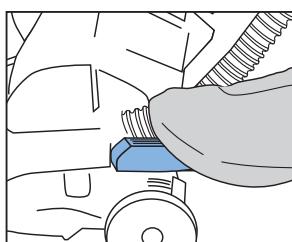


Plug into outlet. Step on handle release to lower handle into position.

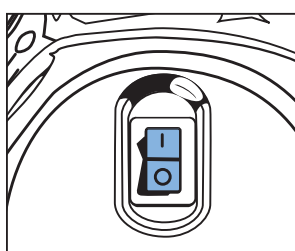


Push power switch (I) on. Push power switch (O) off.

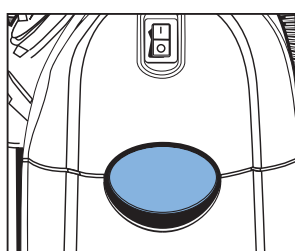

Lift latch to remove front cover. See dust bag for replacement instructions.

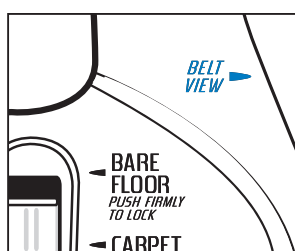

Check belt view window for a broken belt. Replace belt for brush roll to turn.

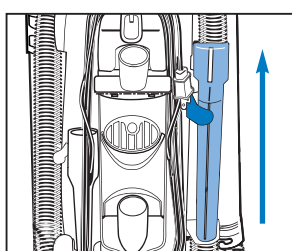

Loosen hose from hose retainer and place attachment onto end of wand or hose.

PROBLEM SOLVING
Refer to Owner's Guide.

MAINTENANCE SCHEDULE
Refer to Owner's Guide.