
ASSEMBLY AND INSTALLATION INSTRUCTIONS

C0137

■ TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

2. READ AND SAVE THESE INSTRUCTIONS.

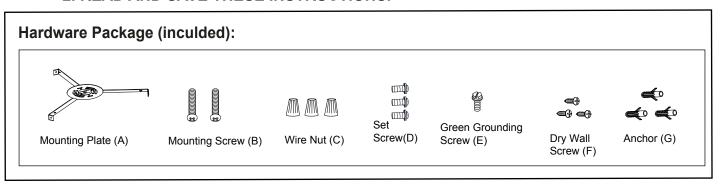

Warning: LED electronics can be damaged by electro static discharge (ESD)shock. Before installation, discharge yourself by touching a grounded bare metal surface to remove this hazard. To avoid damage, do not touch the LED module.

Installation Steps

Turn off the power at fuse or circuit box.

- 1. Unscrew the set screws to remove mounting plate from
- 2. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
 - ---The black (hot) wire from the fixture to the black (hot) wire from the power source.
 - ---The white (neutral) wire from the fixture to the white (neutral) wire from the power source.
 - --- Attach the fixture grounding wire to the mounting plate with the green grounding screw. Then connect it to the house grounding wire with the wire nuts.

Carefully put the wires back into the outlet box.

- 3. Attach the mounting plate to the wall.
 - a) If the wall material is wood: Attach the mounting plate to the outlet box by using two mounting screws, then secure the dry wall screws through the set holes to the wall.
 - b) If the wall material is cement: Place the mounting plate to the outlet box and mark the target on the wall from the set hole for drilling two holes. Remove the mounting plate. Drill the holes and thread the anchors into the holes, then attach the mounting plate to the outlet box by using two mounting screws. Secure the dry wall
- 4. Attach ceiling pan to mounting plate and tighten it with set screws.

screws through the set holes into the anchors.

Outlet Box

Wire Nut (C) Green Grounding Screw (E)

Mounting Plate (A)

House Grounding Wire

Dry Wall Screw (F)

Ceiling Pan

Set Screw (D)

Mounting Screw (B)

Fixture Grounding Wire

-Anchor (G)

Turn off the power at fuse or circuit box.

This fixture is dimmable with a forward phase electronic dimmer. Dimmers tested to be compatible with this fixture are the Lutron: TGCL-153PH-WH, MACL-153M-RHW, MACL-153MH, DVWCL-153PH, MSCL-OP153M. If you are unfamiliar with electrical installations, it is recommended you have a qualified electrician for your installations.

The following parts are available for re-order if damaged or missing.

