


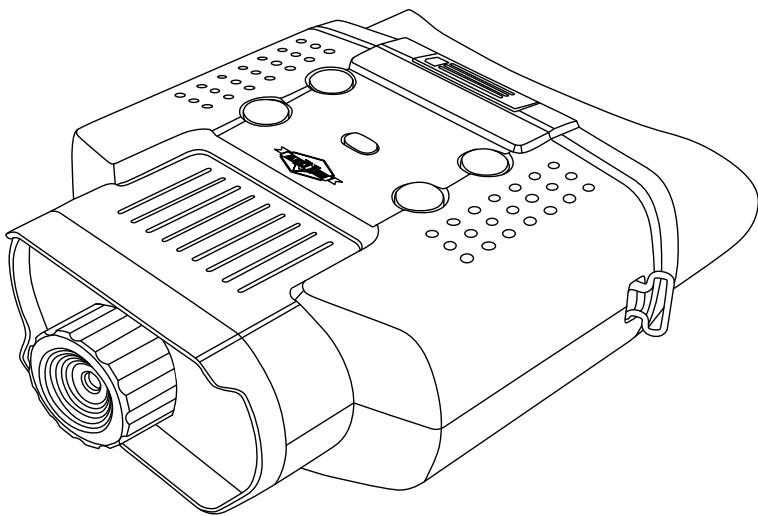

NIGHT VISION BINOCULARS

USER GUIDE

HKNVB200



Thank you for purchasing the Hike Crew™ Night Vision Binoculars. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.


Please read all directions before using the product and retain this guide for reference. This product is intended for domestic use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

FEATURES

- Zoom up to 2X
- Infrared with seven (7) levels of brightness
- Take photos or videos and play them back
- Visual distance of 400 m (437.4 yards) for day and 100 m (109.3 yards) for night
- Battery life of up to ten (10) hours for day use and six (6) hours for night use
- Great for hunting, camping, sporting events, and more


PACKAGE CONTENTS

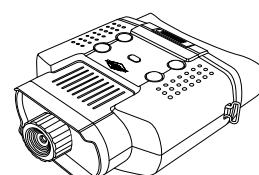

Binoculars



User guide

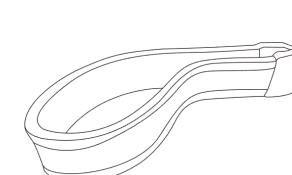


Neck strap

SAFETY PRECAUTIONS

1. **⚠ WARNING: CHOKING HAZARD – Small parts.** This product contains small parts and is not suitable for children under 3 years old.
2. Remove all packaging before using this device. Please keep all packaging materials out of reach of children and pets.
3. Properly dispose of all packing materials immediately after unpacking product, as the bags used for packaging could present a suffocation or choking hazard.
4. Never look directly at the sun through binoculars. Doing so may seriously damage your eyes.
5. Keep away from excessive heat and moisture and avoid sudden temperature changes to avoid damage.
6. Do not adjust movable parts beyond their limits. Attempting to do so could cause damage.
7. Protect from shock, high impacts, drops, or other hard blows which could damage the precise optics inside.

YOUR BINOCULARS

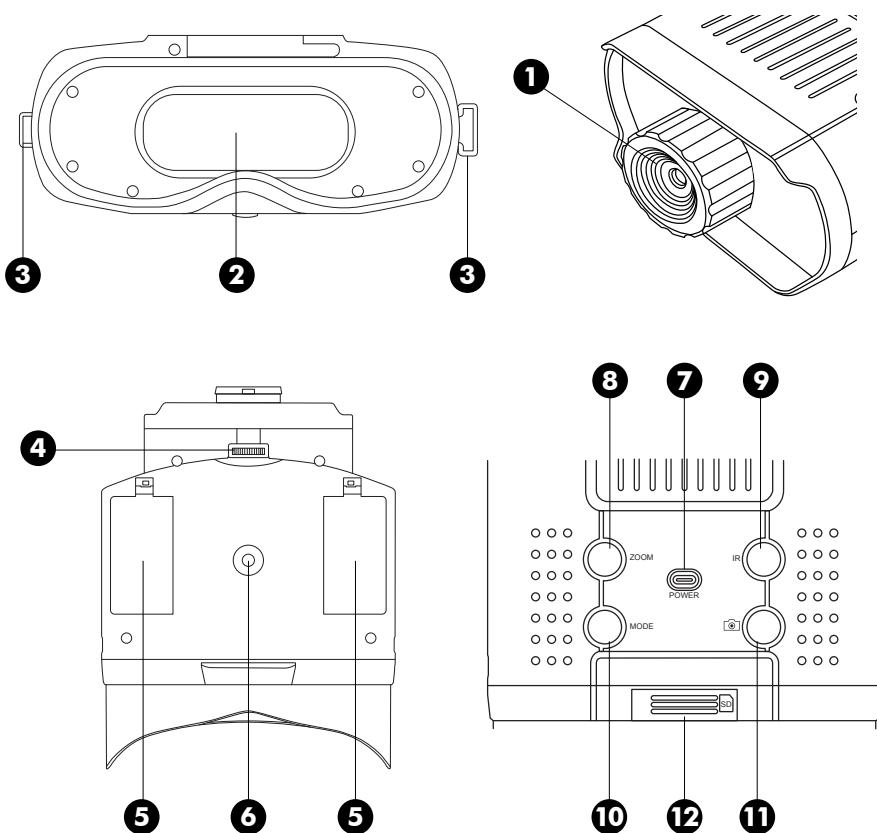

1. Main lens
2. LCD viewing screen
3. Strap hook
4. Focus wheel
5. Battery compartment
6. Tripod mount
7. Power button
8. Zoom button
9. IR button
10. Mode button (choose between Photo, Video, Playback, and Menu)
11. Photo/Video button (Takes photo or records video. When in Playback Mode, press to select items.)
12. SD card slot


HOW TO USE YOUR BINOCULARS

Install batteries:

1. Opening both battery compartments.
2. Placing four (4) AA batteries in each compartment, aligning the terminals properly with the + and – symbols.
3. Replacing the lids to the battery compartments.

Getting started:

1. Press the power button for three (3) seconds to turn on the binoculars.
2. Look at the LCD viewing screen.
3. Adjust the sharpness by turning the focus wheel in either direction until it becomes clear. Tap the Power button to adjust the brightness of the LCD viewing screen.
4. Zoom up to 2X by pressing the zoom button until you reach your desired level. If you keep pressing the zoom button, you will return to the default of 1X.
5. When using the binoculars at night, the lens should automatically adjust to the brightness level. Tap the IR button to adjust the IR brightness from levels 1-7.

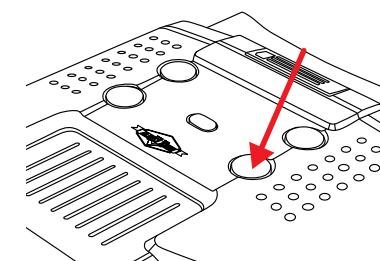

Using an SD card:

Note: if you are using a card that contains previous files, you must save those files to your computer first before formatting the card for use in your binoculars. Failure to complete this step may result in the loss of files that were previously on your card.

1. First, make sure the power is off.
2. Insert the card into the slot with the label facing up and the notched corner facing the binoculars. Push until it locks in.

- To remove the card, push the card in until it releases. Once it is partially ejected, continue pulling it the rest of the way out.
- If the "Memory Full" message appears on your LCD screen, then your card is full. Please save the files to your computer and then delete them from the card so that you can use it again.

Taking photos:

- When you power on your binoculars, you will automatically start in Photo Mode. You should see the camera icon  in the upper left corner of your LCD screen. If you do not see the camera icon , press the Mode button until it appears.
- Following the instructions in the "Getting started" section, adjust the sharpness by turning the focus wheel, and for nighttime use, adjust the brightness by pushing the IR button.
- Press the Photo/Video button to capture the image.

Taking video:

- With the power on, press the Mode button until you see the video icon  in the upper left corner of your screen.
- Following the instructions in the "Getting started" section, adjust the sharpness by turning the focus wheel, and for nighttime use, adjust the brightness by pushing the IR button.
- Press the Photo/Video button to capture the image.

Using Playback mode:

- With the power on, press the Mode button until you see the playback icon  in the upper left corner of your screen.
- The last file that has been saved will be displayed on the LCD screen. If it is a photo, the file suffix JPG will appear in the lower left corner of the screen. For a video, the file suffix AVI will appear in the lower left corner of the screen.
- Use the Zoom and IR buttons to navigate through the saved files on your SD card.
- Press the Photo/Video button to enter the menu of choices to Play, Delete, Delete All, or Exit. Use the IR button to navigate the choices and press the Photo/Video button to make your selection.

GUIDE TO MENUS AND SETTINGS

- With the power on, press the Mode button until you see the menu.
- Use the IR and Zoom buttons to navigate through the menu.
- Use the Photo/Video button to select your choice and enter its submenu.
- Once you have made your desired changes in the submenu, press the Photo/Video button to save your changes.
- Press the Mode button to exit back to the main menu. Then press the Mode button again to re-enter Photo Mode.

Menu Options and Submenus

Format SD (Deletes all files on SD card)

- YES: deletes files
- NO: cancels deletion of files

Power Save (Set up auto-off)

- OFF: No auto-off (default)
- 5 min: Auto-off after 5 minutes of inactivity
- 10 min: Auto-off after 10 minutes of inactivity
- 15 min: Auto-off after 15 minutes of inactivity
- 30 min: Auto-off after 30 minutes of inactivity

Date (Set the date)

- Press the Photo/Video button to enter the menu. This will allow you to adjust the date.
- Use the IR and Zoom buttons to navigate.
- Once you have set the date, press the Photo/Video button to save.

Time (Set the time)

- Press the Photo/Video button to enter the menu. This will allow you to adjust the time.
- Use the IR and Zoom buttons to navigate.
- Once you have set the time, press the Photo/Video button to save.

Flicker (Controls flicker rate)

- 50 Hz: Default setting for EU
- 60 Hz: Default setting for US and Japan

LCD Backlight (Select the brightness of the LCD screen)

- Slide bar allows you to select levels 0-15.
- Default level is 10.

Date/Time Tag (Shows date and time on photos)

- OFF (default)
- ON

Version (Displays version of the firmware. For reference only.)

4

5

TROUBLESHOOTING

Binoculars won't power on.

Check to make sure you have installed fresh AA alkaline batteries in the proper configuration indicated by the + and — symbols.

Poor image quality.

- If you normally wear glasses for vision correction, please leave them on while using binoculars.
- For daytime use, make sure the daytime use lens is in position, covering the main lens.
- For night use, make sure the daytime use lens has been removed to expose the main lens.
- Use the focus wheel by turning it slowly back and forth to adjust the clarity.

"Please insert SD card" error message when an SD card has been inserted.

- The SD card must be inserted while the power is off. Try turning off the power, removing and re-inserting the card, and turning the power back on.
- If the issue persists, try using another type of SD card. Some cards may not be compatible with your binoculars.

SPECIFICATIONS

Viewfinder: EVF mode

Aspect ratio: 4:3

Aperture: F1.4 with adjustable aperture day and night dual mode

Operation: preview/ photo playback

Visual distance: 400 m (437.4 yards) for day and 100 m (110 yards) for night

Object lens focus: manually adjust

Visual angle: 10°

Luminance: IR LED / total 2 W

Power supply: alkaline AA battery x 8, 6 hours operation time

Power consumption: 2.5 W with IR LED fully on

Size: 7.28" x 5.7" x 2.16" (approx.) / 18.5 cm x 14.5 cm x 5.5 cm (approx.)

Weight: 1.33 lbs / 603 g (approx.)

Color: black

GET IN TOUCH!

info@supportcbp.com | 1-833-665-2122

WARRANTY INFORMATION

LIMITED WARRANTY ON HIKE CREW™ NIGHT VISION BINOCULARS

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WE WARRANT THAT DURING THE WARRANTY PERIOD, THE PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP.

LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS LIMITED WARRANTY STATEMENT AND TO THE EXTENT NOT PROHIBITED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES, SO THIS DISCLAIMER MAY NOT APPLY TO YOU. TO THE EXTENT SUCH WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR JURISDICTION, WE LIMIT THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

OUR RESPONSIBILITY FOR DEFECTIVE GOODS IS LIMITED TO REPAIR, REPLACEMENT OR REFUND AS DESCRIBED BELOW IN THIS WARRANTY STATEMENT.

WHO MAY USE THIS WARRANTY? C&A Marketing, Inc. located at 114 Tived Lane East, Edison, NJ ("we") extend this limited warranty only to the consumer who originally purchased the product ("you"). It does not extend to any subsequent owner or other transferee of the product.

WHAT DOES THIS WARRANTY COVER? This limited warranty covers defects in materials and workmanship of the Hike Crew™ Night Vision Binoculars (the "product") for the Warranty Period as defined below.

WHAT DOES THIS WARRANTY NOT COVER? This limited warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

WHAT IS THE PERIOD OF COVERAGE? This limited warranty starts on the date of your purchase and lasts for one year (the "Warranty Period"). The Warranty Period is not extended if we repair or replace the product. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

WHAT ARE YOUR REMEDIES UNDER THIS WARRANTY? With respect to any defective product during the Warranty Period, we will, at our sole discretion, either: (a) repair or replace such product (or the defective part) free of charge or (b) refund the purchase price of such product if an exchange unit cannot be provided.

HOW DO YOU OBTAIN WARRANTY SERVICE? To obtain warranty service, you must contact us at 1-833-665-2122 or by email at info@supportcbp.com during the Warranty Period to obtain a Defective Merchandise Authorization ("DMA") number. No warranty service will be provided without a DMA number and return shipping costs to our facilities shall be assumed by you, the purchaser. Shipping costs of the replacement unit to you shall be assumed by us.

HIKE CREW is a trademark of C&A IP Holdings, LLC in the US, Canada, China and the EU. All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837. Made in China.

© 2019. C&A IP Holdings, LLC. All Rights Reserved.

6

7