



Instruction Manual

Please save this manual for future reference.

Thank you for purchasing this Winsome House product. This product has been manufactured with the highest standards of safety and quality.

Product Name:	Bar Marquee
SKU #:	WH148



Instructions:

- To use, unclip the black panel on the back of the “B”. No tools required.
- Insert 2 AA batteries (not included). Make sure they are inserted according to the image (positive/negative).
- Re-attach black panel.
- “On/Off” switch is on the back of the “B”. Move switch to “On” to turn on, and “Off” to turn off. Light will not automatically turn off without being switched to the “Off” position.
- To extend battery life, turn to the off position when not in use.
- Battery: 2 AA batteries (not included)

This marquee can be hung on a wall, or can be self-standing on a shelf.