


FRONT

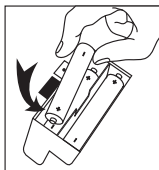

INSTRUCTIONS: Requires 3 AA batteries (included). 1. Carefully remove product from package. 2. Battery compartment is located underneath item. See illustration to insert batteries. 3. Press button to activate. 4. Replace batteries if movement slows or sound becomes distorted. 5. Do not interfere with moving parts as this may damage your item. **BATTERY USAGE:** See illustration. 1. Keep these instructions for future reference because they contain important information. 2. May explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled. 3. Products that contain batteries should not be disposed of in fire. The batteries inside may explode or leak. 4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 5. Do not mix old and new batteries. Replace all batteries of a set at the same time. 6. Use only batteries of the same or equivalent type as recommended by the manufacturer. 7. Be sure to insert batteries with correct polarities and always follow manufacturers' instructions. 8. Remove exhausted batteries from product promptly. 9. Do not short-circuit supply terminals. 10. Remove batteries before storage or extended periods of non-usage. 11. Clean the contacts on the batteries and the device prior to battery installation. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are not recommended for use in this product. If


rechargeable batteries are being used, however, please follow these guidelines. 1. Rechargeable batteries should be removed from the product before being charged. 2. Rechargeable batteries should only be charged under adult supervision. **SAFETY WARNING:** Remove all plastic fasteners and tags. These are part of the packaging and should be discarded. **ATTENTION:** Includes 3 AA batteries for in-store demonstration only. Manufacturer makes no guarantee as to the demonstration battery life. The consumer is responsible for replacing batteries with fresh cells to ensure proper operation. **ADULT SUPERVISION IS RECOMMENDED WHEN REPLACING BATTERIES.** For indoor use only. This item is not a toy and should be used for decorative purposes only.

WARNING: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help..

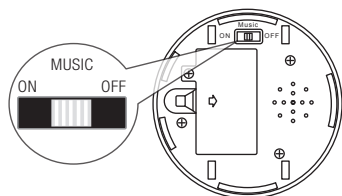

IN "On" MODE: When button is pressed, the Mini Snow Globe blows snow and plays holiday music.

IN "Off" MODE: When button is pressed, the Mini Snow Globe only blows snow

MADE IN CHINA / PRINTED IN CHINA