





# Table

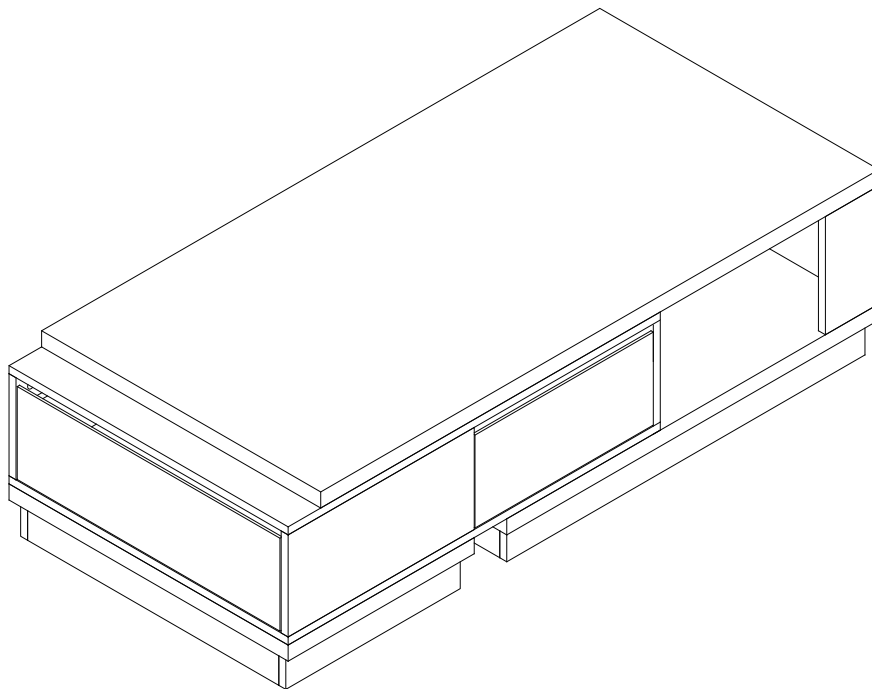

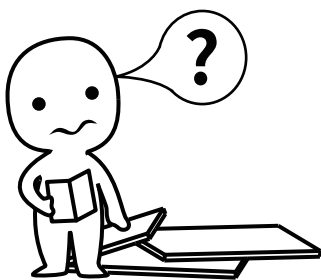


### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

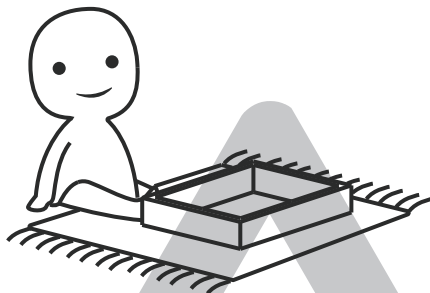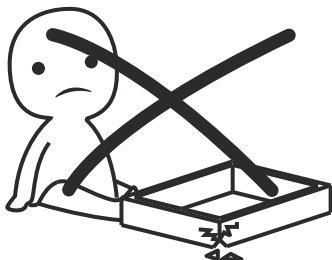



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

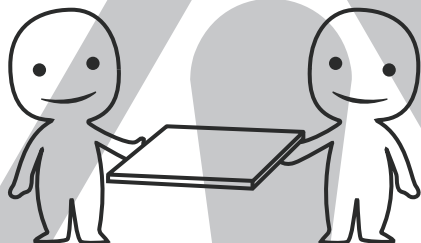

### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

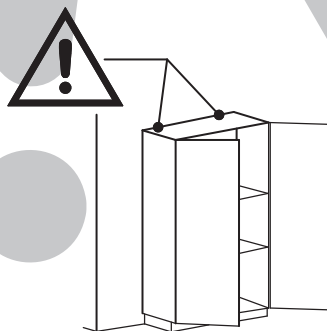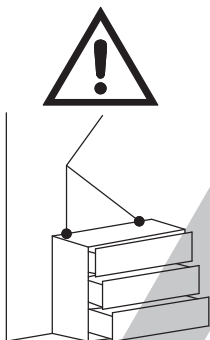

### **ANTI-TOPPLE WARNING !**


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

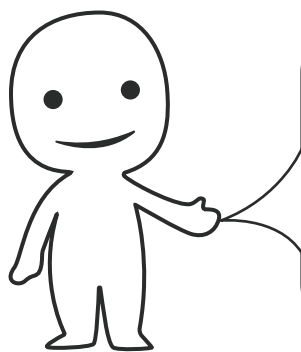


Please prepare the following tools

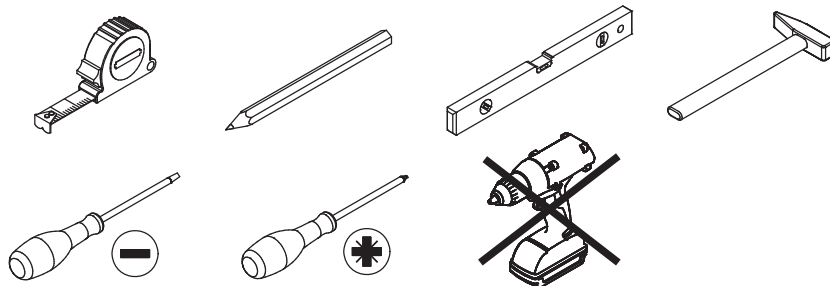


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 1

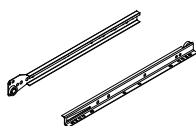

Drawer Glide(Left)

B x 1

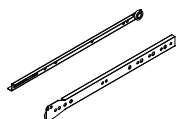

Drawer Glide(Right)

C x 26




Ø 3 x 12 mm

D x 76




Ø 8 x 30 mm

E x 12

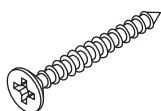

Ø 4 x 40 mm

F x 66

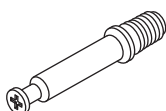


Ø 6 x 35 mm

G x 66




Ø 15 x 9 mm

H x 8

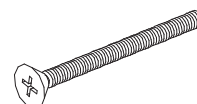


Ø 4 x 60 mm

J x 2

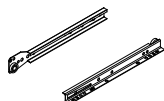

Drawer Glide(Left)

K x 2

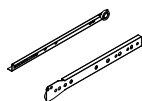

Drawer Glide(Right)

L x 12




Ø 4 x 35 mm




1


A x 1	B x 1	C x 6 Ø 3 x 12 mm	F x 4 Ø 6 x 35 mm	
-------	-------	----------------------	----------------------	--

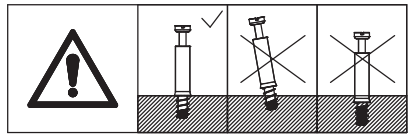

Fix slide rail(A) and (B) to plate 1 and 2 respectively using screw(C) as shown.

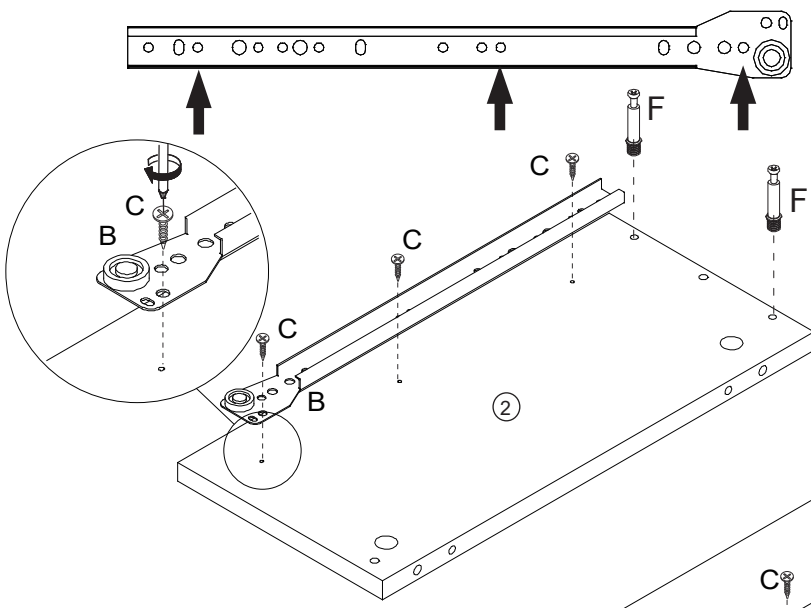


Insert quickfit screw(F) into corresponding holes in plate 1 and 2 with a screwdriver as shown.

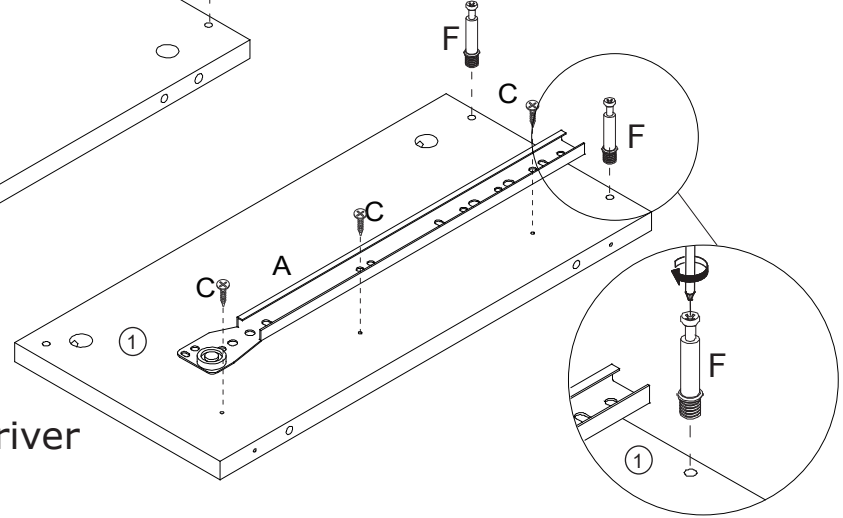





2

J x 2	K x 2	C x 8 Ø 3 x 12 mm	
-------	-------	----------------------	--

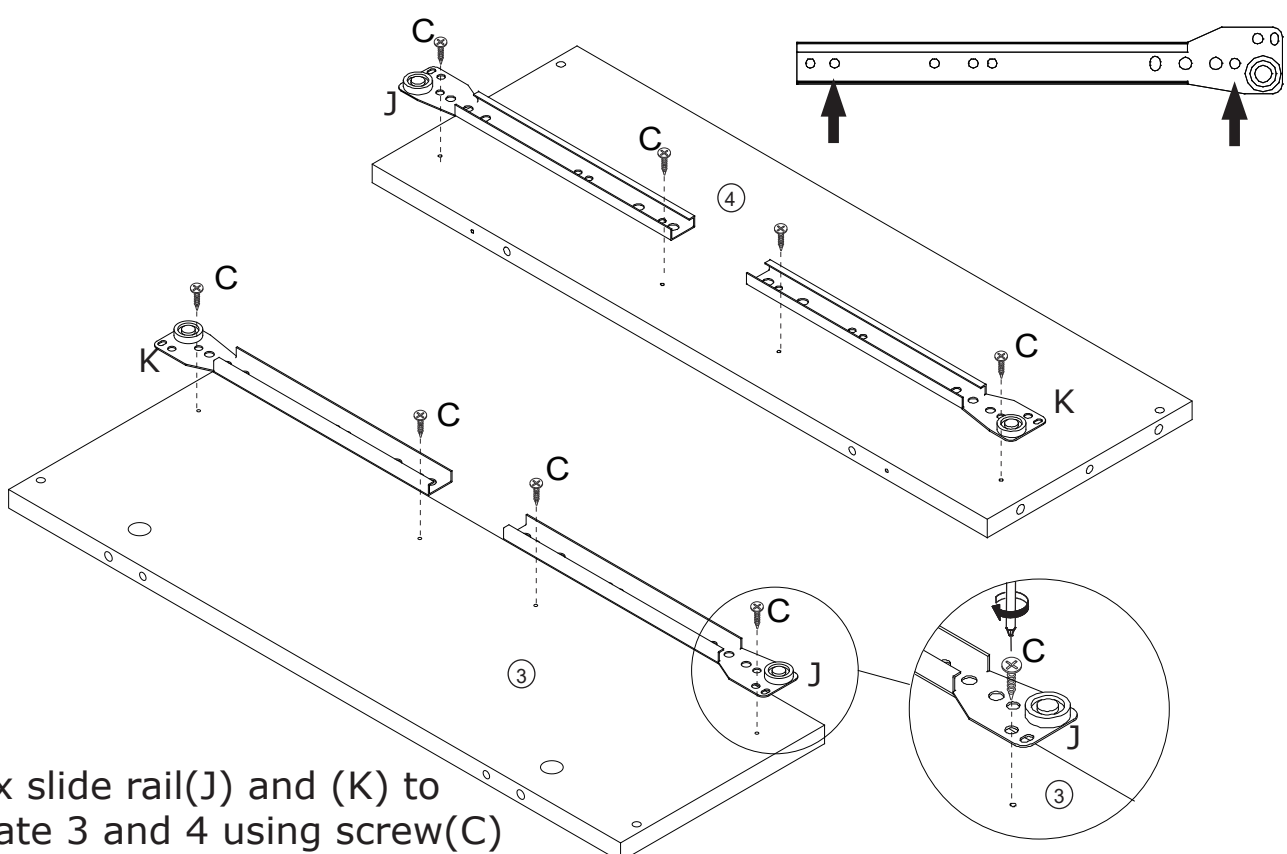


Fix slide rail(J) and (K) to plate 3 and 4 using screw(C) as shown.

# 3

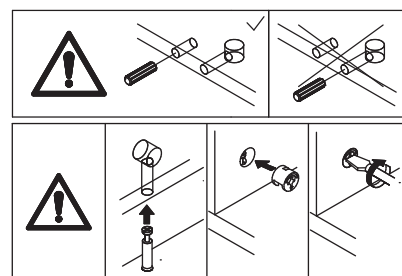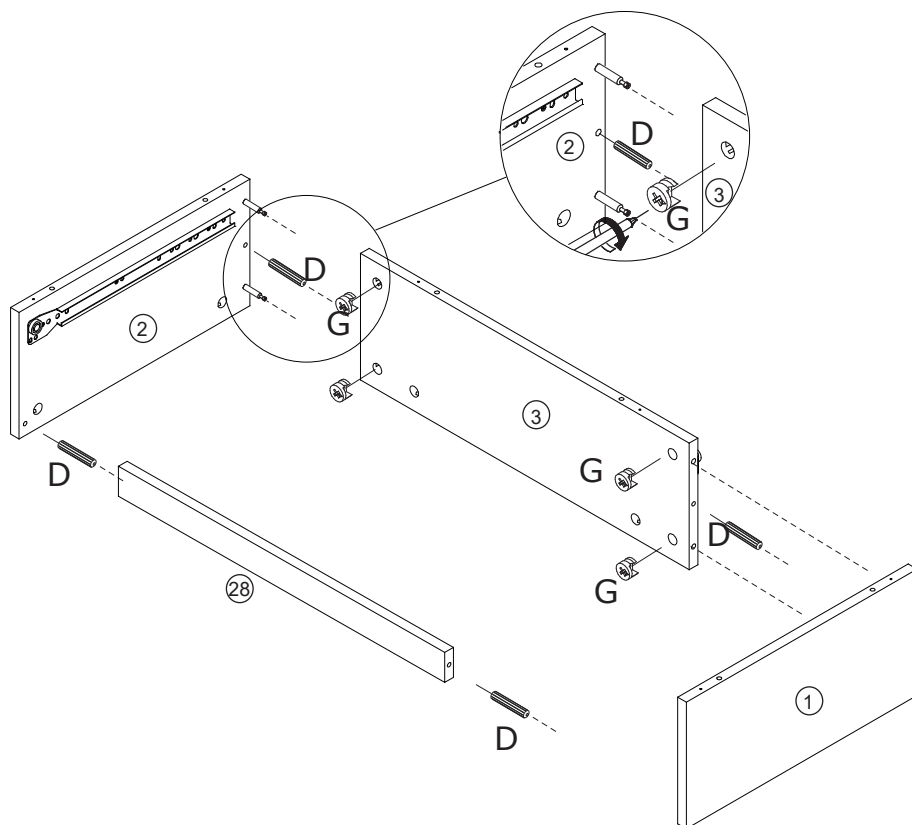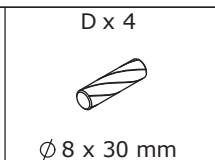
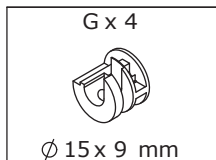


Connect plate 1 and 2 with plate 3 and 28 using wooden dowel(D) as shown.  
Put cam lock(G) into holes in plate 3 and turn clockwise to tighten as shown.

# 4

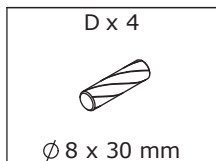

Connect plate 4 and the assembled component with plate 5 using wooden dowel(D) as shown.

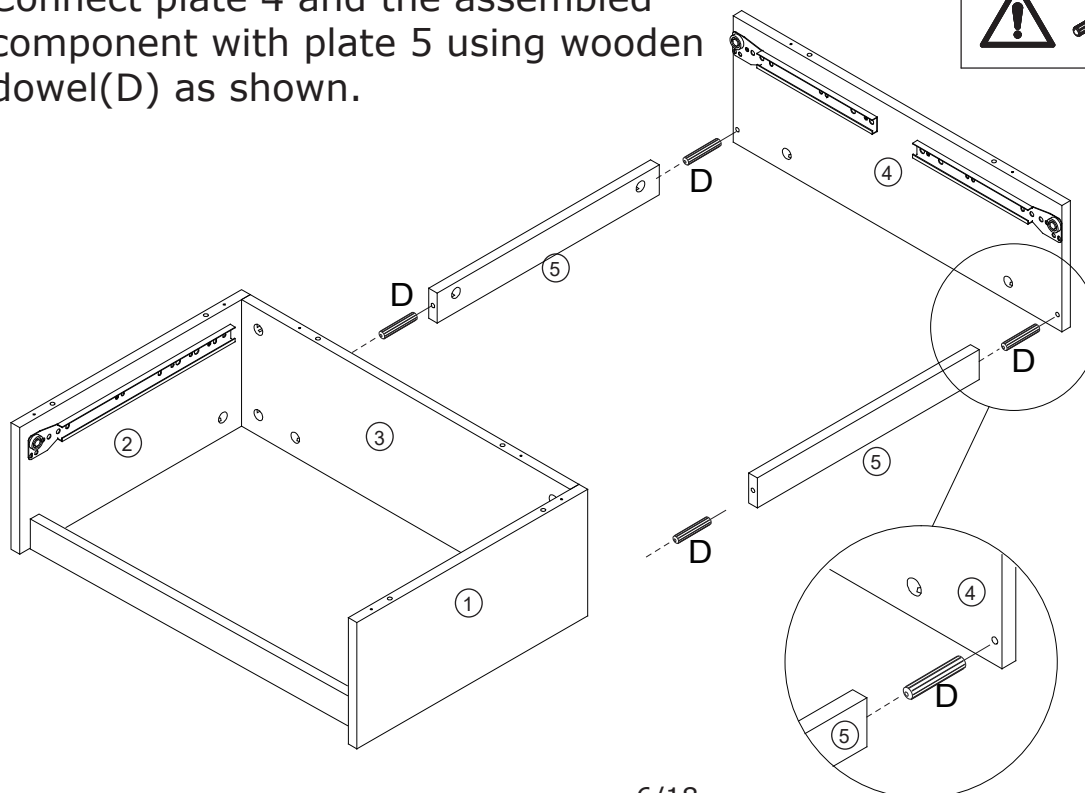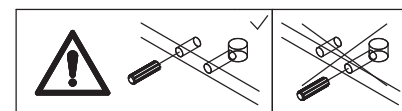

# 5

D x 8




Ø 8 x 30 mm




E x 8



Ø 4 x 40 mm

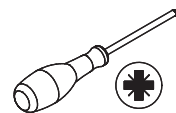

Cover plate 6 to the component with wooden dowel(D), then fix using screw(E) as shown.

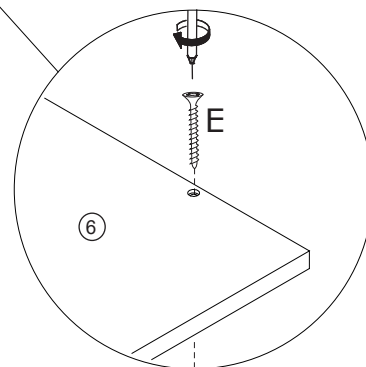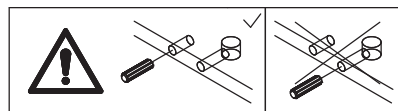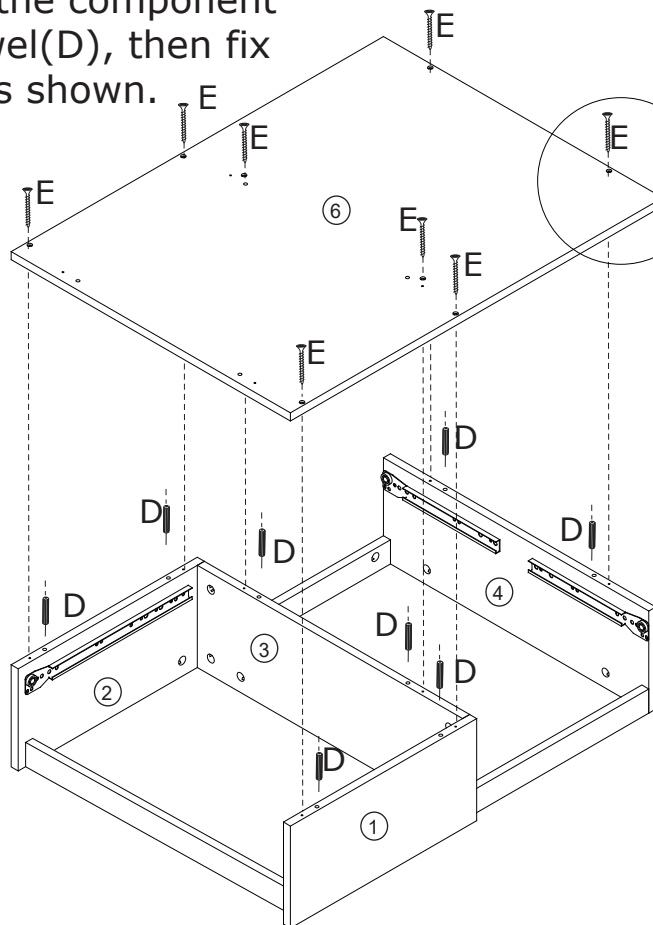

# 6

E x 4





Ø 4 x 40 mm

D x 4






Ø 8 x 30 mm

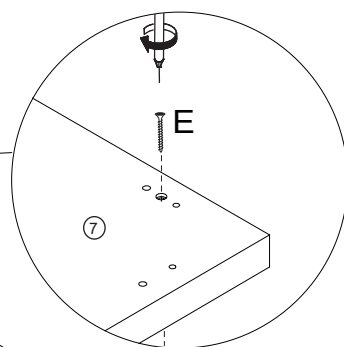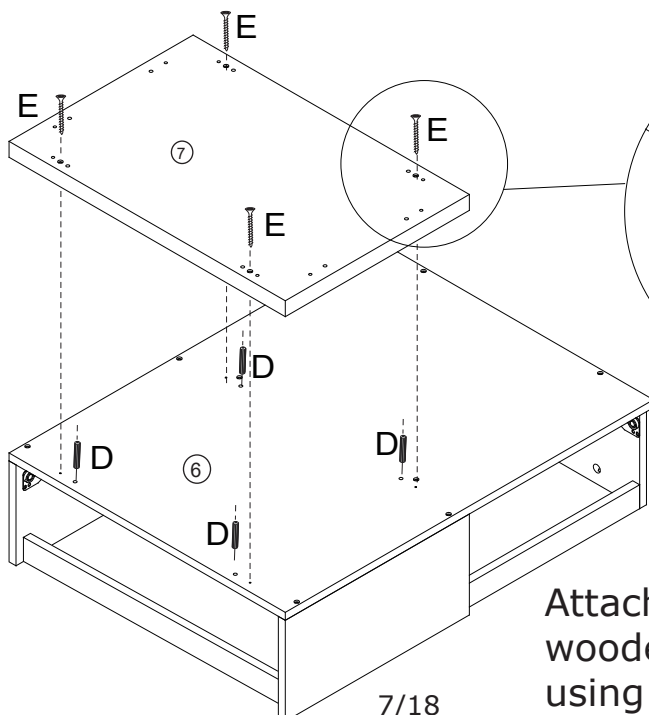


Attach plate 7 to plate 6 with wooden dowel(D), then fix using screw(E) as shown.

7/18





7

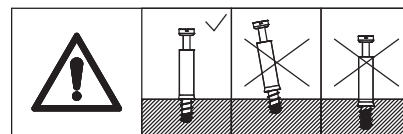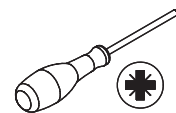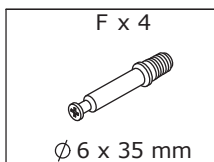

Insert quickfit screw(F) into plate 9 as shown.

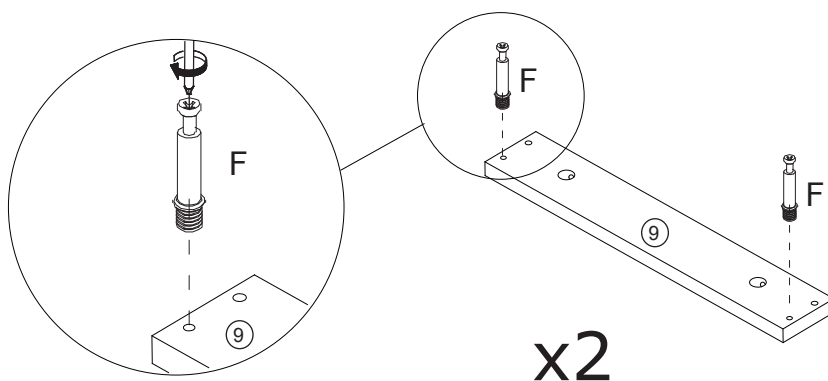

8

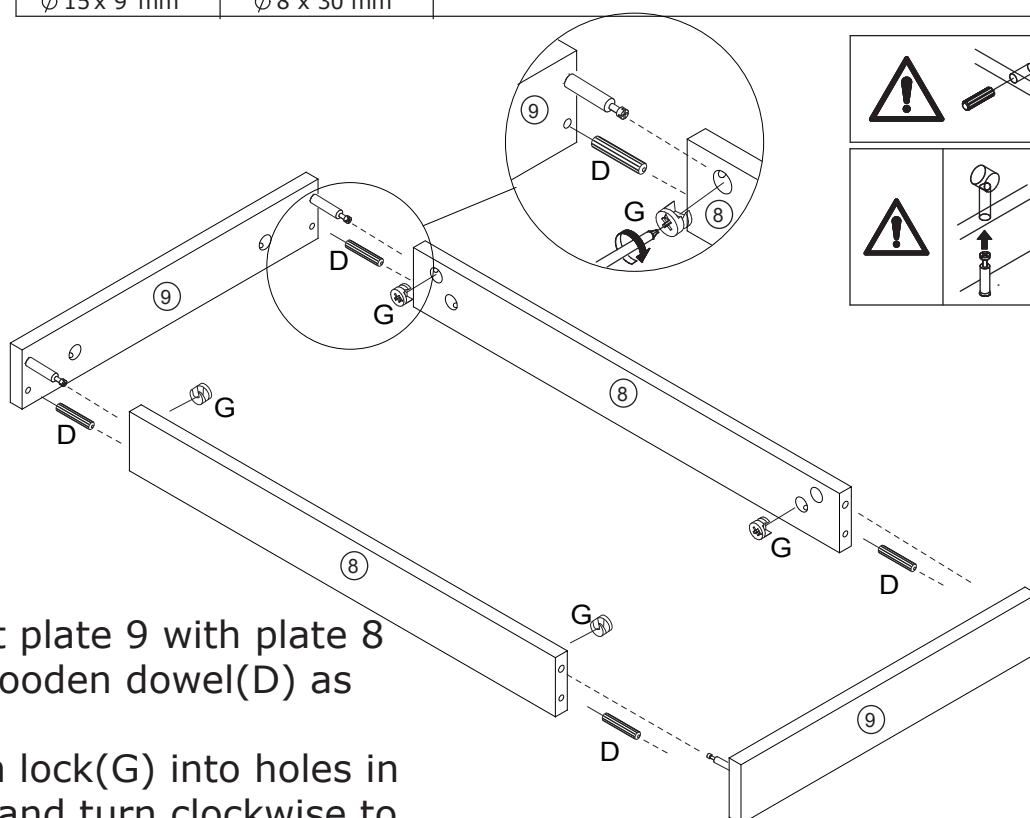
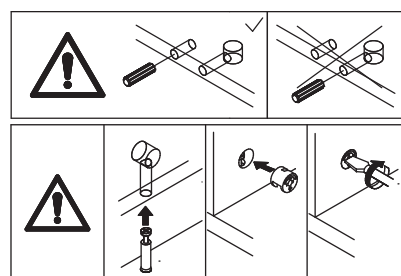
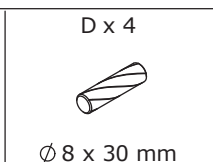
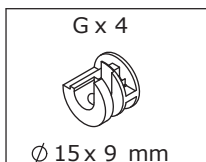


Connect plate 9 with plate 8 using wooden dowel(D) as shown.

Put cam lock(G) into holes in plate 8 and turn clockwise to tighten as shown.








# 9

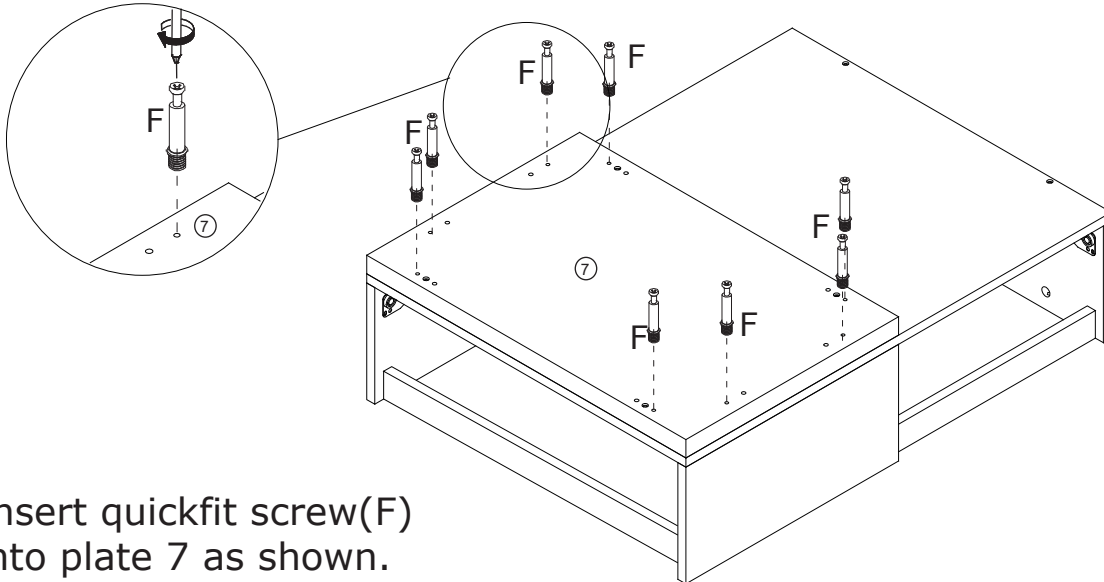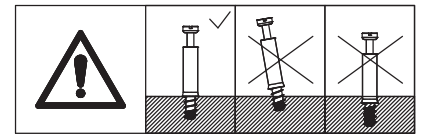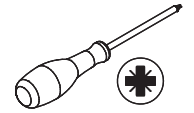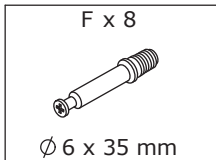

Insert quickfit screw(F)  
into plate 7 as shown.

# 10

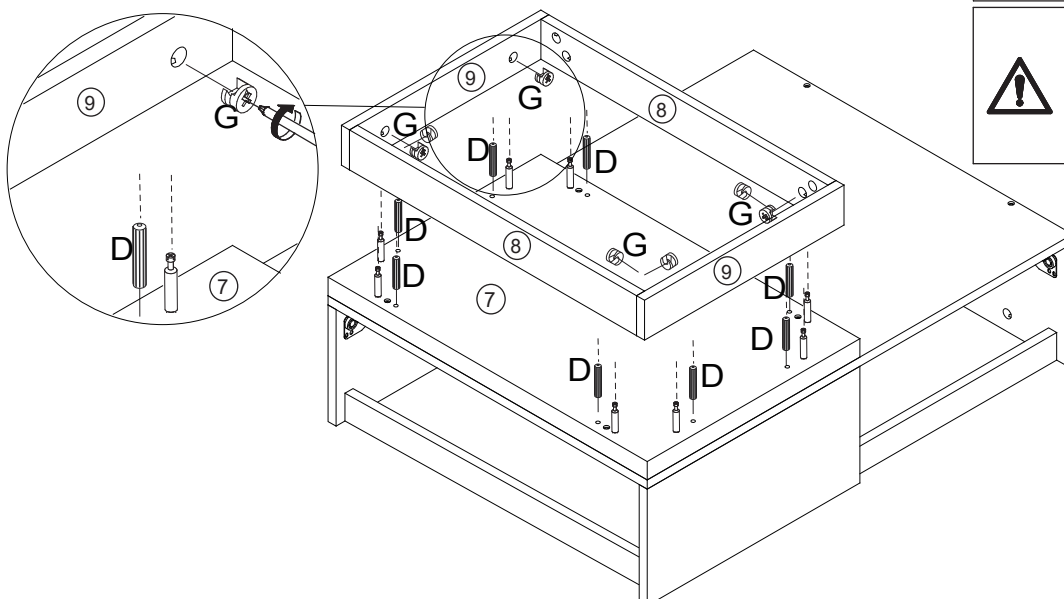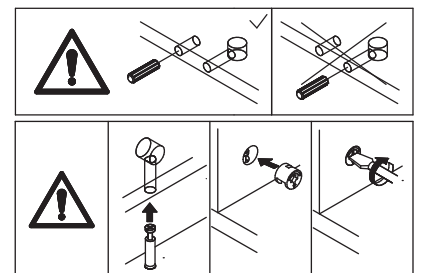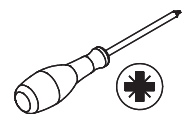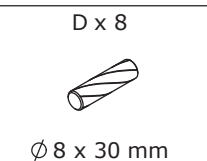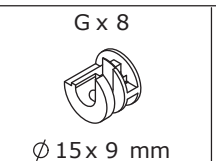





Attach the part(assembled in step 8) to plate 7 with  
wooden dowel(D) at first.  
Put cam lock(G) into holes in plate 8,9 and turn  
clockwise to tighten as shown.

# 11

D x 2




Ø 8 x 30 mm

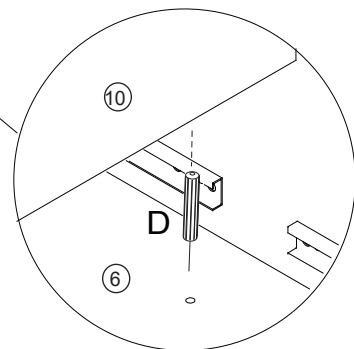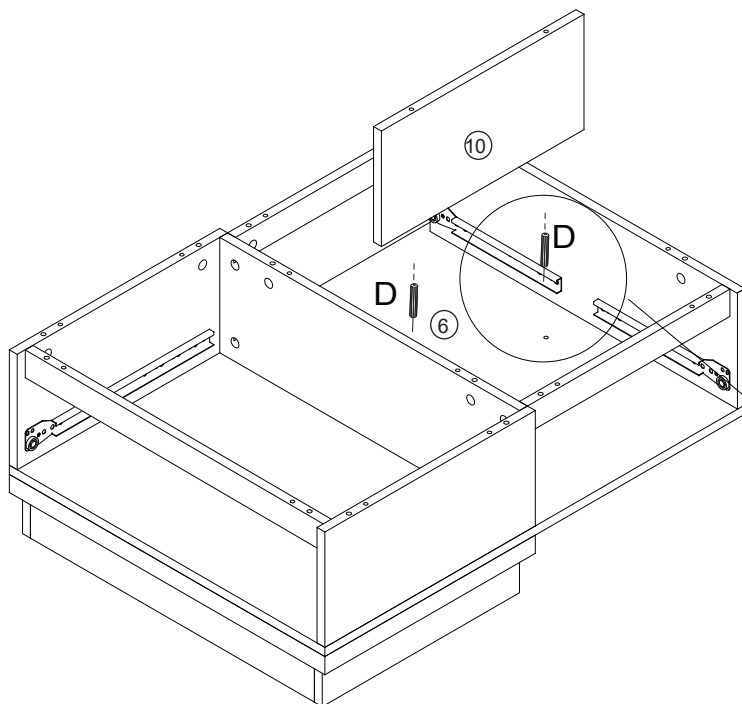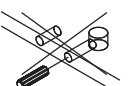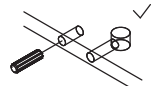





Flip the component, attach plate 10 to plate 6 with wooden dowel(D) as shown.

# 12

F x 14

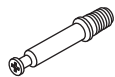

Ø 6 x 35 mm

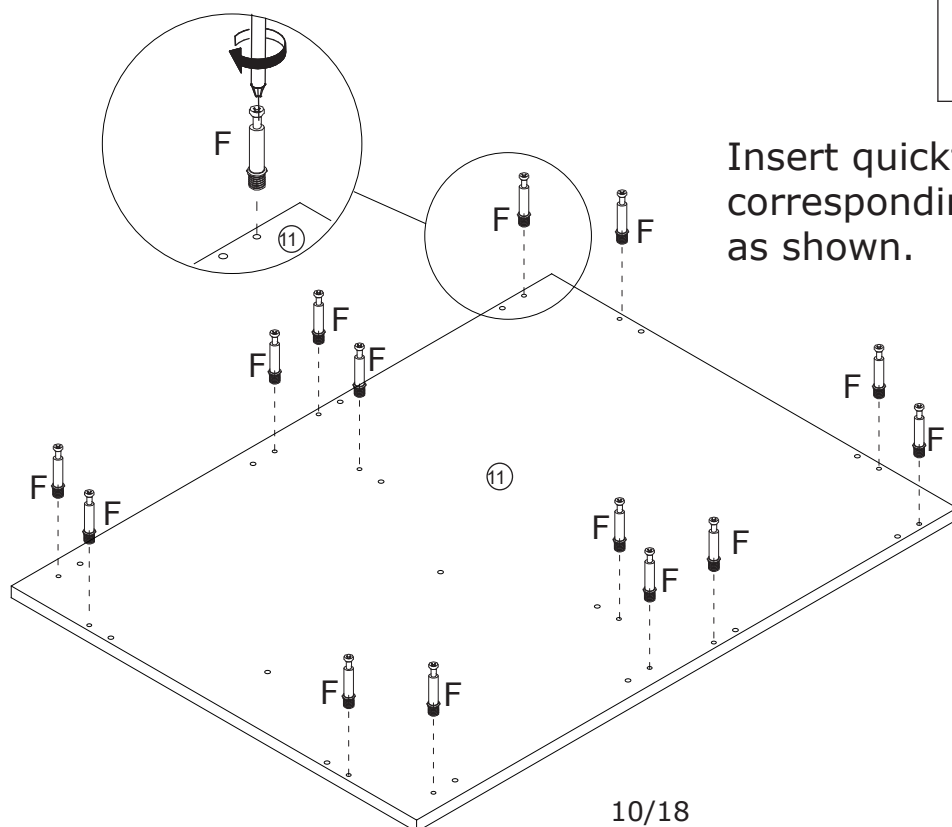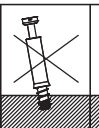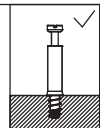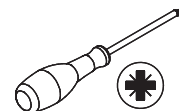

Insert quickfit screw(F) into corresponding holes in plate 11 as shown.

10/18

# 13

G x 14






Ø 15 x 9 mm

D x 16




Ø 8 x 30 mm

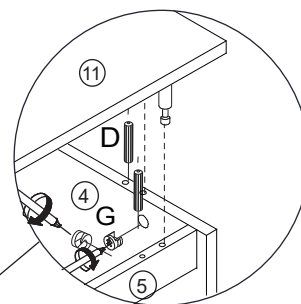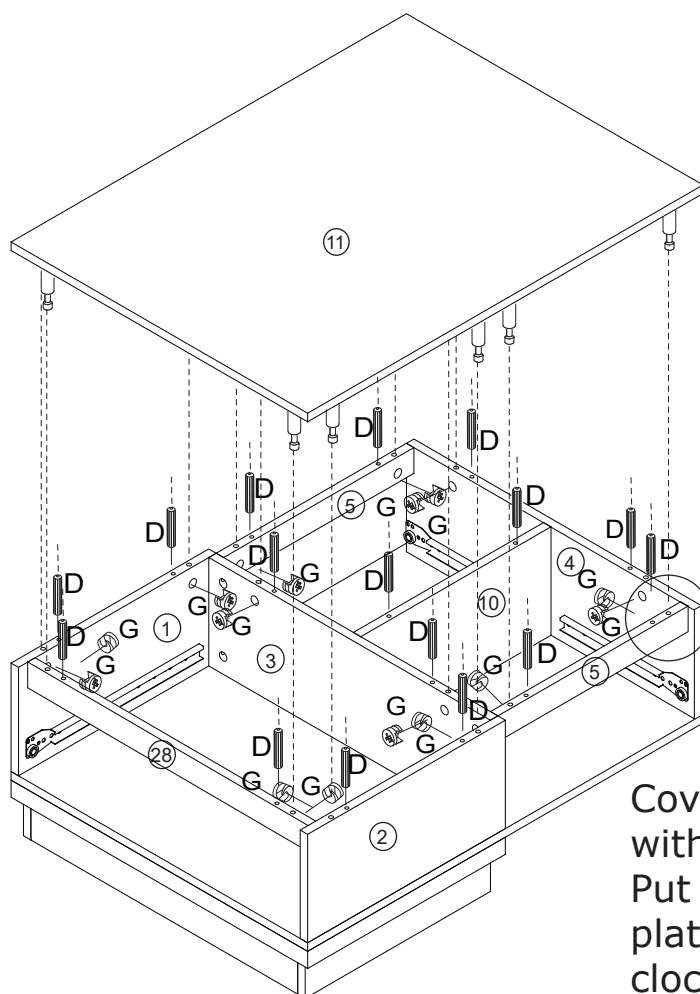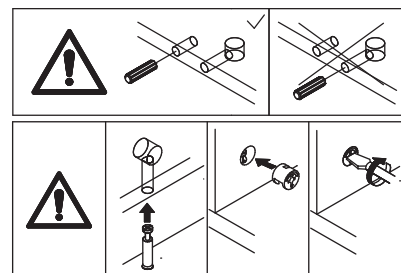

Cover plate 11 to the component with wooden dowel(D) at first. Put cam lock(G) into holes in plate 1,2,3,28,4,5 and turn clockwise to tighten as shown.

# 14

F x 12




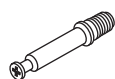


Ø 6 x 35 mm




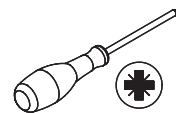
Insert quickfit screw(F) into plate 16 and 21(x2) as shown.

X 2

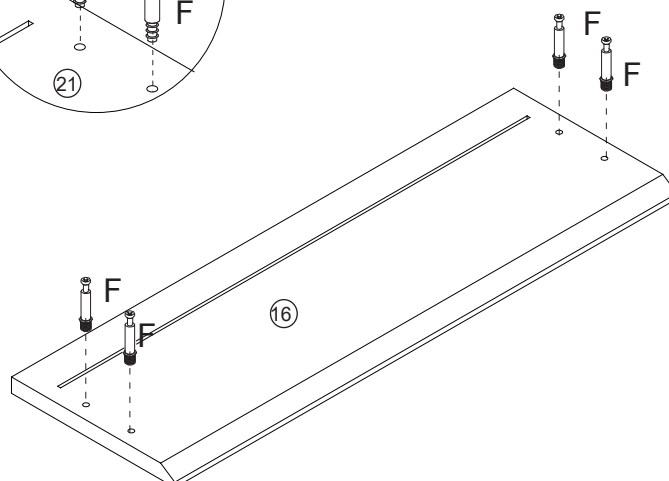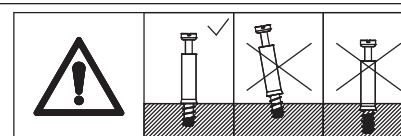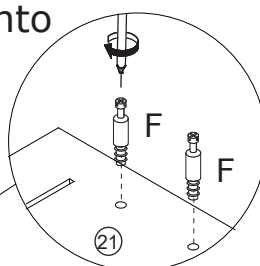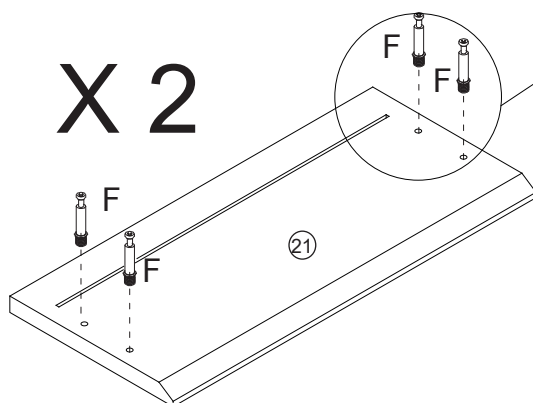


# 15

L x 8  
  
 Ø 4 x 35 mm




## X 2

Fix plate 17 and 19 with plate 18 using screw(L) as shown.

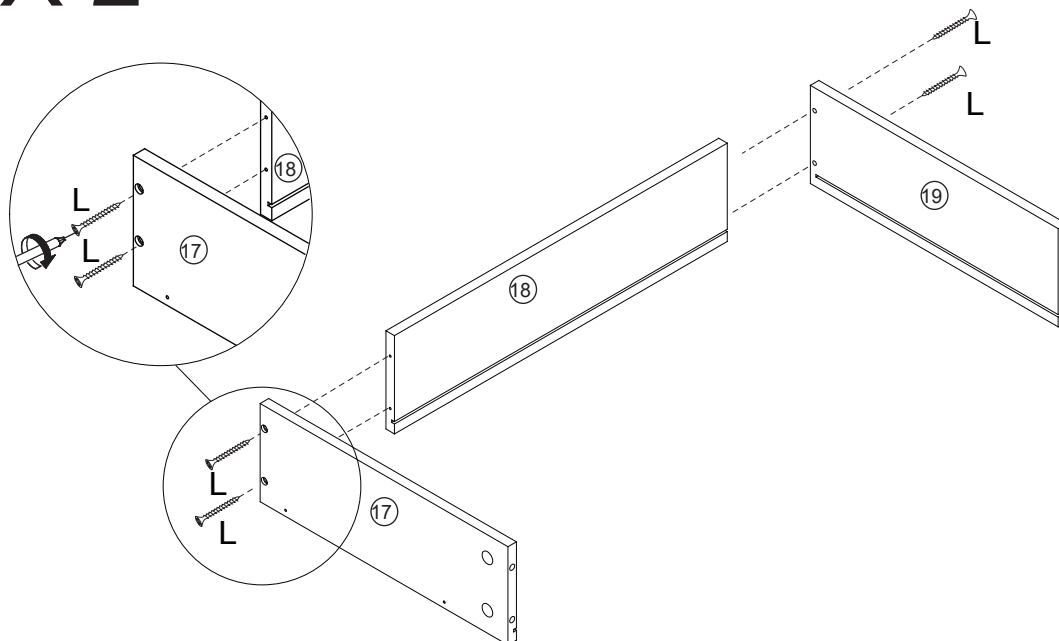



# 16

G x 8  
  
 Ø 15x 9 mm




Slide plate 20 along grooves.  
 Attach plate 21 to plate 17 and 19,  
 put cam lock(G) into holes in plate 17,19  
 and turn clockwise to tighten  
 as shown.

## x2

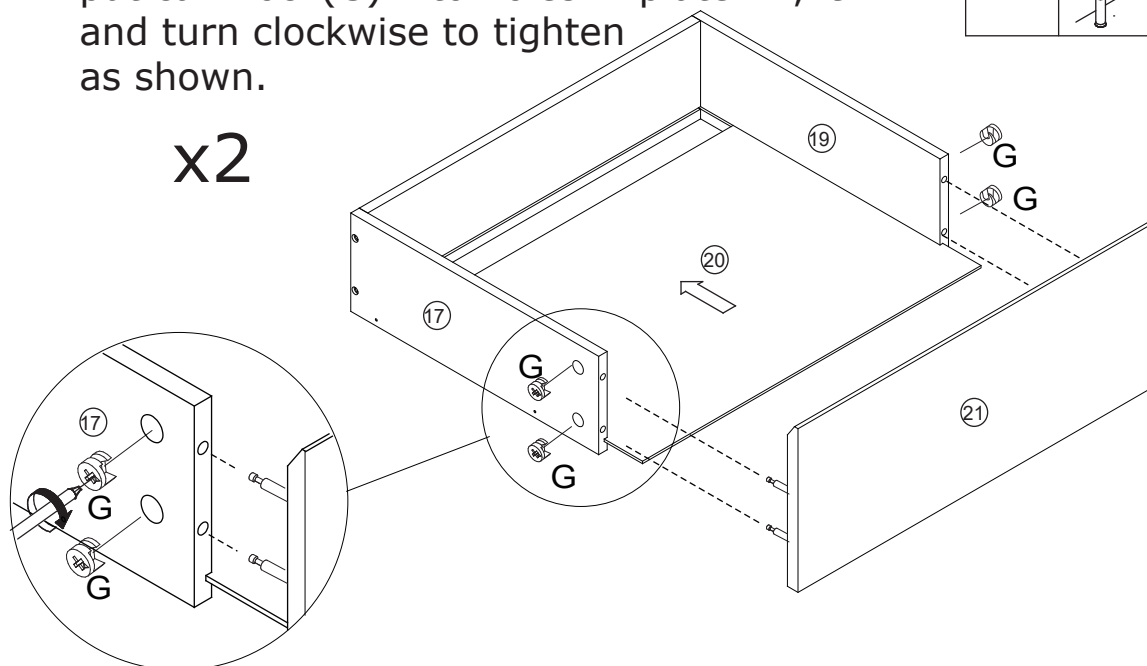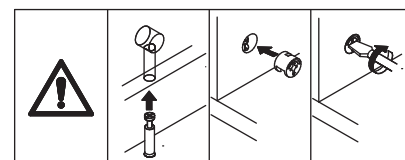

# 17

J x 2

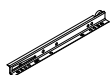


K x 2



C x 8




Ø 3 x 12 mm

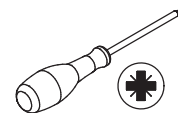

x2

Fix runner(J) and (K) to plate 17 and 19 respectively using screw(C) as shown.

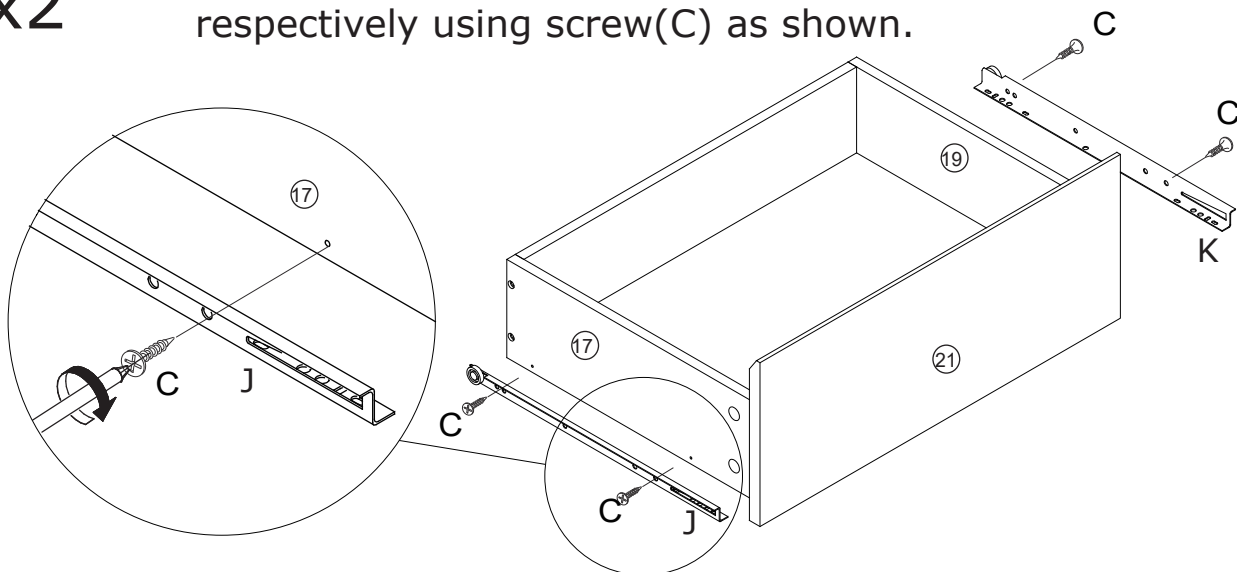

# 18


L x 4



Ø 4 x 35 mm



Fix plate 12 and 14 with plate 13 using screw(L) as shown.

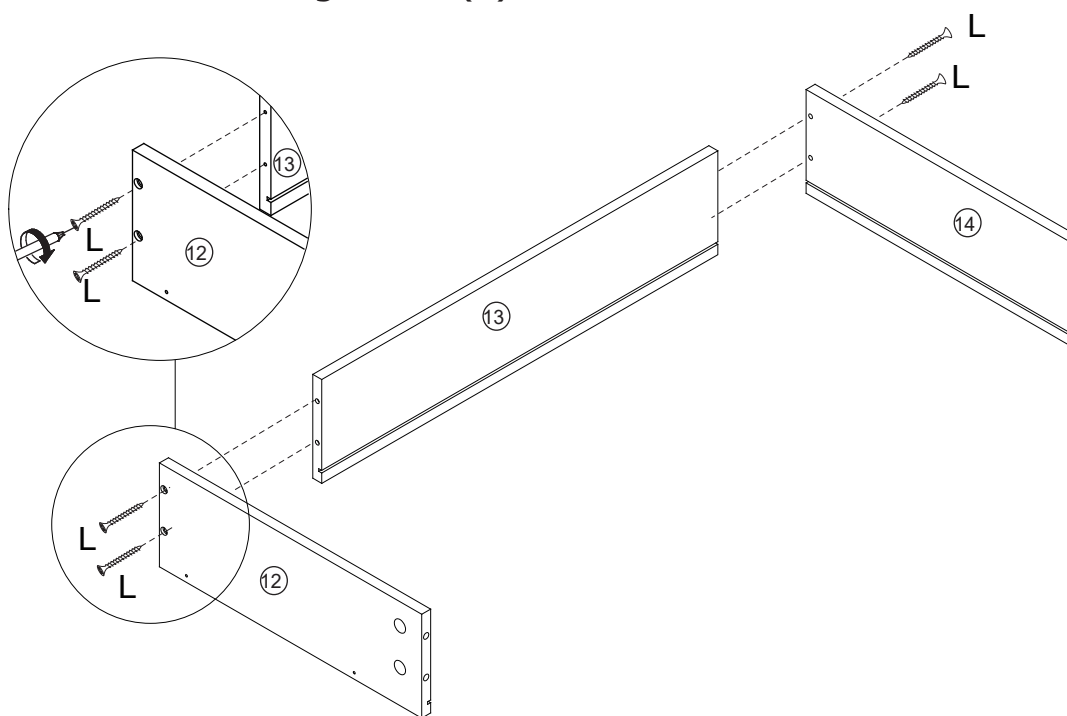


# 19




G x 4



Ø 15 x 9 mm

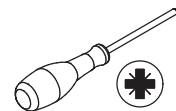


Slide plate 15 along grooves.  
Attach plate 16 to plate 12 and 14,  
put cam lock(G) into holes in  
plate 12,14 and turn clockwise  
to tighten as shown.

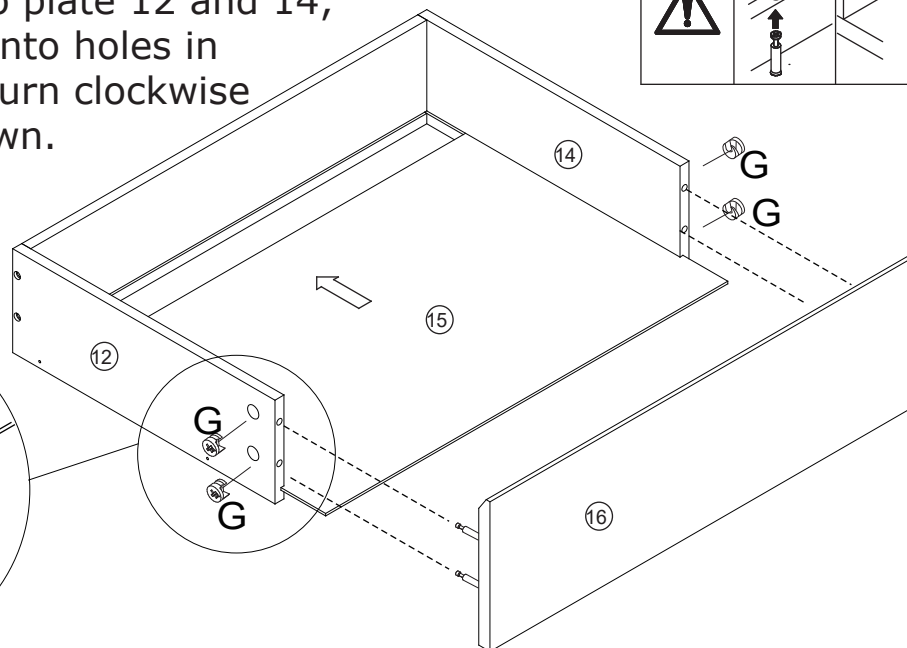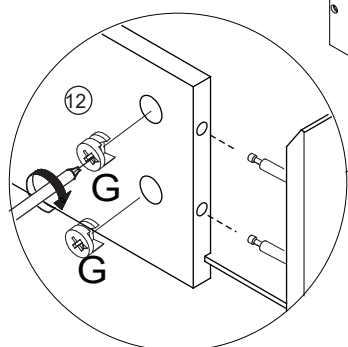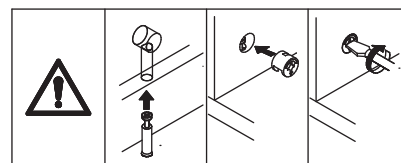

# 20

A x 1

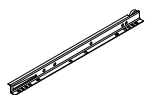

B x 1





C x 4



Ø 3 x 12 mm




Fix runner(A) and (B) to plate 12  
and 14 respectively using screw(C)  
as shown.

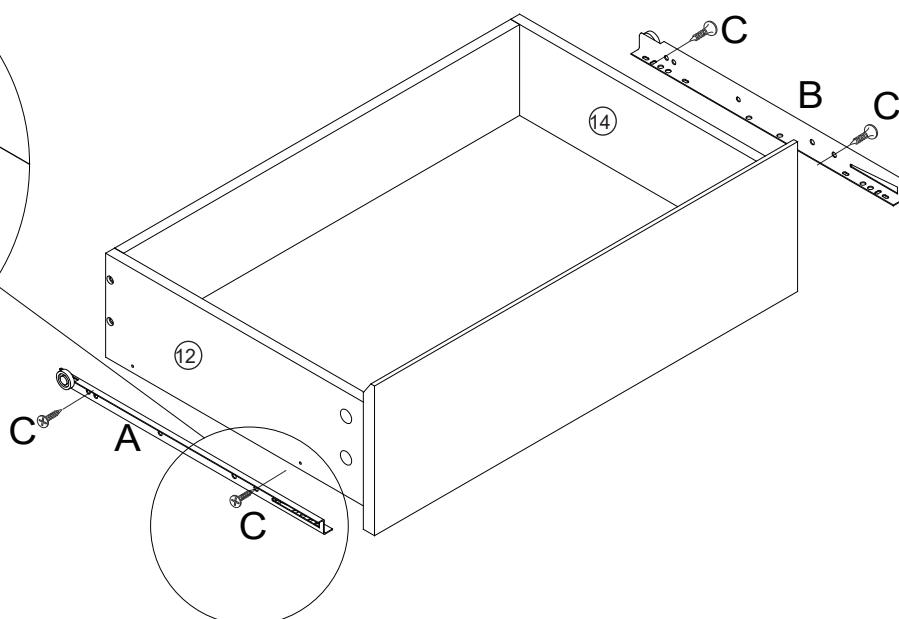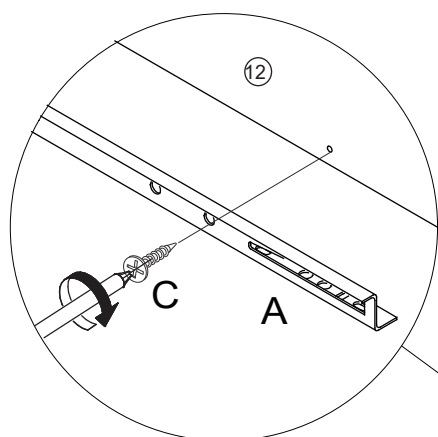


# 21



F x 12

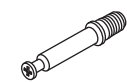

Ø 6 x 35 mm

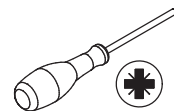

Insert quickfit screw(F) into corresponding holes in plate 23,25 and 26 as shown.

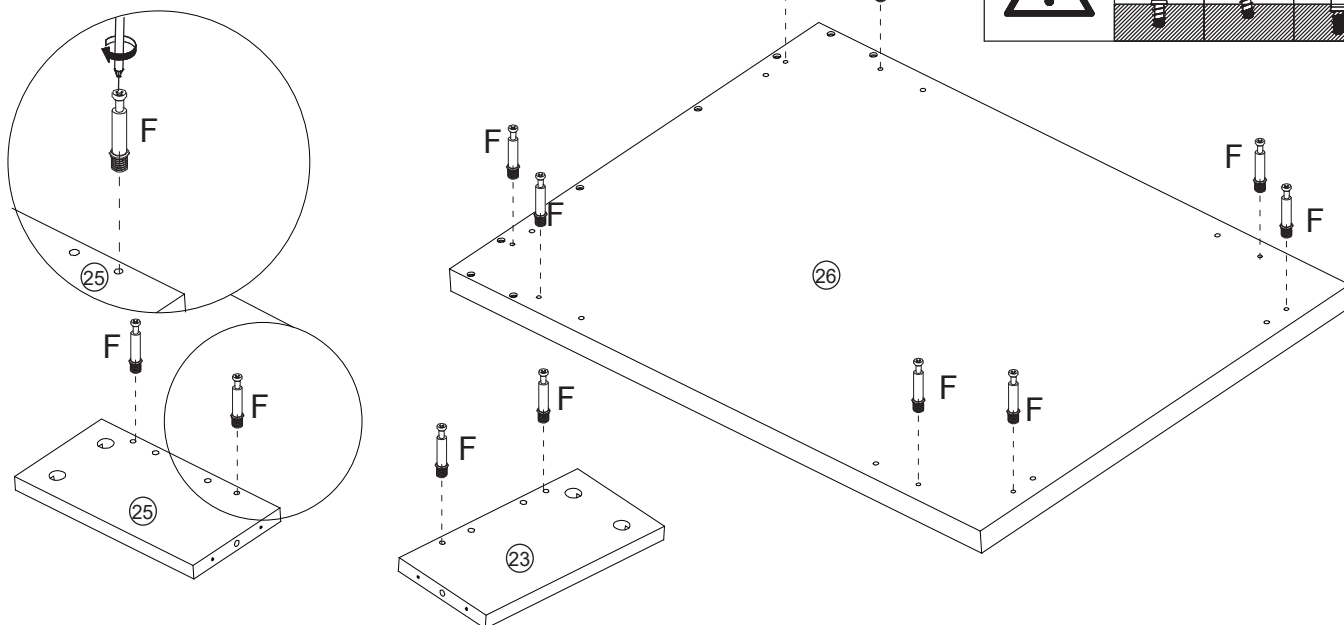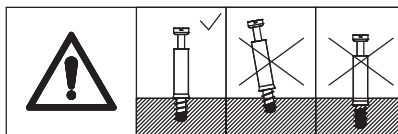

# 22

G x 4



Ø 15 x 9 mm

D x 4





Ø 8 x 30 mm






Connect plate 23 and 25 with plate 24 using wooden dowel(D) at first.



Put cam lock(G) into holes in plate 24 and turn clockwise to tighten as shown.

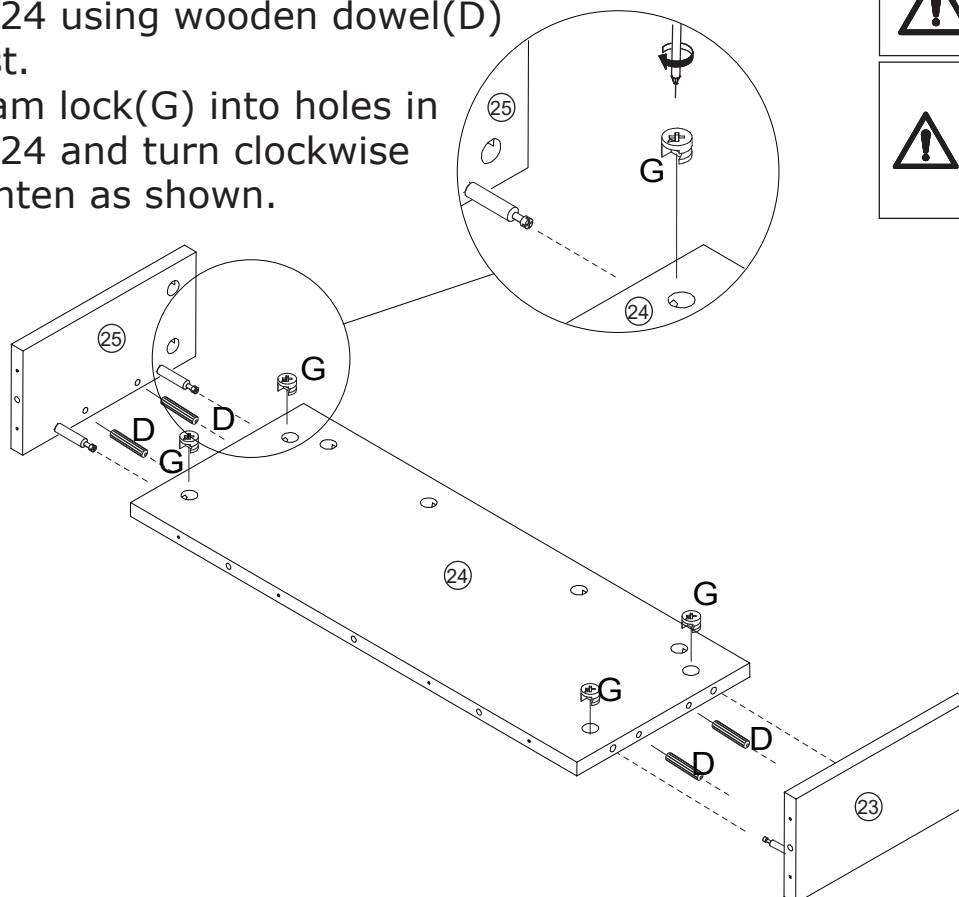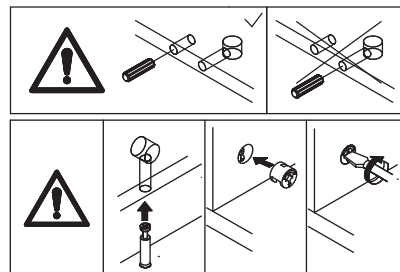



# 23

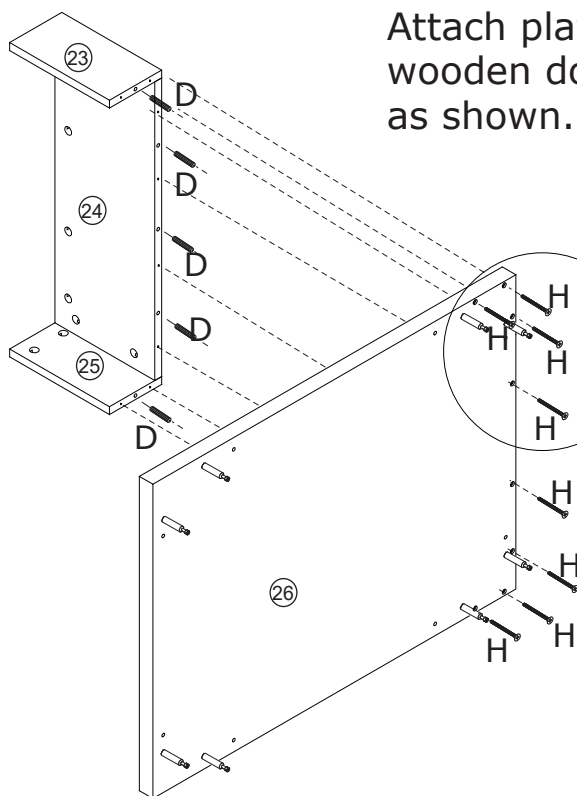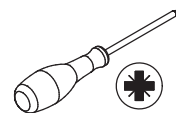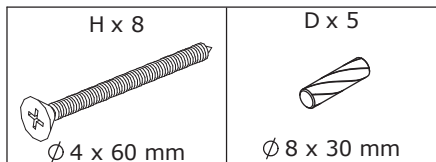

Attach plate 26 to plate 23,24 and 25 with wooden dowel(D), then fix using screw(H) as shown.




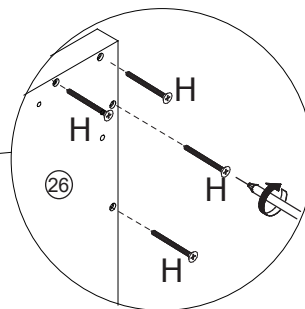
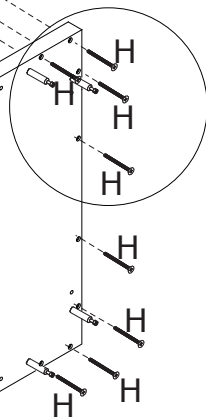


# 24

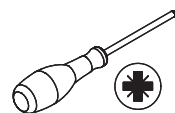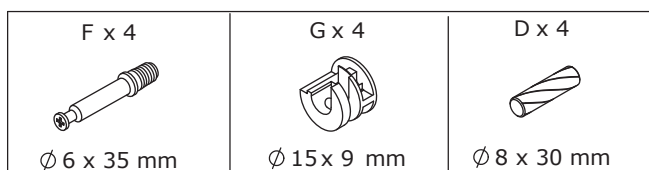

Insert quickfit screw(F) into plate 27(x2) as shown. Connect plate 27 with plate 8 using wooden dowel(D) at first.

Put cam lock(G) into holes in plate 8 and turn clockwise to tighten as shown.

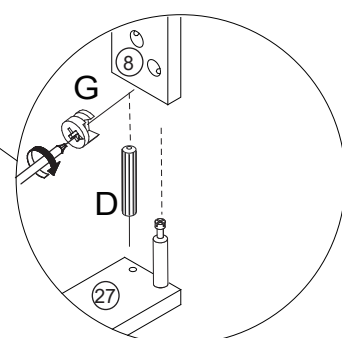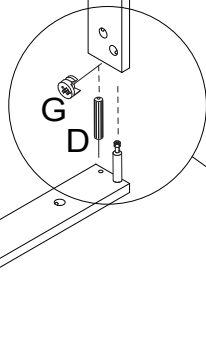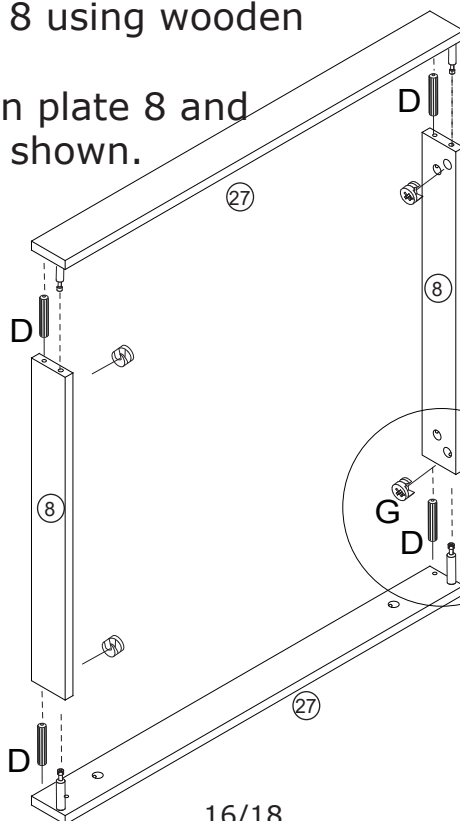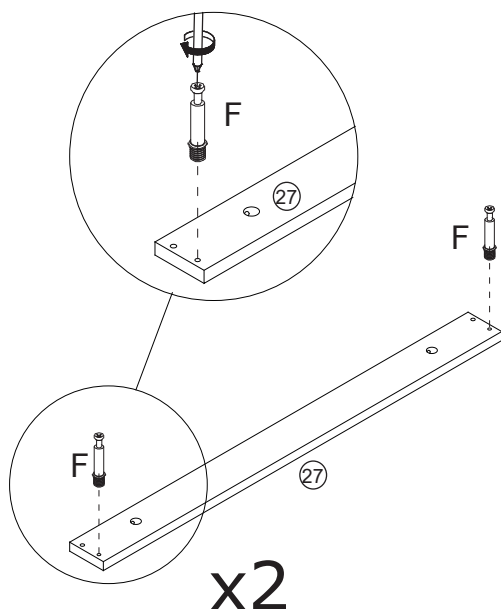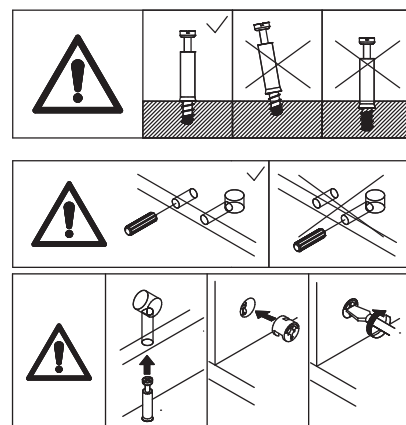



# 25

G x 8




Ø 15 x 9 mm




D x 8



Ø 8 x 30 mm

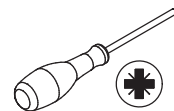


Attach the two components (assembled in step 23 and 24) with wooden dowel(D) at first.

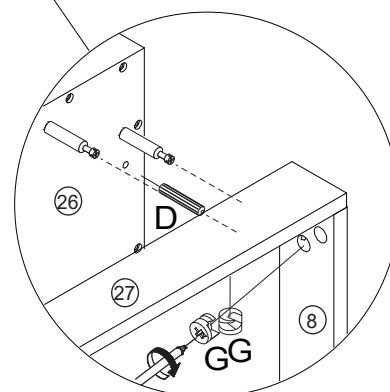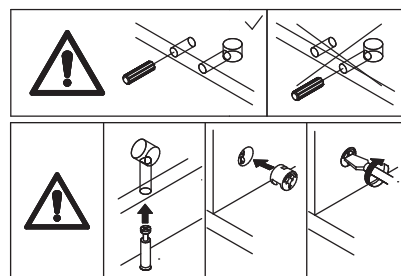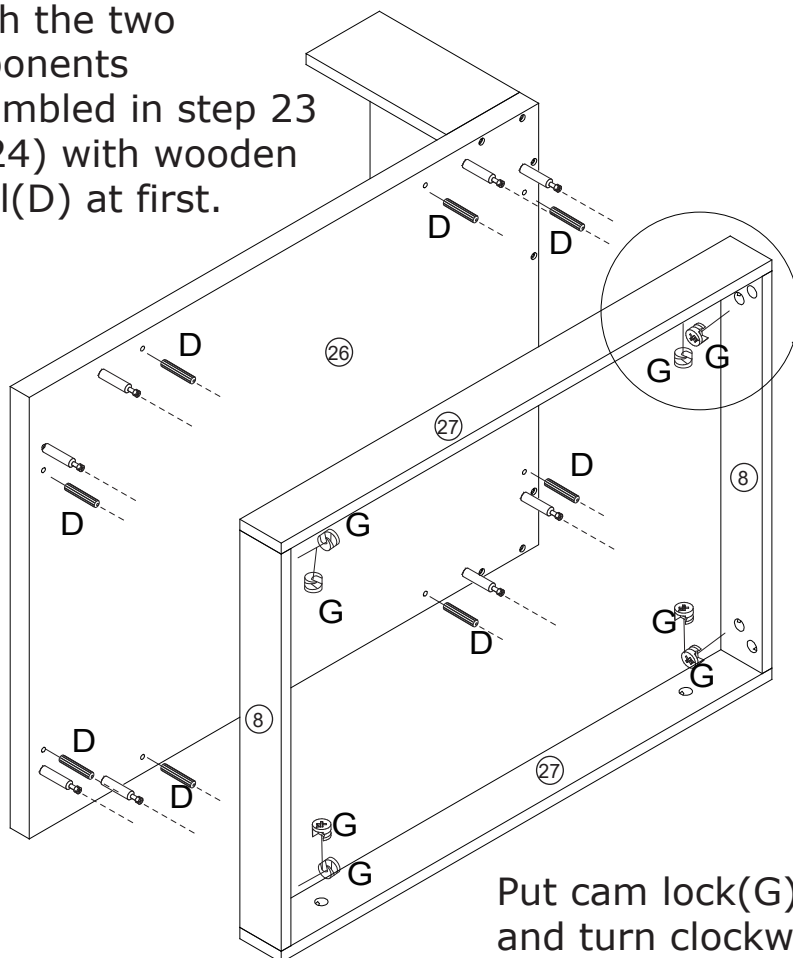

Put cam lock(G) into holes in plate 8,27 and turn clockwise to tighten as shown.

# 26




F x 8

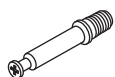

Ø 6 x 35 mm



Insert quickfit screw(F) into plate 22 as shown.

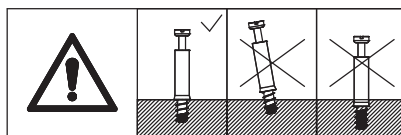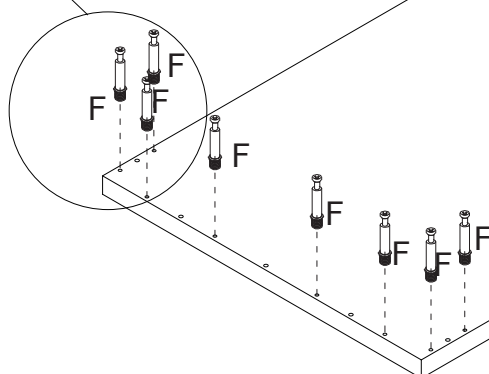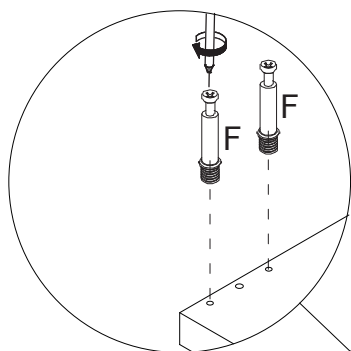

# 27

G x 8










Ø 15 x 9 mm


D x 5



Ø 8 x 30 mm

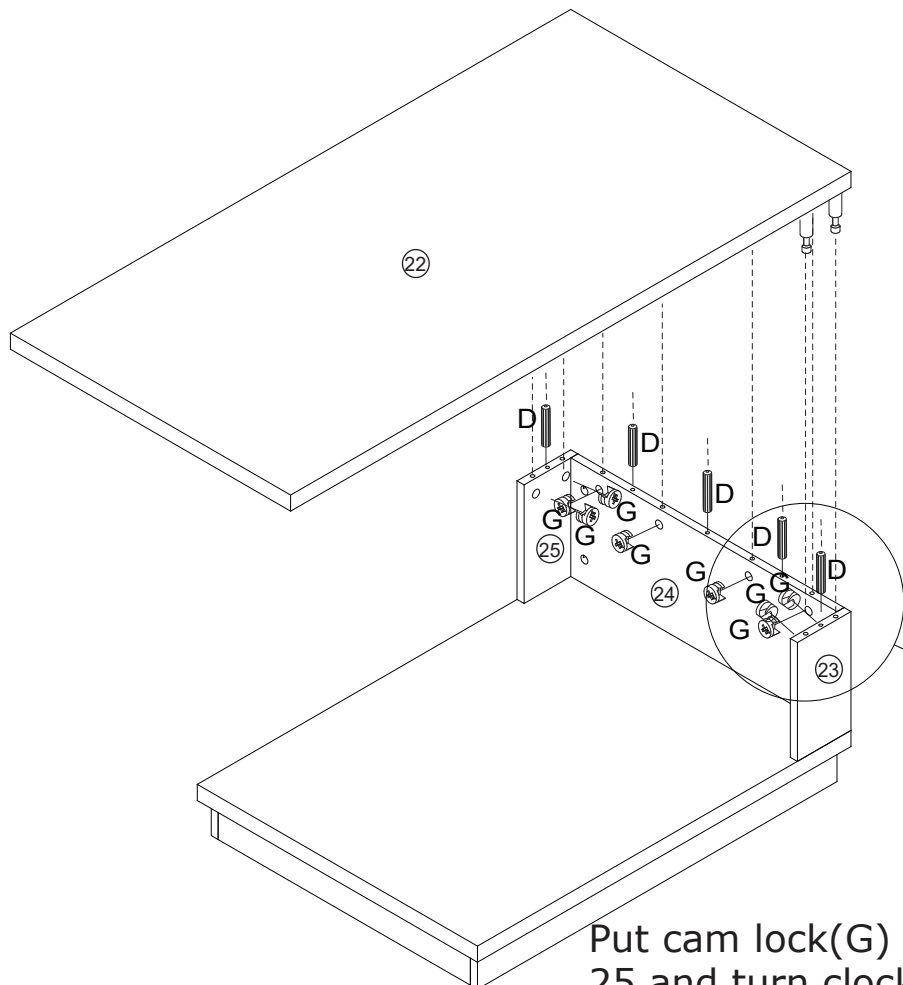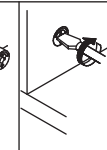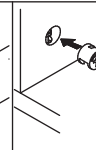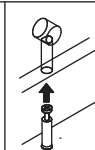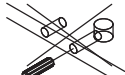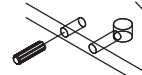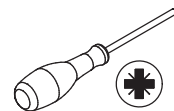



Cover plate 22 to plate 23,24 and 25 with wooden dowel(D) at first.

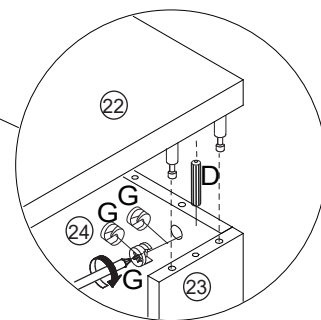

Put cam lock(G) into holes in plate 23,24, 25 and turn clockwise to tighten as shown.

# 28

Slide drawers into corresponding positions.

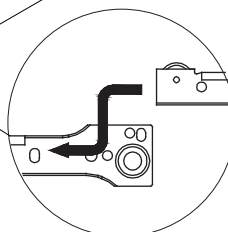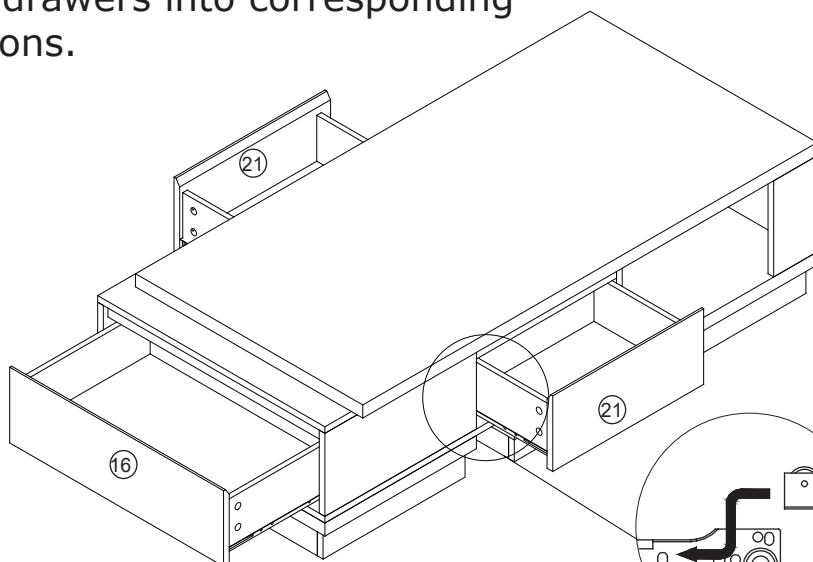

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day<sup>23</sup> warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## **CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?**

### **PLEASE FOLLOW THE BELOW INSTRUCTIONS:**

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### **DEFECTIVE ITEMS**

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### **DAMAGED ITEMS**

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.