


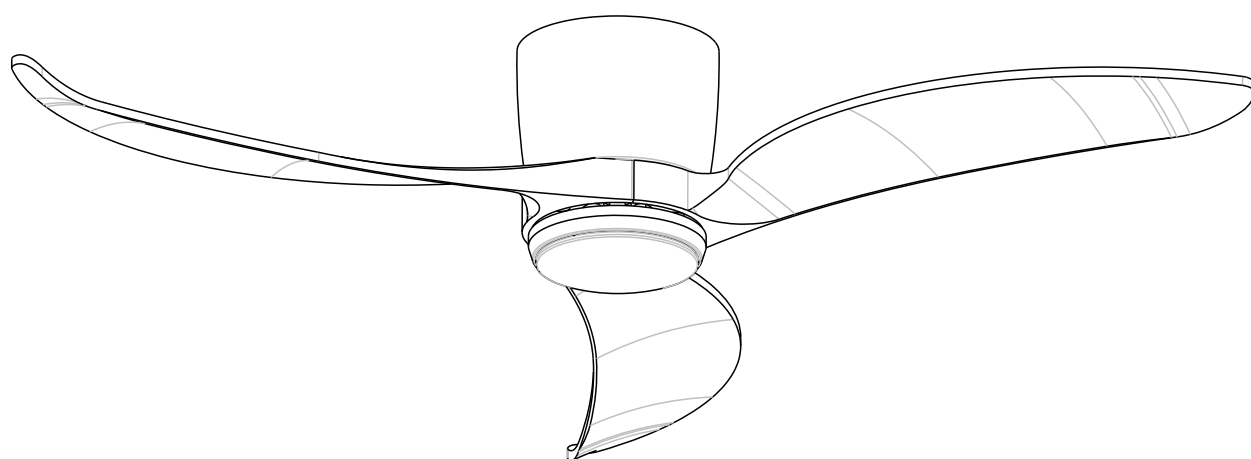


52-INCH DEROCATE CEILING FAN


USE AND CARE GUIDE

Pre-Installation


Light kit fitter assembly

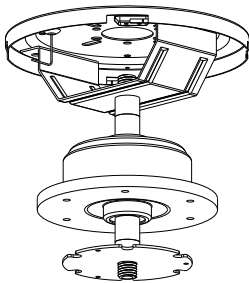

Fan-Motor assembly & Hanging-board ×1PCS

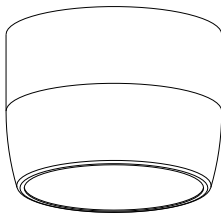


Motor cover ×1PCS

 

Blade X 3PCS



 
Light kit fitter assembly ×1PCS



LED ×1PCS




lamp shade ×1PCS

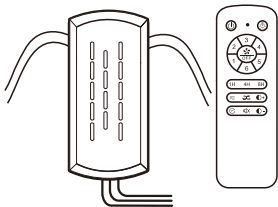


Controller & Remote Control ×1PCS

 Parts Kit



AA
Mounting screws
×4

 

BB
Expansion bolts
×2



CC
Plastic wire nut
(not to scale)
×3



DD
Blade attachment screw
×7




EE
iron Washers
×7

NOTE

Hardware not shown to actual size.

Installation of the hanging bracket

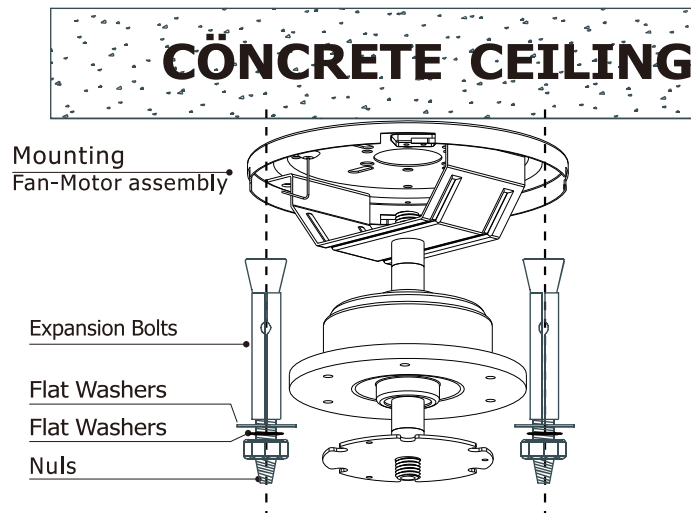

For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).


STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1)Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.
- 2)Remove the Mounting Bracket , drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers , Spring Washers and Nuts .



IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG

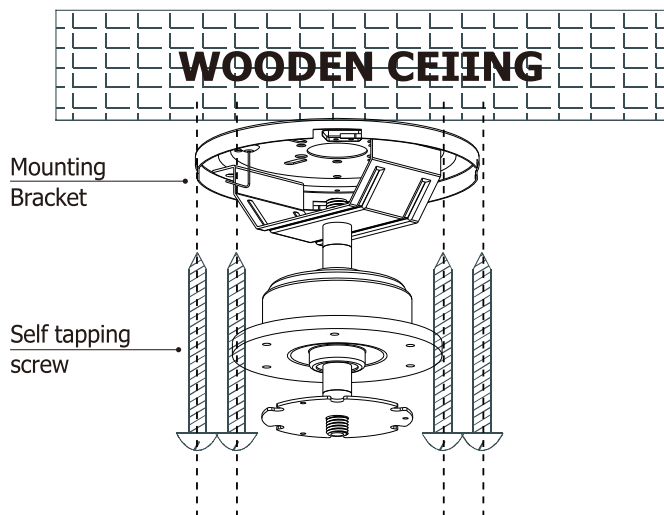

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)

STEP 2 A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.
- 2) Remove the Mounting Bracket , drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4Self Tapping Screws &Washers

Making the electrical connections



WARNING: Each wire not supplied with this fan is designed to accept up to one 12-gauge house wire and two wires from the fan. If you have larger than 12-gauge house wiring or more than one house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use.



IMPORTANT: Use the plastic wire connectors (BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.



WARNING: Remove the rubber motor stops on the bottom of fan before installing the blades or testing the motor.



WARNING : Each wire not supplied with this fan is designed to accept up to one 12-gauge house wire and two wires from the fan.


If you have larger than 12-gauge house wiring or more than one house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use.



WARNING: Remove the rubber motor stops on the bottom of the fan before installing the blades or testing the motor.



IMPORTANT: Use the plastic wire connectors (BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

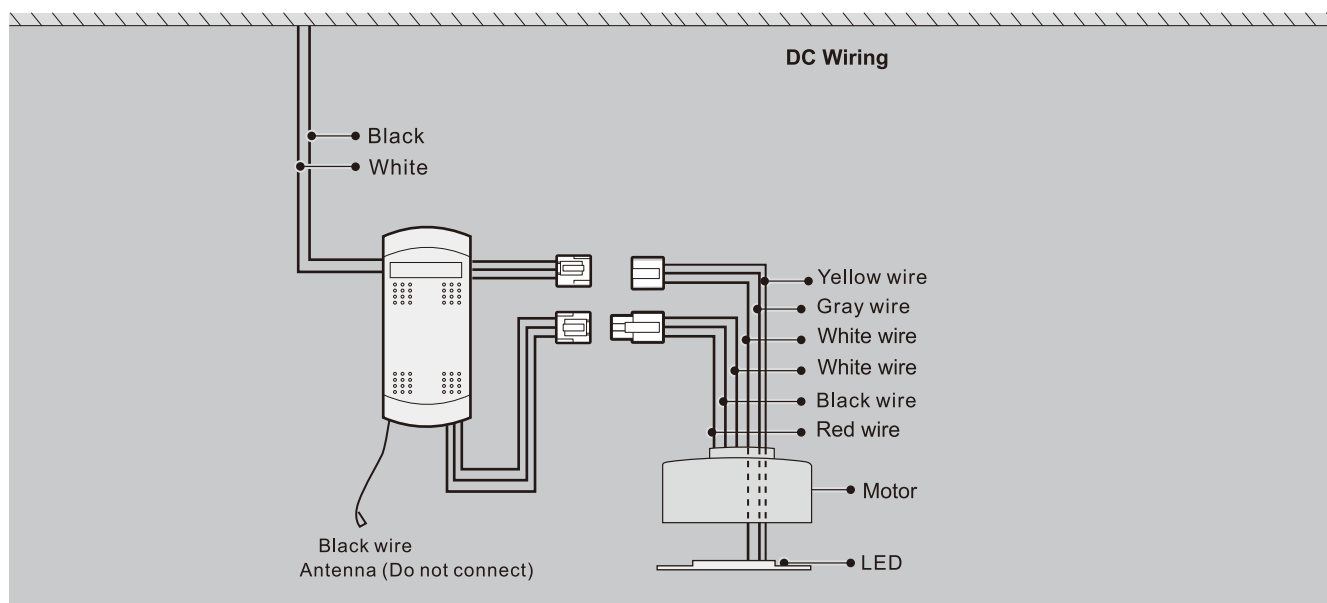

The receiver is connected to the motor power cord and the ceiling power cord respectively.

Note:

Connect wires color to color, plug to plug.



Live Wire




Neutral Wire




Ground Wire

Install remote control

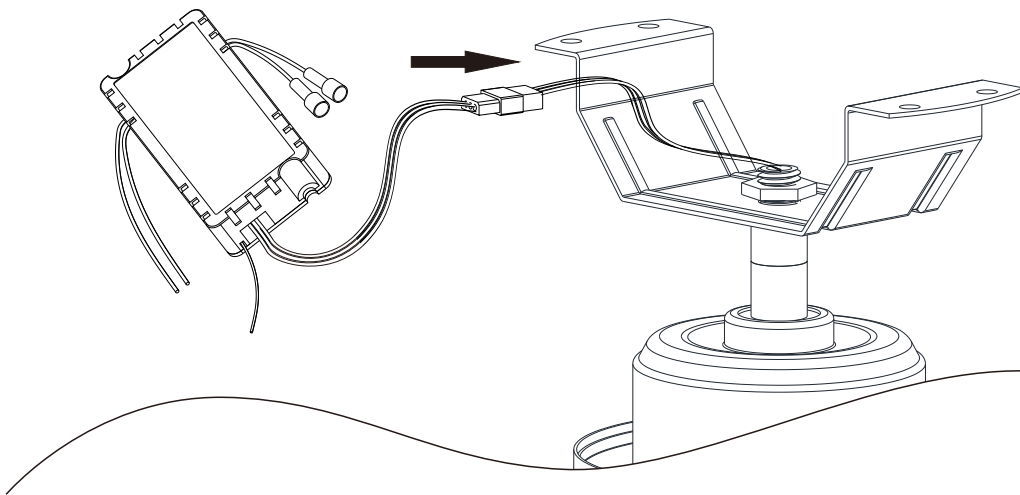

1. Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.
2. Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.

Preparing for mounting

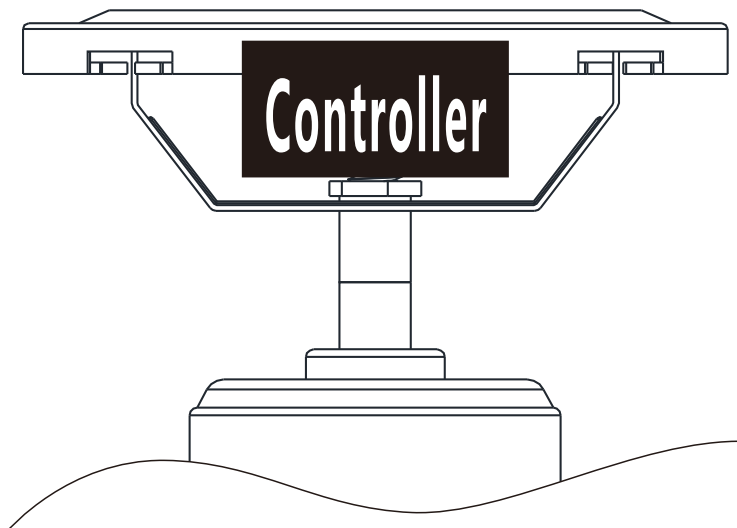


- 1: Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots.
- 2: Remove and save the two canopy screws in the round holes.
This will enable you to remove the mounting bracket


LIGHT MUST BE KEPT AT THE ON POSITION

FAN MUST BE KEPT AT THE HIGH SPEED

Fastening the blade arms to the motor

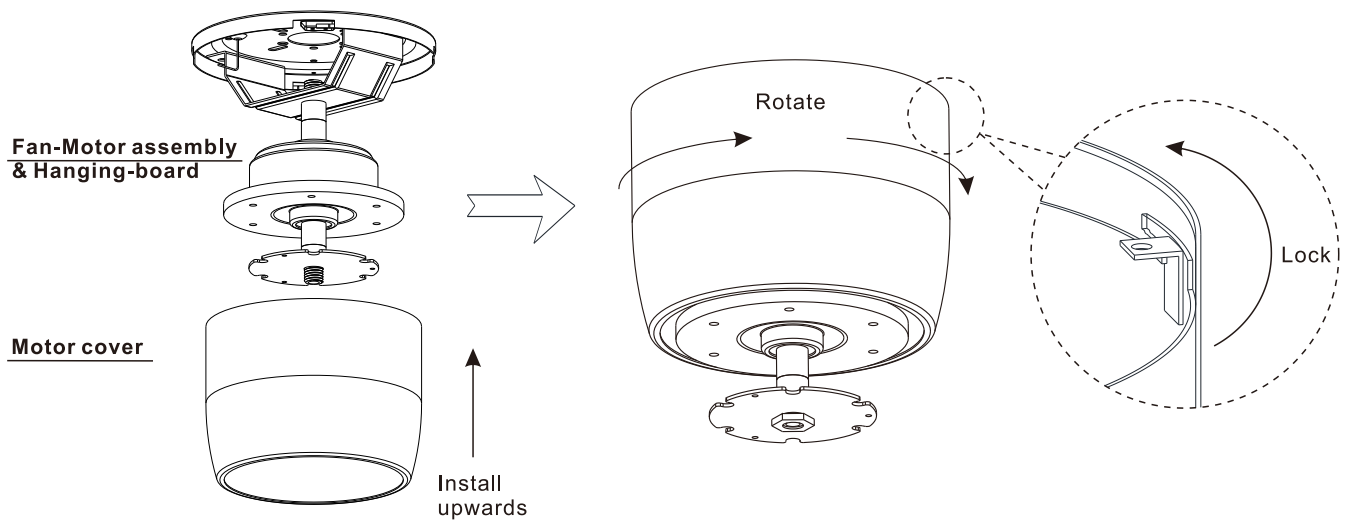


1. Lift the motor cover up to the ceiling plate
2. Make the L-shaped connector contact the notch recess and rotate it to the right
3. Secure the connectors and clips in place

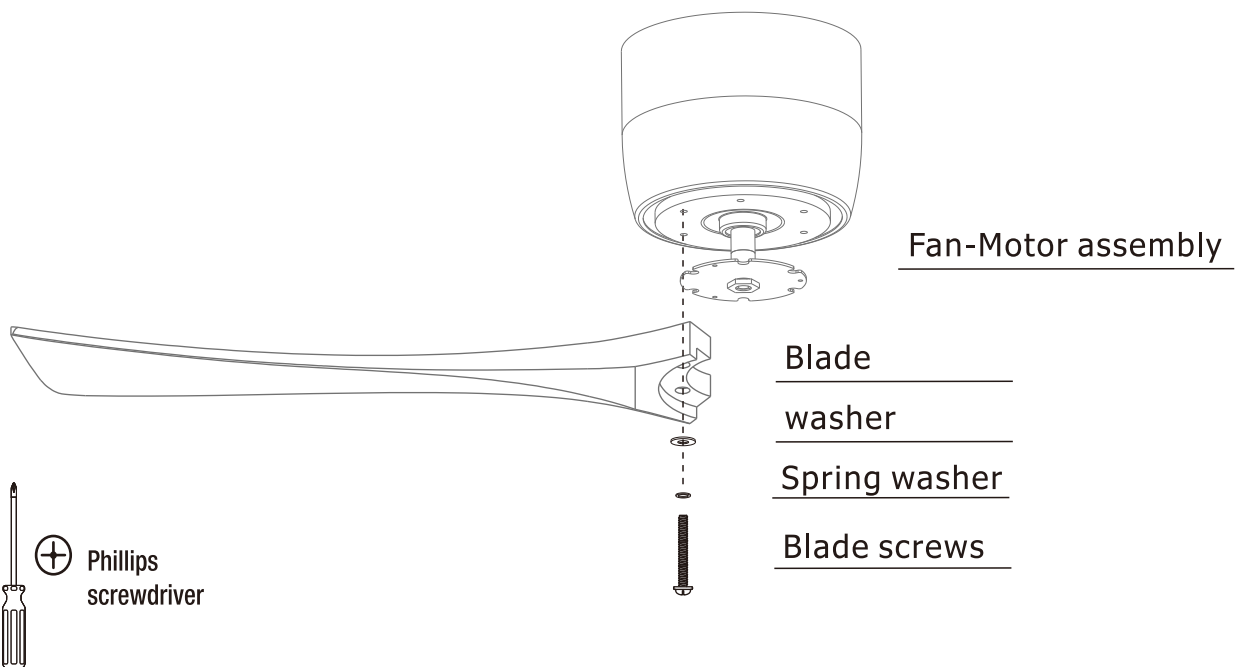


1. Remove the pre installed screws
2. Install the fan blade on the corresponding screw hole, and then install and fix it with the removed screws.
3. Fasten the arm to the fan-motor assembly by inserting the alignment post into the slot on the bottom of the motor and tightening the pre-installed armscrews.

☐ Repeat this step for the remaining blade assemblies.


Fastening the blade arms to the motor

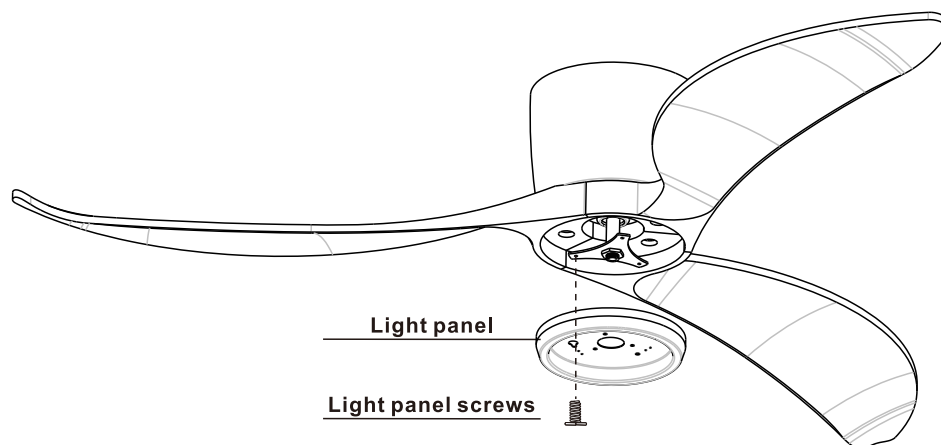

1. Remove the pre installed screws and install the lamp at the specified position

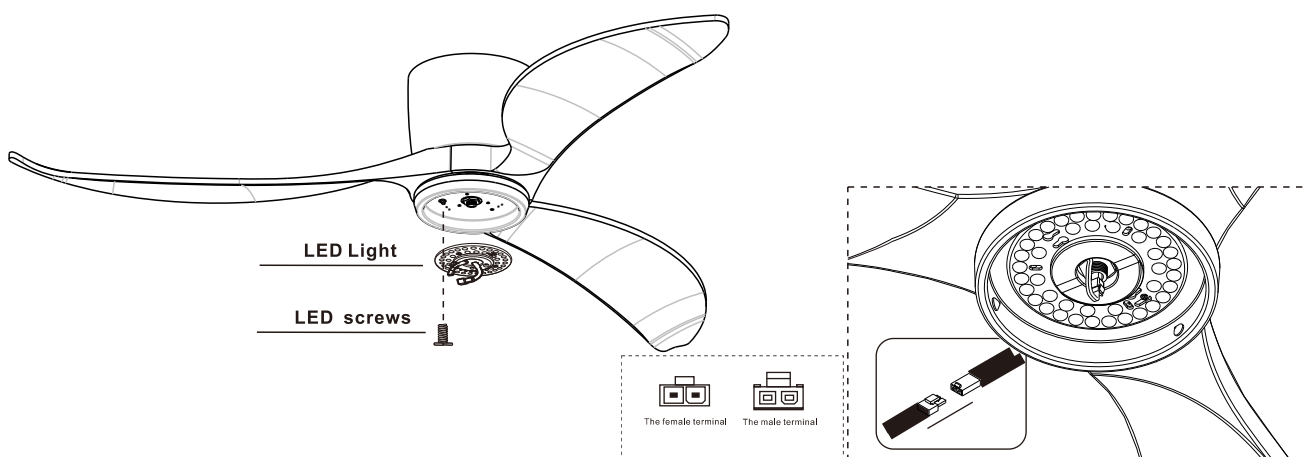


- 1: Put the LED light source into the disc (the LED light source has a magnet, which can be directly magnetized on the disc)
- 2: Pass the LED lead of the motor through the hole in the middle of the LED light source.
- 3: Then plug the male terminal of LED lead into the female terminal of LED light source (as shown in figure)

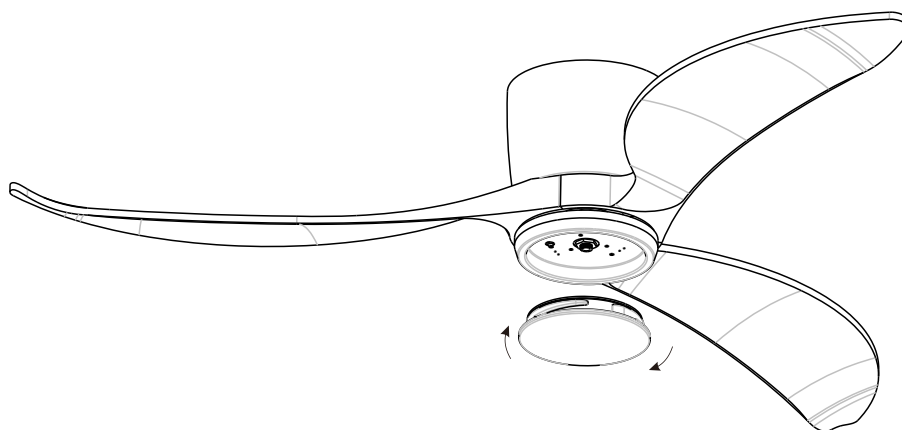

1. Screw the glass lampshade into the lamp in a counterclockwise direction. Make sure the glass lampshade is locked.

REMOTE CONTROL MANUAL

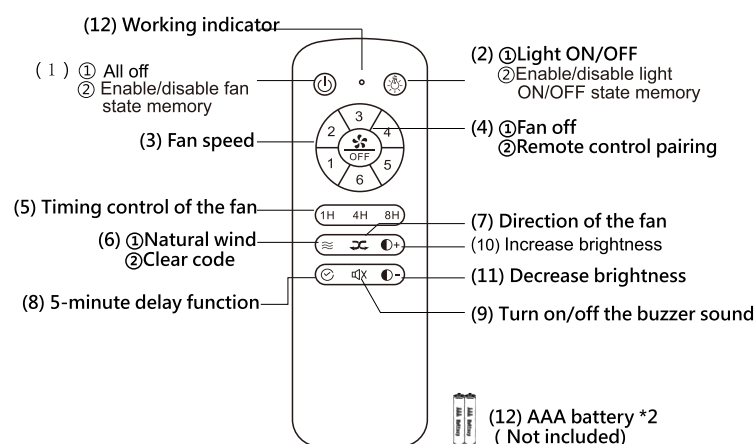

- (1) **All OFF:**
- Turn OFF the Fan and Light simultaneously.
 - Fan Memory Setting
 - To Enable:** Press and hold the button for 2-3 seconds until you hear a long beep. The device will now remember its last speed setting before power-off.
 - To Disable:** Press and hold the button for 2-3 seconds until you hear two short beeps. The memory function is now deactivated. Upon power-up, the fan will remain OFF by default and must be started manually using the remote control.
- (2) **Light ON/OFF:**
- Press the key to turn on or turn off the light.
 - Light State Memory Setting
 - To Enable:** Press and hold the button for 2-3 seconds until you hear a long beep. The device will now remember its last state (ON/OFF) before power-off.
 - To Disable:** Press and hold the button for 2-3 seconds until you hear two short beeps. The memory function is now deactivated. Upon power-up, the light will automatically turn ON by default, regardless of its previous state.
- (3) **Fan speed:**
- Press keys 1-6 to adjust the fan speed.
- (4) **Fan OFF / Remote control pairing:**
- Turn OFF the fan.
 - For remote control pairing, press and hold the button for 3-5 seconds within 30 seconds of powering on. The buzzer will emit a long beep to confirm that the pairing is complete.
- Note: The remote controller only needs to be paired once. After pairing, it will retain memory. Products are pre-paired at the factory. If the remote control is damaged or lost, pairing with a new remote control is necessary before use.
- (5) **Timing control of the Fan:**
- Press the 1H/4H/8H keys to set the fan timer for 1, 4, or 8 hours. The fan will automatically turn off when the timer ends. During the timing function, all functions of the ceiling fan can be operated. To cancel the timer setting, press key(1) or key(4) while the timing function is active.
- (6) **Natural wind:**
- Press the key to activate the natural wind mode, which automatically adjusts the fan speed between levels 1 and 6.
- (7) **Direction of the fan:**
- Change the direction of the fan using the appropriate controls.
- (8) **5-minute delay function:**
- Press the key to activate the 5-minute delay function for the light, after which it will automatically turn off.
- Note: After the delay, the fan remains unchanged. This function is primarily for pre-sleep lighting delays. If used before leaving, you'll need to manually turn off the fan with 'Fan OFF'.
- (9) **Turn ON/OFF the buzzer sound:**
- Press the key to toggle the buzzer sound on or off.
- (10) **Increase brightness:**
- Press the key to increase brightness.
- (11) **Decrease brightness:**
- Press the key to decrease brightness.


AAA battery (2):

- Install 2 AAA batteries before use.
- Remove the batteries when not in use for an extended period.


About Light Color Temperature:

To select the color: Toggle the light ON and OFF quickly (within 7 seconds) to cycle to the next color temperature.


To save the color: Turn the light OFF and wait for more than 7 seconds. The next time you turn it on, it will remember the last color temperature used.

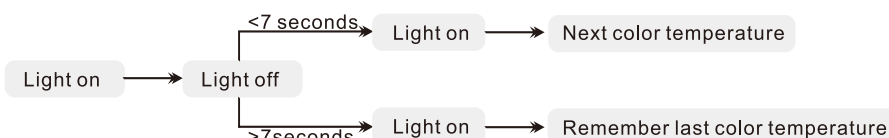


Enable fan memory:

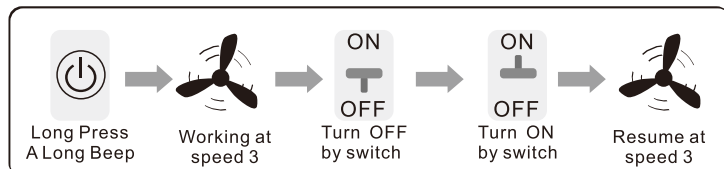


Disable fan memory:

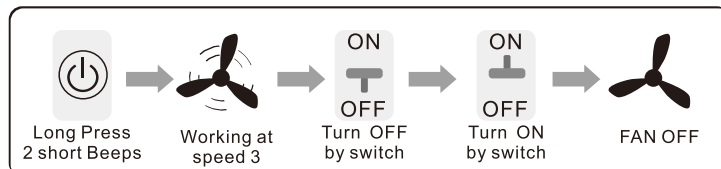

Enable light state memory:

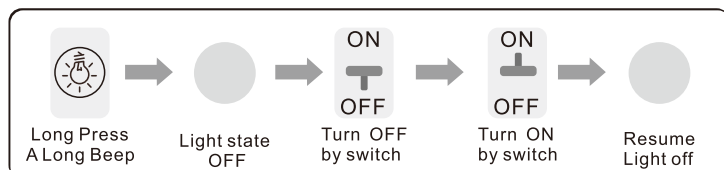

Disable light state memory:

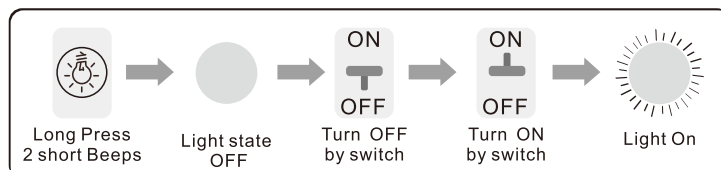

※ Long press = press and hold for 2-3 seconds