

INSTALLATION

 
Product Manual

Version: 210270-01-24A-PF



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

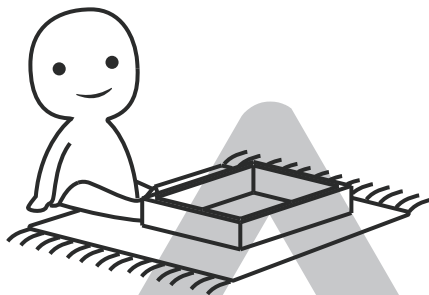

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.











Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

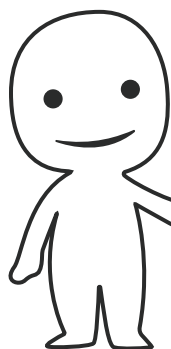

Please prepare the following tools

   

          
When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

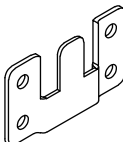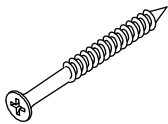A x 40  M5 x 42 mm	B x 40  Ø 15 x 10 mm	C x 16  M5 x 40 mm	D x 16  M6 x 12 mm	E x 6  M6 x 20 mm
F x 70  M6 x 30 mm	G x 4  M6 x 40 mm	H x 64  M6 mm	I x 80  M3.5 x 12 mm	J x 88  M3.5 x 14 mm
K x 18  M3.5 x 25 mm	L x 8  BBK	M x 32  41 x 16 mm	N x 20  Ø 8 x 60 mm	O x 20  Ø 5 x 70 mm
P x 12  M6 x 50 mm	Q x 4  220-96 mm	R x 8  M4 x 18 mm	x 1  12mm 10mm	x 1  #4


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

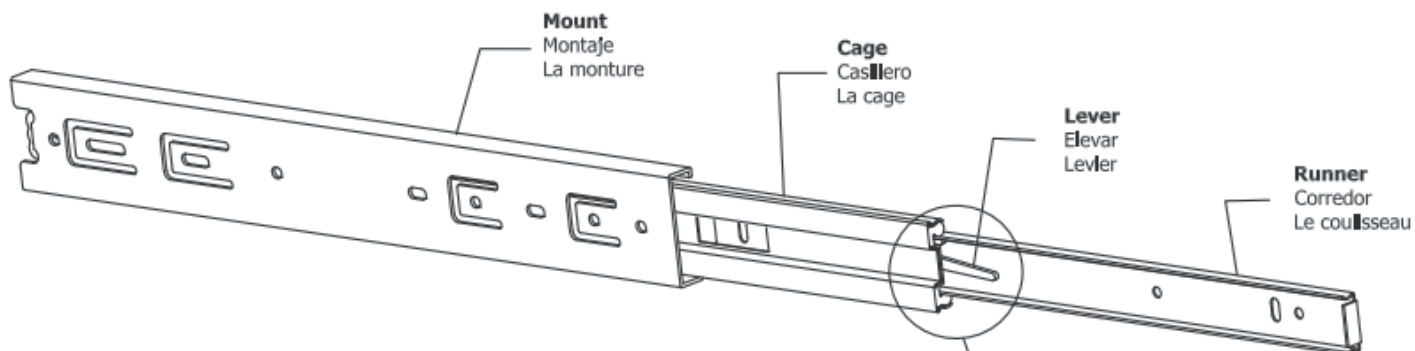

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive



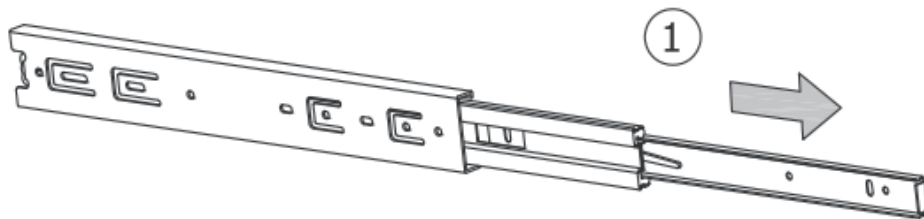


 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

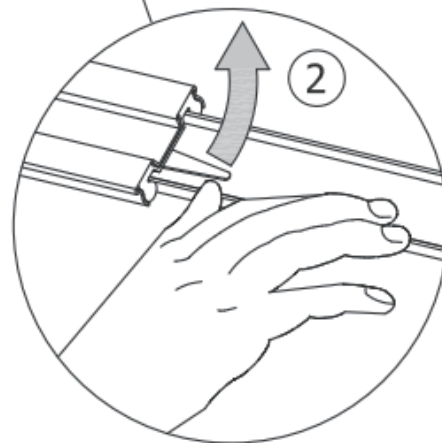

    STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

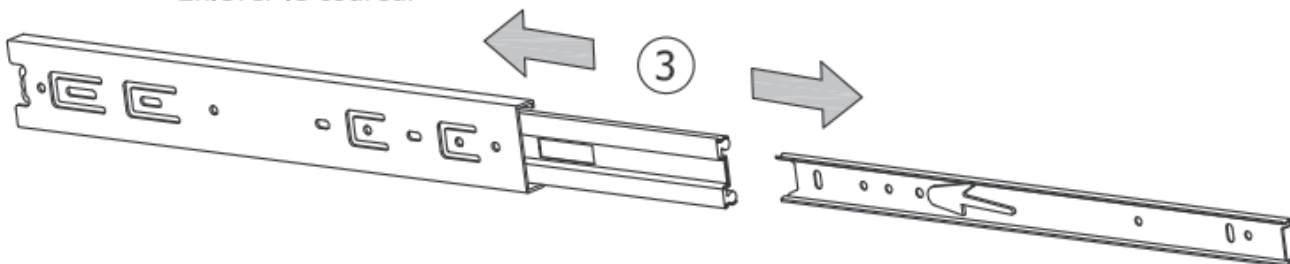

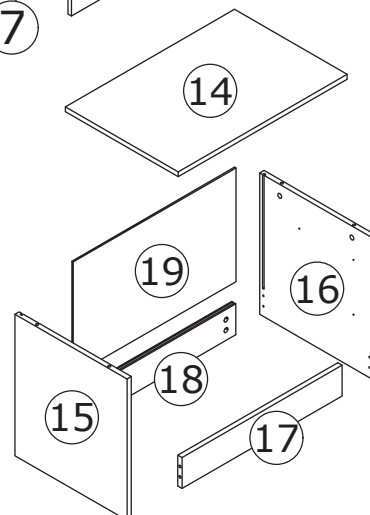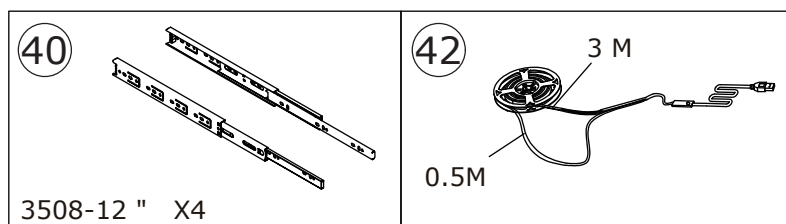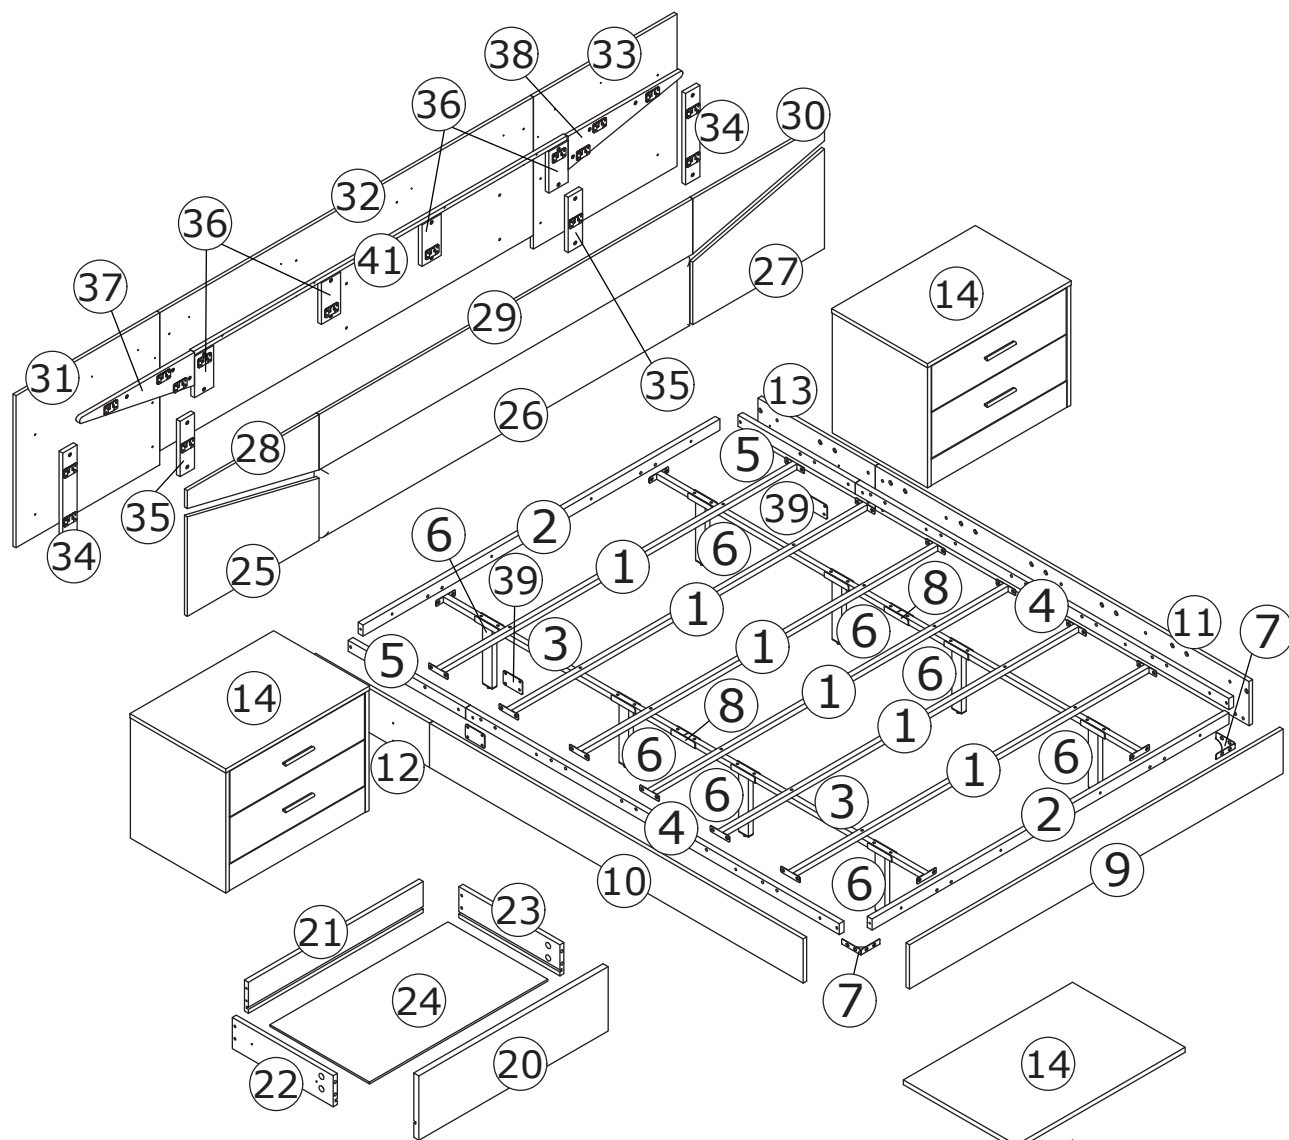


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

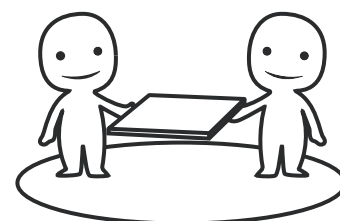

ASSEMBLED BY 2 ADULTS

1

F x 16

 
 


M6 x 30 mm


H x 16



M6 mm



 Fix leg part 6 to tube 3 using screw(F) and nut(H) as shown.

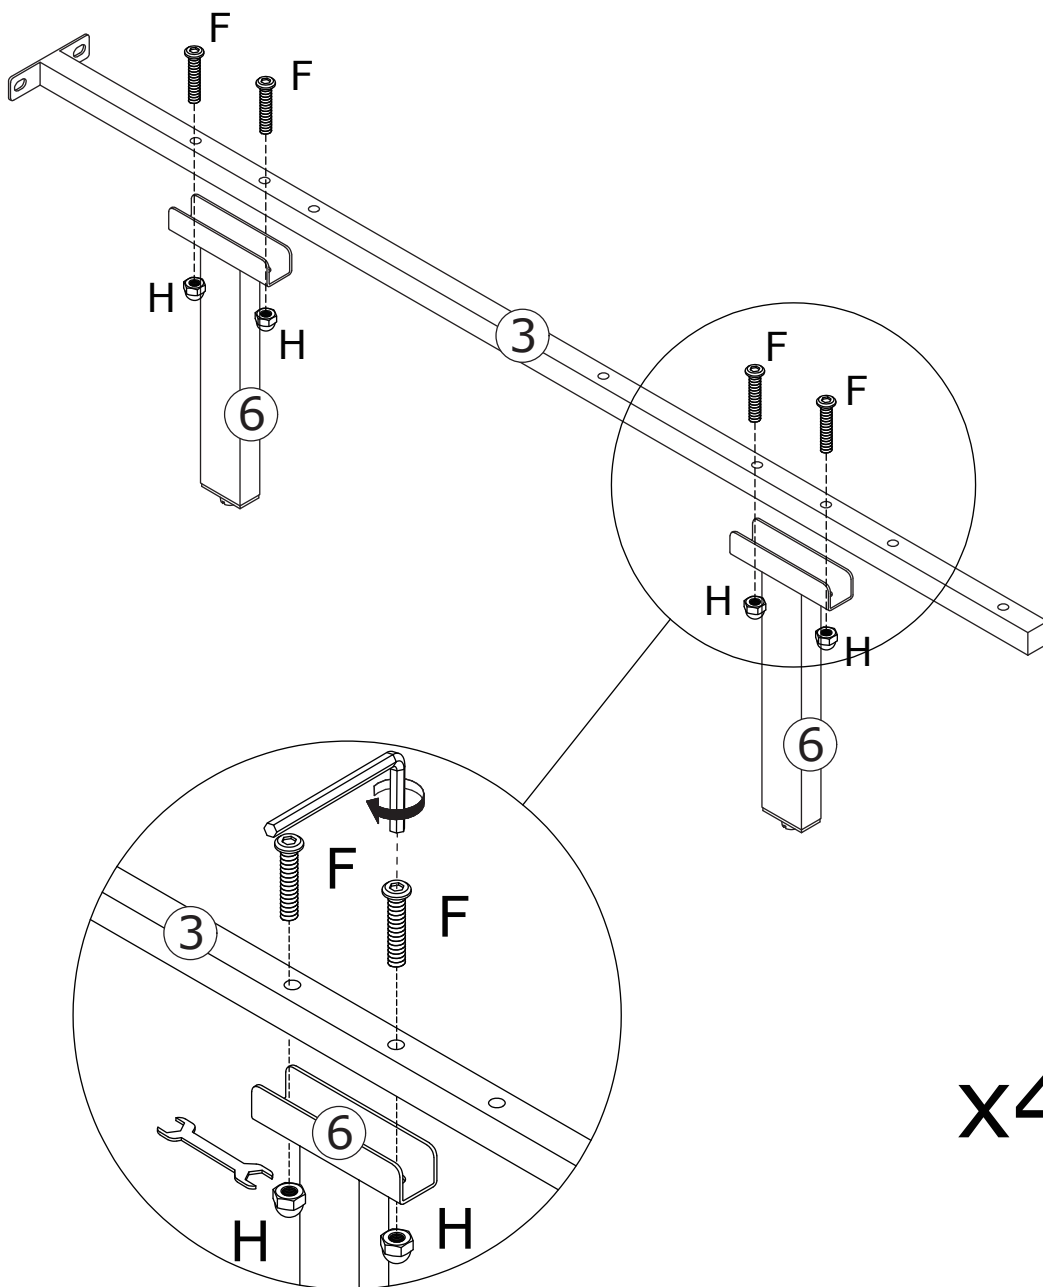


x4



2



 
Fix tube 1 to tube 3 using screw(P) and nut(H) as shown.

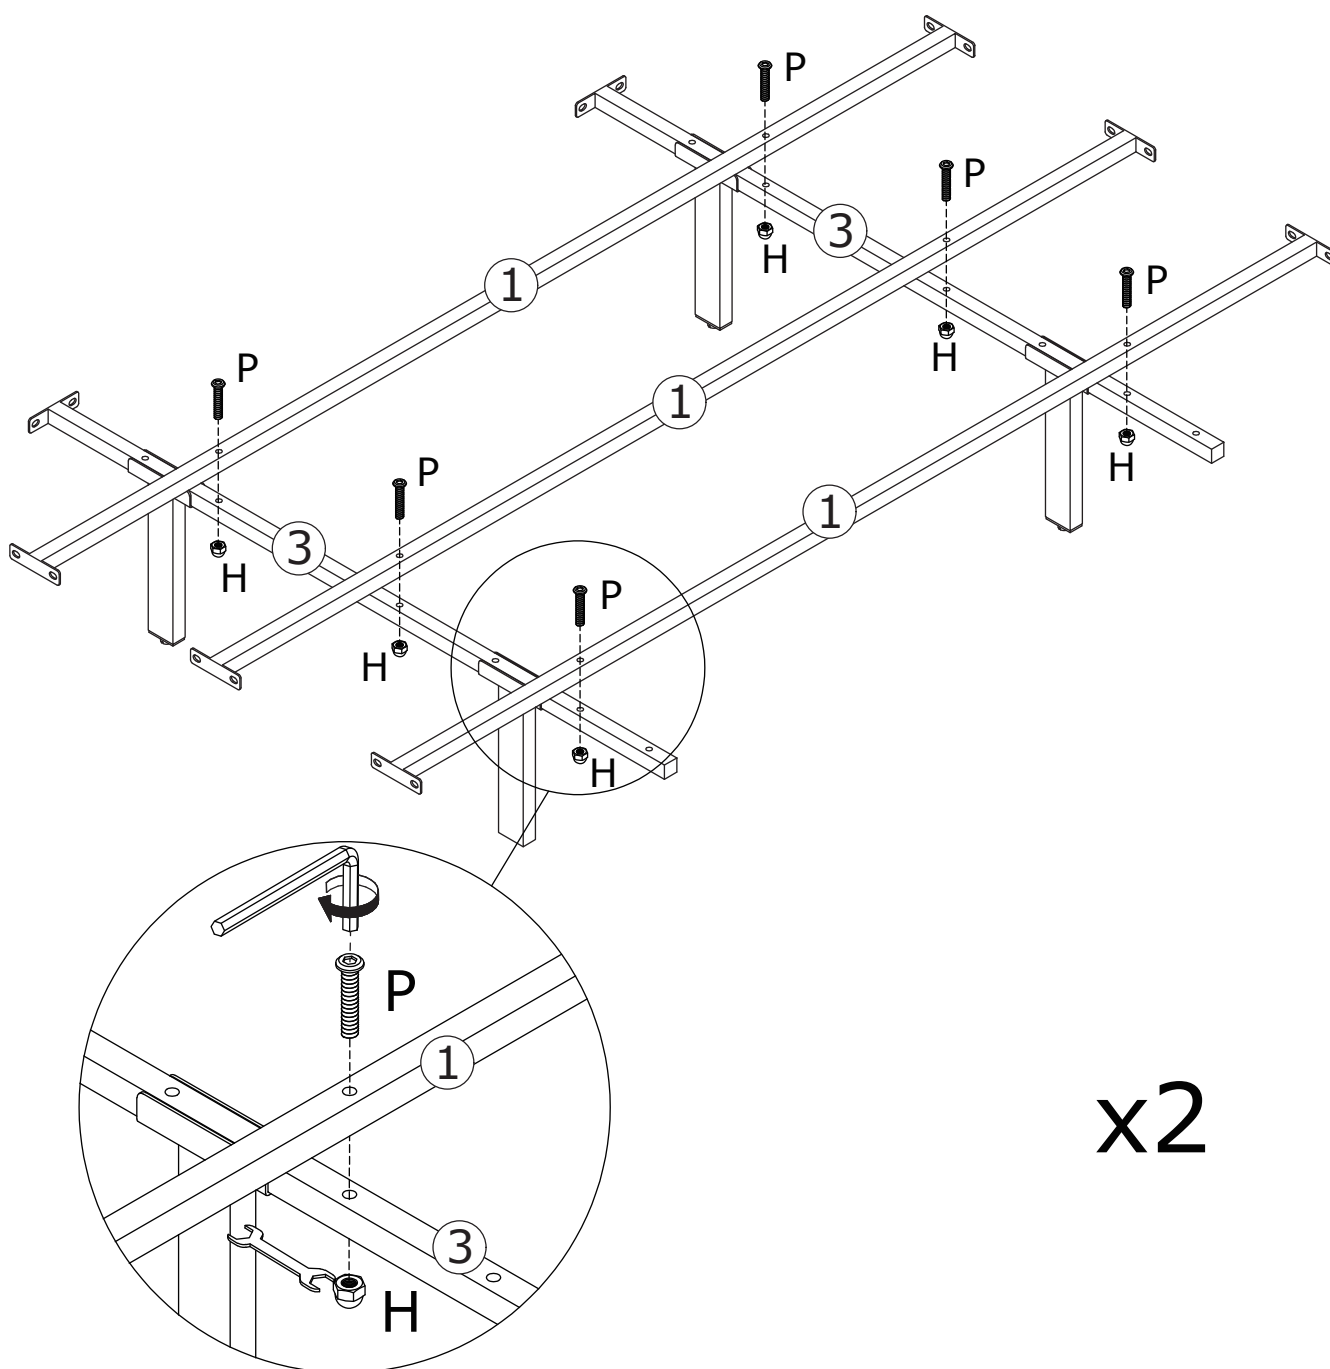

3

  F x 8  M6 x 30 mm	H x 8  M6 mm	 
--	---	---

 Fix tube 2 to tube 3 using screw(F) and nut(H) as shown.

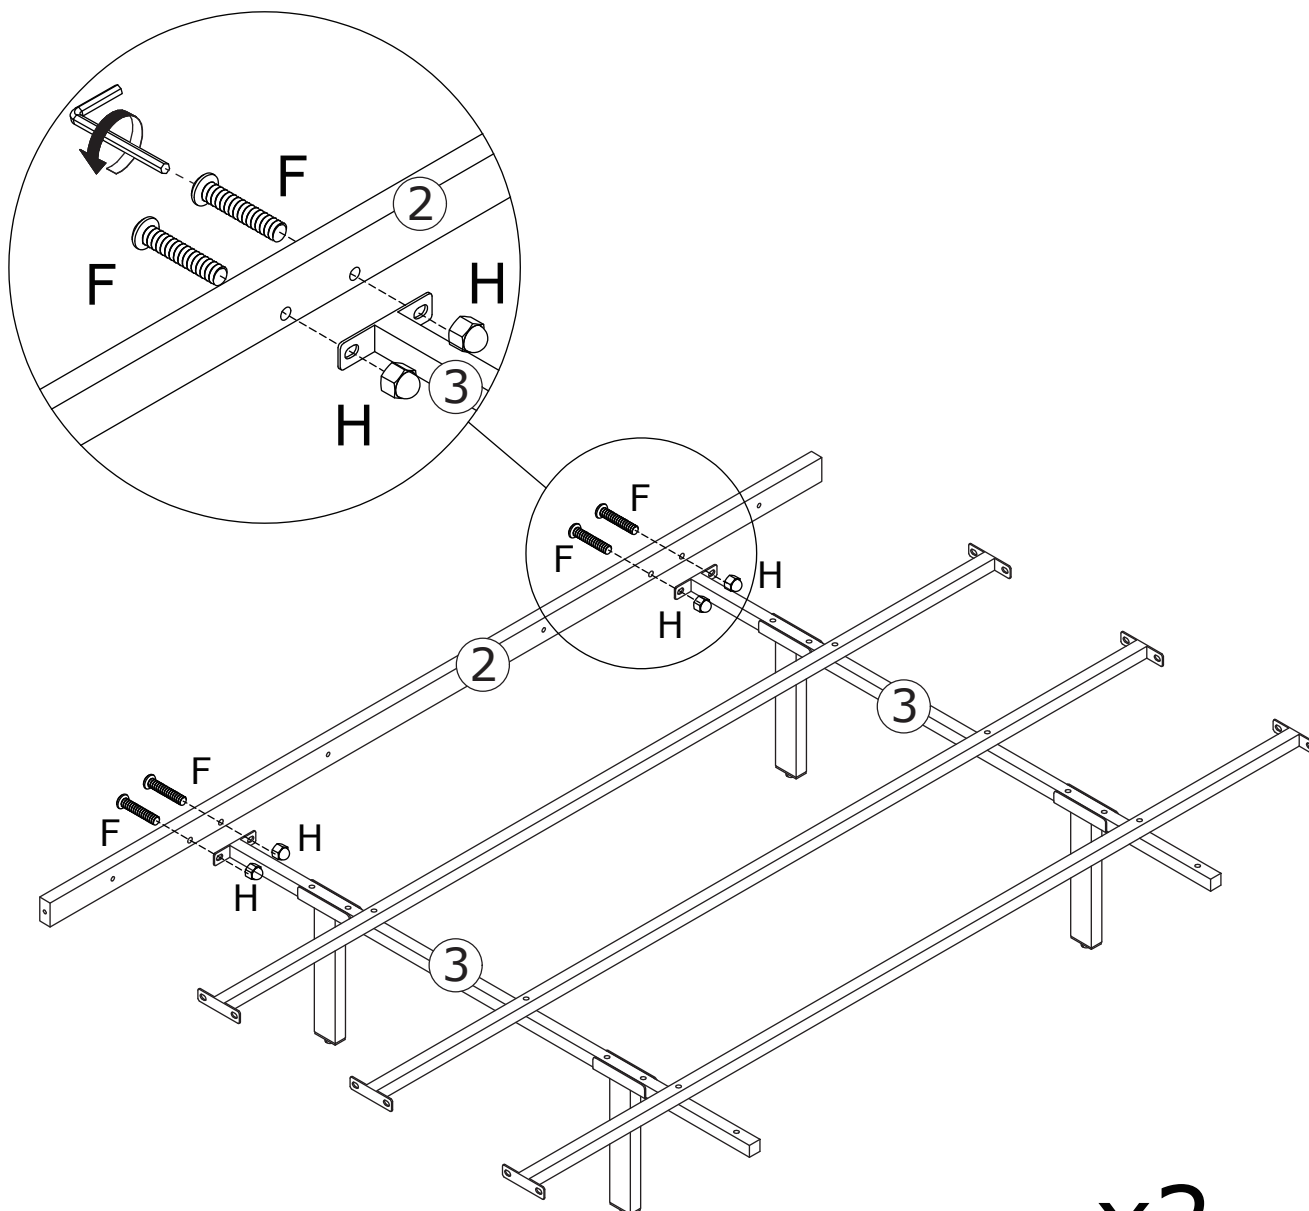

x2

4

F x 4

 
 


M6 x 30 mm


H x 4



M6 mm



 
Fix iron sheet 8 to tube 3 using screw(F) and nut(H) as shown.

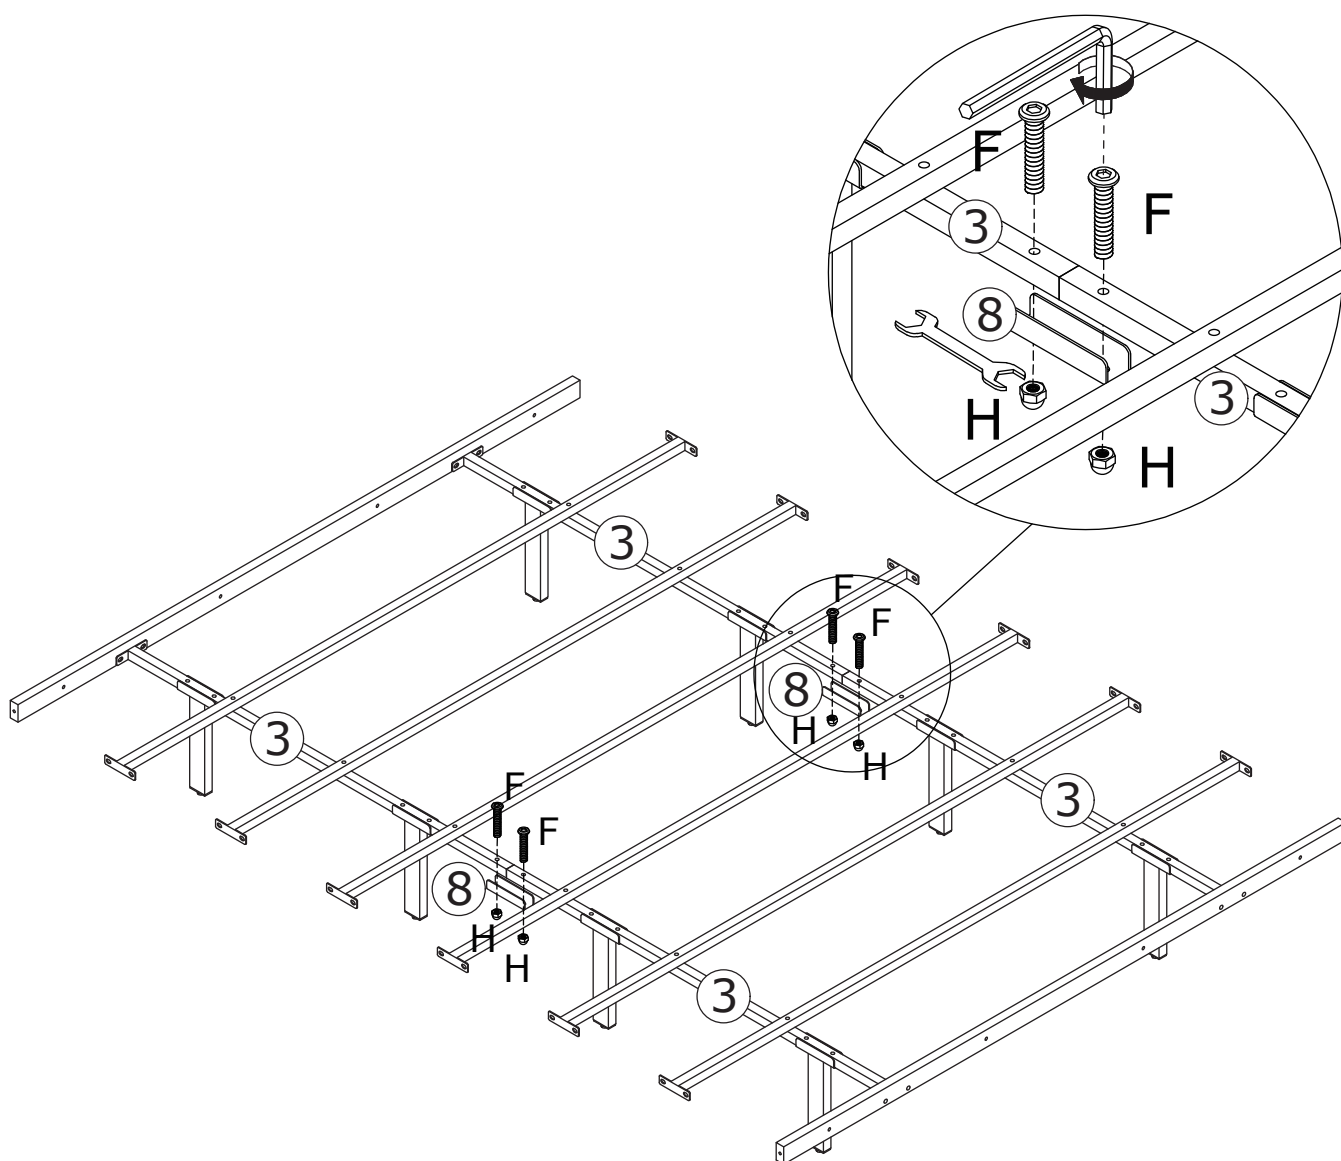



5



 
Fix tube 4 and 5 to tube 1 using screw(F) and nut(H) as shown.

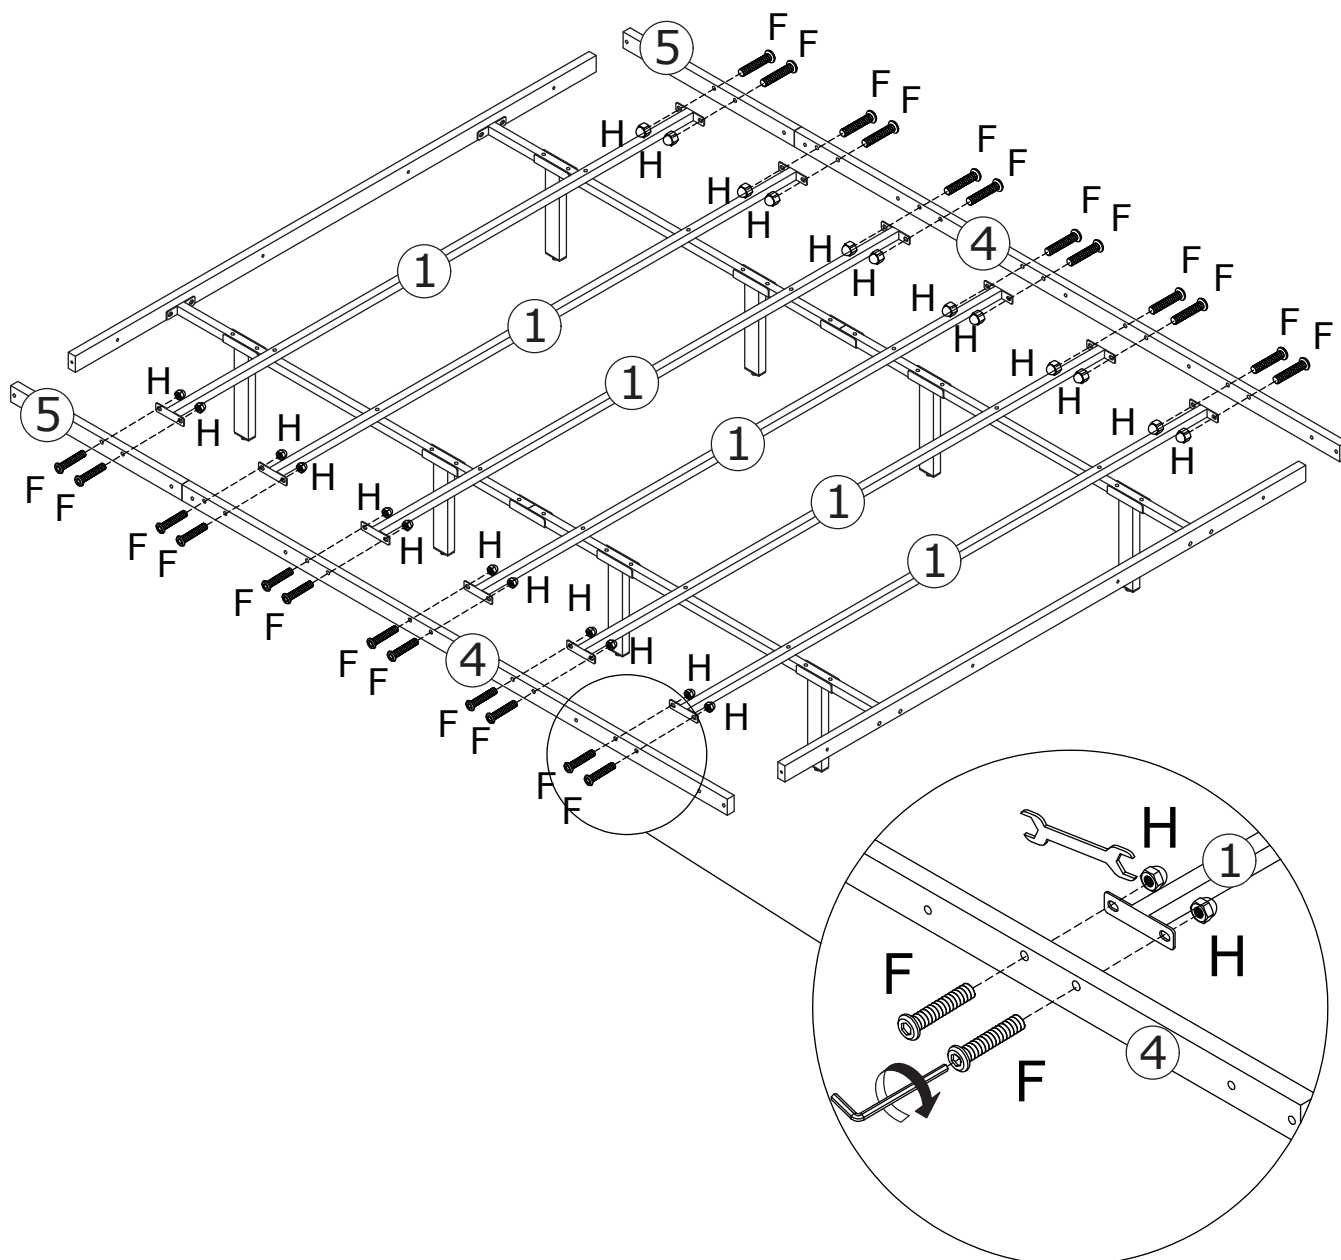

6

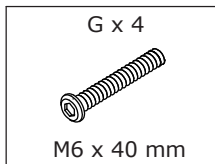  

 Fix tube 2 to tube 4 and 5
using screw(G) as shown.

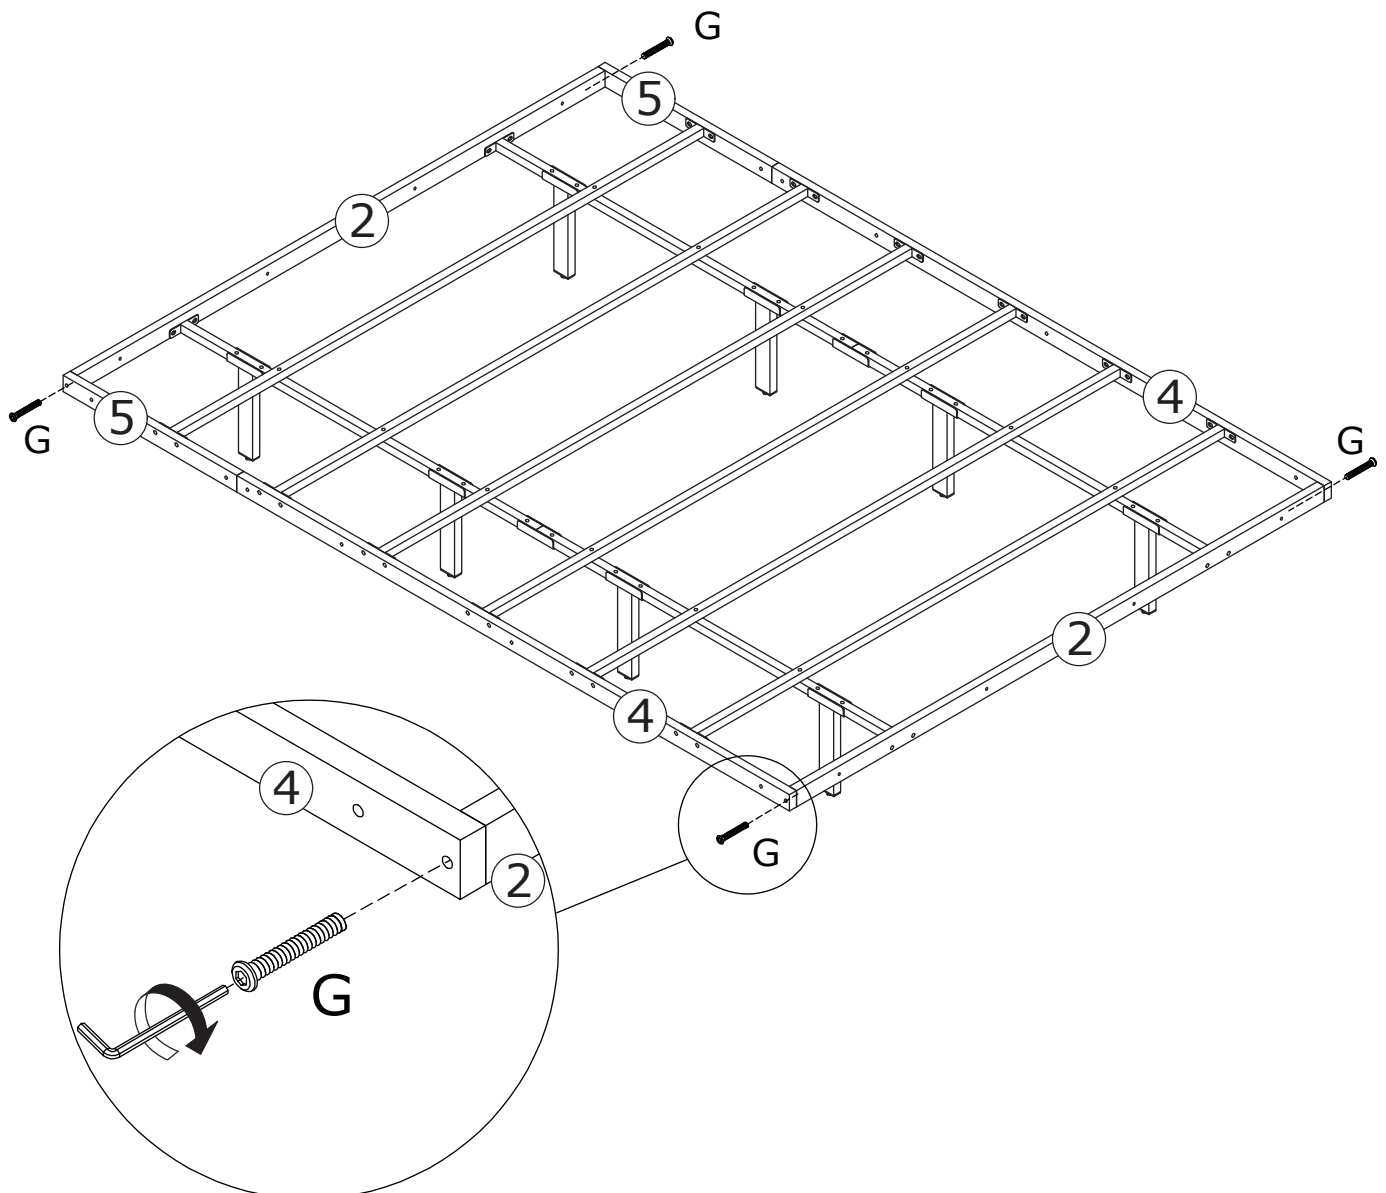


7


F x 14



 M6 x 30 mm



 Fix panel 10 and 11 to tube 4 using screw(F) as shown.
Fix panel 12 and 13 to tube 5 using screw(F) as shown.

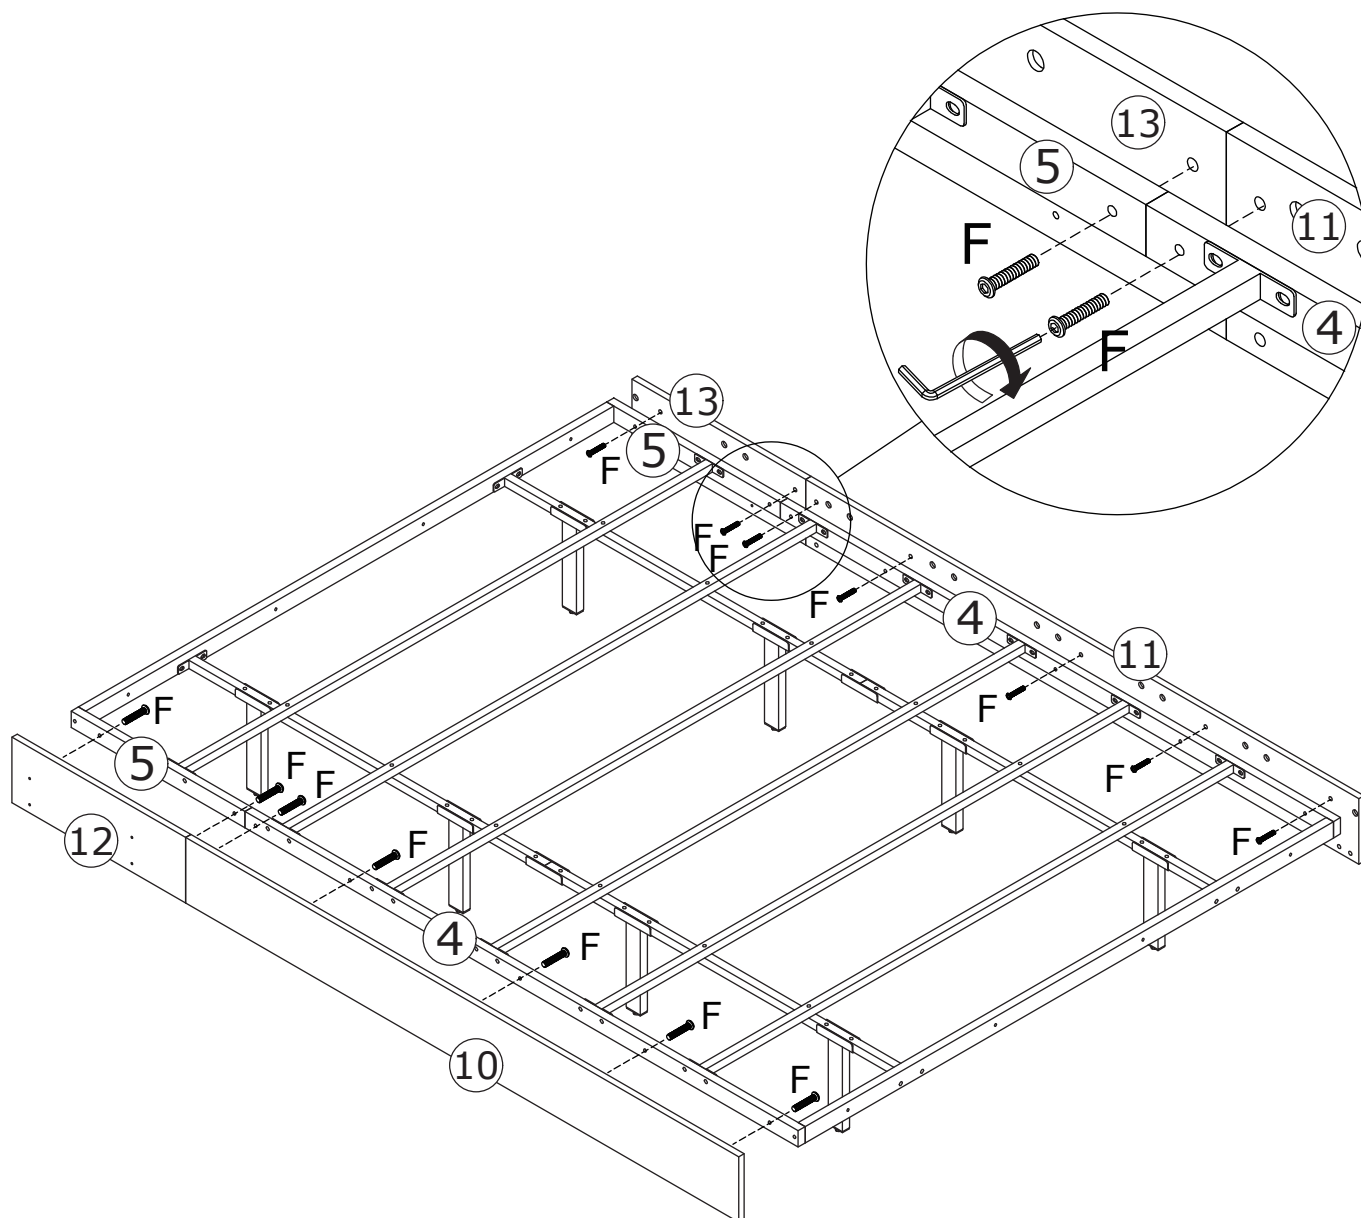


8



D x 8



 M6 x 12 mm



  Fix iron sheet 39 to panel 11, 13 and 10, 12 using screw(D) as shown.

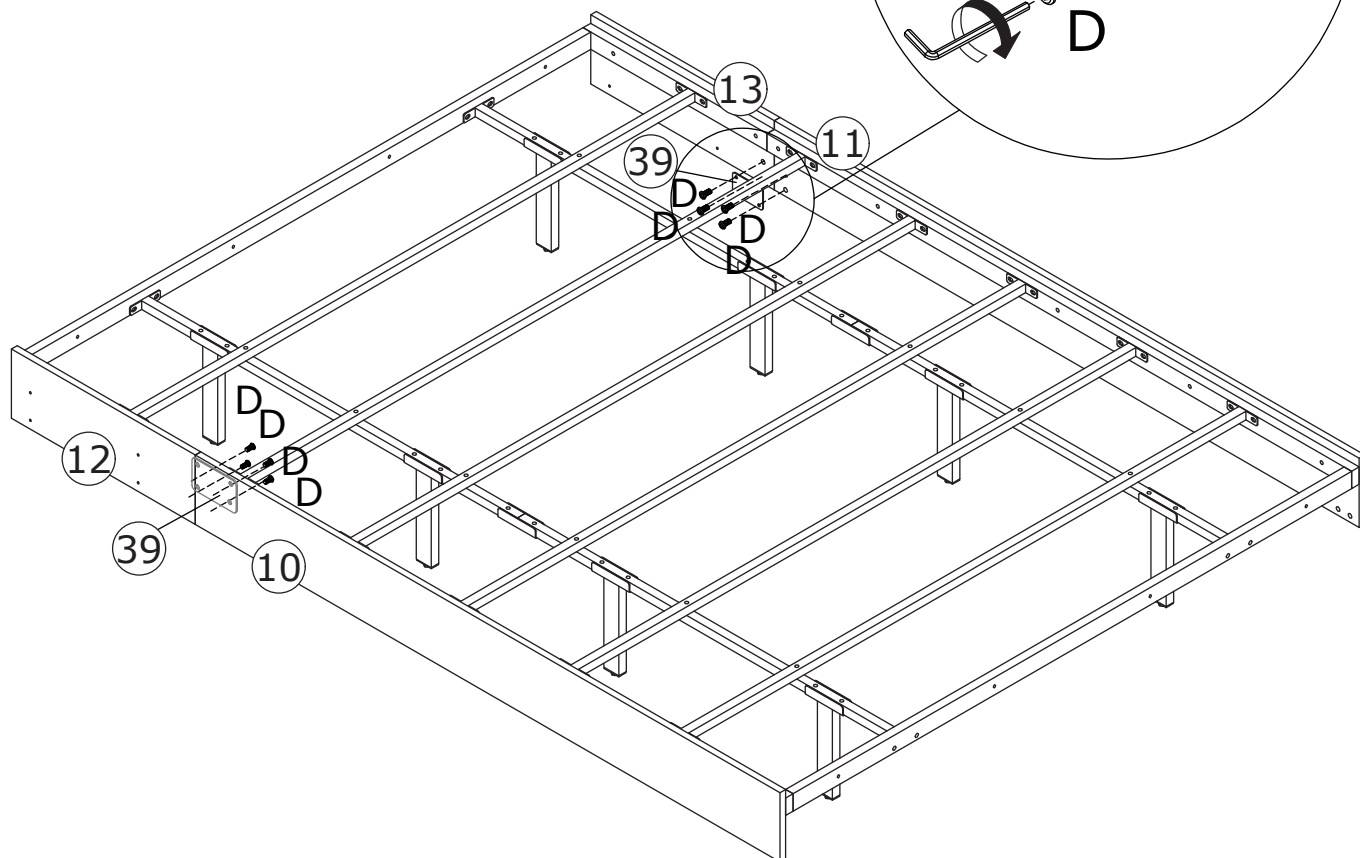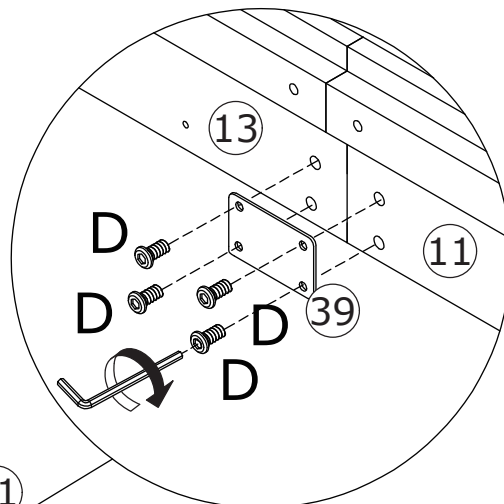


9


D x 4



 M6 x 12 mm



 Fix corner connector 7 to panel 10 and 11 using screw(D) as shown.

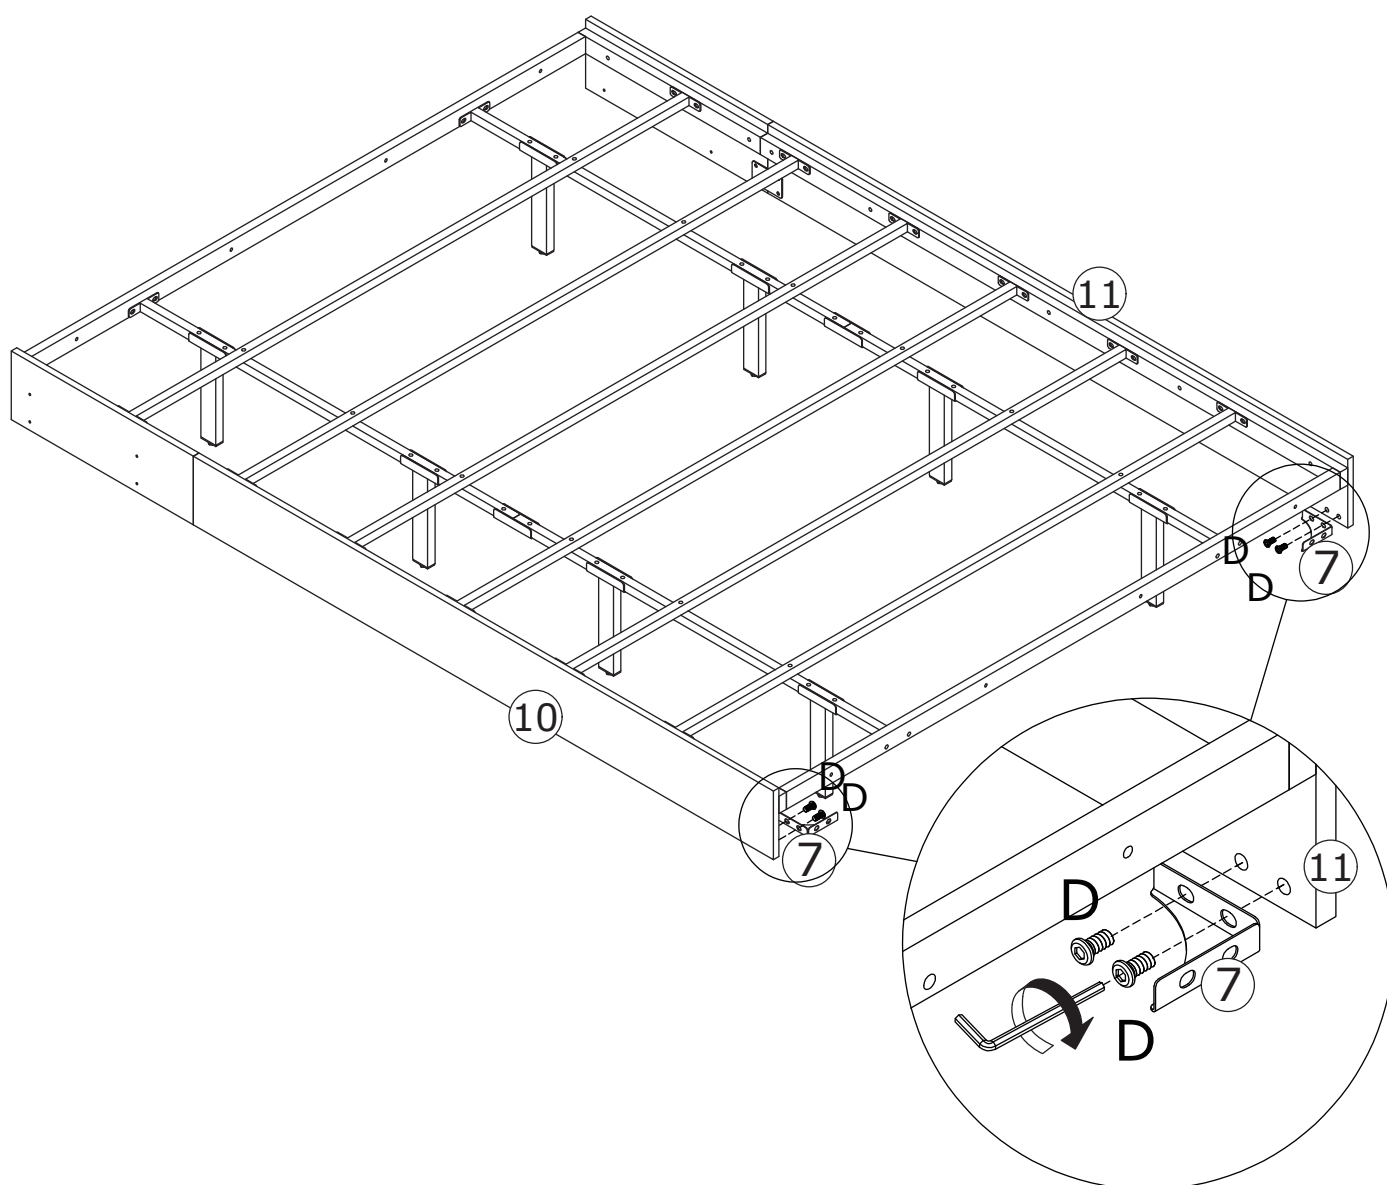

10

F x 4

 


M6 x 30 mm


D x 4



M6 x 12 mm



 Fix panel 9 to corner connector 7 using screw(D) at first.
Fix panel 9 to tube 2 using screw(F) as shown.


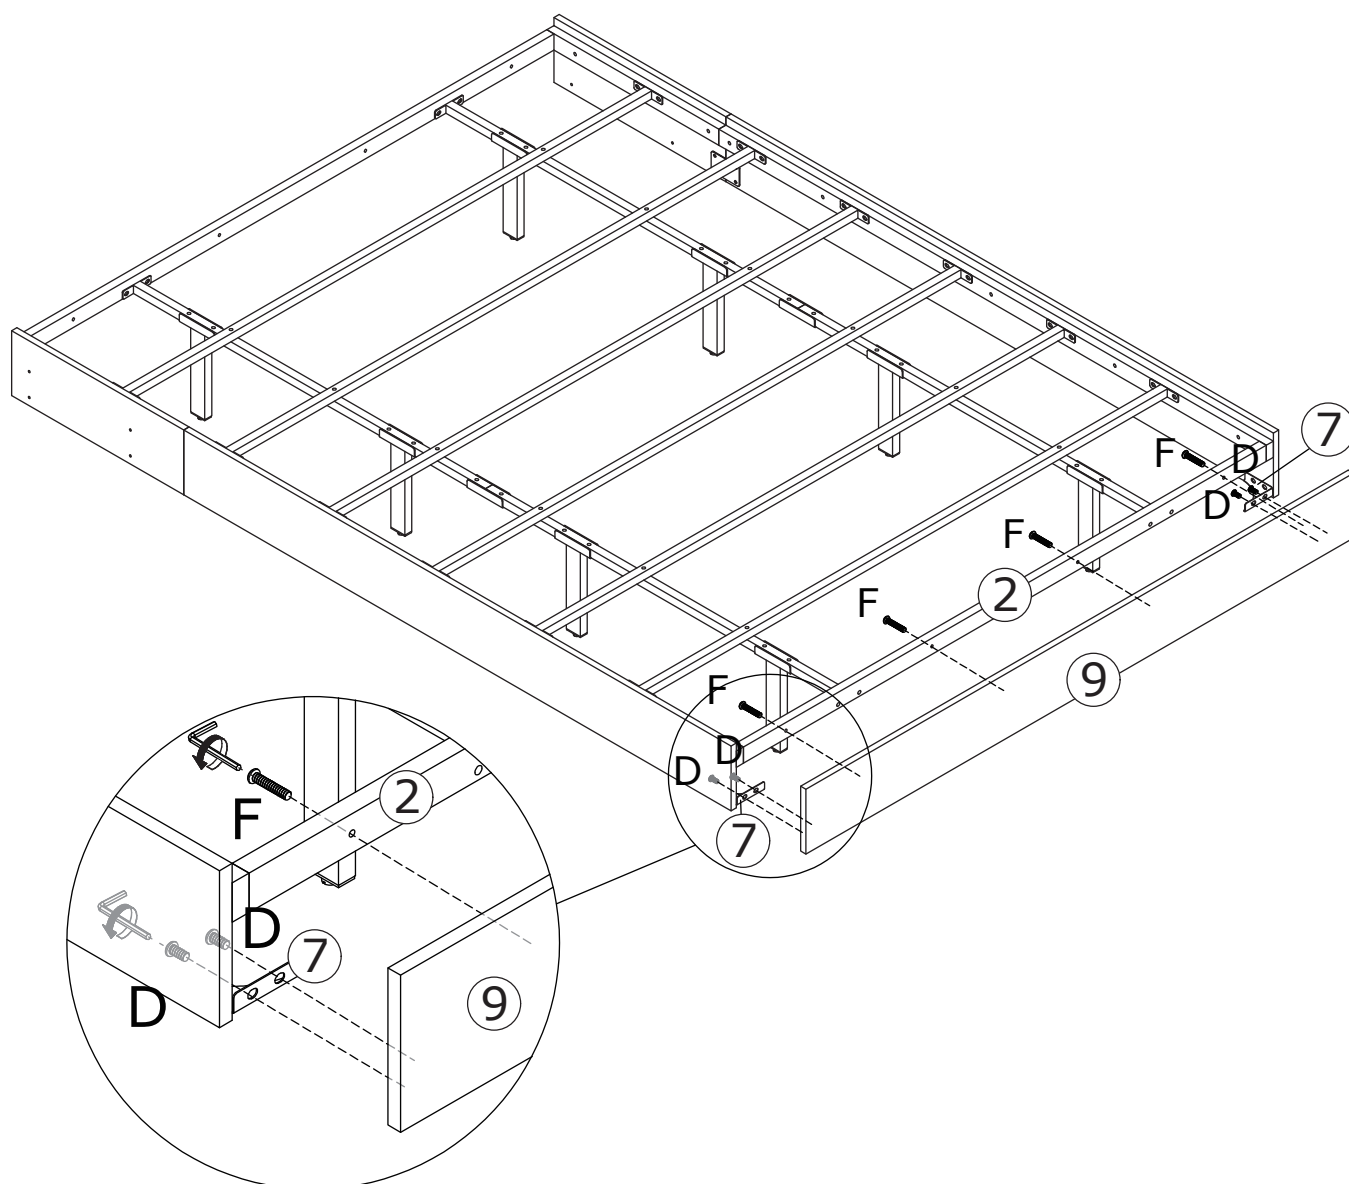


11


N x 4



  
O x 4




WALL

 


WALL

 

WALL

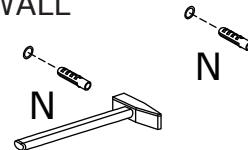 

 
After the bed frame is positioned against the wall and fixed holes are drilled, knock expansion screw(N) into the wall, and then fix tube 2 to the wall using screw(O) as shown.

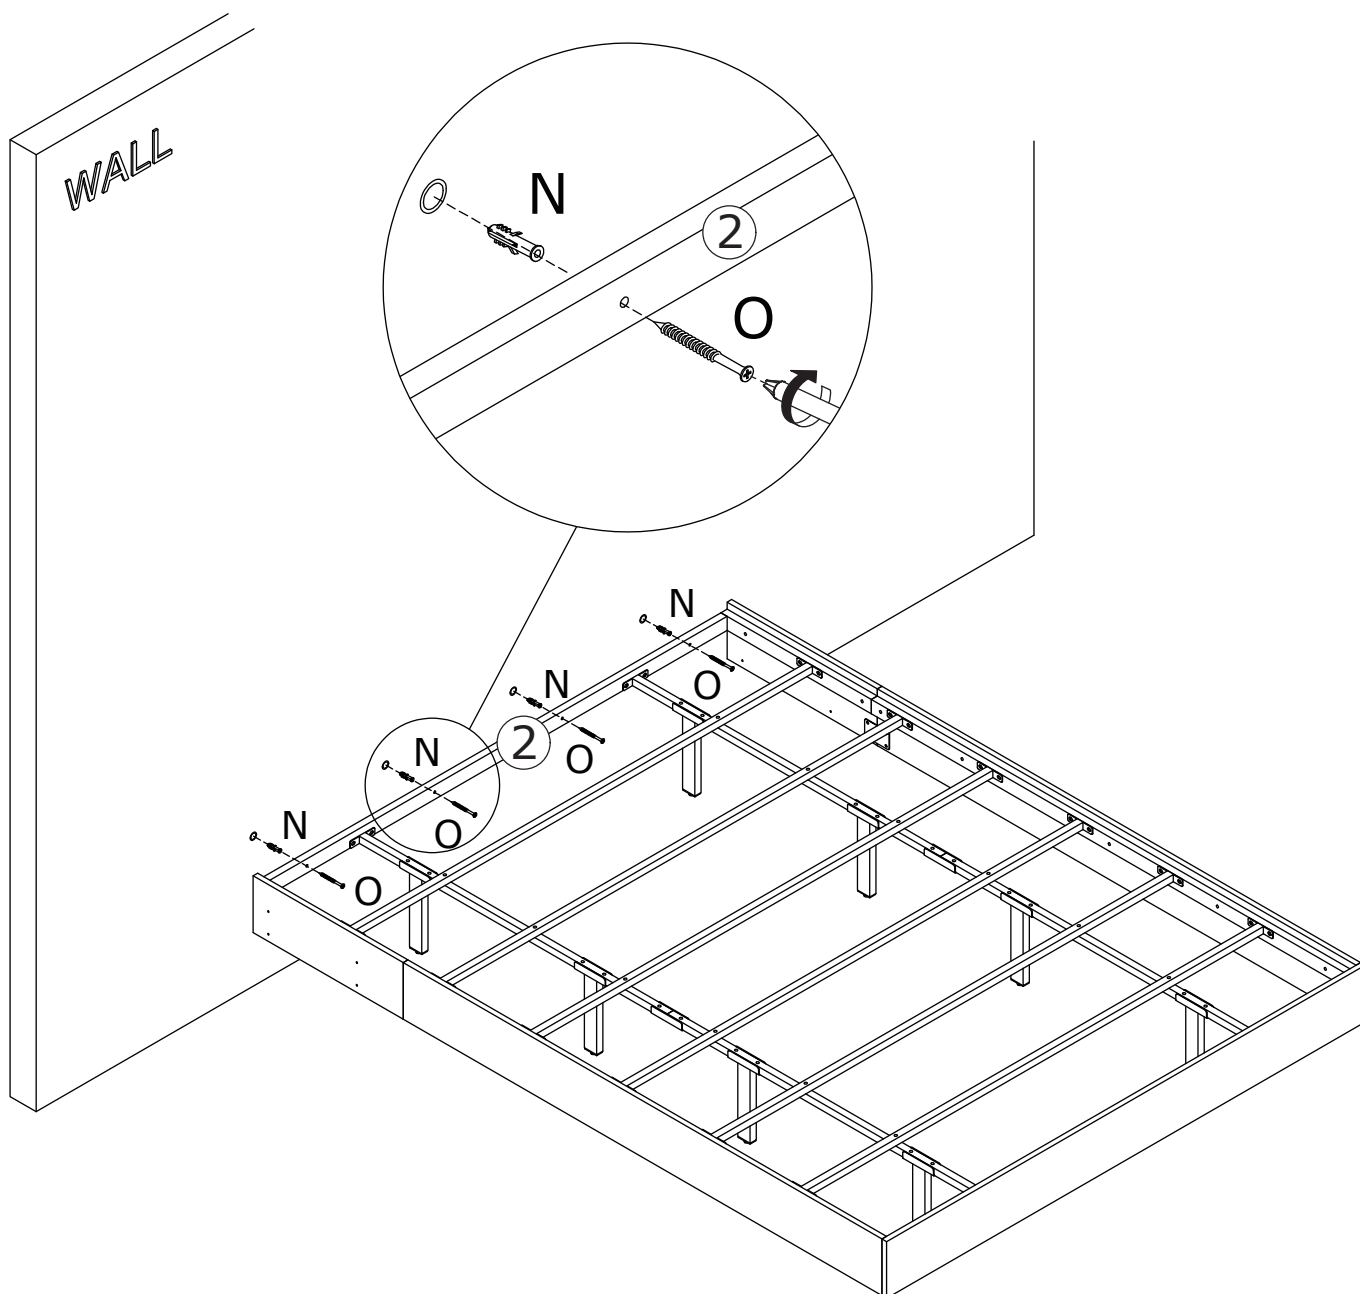








12

A x 16
M5 x 42 mm

 J x 16
M3.5 x 14 mm



       Separate glide into two parts at first(Page 3).
Fix slide rail 40 to panel 15 and 16 with
screw(J) and screw eccentric rod(A) into
as shown.

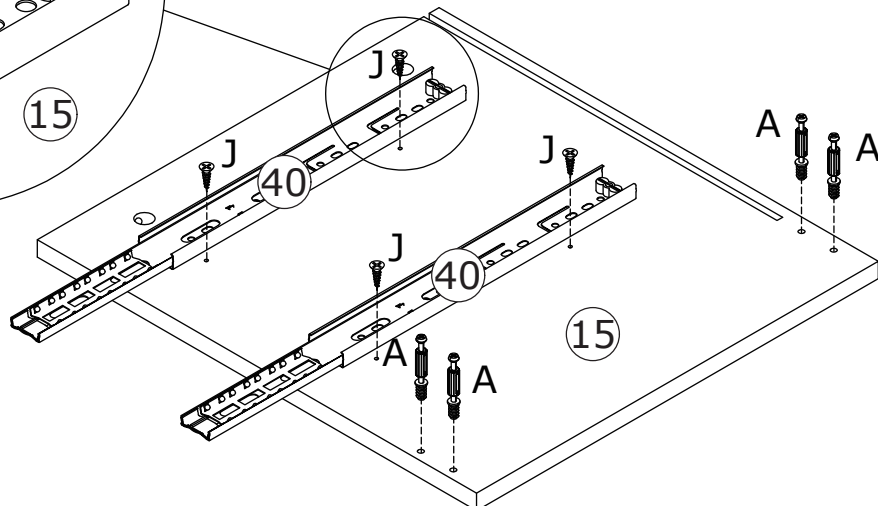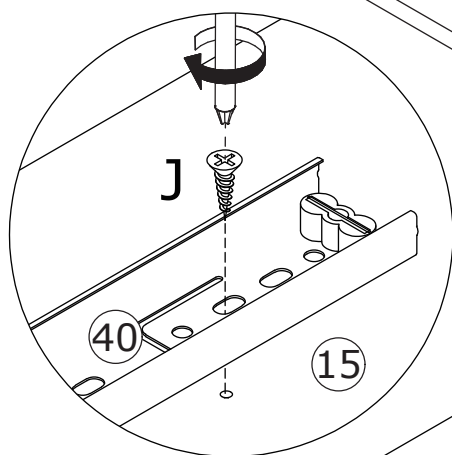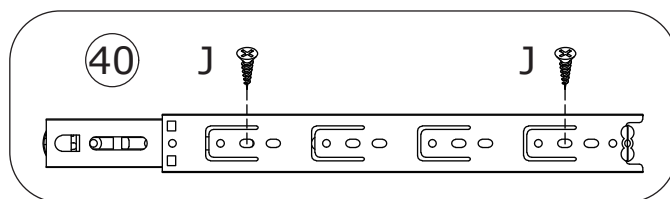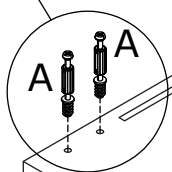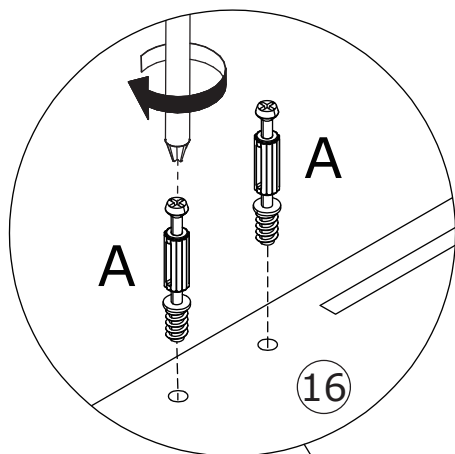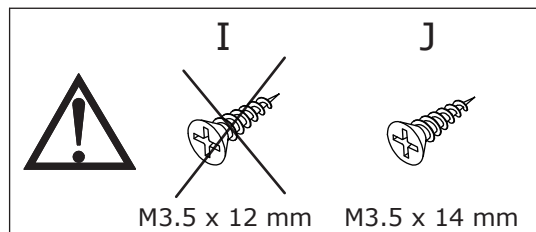
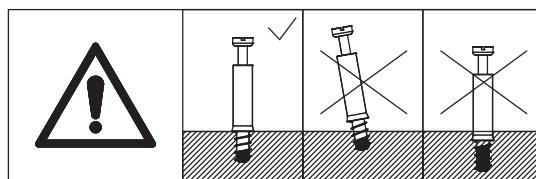


13


B x 16



  Ø15 x 10 mm

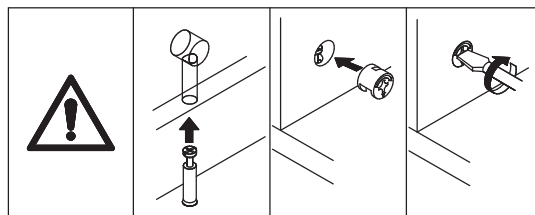

 Connect panel 17 and 18 to panel 15 and 16, add cam lock(B) into panel 17, 18 and turn clockwise to tighten as shown. Insert back panel 19 along available grooves as shown.

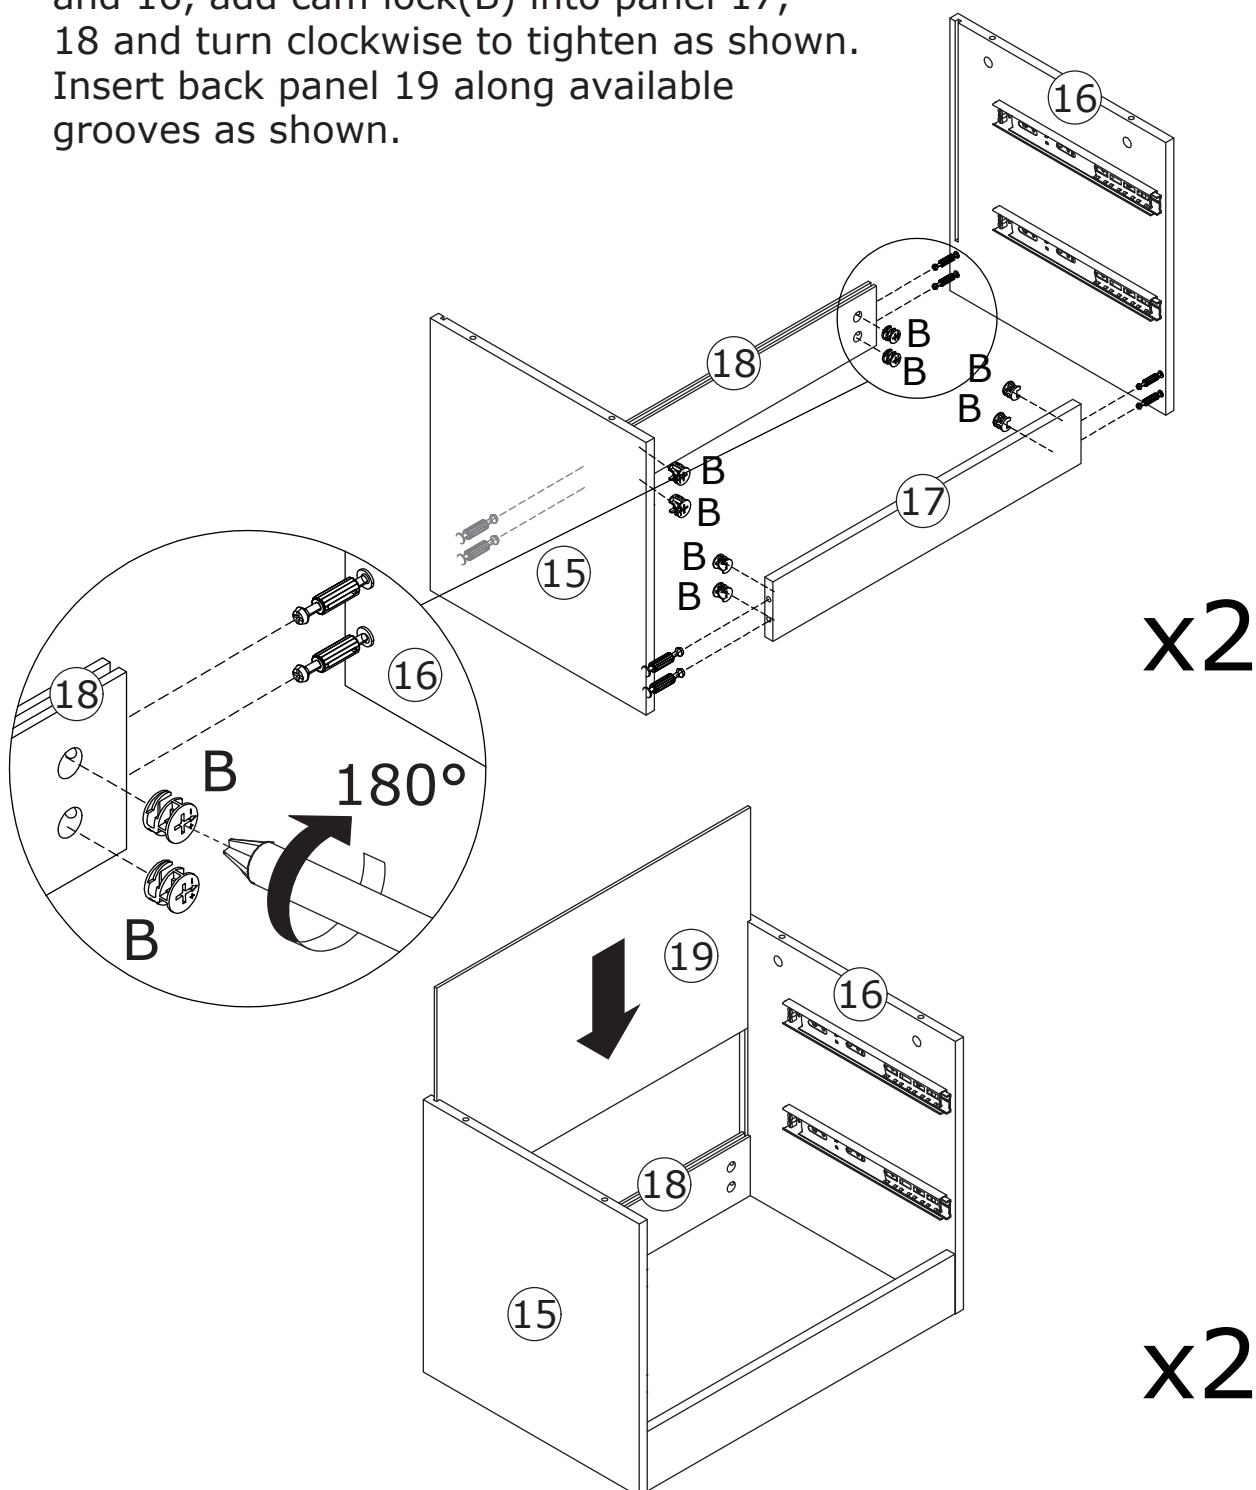

14

A x 8

 


M5 x 42 mm



B x 8



Ø15 x 10 mm



  Screw eccentric rod(A) into panel 14 at first.
Attach panel 14 to panel 15 and 16, add
cam lock(B) into panel 15, 16 and turn
clockwise to tighten as shown.

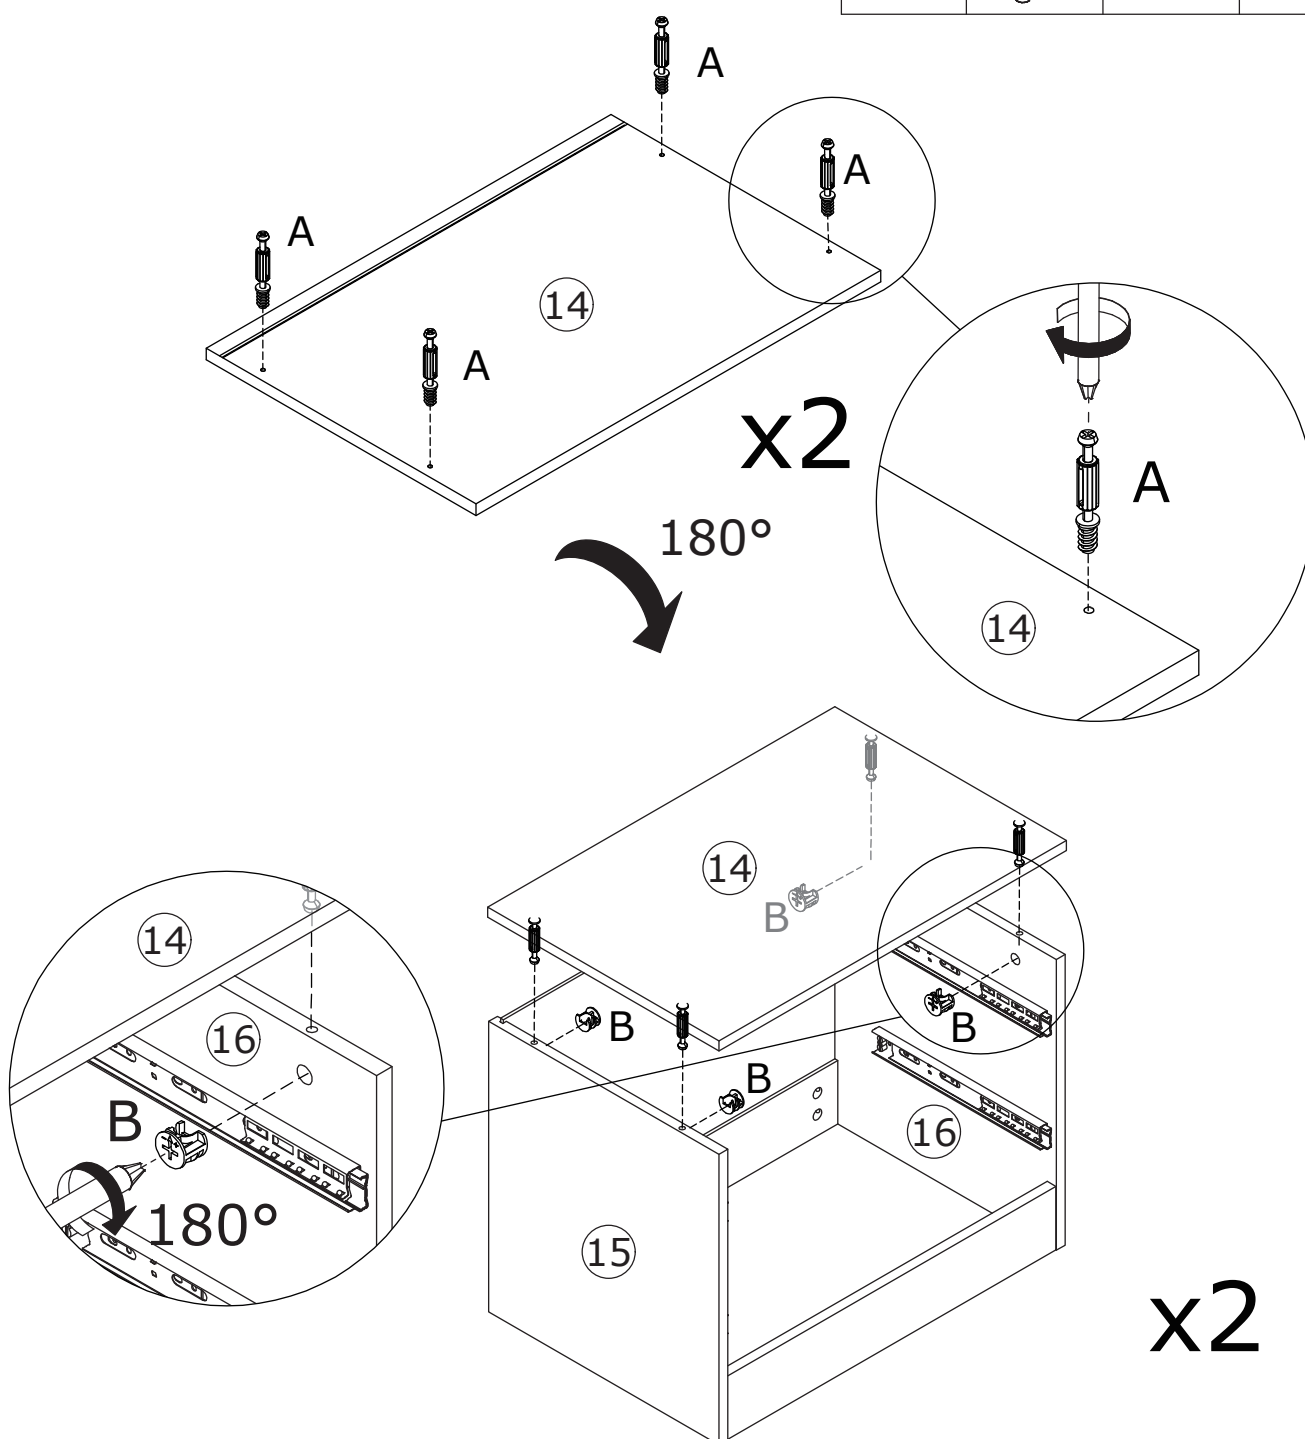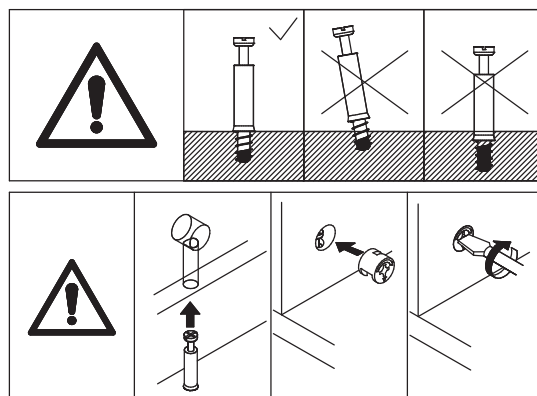

15

L x 8

 


BBK


J x 8



M3.5 x 14 mm



I

 




M3.5 x 12 mm

J



M3.5 x 14 mm

   
Insert buckle(L) into back slots
and fix with screw(J) as shown.

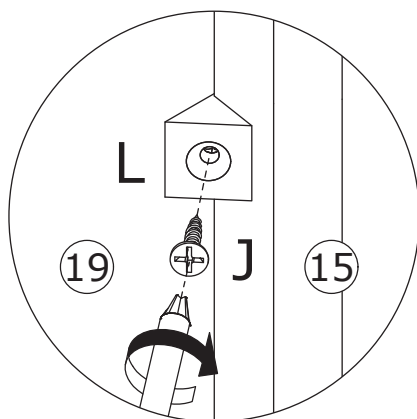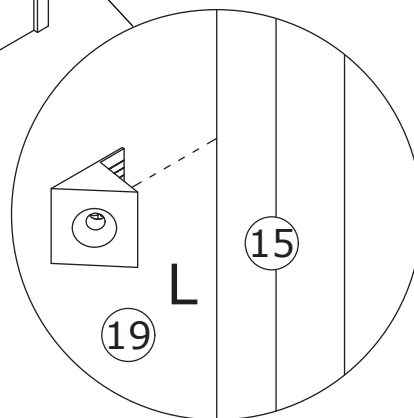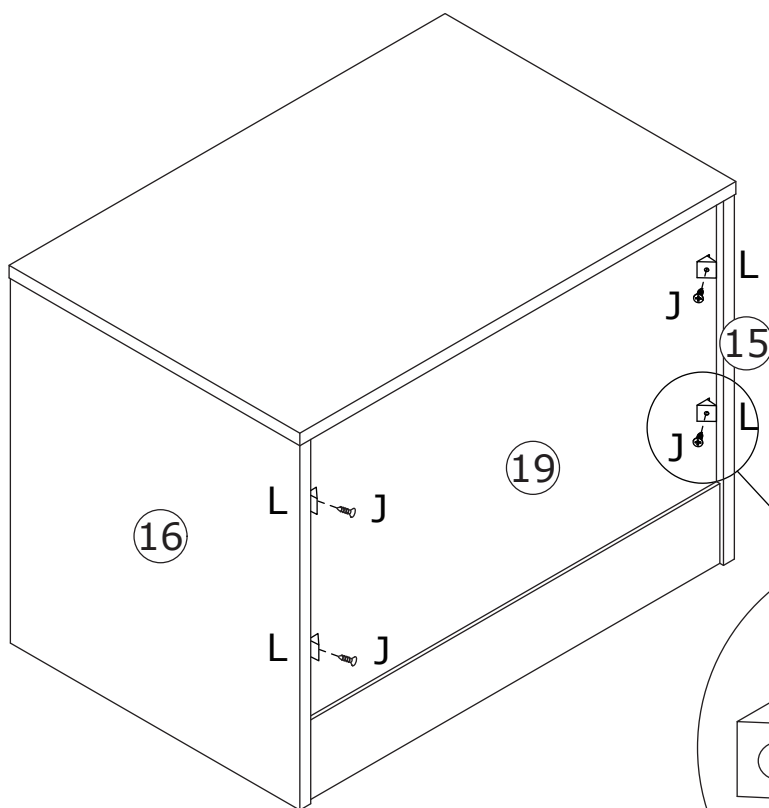


x2

16

 
K x 8



M3.5 x 25 mm

 


 Fix the two components to the bed frame with screw(K) as shown.

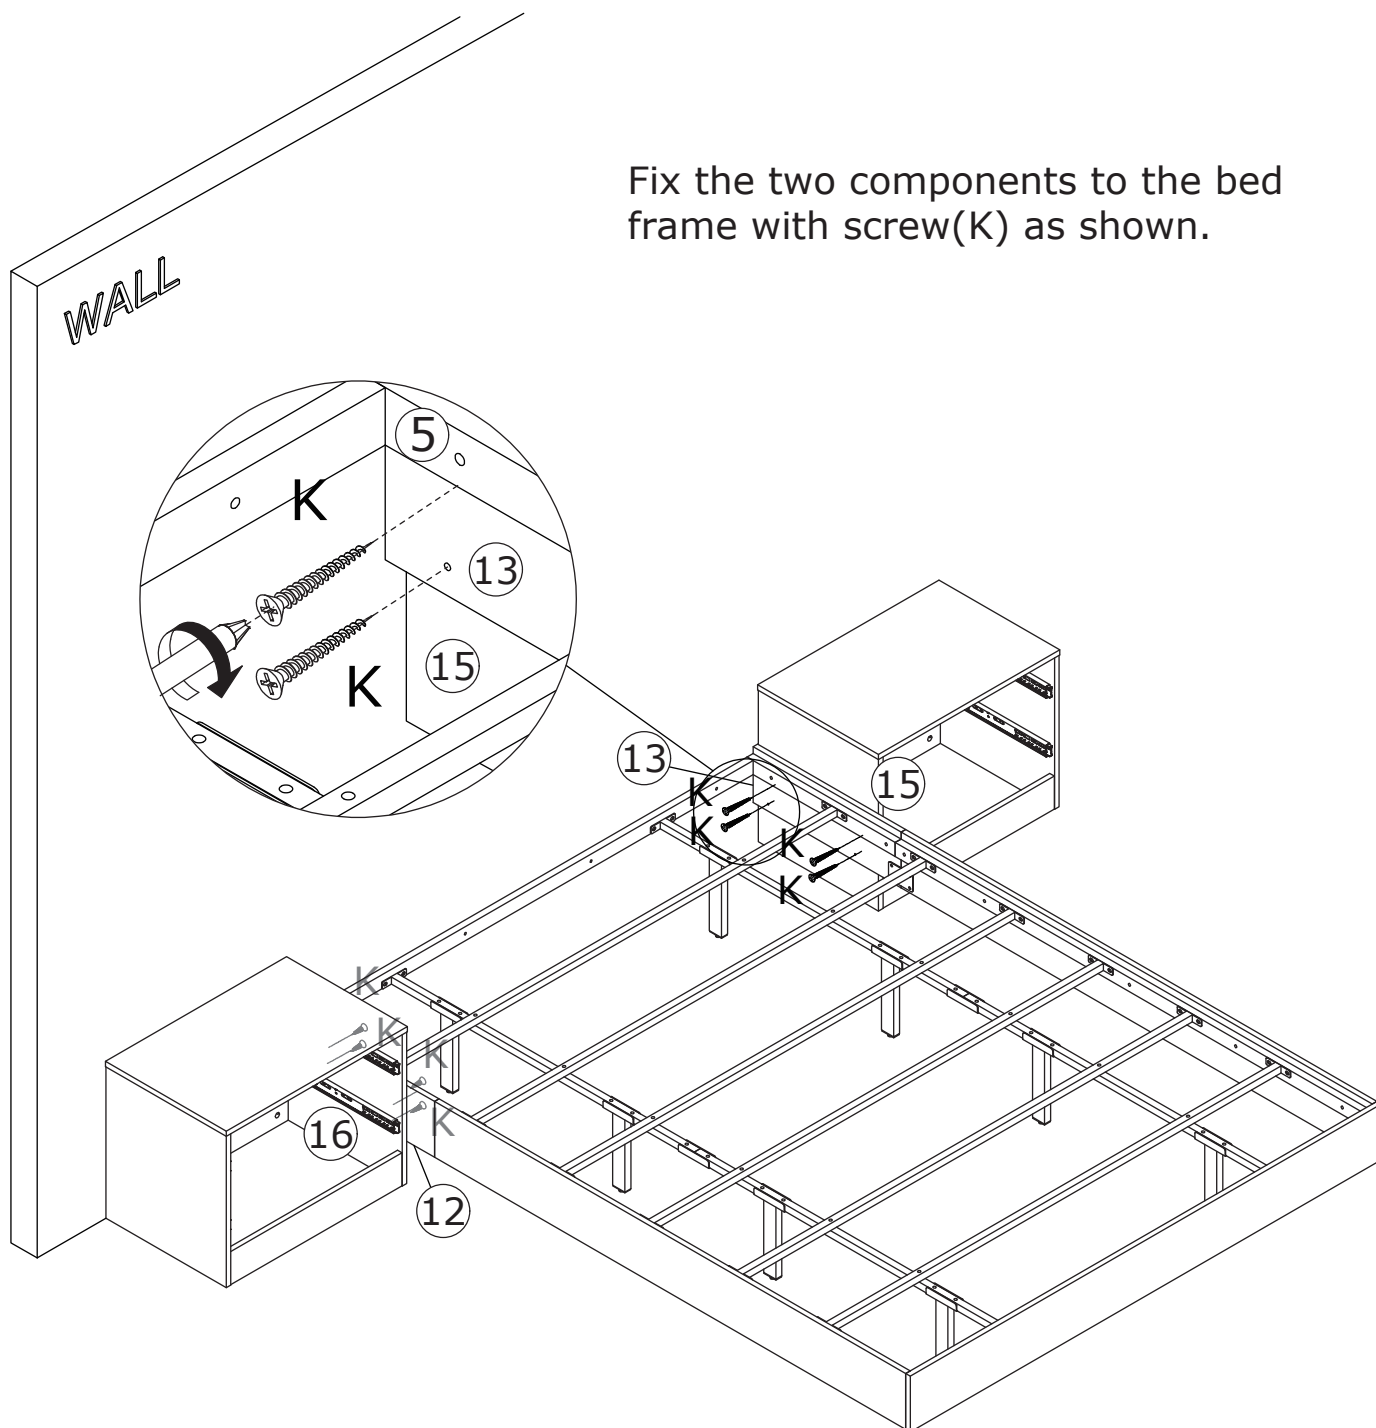


17


 
C x 16






M5 x 40 mm

 





 
 
Fix panel 22 and 23 to panel 21 with screw(C) at first.
Insert bottom panel 24 along available grooves as shown.

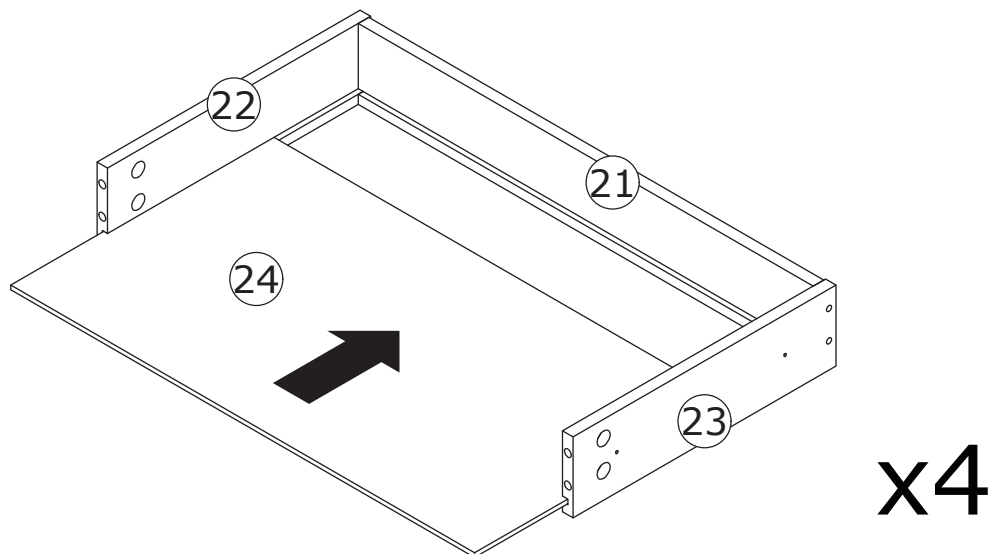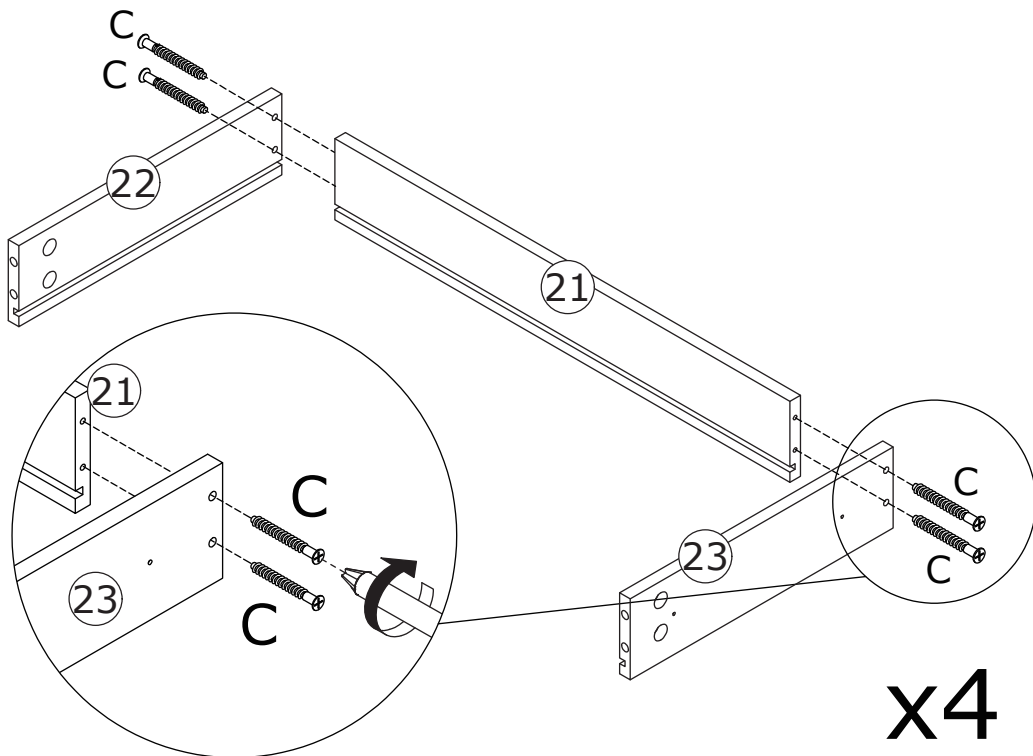

18

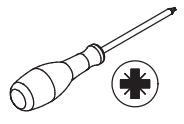   A x 16  M5 x 42 mm	B x 16  Ø 15 x 10 mm	Q x 4  200-96 mm	R x 8  M4 x 18 mm	
---	---	---	---	---

      Screw eccentric rod(A) into panel 20 at first.
 Attach panel 20 to panel 22 and 23, add
 cam lock(B) into and turn clockwise
 to tighten as shown.
 Fix handle(Q) to panel 20 with screw(R).

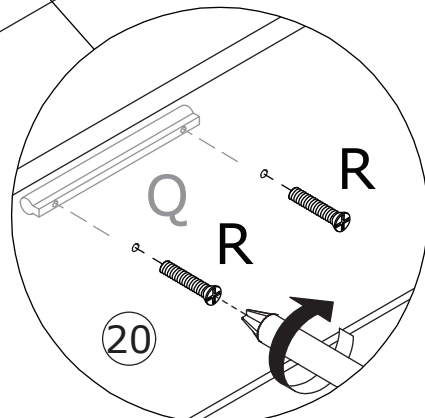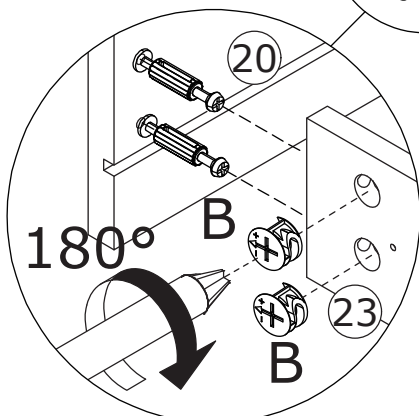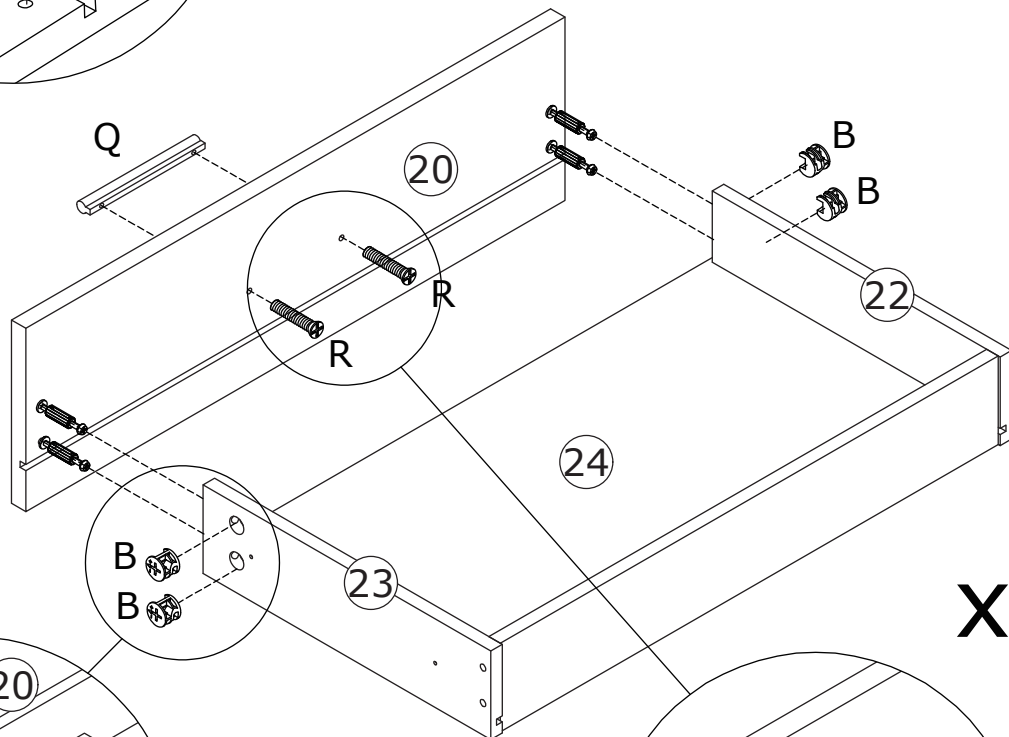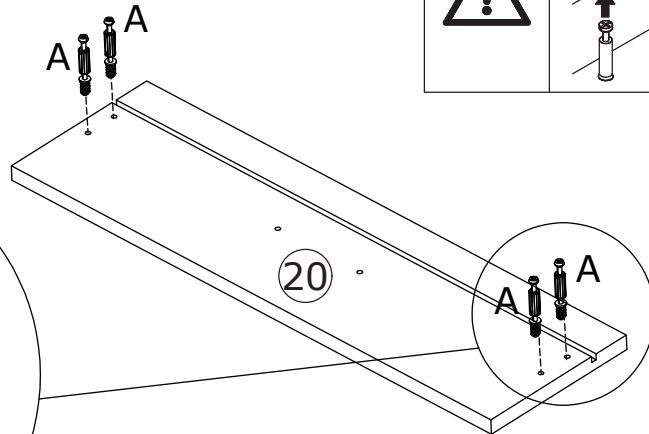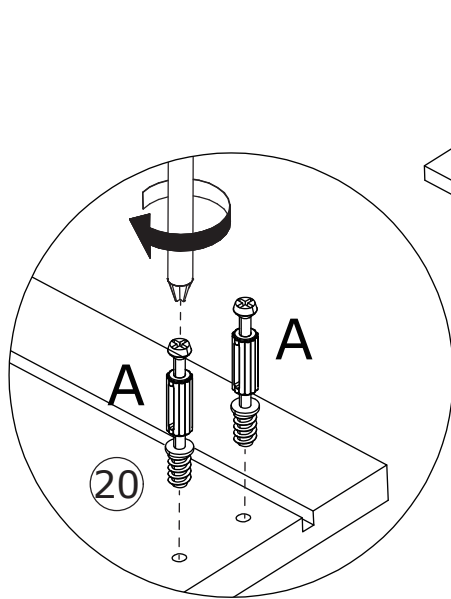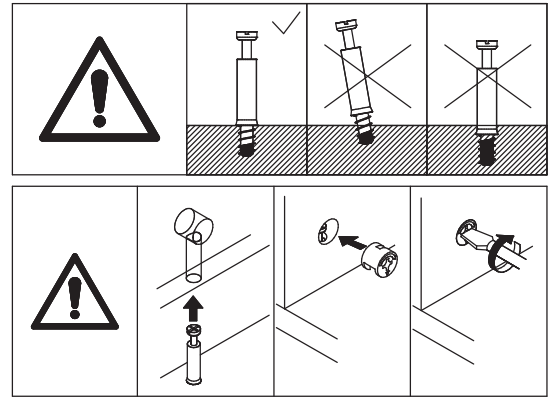


19

I x 16



 M3.5 x 12 mm



Fix runner 40 to panel 22 and 23 with screw(I) as shown.

 


I



M3.5 x 12 mm

J

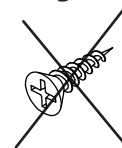

M3.5 x 14 mm

 
 
40



I




I

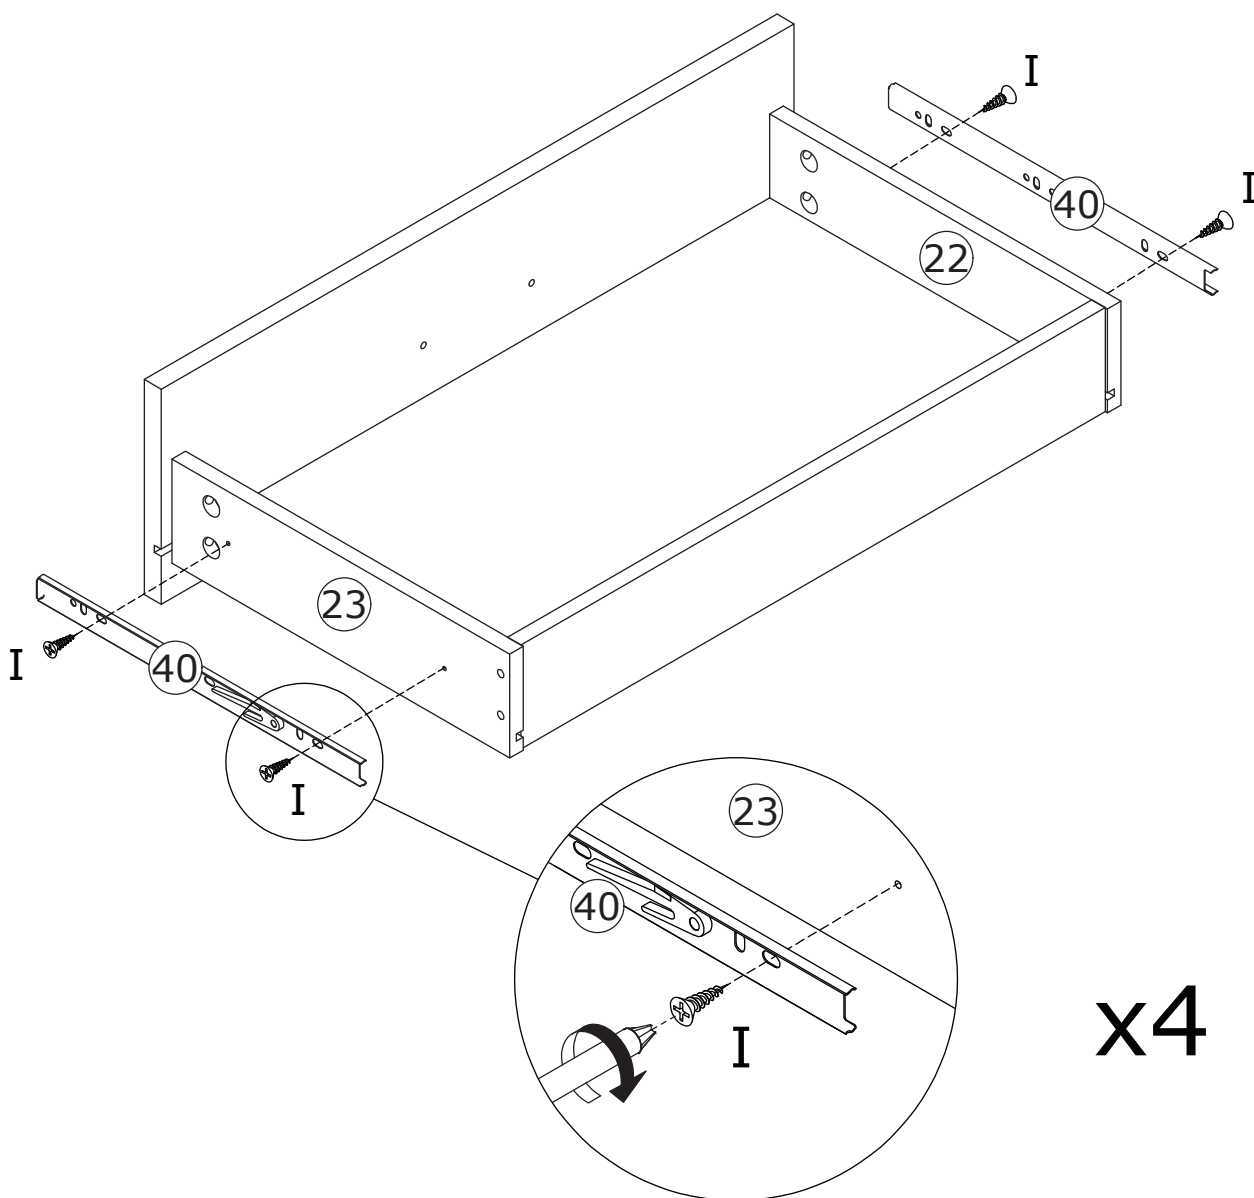

x4

20

 Align rails, insert all drawers in.



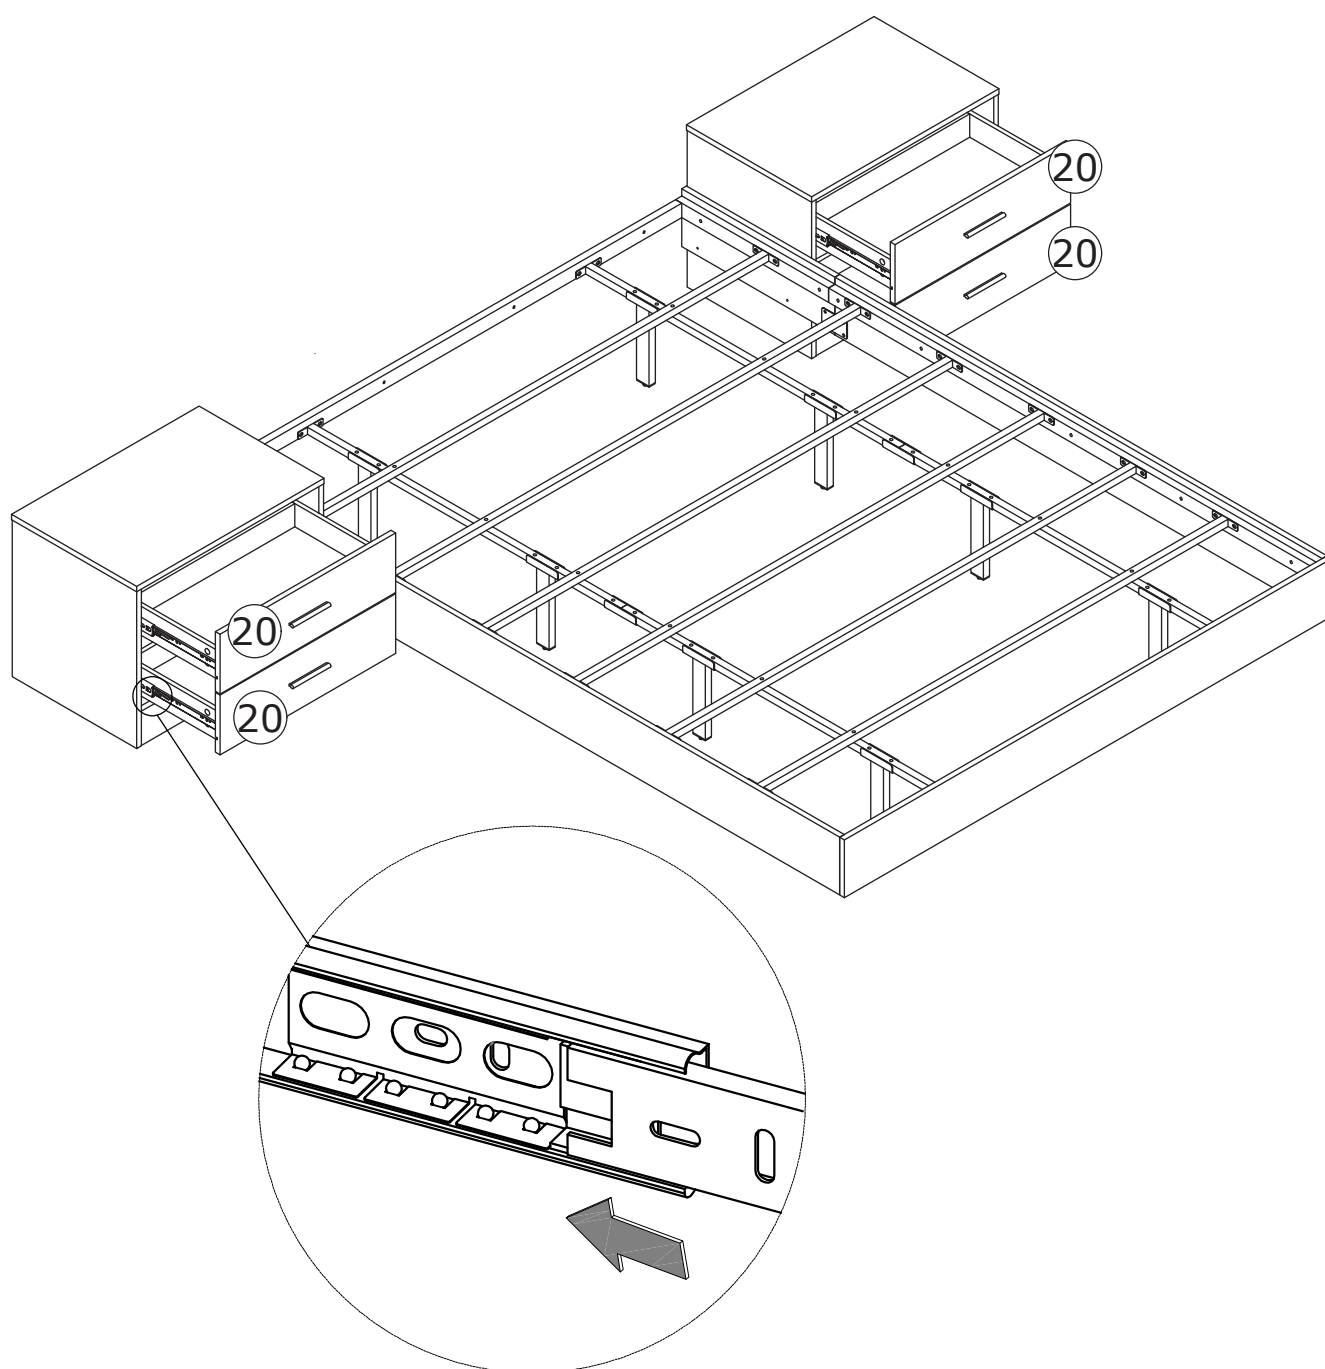


21


N x 4



   
O x 4

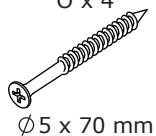


WALL

 


WALL

 

WALL

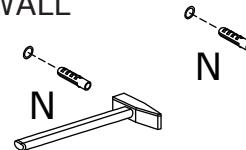 

 Set the fixed point of panel 33 against the wall, drill holes, knock expansion screw(N) into the wall, and then connect panel 33, 34 and 35 to the wall with screw(O) as shown.

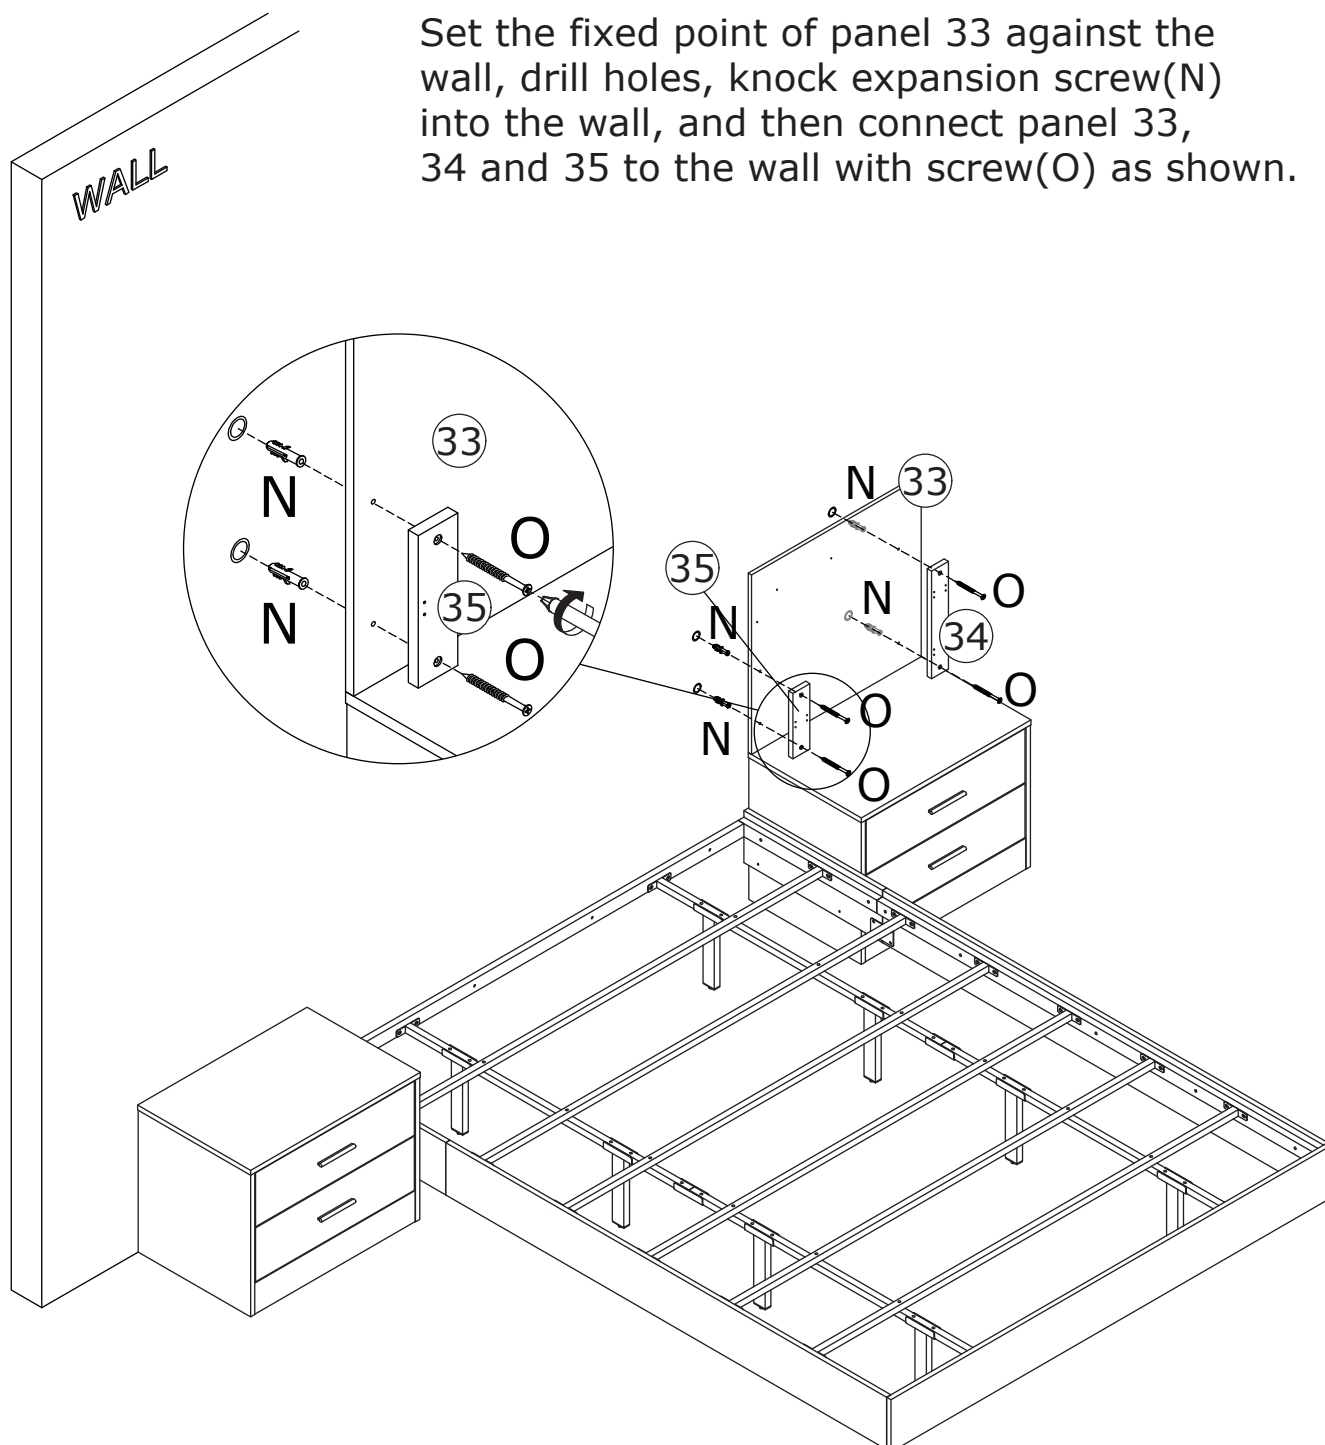


22


E x 6



 M6 x 20 mm




 Fix panel 26 to panel 32
with screw(E) at first.


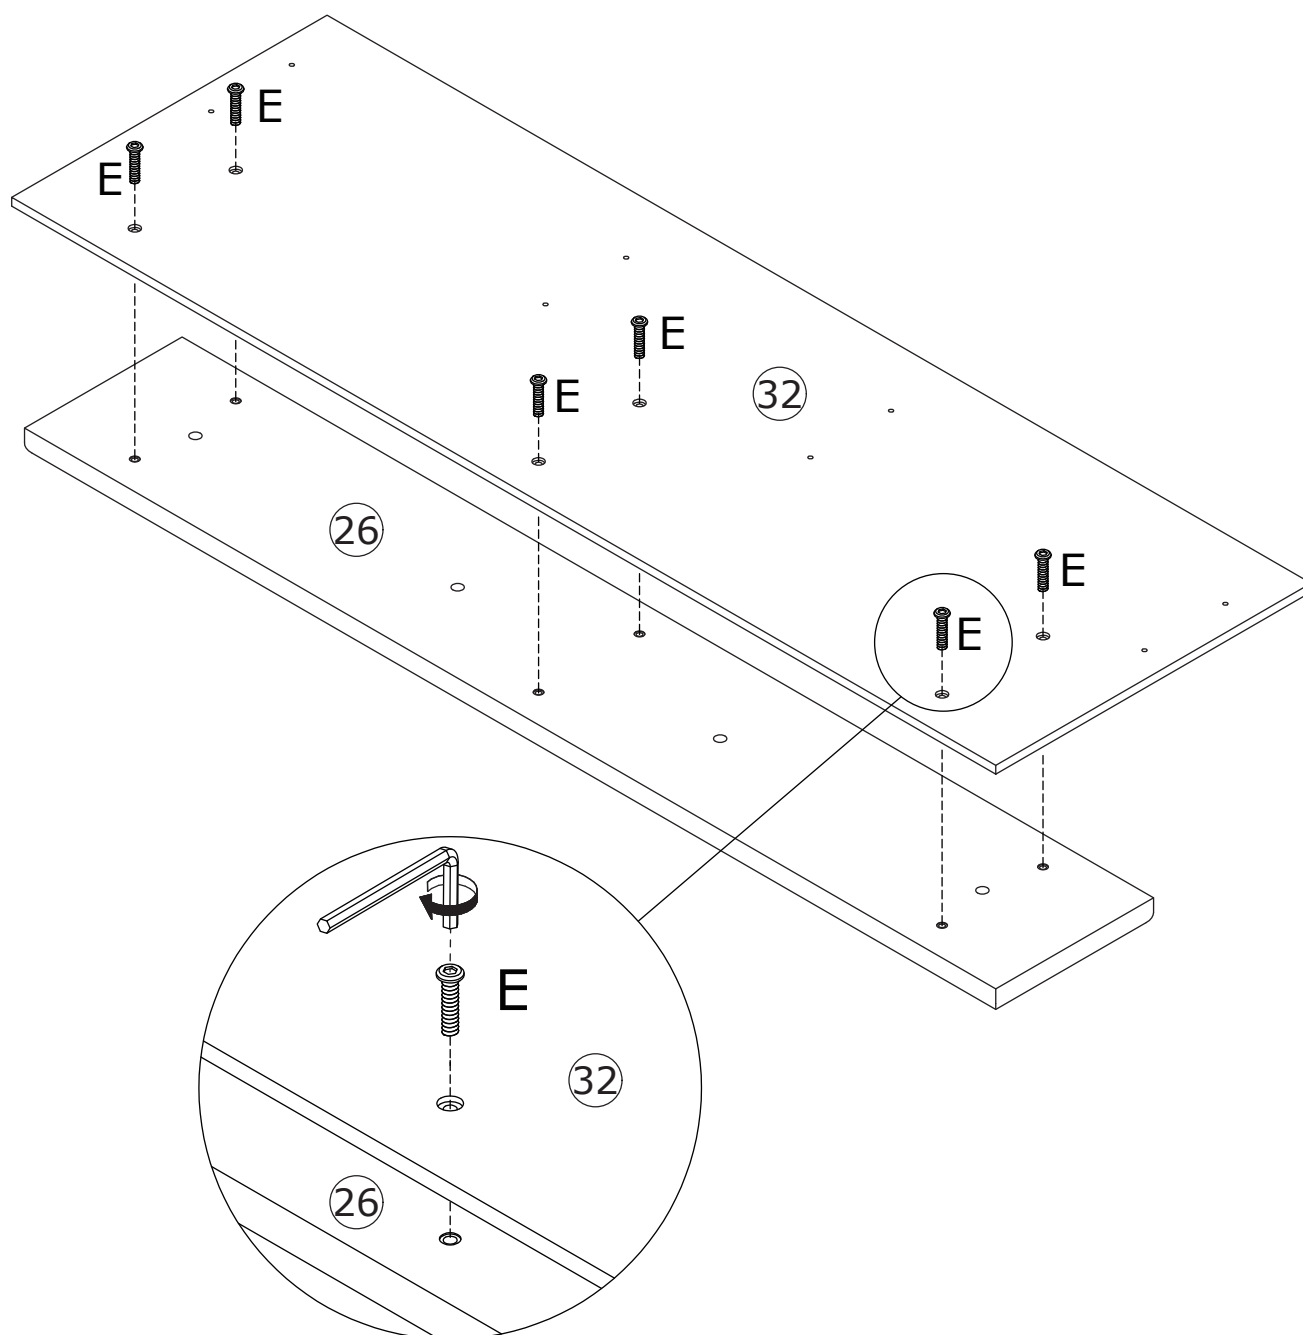


23

 
N x 8




O x 8

  


WALL

 

WALL

 


WALL

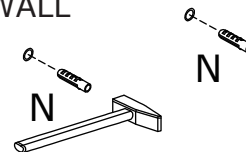 

Set the fixed point of panel 32 against the wall, drill holes, knock expansion screw(N) into the wall, and then connect panel 32 and 36 to the wall with screw(O) as shown.

 Note: The holes in the middle two pieces of panel 36 face down, and the left and right sides face up.


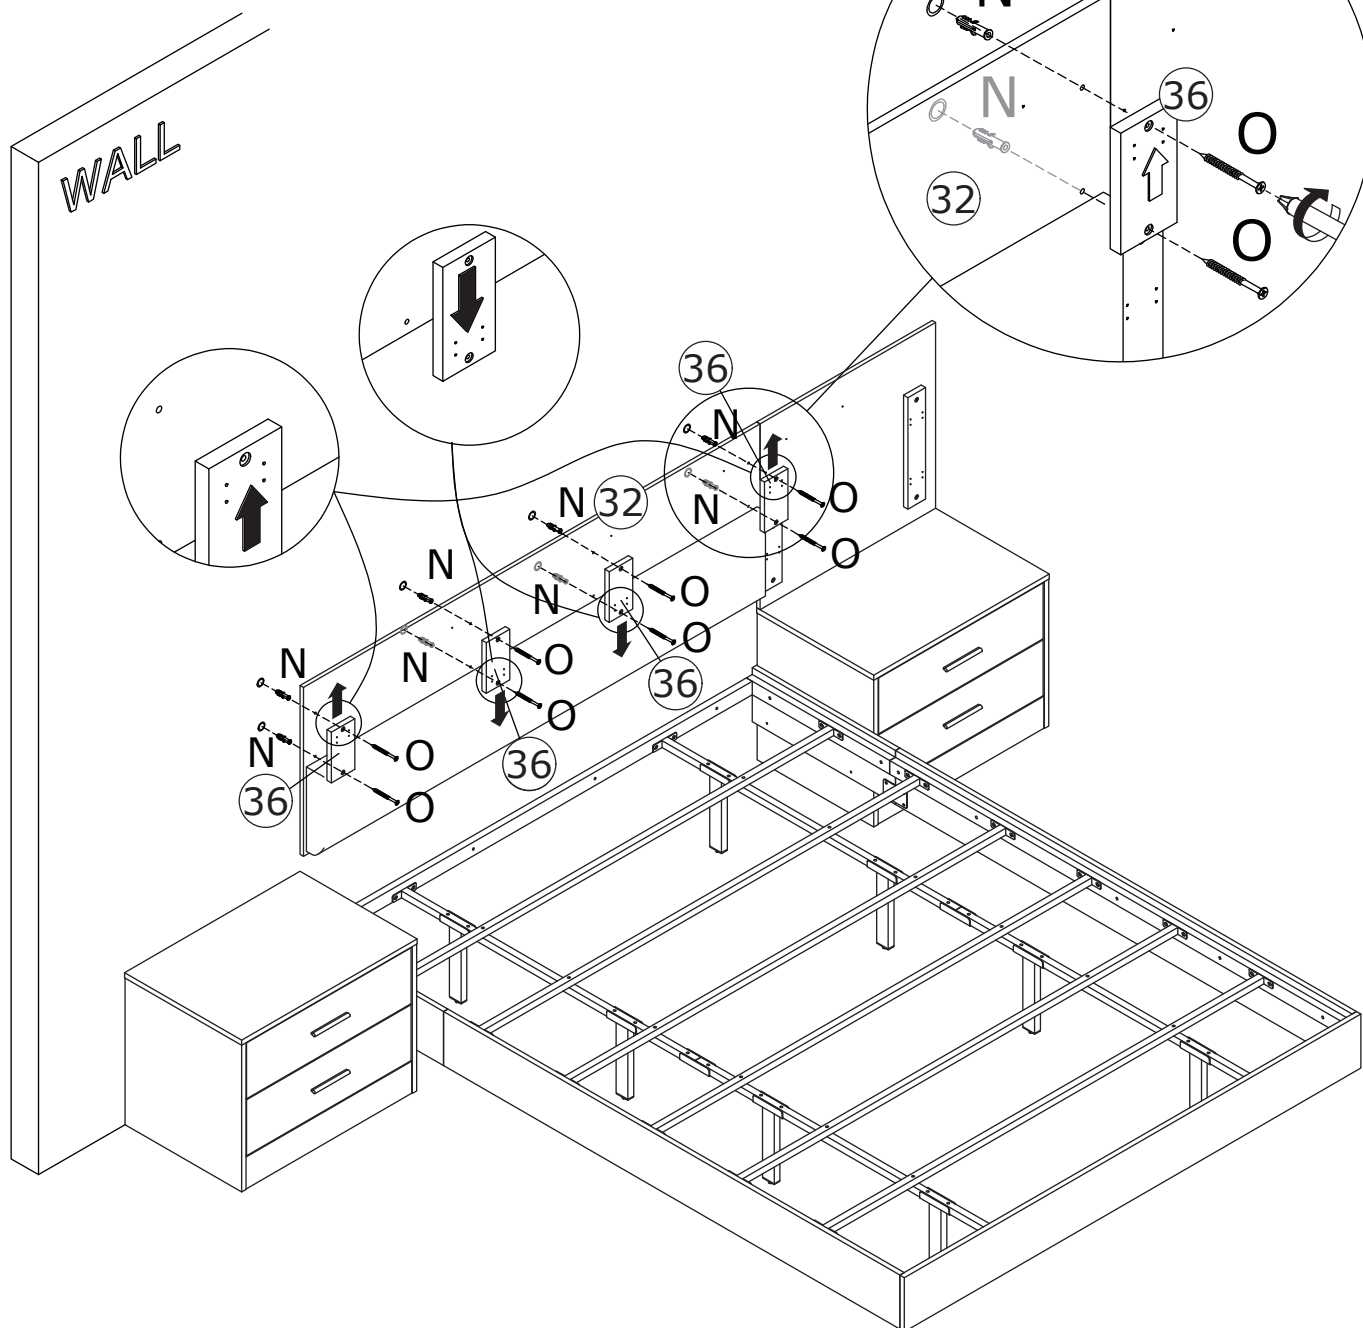


24


N x 4



  O x 4




WALL

 


WALL




 
WALL

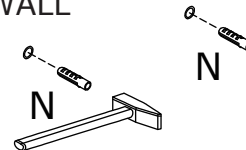

 
Set the fixed point of panel 31 against the wall, drill holes, knock expansion screw(N) into the wall, and then connect panel 31, 34 and 35 to the wall with screw(O) as shown.

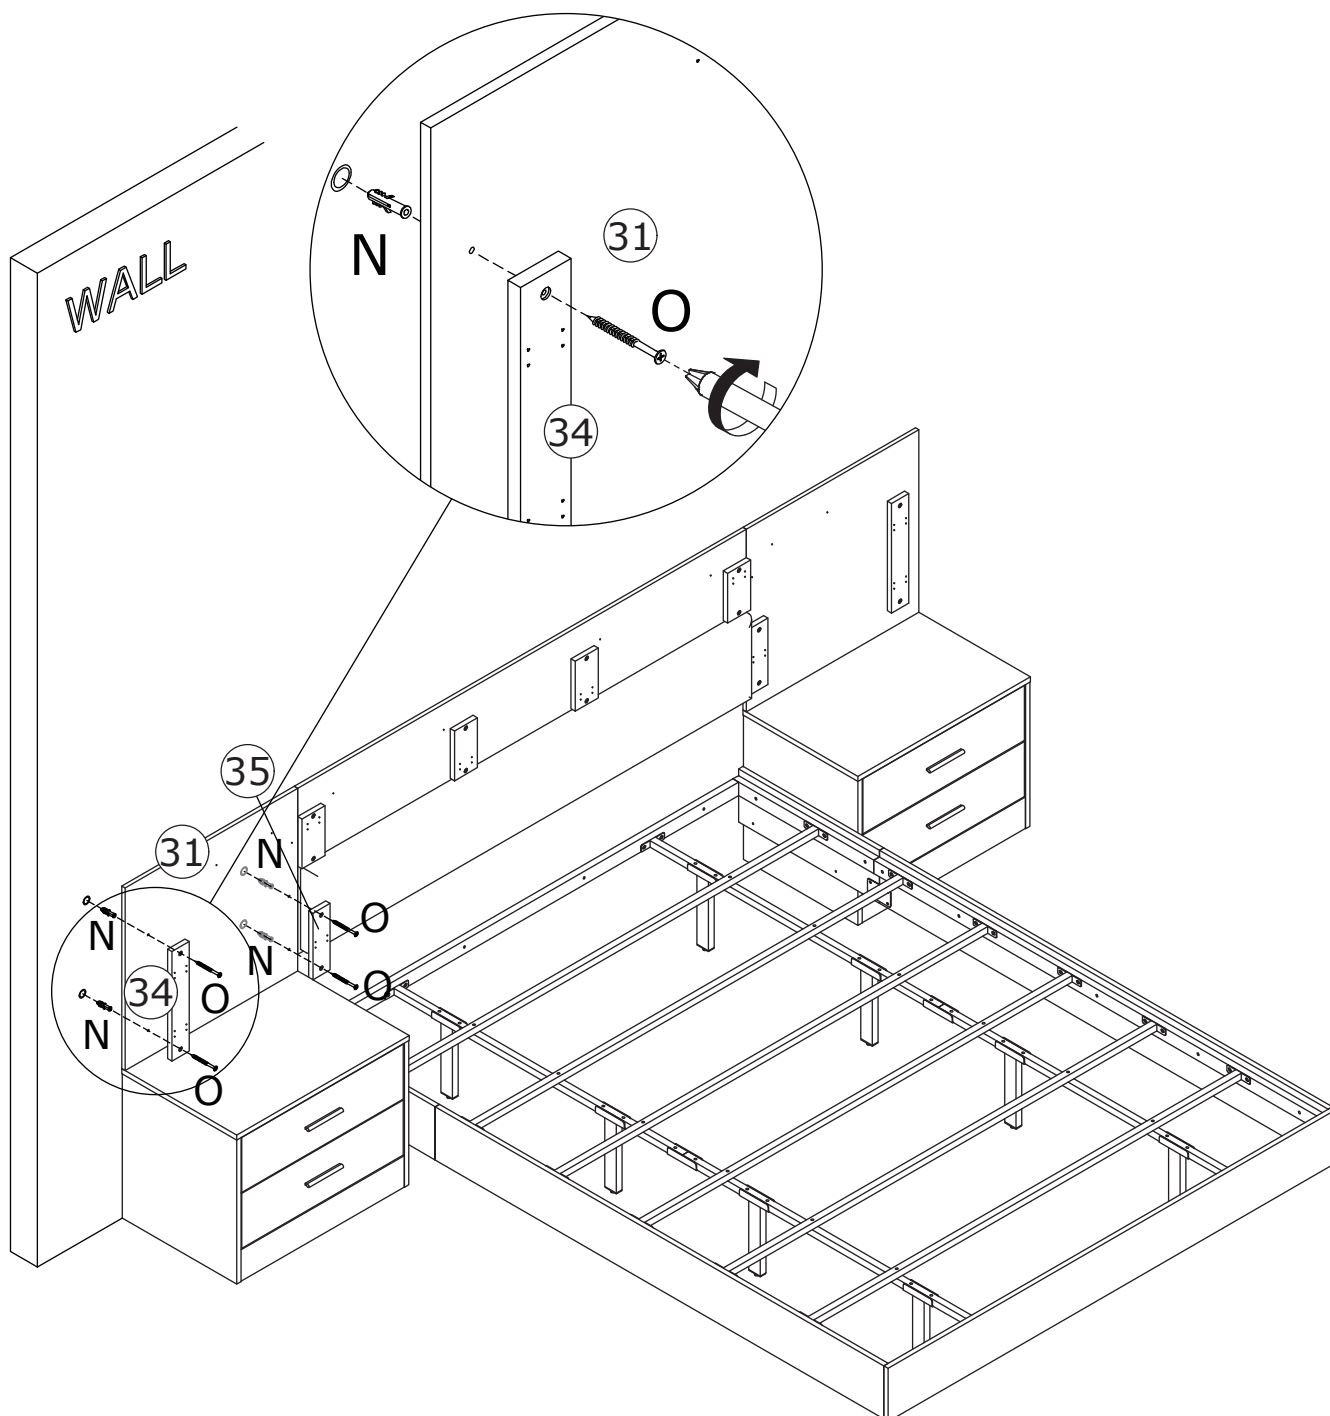




25

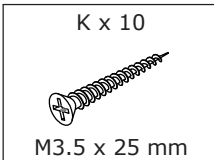  


 
Fix panel 37, 38 and tube 41 to panel 31, 33 and 32 with screw(K) at first.

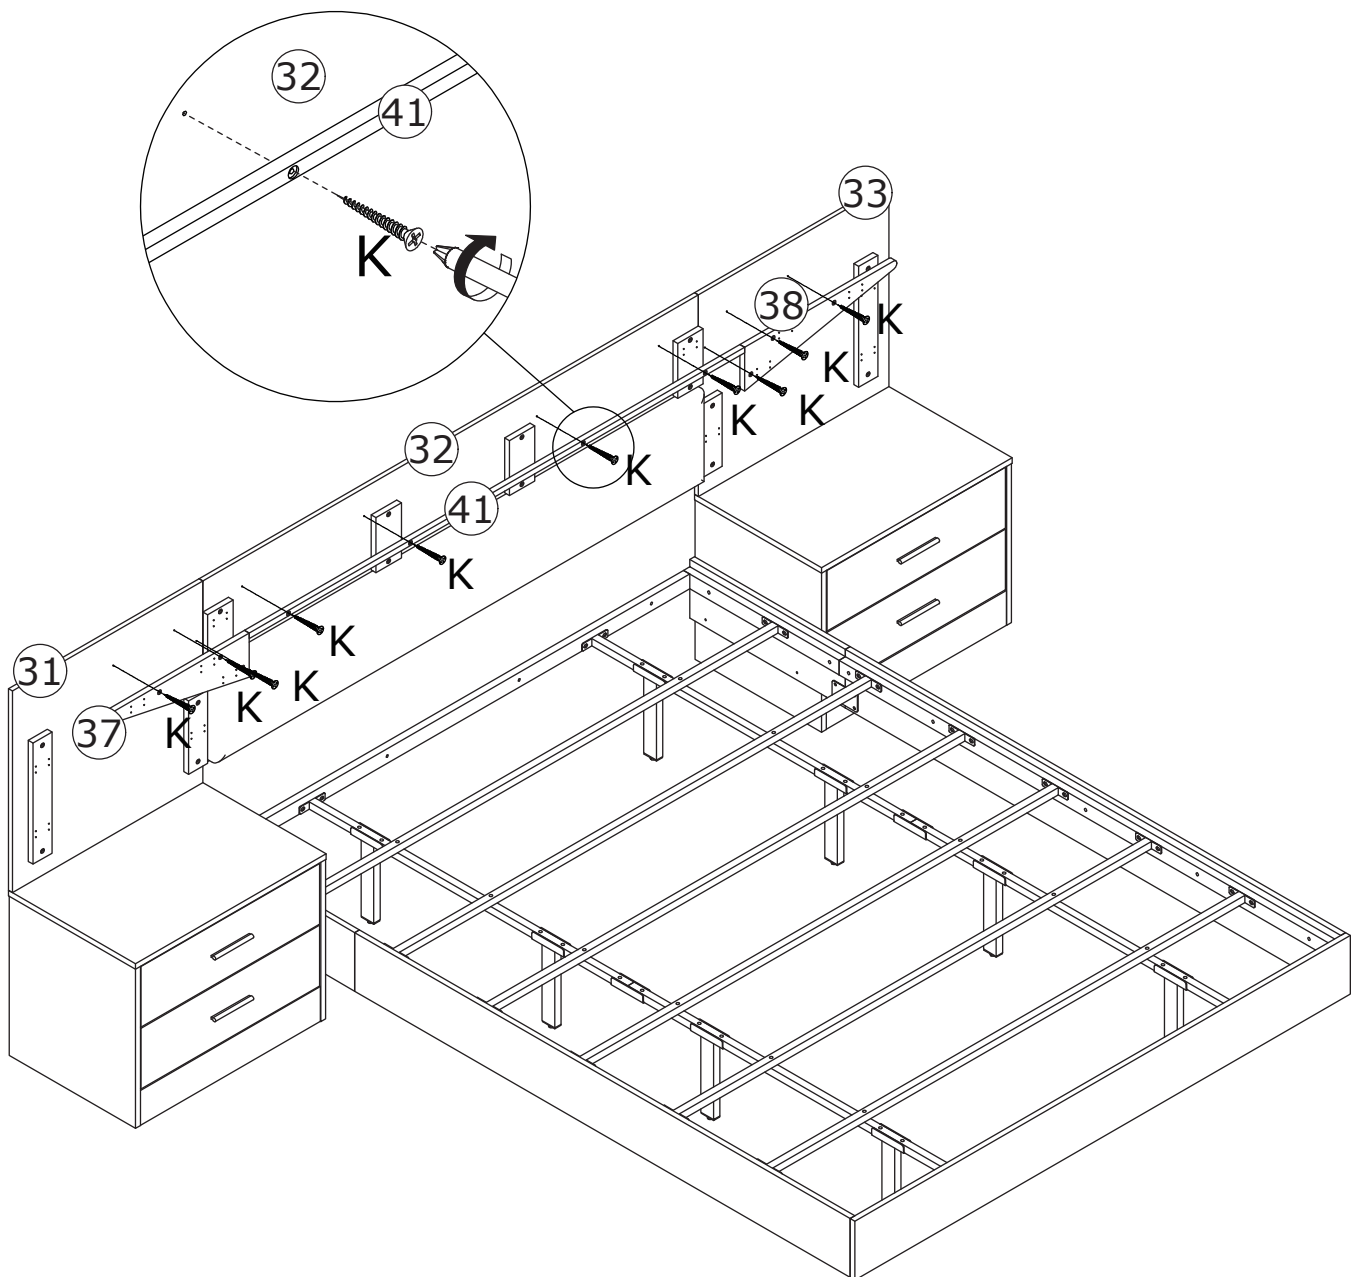

26

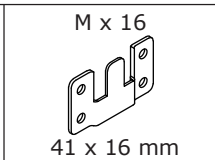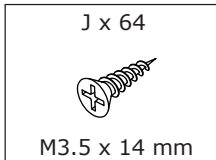   

 
 
Fix buckle(M) to panel 34, 35, 36, 37 and 38 with screw(J) as shown.

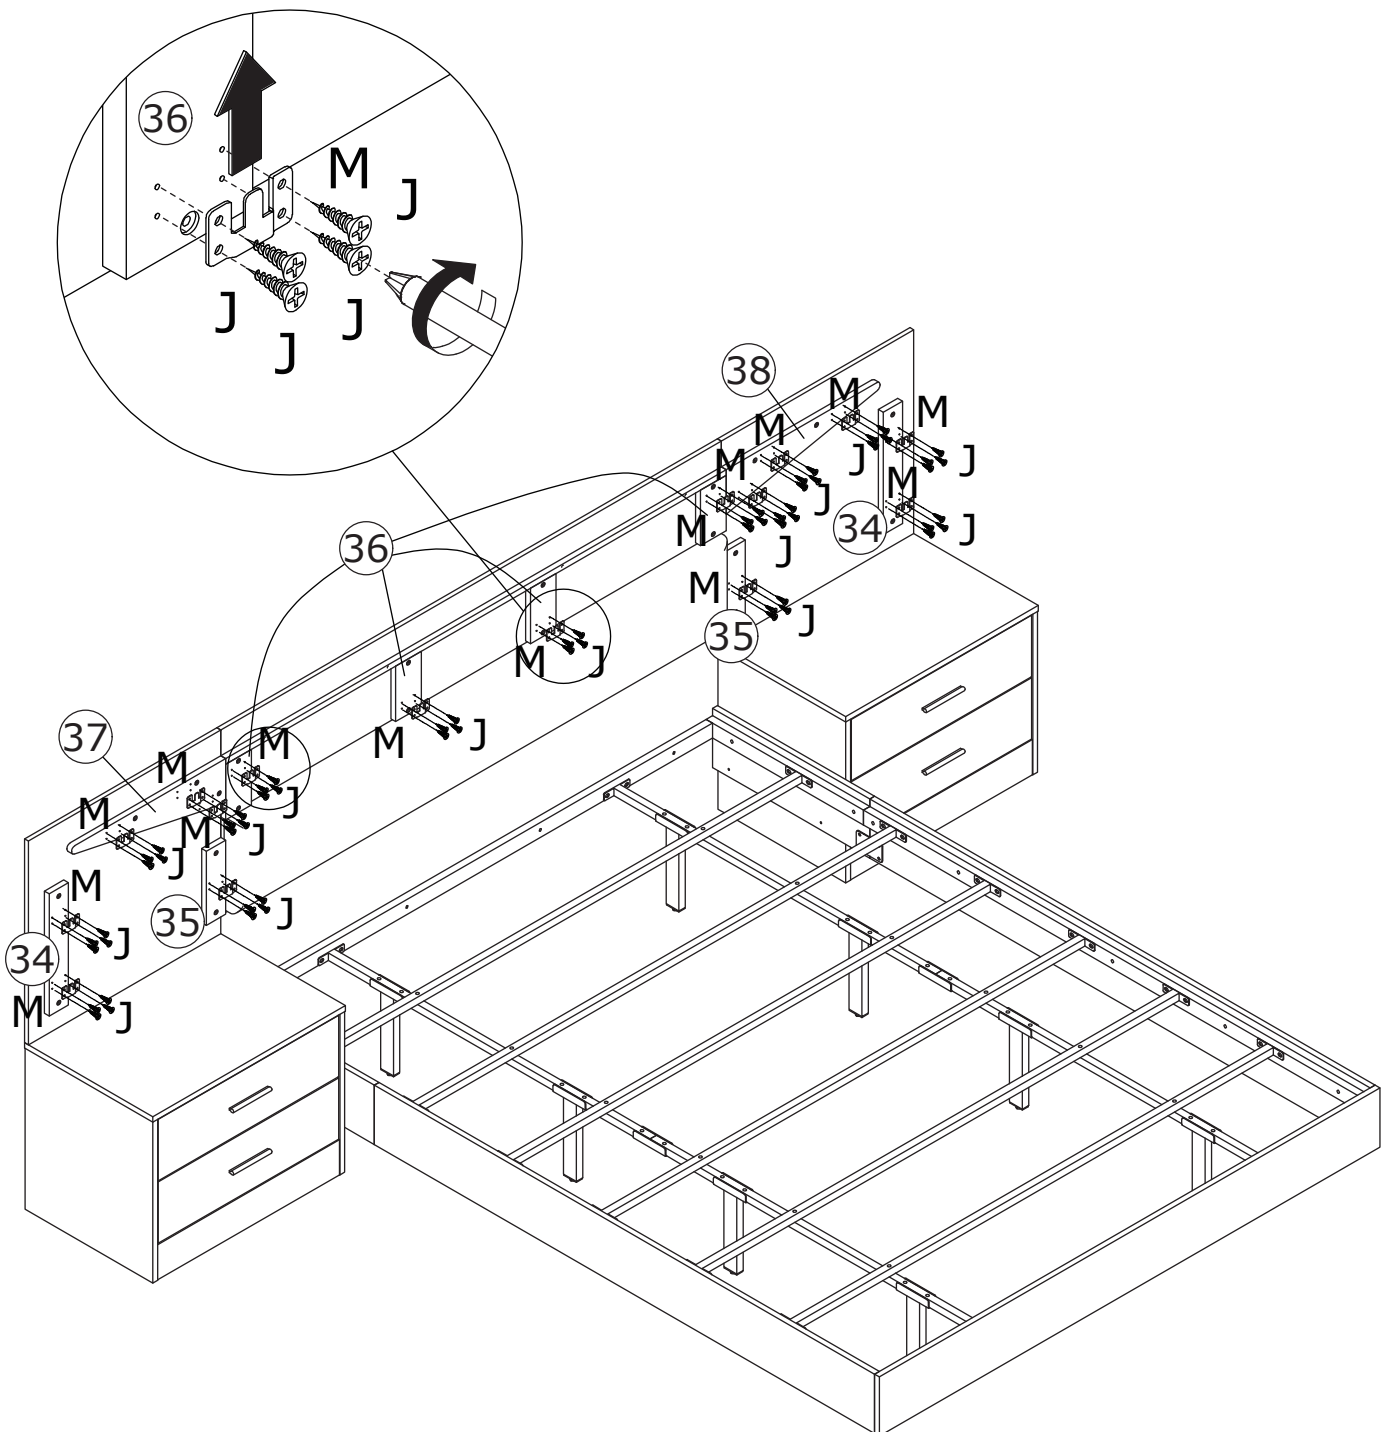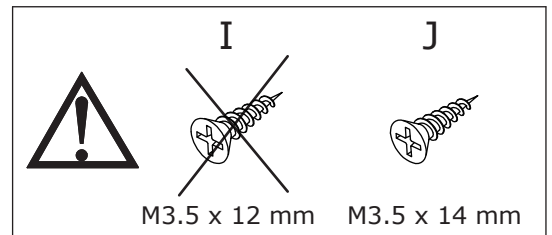



27



  
Fix buckle(M) to panel 25 and 27 with screw(I) as shown.

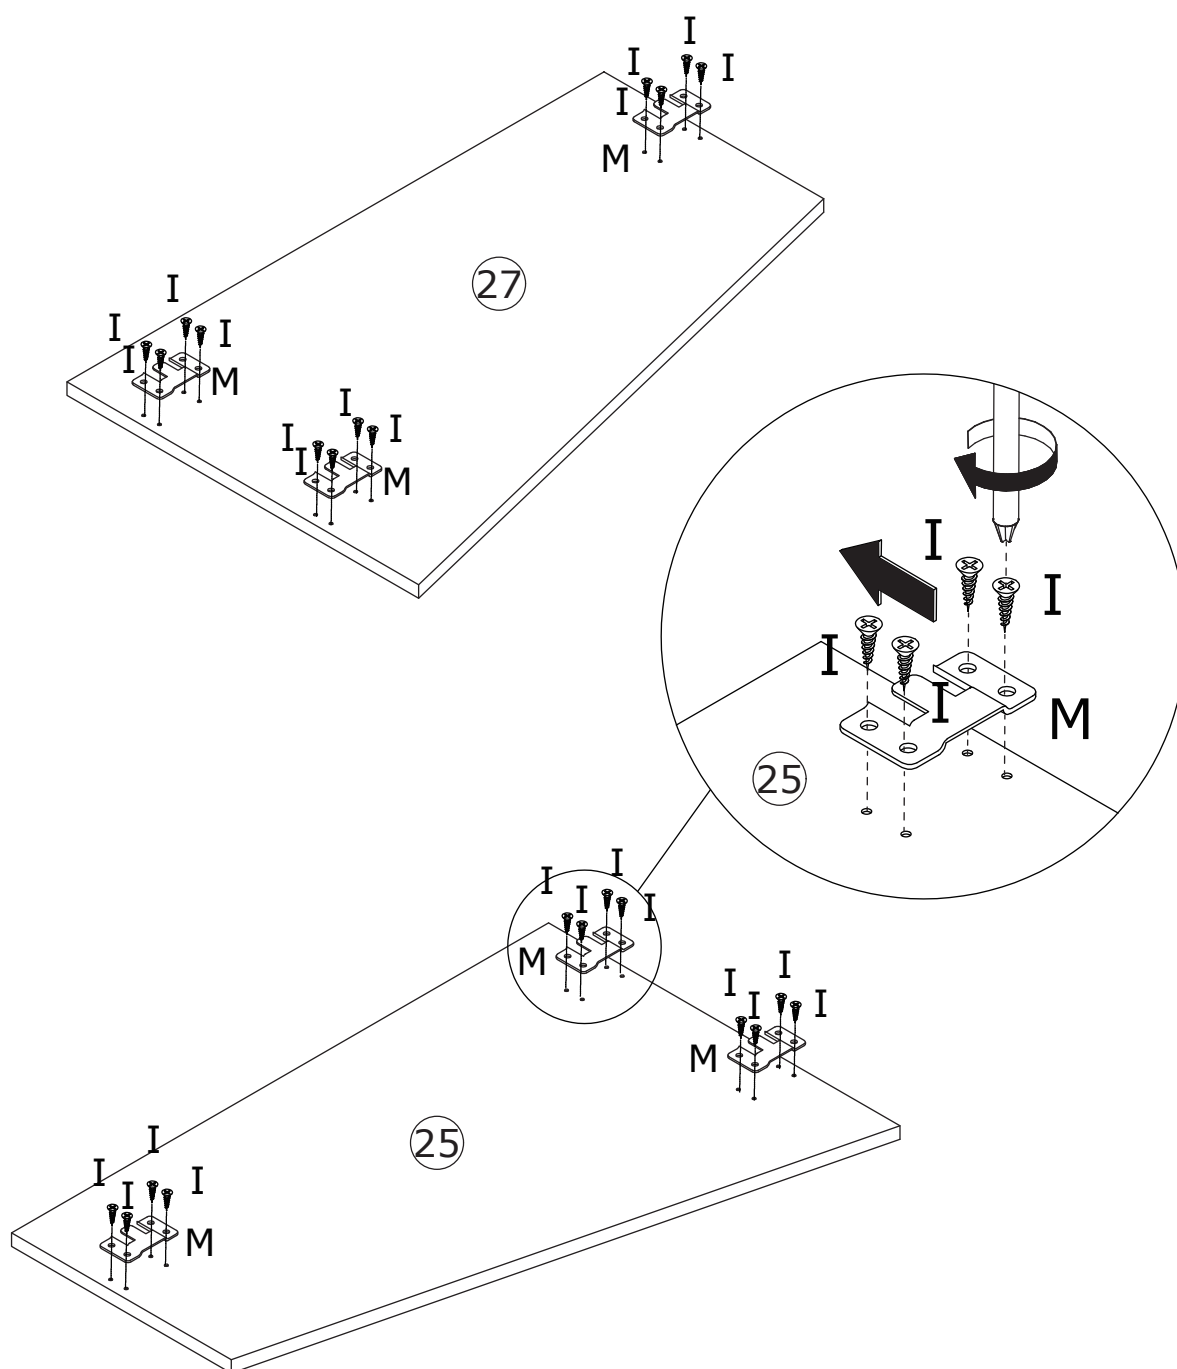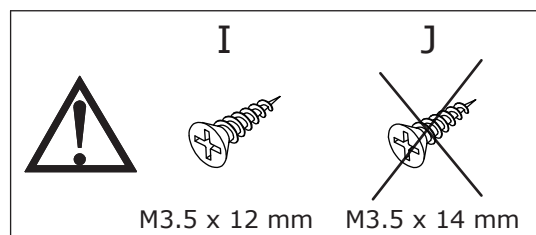


 
 
Embed panel 25 and 27 into panel 34 and 35 as shown.

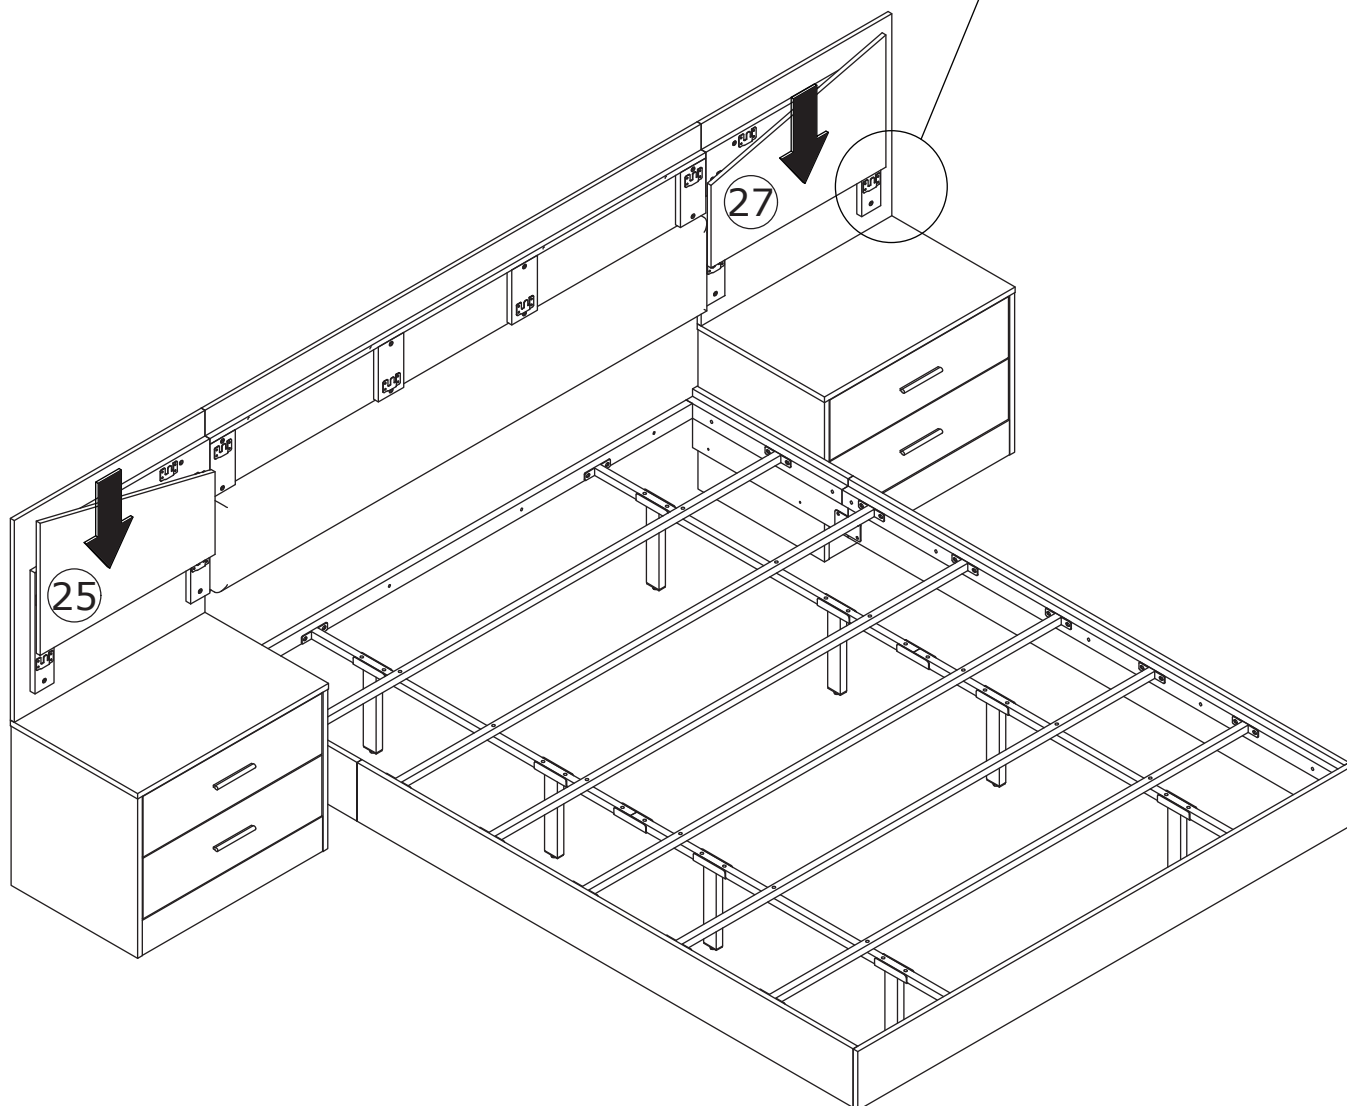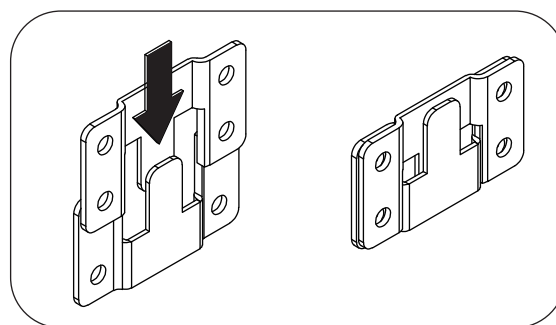


 
Stick light strip 42 to panel 37, 38 and tube 41.
The light can be adjusted manually by pressing the button on the controller, or scan the QR code on the back of the controller to download the APP for adjustment.

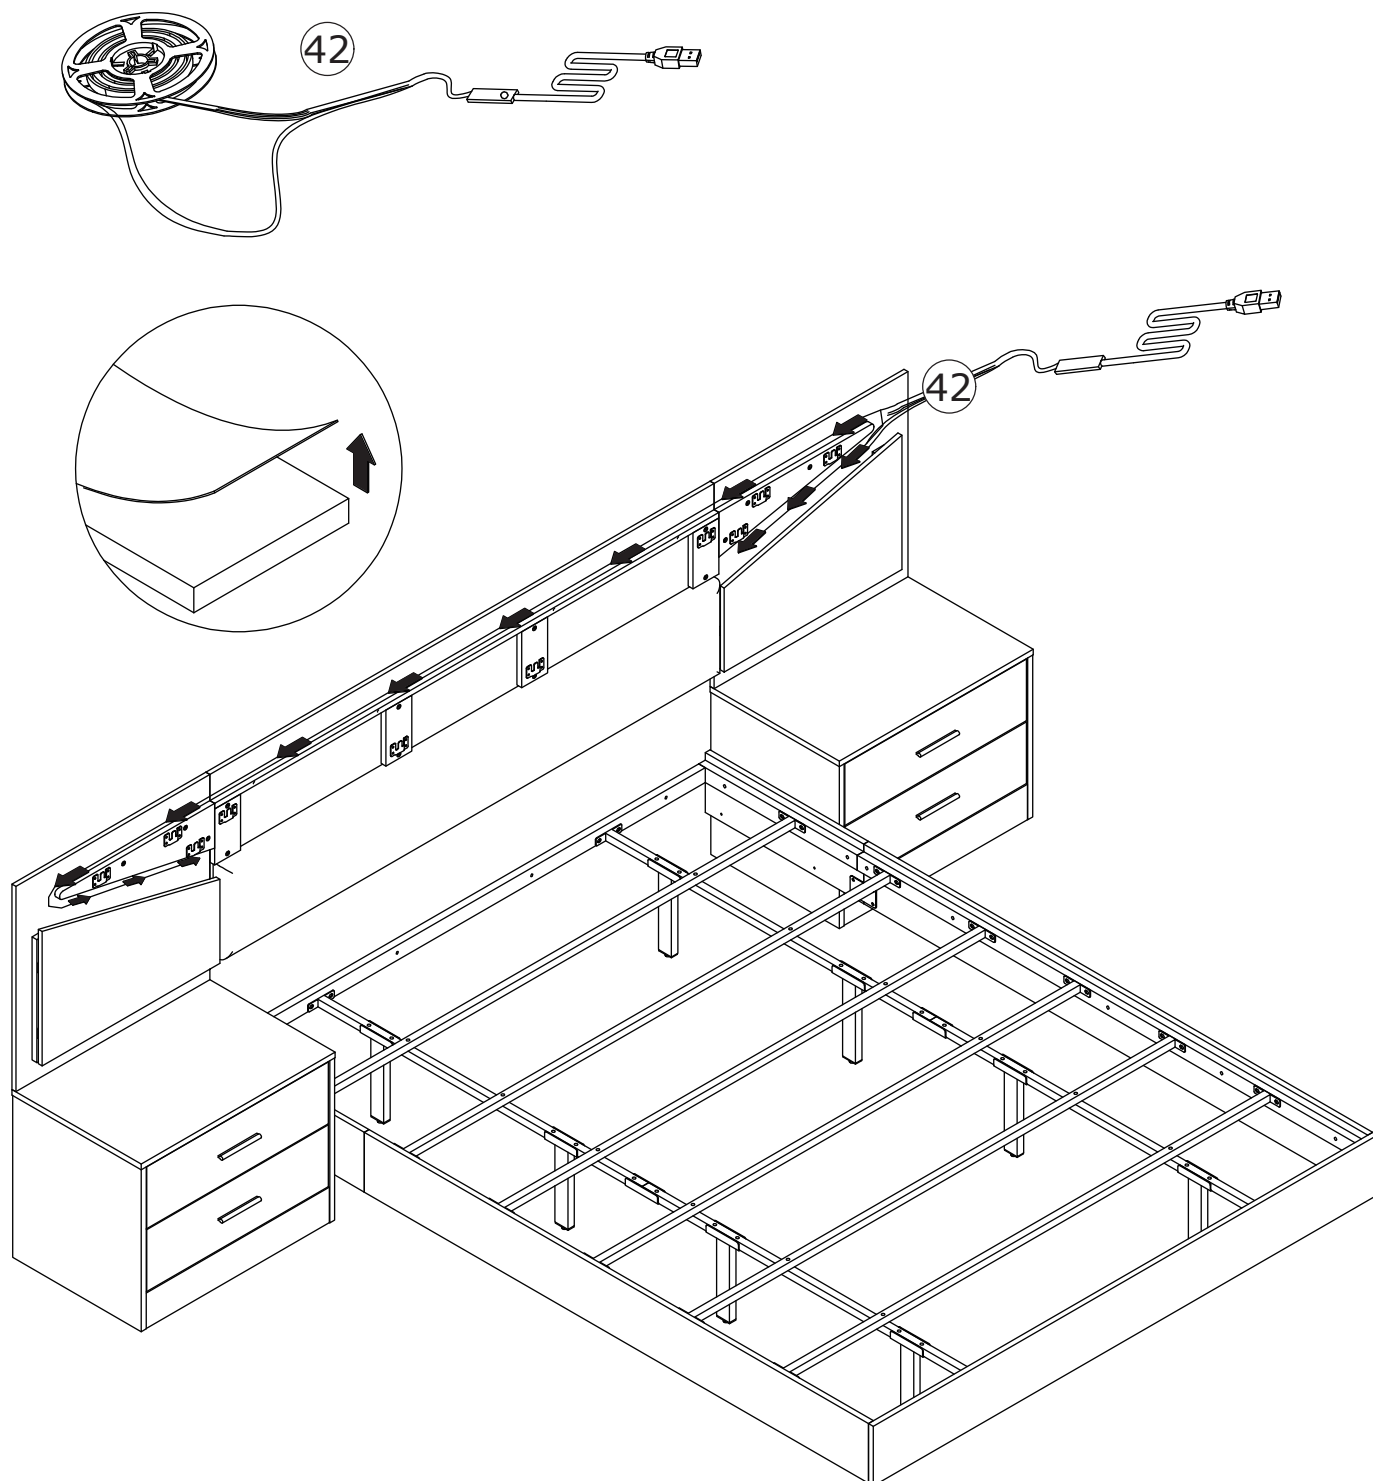

30

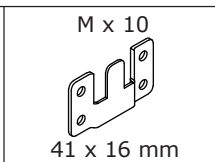  
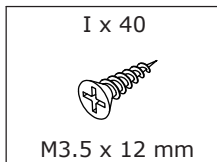 


  
Fix buckle(M) to panel 28, 29 and 30 with screw(I) as shown.

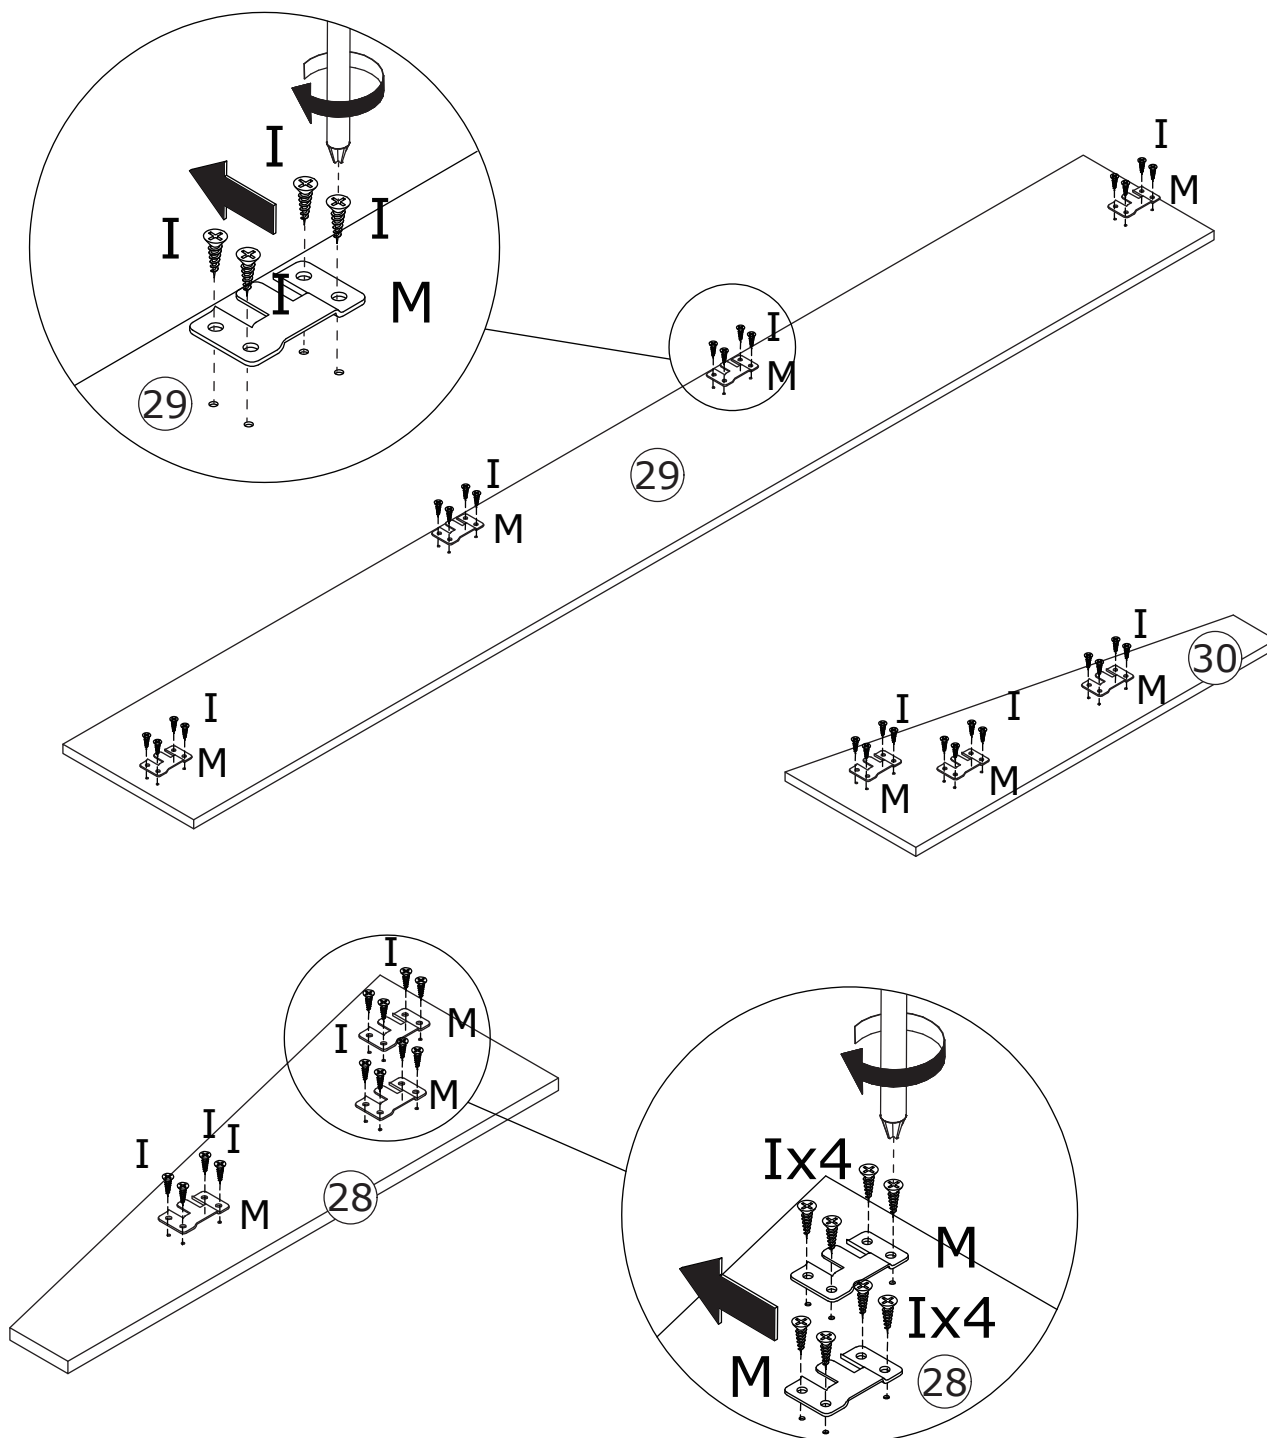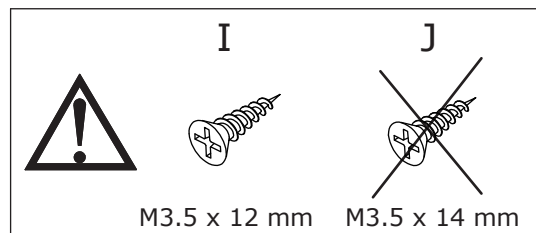

31

   Embed panel 28, 29 and 30 into panel 37, 36 and 38 as shown.

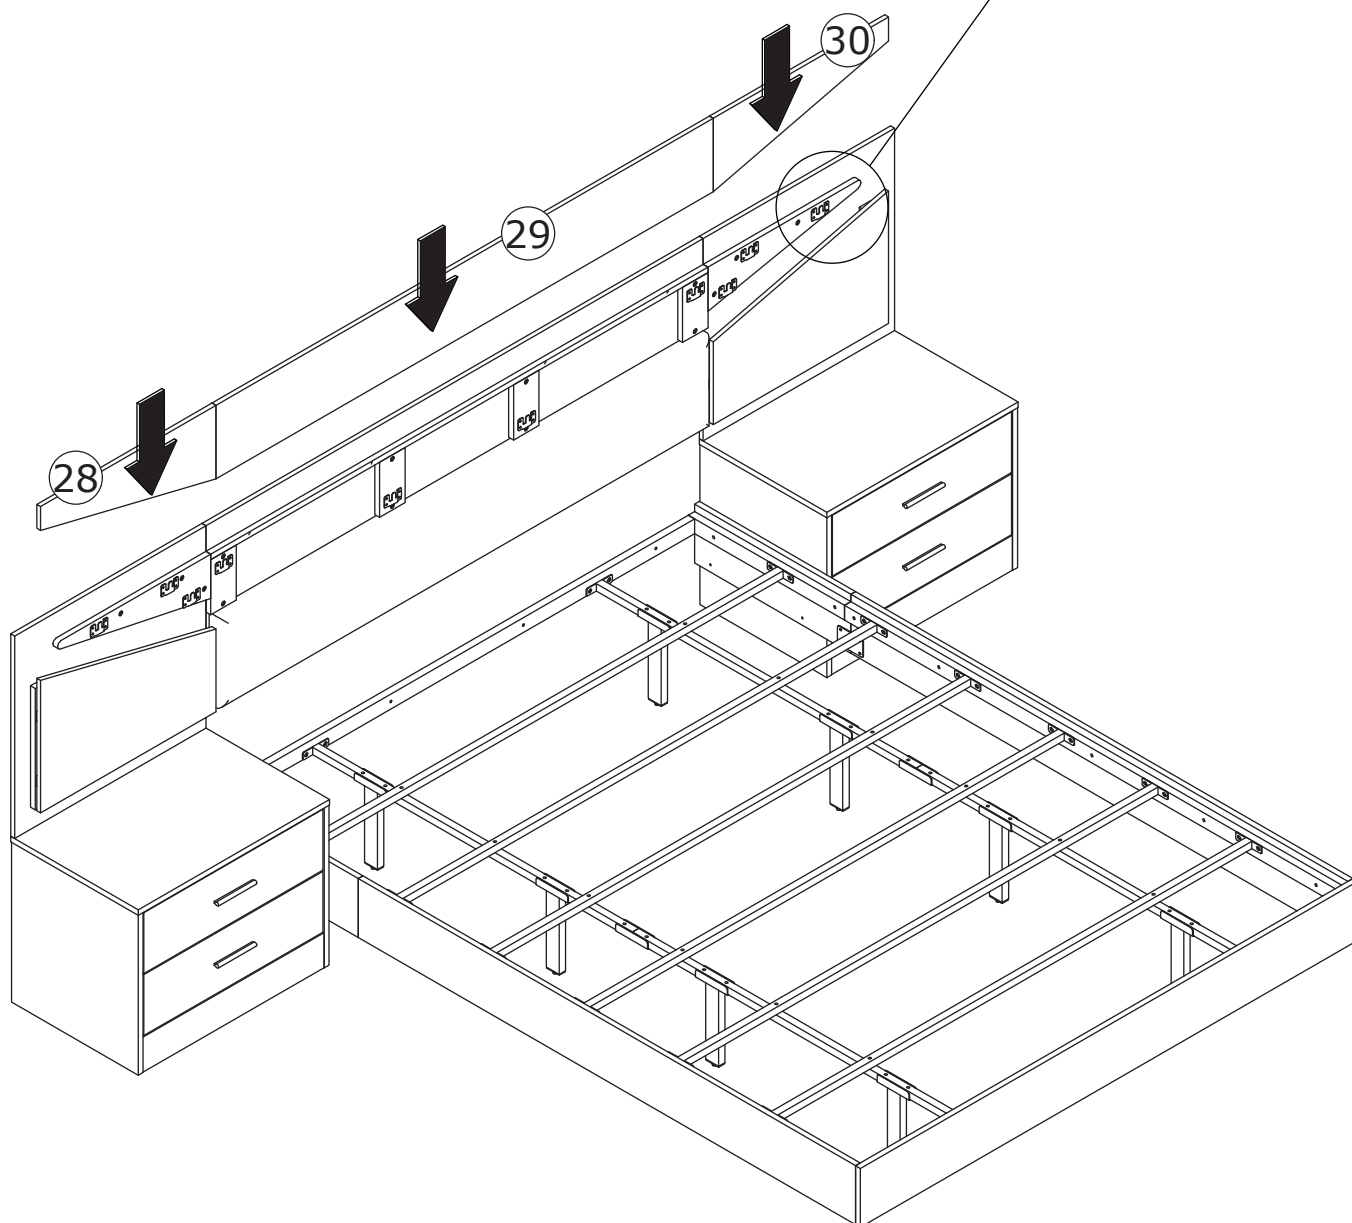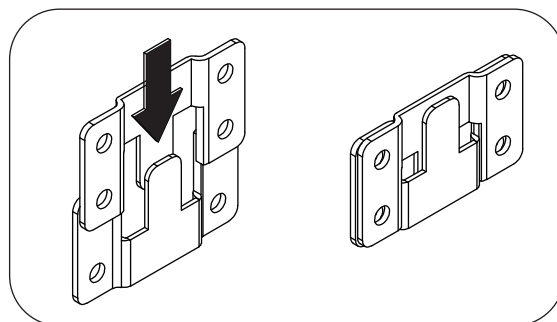

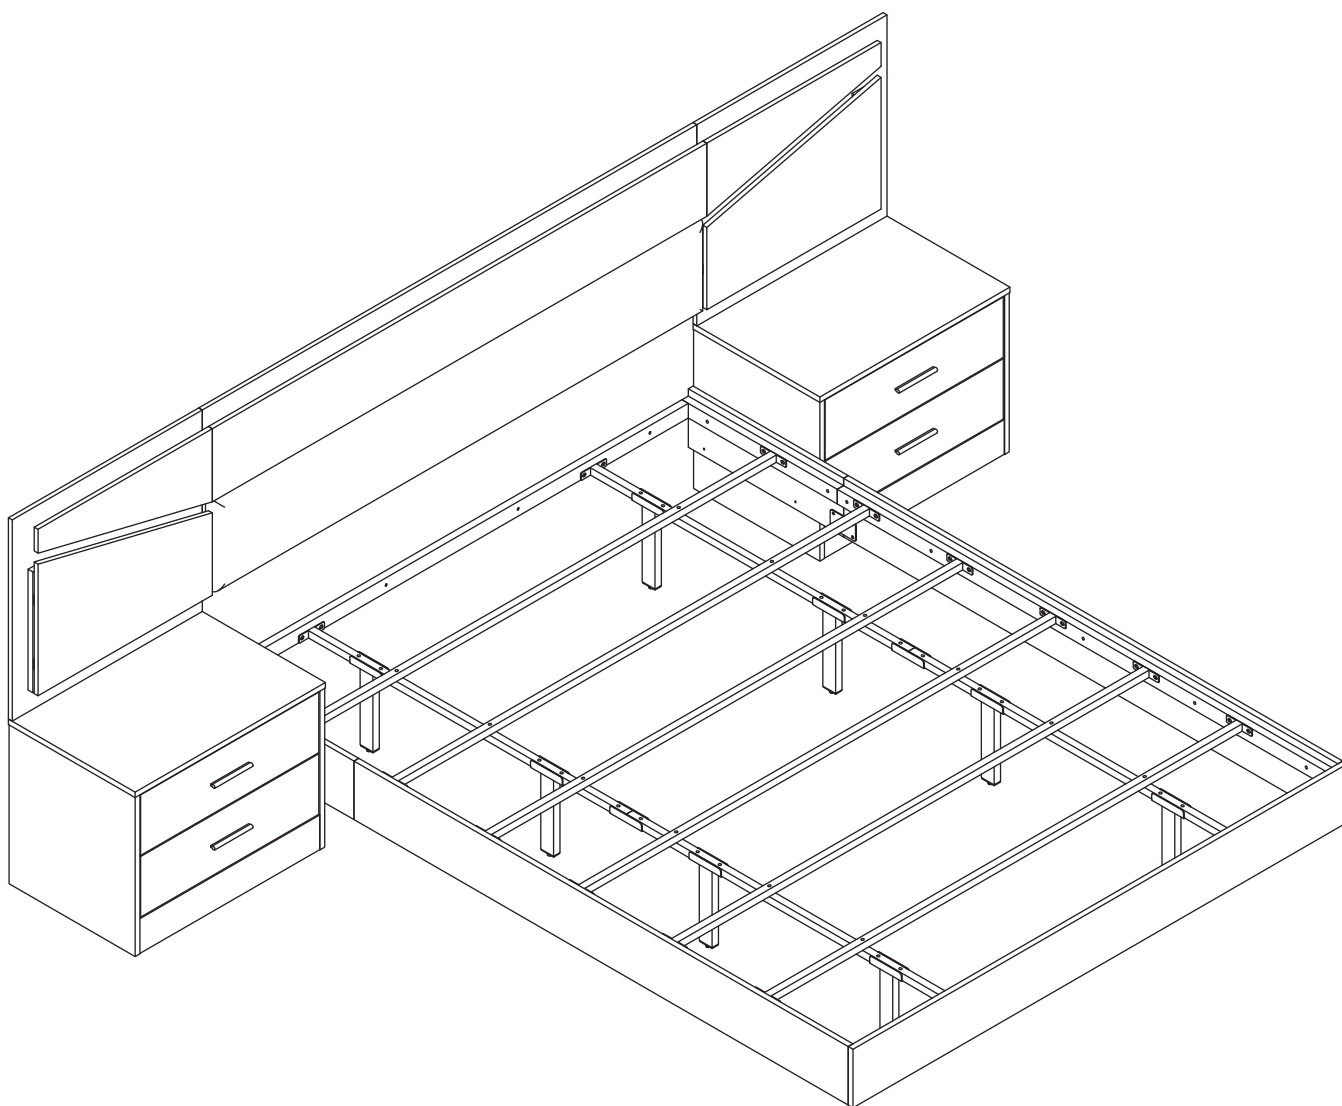

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387