



#### **Product Dimension Guide for models KRSC705**

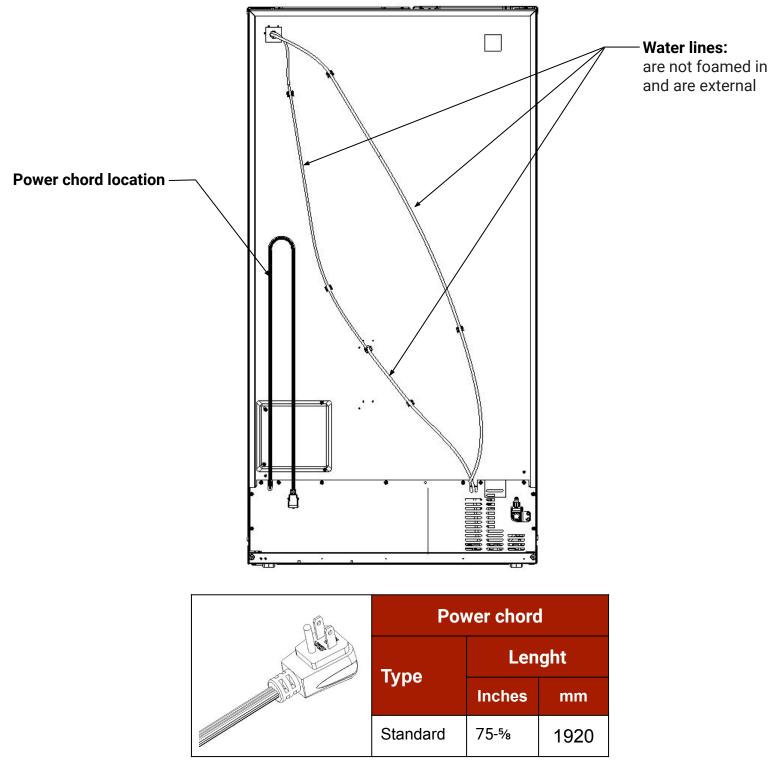

**Electrical**: A 115 volt, 60 Hz, AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


**Water**: A cold water supply with water pressure of between 30 and 120 psi (207 and 827 kPa) is required to operate the water dispenser and ice maker. If you have questions about your water p

#### **Product Dimension Guide for models KRSC705**

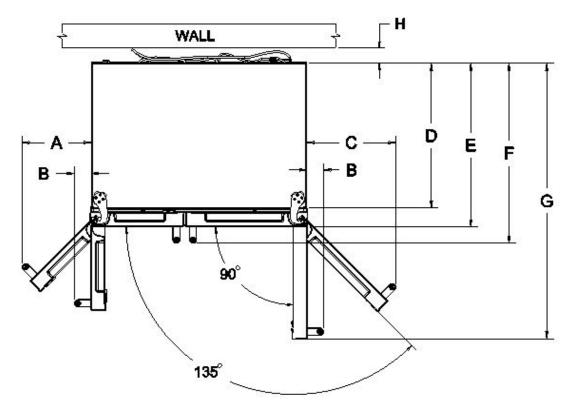

	Description	Inches	mm
Α	Width from FC side of refrigerator to handle - door fully open 135°	11-3⁄8	288.9
В	Width from FC side of refrigerator to handle - door open 90°	2-3⁄4	69.8
С	Width from RC side of refrigerator to handle - door fully open 135°	14-5⁄8	365.1
D	Depth without doors	29	736.6
Е	Depth with doors	32-1/16	814.3
F	Depth with handles	34-¾	882.65
G	Depth with doors open 90°	50-1⁄2	1282.7
Н	Space required for water lines and power chord	2	50.8

# KitchenAid®

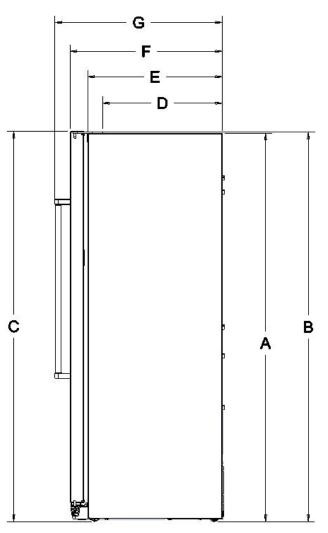


### **Product Dimension Guide for models KRSC705**

	Description	Inches	mm
Α	Height of recessed refrigerator	68-¾	1736.7
В	Height to top of hinges	68-13/16	1747.8
С	Total height	69	1752.6
D	Depth to back of hinges	26-5/16	668.3
Ε	Depth without doors	29	736.6
F	Depth with doors	32-1/16	814.3
G	Depth with handles	34-3/4	882.6

Interior dimensions	Width	Height
Refrigerator Compartment	17	62 ¼ in 1577.5 mm
Freezer Compartment	12-¼ in 307.9 mm	60 ¼ in (1527.5 mm

#### **Location Requirements**

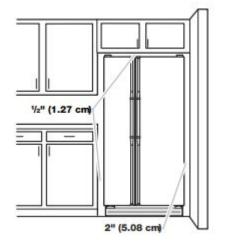

To ensure proper ventilation for your refrigerator, allow for 1/2" (1.27 cm) of space on each side and at the top.


Allow for 1" (2.54 cm) of space behind the refrigerator. If your refrigerator has an ice maker, allow extra space at the back for the water line connections. When installing your refrigerator next to a fixed wall, leave a 2" (5.08 cm) minimum space on each side (depending on your model) to allow the doors to swing open.


#### NOTES:


• This refrigerator is intended for use in a location where the temperature ranges from a minimum of  $55^{\circ}F(13^{\circ}C)$  to a maximum of  $110^{\circ}F(43^{\circ}C)$ . The preferred room temperature range for optimum performance, which reduces electricity usage and provides superior cooling, is between  $60^{\circ}F(15^{\circ}C)$  and  $90^{\circ}F(32^{\circ}C)$ . It is recommended that you do not install the refrigerator near a heat source, such as an oven or radiator.

■ Normal minimum cabinet cut-out width required for product installation is 36" (91.44 cm). However, if the product is placed against an extended wall and the ability to remove the crisper pans is desired, an additional 18" (45.72 cm) of cabinet width is required, so a total cabinet opening width of 54" (137.16 cm) is recommended.


### **Product Dimension Guide for models KRSC705**

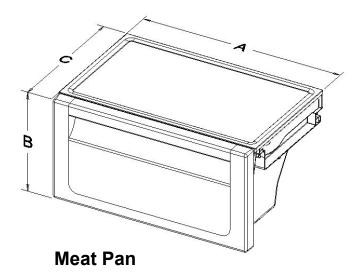


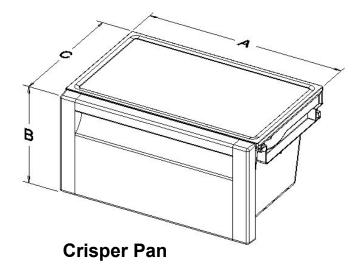


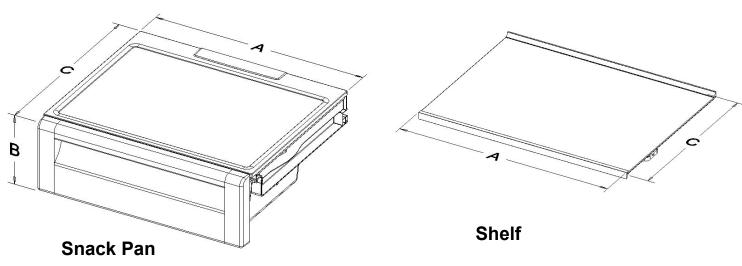

Refrigerator Compartment Features				
Description	A	B	C	
	width	height	depth	
Meat Pan	17-½ in	8-‰ in	16-3/8 in	
	444.5 mm	225.4 mm	415.9 mm	
Crisper pan	17-½ in	9-¼ in	16-3/8 in	
	444.5 mm	231.7 mm	415.9 mm	
Snack Pan	17-½ in	6-¼ in	19-‰ in	
	444.5 mm	155.5 mm	504.8 mm	
Shelf	17-½ in 444.5 mm	N/A	17-¾ in 450.8 mm	

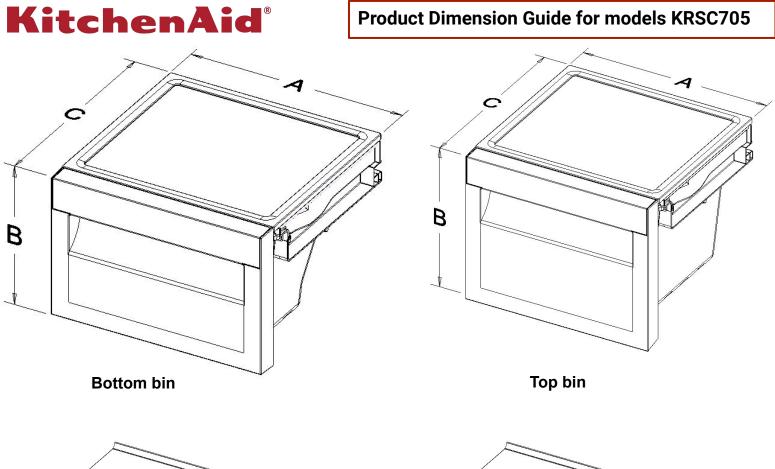

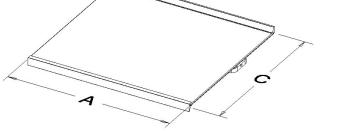

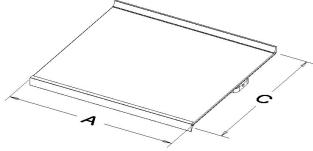

**Bottom Shelf** 

Top Shelf

Freezer Compartment Features				
Description	A	B	C	
	width	height	depth	
Bottom bin	11-¾ in	7-≸ in	16-¼ in	
	298.4 mm	193.6 mm	412.7 mm	
Top bin	11-¾ in	9 in	16-¼ in	
	298.4 mm	228.6 mm	412.7 mm	
Bottom Shelf	11-¾ in 298.4 mm	N/A	14-3/4 in 374.6 mm	
Top Shelf	11-¾ in 298.4 mm	N/A	16-¼ in 412.7 mm	