

### **CAUTION: Maintenance**

- 1. Replacement parts may be available at the store where you purchased your faucet.
- 2. Always turn off water and relieve pressure before working on your faucet.

## NOTES: Cleaning Instructions

- 1. To keep the faucet clean, you should clean the faucet frequently and regularly.
- 2. Clean the faucet with clearwater or mild liquid, rinse the faucet with clearwater and then dry the faucet with soft cotton cloths.
- 3. Do not use any abrasive cleansers, cloths, or paper towel.
- 4. Do not use any acid or abrasive detergent.

### TROUBLE-SHOOTING

If you've followed the instruction carefully and your faucet still does not work properly, take these corrective steps


Problem	Cause	Action
Leaks underneath handle.	Cartridge has come loose.	Tighten the cartridge.
Aerator leaks or has an inconsisitent water flow pattern.	Aerator is dirty or worn out or misfitted.	Unscrew the aerator to clean or replace washer, or replace the aerator.
Water will not shut off completely.	Dirty or worn out washer in cartridge.	Remove handle and cartridge to check if the washer is damaged permanently or dirty. Re-install cartridge.



# **Wall-Mount Pot Filler Faucet**

### **PACKING LIST**

After you open this package, please check to ensure that all of the following items are included.

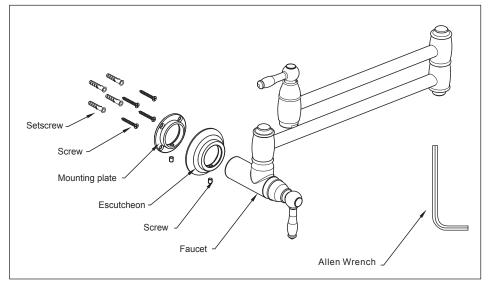

IMPORTANT NOTICES: Do not use petroleum-based products in this faucet.

Observe all local plumbing and building codes.


### YOU MAY NEED

Common woodworking and plumbing tools and materials




Questions, problems, missing parts?
call Akicon Customer Service 8 a.m.-6p.m. EST, Monday-Friday
Phone: +1(302)213 4406, Email: service@akiconshop.com
AKICONSHOP.COM

## **INSTALLATION PROCEDURES**

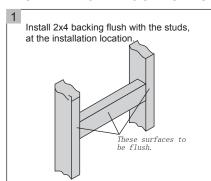

Secure the supply pipe to the 2x4 backing.

Secure here.

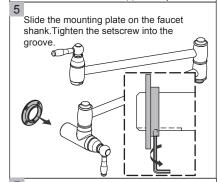

Mark the four screw hole locations with the setscrew down.

Setscrew

Install a 1/2" NPT supply pipe to extend no more than 1/2" (13mm) beyond the wall. Maa mm) Complete the finished wall. Provide a 1-5/16" (33 mm) hole around the supply Ø 1-5/16" (33 mm) Thread the shank to the supply pipe so the mounting plate is flush. Remove the faucet from the supply

pipe. Remove the mounting plate

from the shank.



