

IMPORTANT SAFETY INSTRUCTIONS



**READ ALL INSTRUCTIONS
BEFORE USE AND SAVE
FOR FUTURE REFERENCE**



This swing set is suitable for children or adults over 5 years old and can accommodate 7-8 children at the same time.



On site adult supervision must be provided for children of all ages and at all times.

SAFE PLAY AREA

 
 
 
 
 
 
 

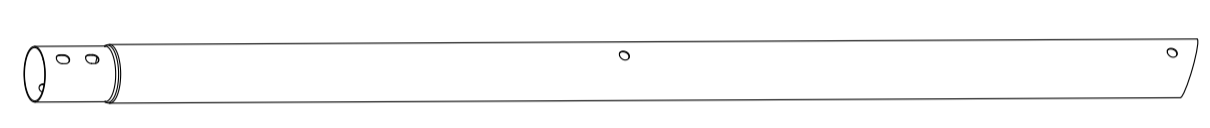 
 
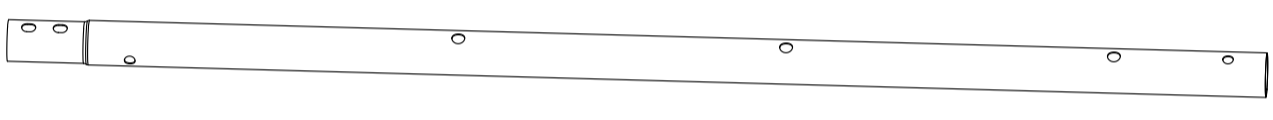 
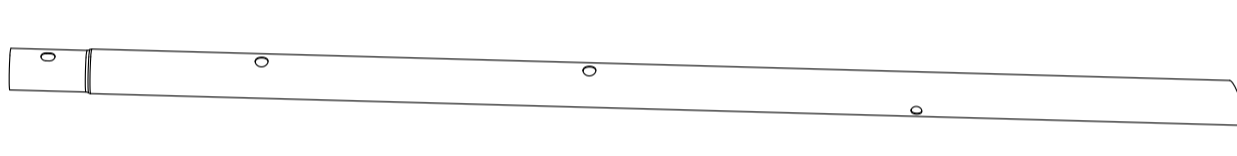 
 
 
 

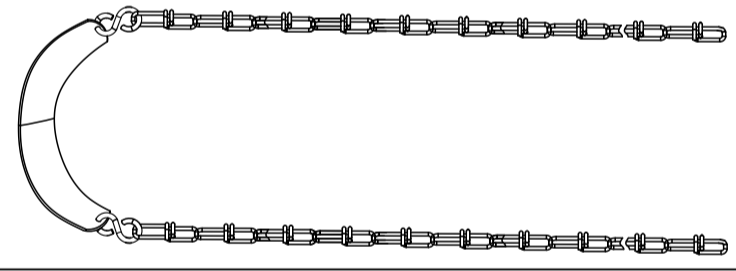 
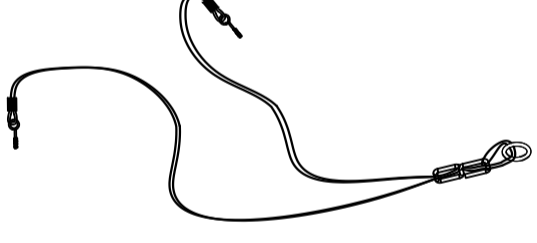 
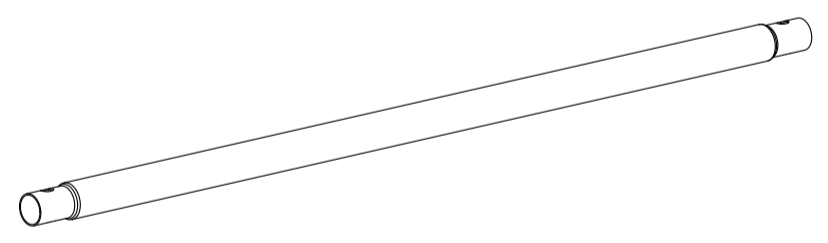 
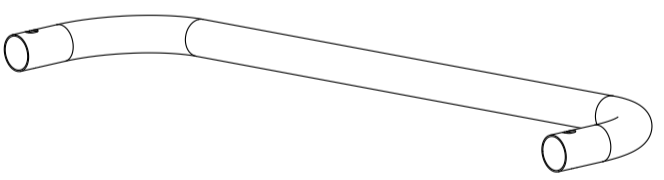 
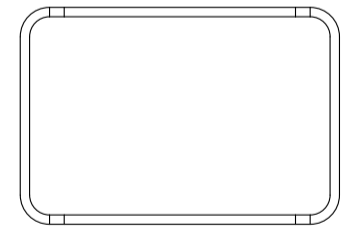 
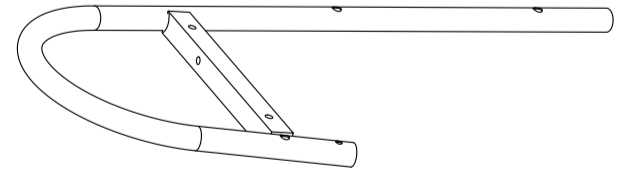 

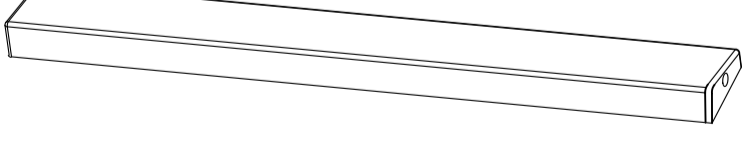 
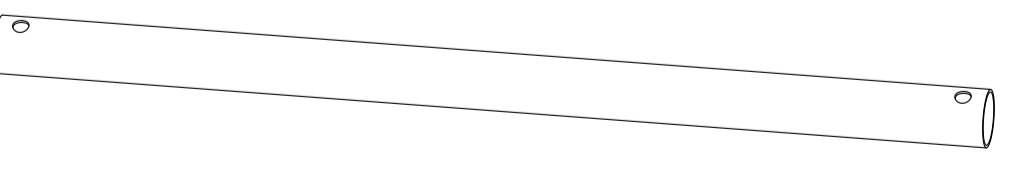 
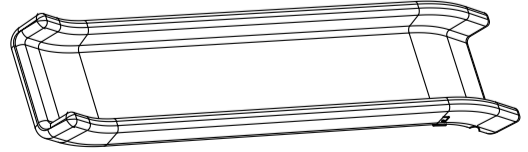 
 
 
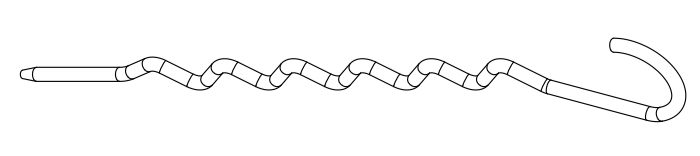 
- **DO NOT** install the swing set over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury. Install on an unpaved steady surface, such as grass or a solid layer of sand.
- **DO NOT** install the swing set on sloping ground. This leaning puts additional stress on all connections and joints and further causes those connections to loosen and fail.
- The safe play area refers to a zone extending 6 ft. (200 cm) beyond the swing set on all sides. Install the ground cover in the safe play zone.
- Remove all tripping hazards such as rocks, stumps, roots etc. from the safe play area.
- The safe play area must be free of all structures, fences, garage, house, overhanging branches, laundry lines, electrical wires and other obstacles to ensure safe play.
- Children should stay out of the work area until the safe play area is cleared of obstacles, the swing set has been completely installed, all hardware has been tightened and checked, and all tools have been picked up.

SAFE PLAY


- Teach your children to play safe.
- Dress children appropriately. Avoid accessories, clothing with drawstrings, loose fitting clothes and stringed items placed around the neck, which could become entangled or snagged on equipment. Dress with well fitting and full foot enclosing footwear. Also bike helmets should be taken off before playing on the swing set.
- **DO NOT** use the swing set in any other manner than the way intended.
- **DO NOT** play upon in wet weather conditions because of potentially slippery surfaces.
- **DO NOT** twist swing chains or ropes or loop them over the top support bar as this may reduce the strength of the chain or rope.
- **DO NOT** attach extra items to the swing set that are not specifically designed for use with the swing set, including (but not limited to) clothes lines, electrical devices, loose ropes or chains etc.
- Caution children **NOT** to:
 - ◆ jump off swing while it is in motion
 - ◆ swing an empty seat
 - ◆ swing at an angle
 - ◆ hang upside down from any part of the gym set
 - ◆ grasp or stop another child on any moving equipment
 - ◆ walk close to, in front of, between or behind moving items
- Caution children to sit in the centre of the swing with their full weight on the seat.
- Make sure that climbing ropes or chain are secured at both ends and cannot be looped back on itself.
- All components may become hot when exposed to direct sunlight. Make sure the swing set is not hot before allowing children to play.

SAVE THESE INSTRUCTIONS


Part List

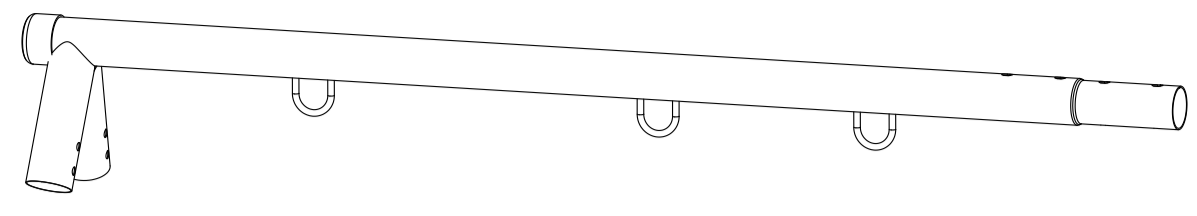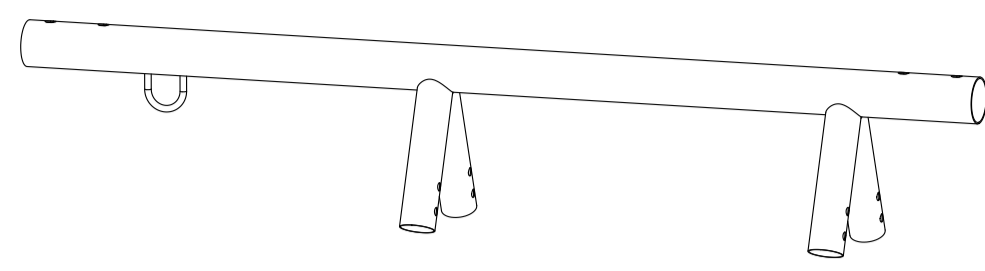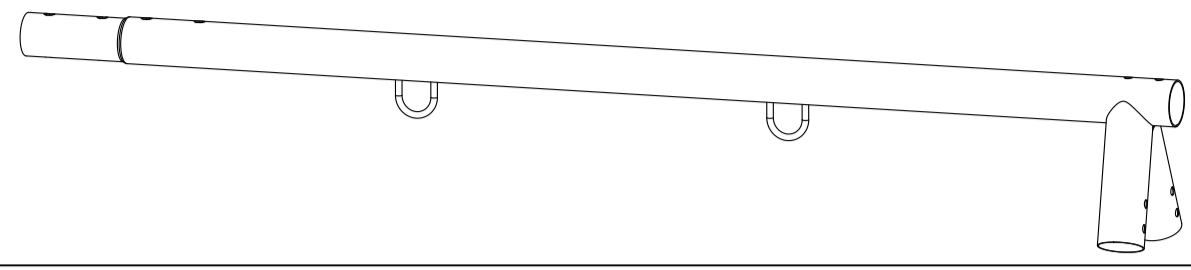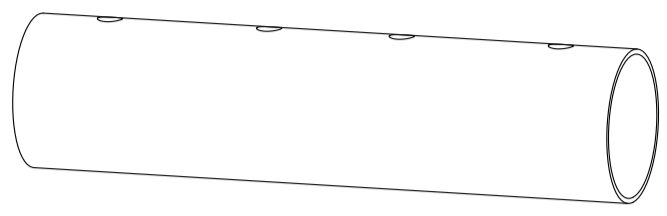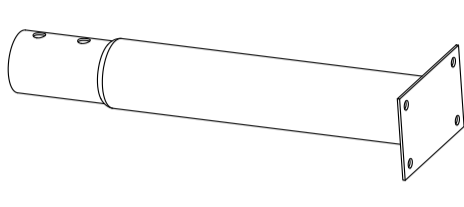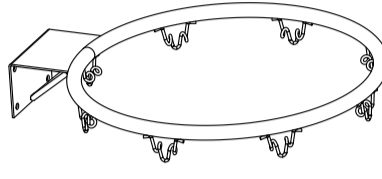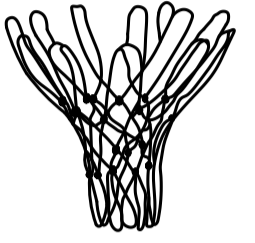1	Left Top Bar		1
2	Meddle Top Bar		1
3	Right Top Bar		1
4	Sleeve		2
5	Hoop Connecting Rod		1
6	Basket		1
7	Basketball Net		1
8	Top Section Leg		4
9	Bottom Section Leg		4
10	Top Support Leg Of Ladder 01		2
11A	Top Support Leg Of Ladder 02		2
11B	Bottom Legs Of Ladder 01		2
12	Bottom Legs Of Ladder 02		2
13	Support Connecting Rod		2
14	Ladder Connecting Pipe		9
15	Ring		1
16	Chain Swing Chair		1
17	Black Rope		2
18	Iron Pipe 01		2
19	Iron Pipe 02		2
20	Cloth Cover		1
21	Half Circle Component		2
22	Slide Leg Tube		2
23	Slide Lader Steps		2
24	Slide Top Support Bar		1
25	Slide		1
26	Glide Seat Support 01		1
27	Glide Seat Support 02		1
28	Ground Hook		4

 
STEP 1

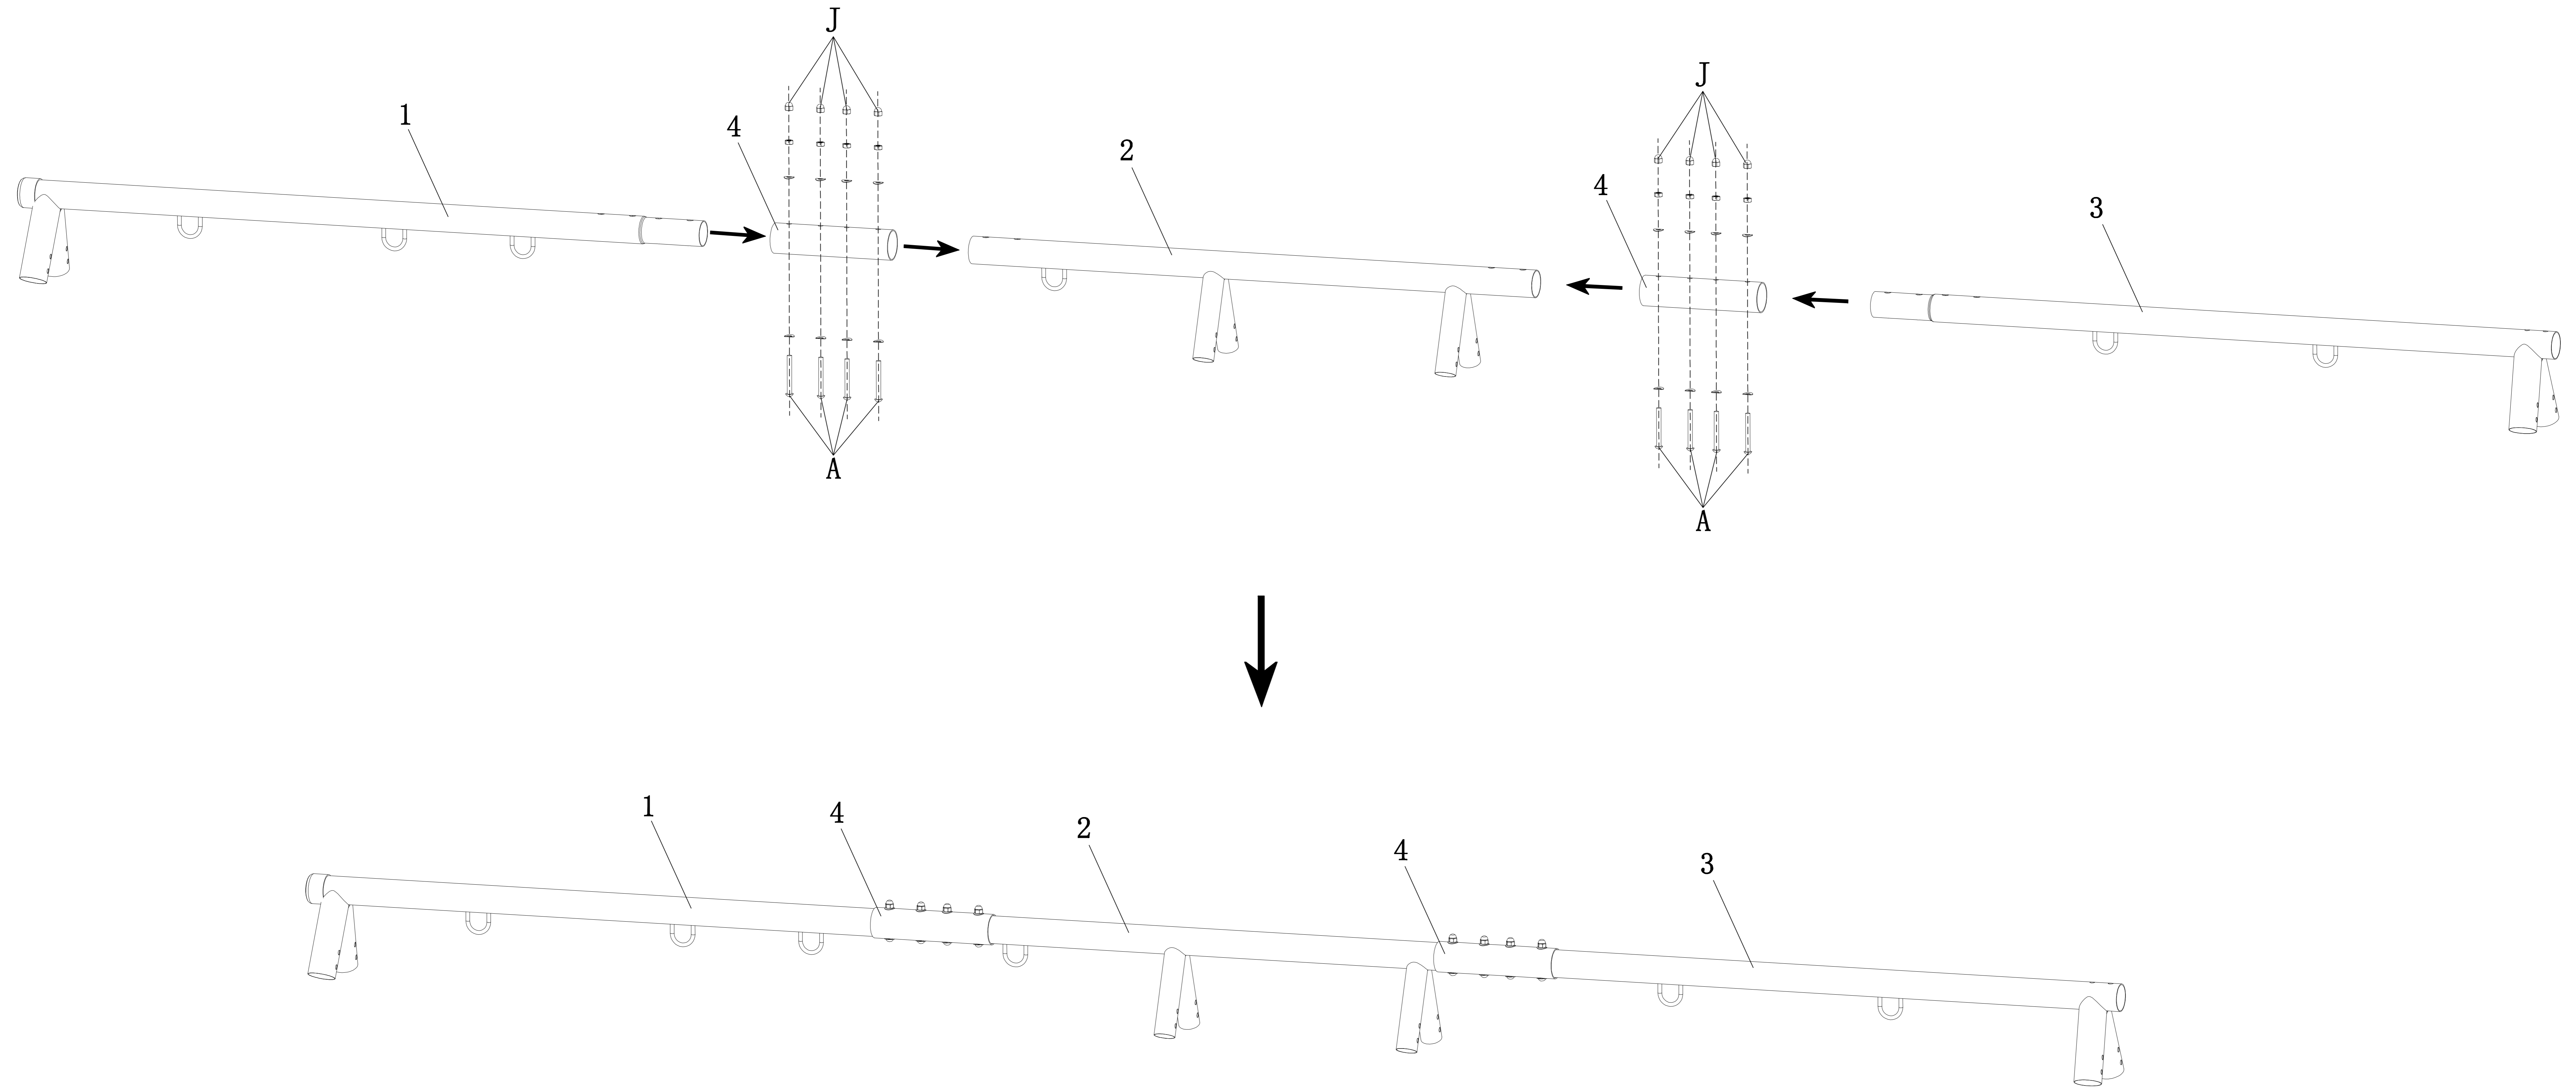

 STEP2

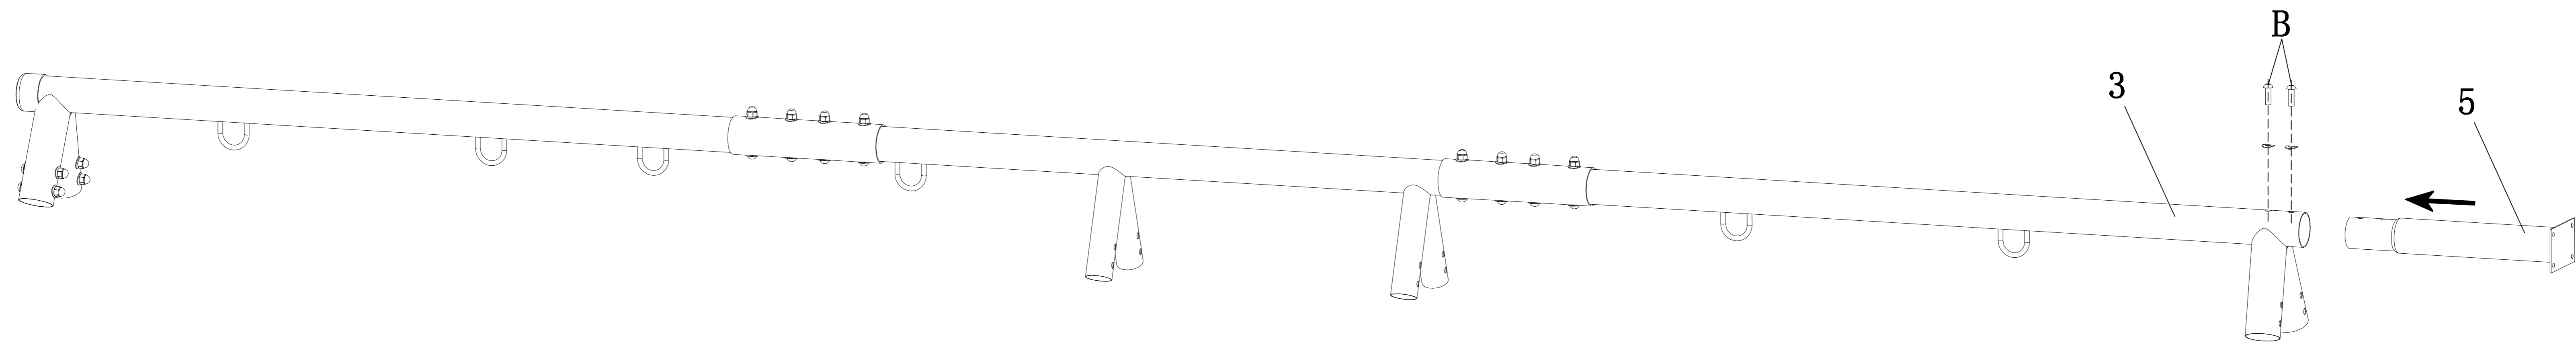

 
STEP3

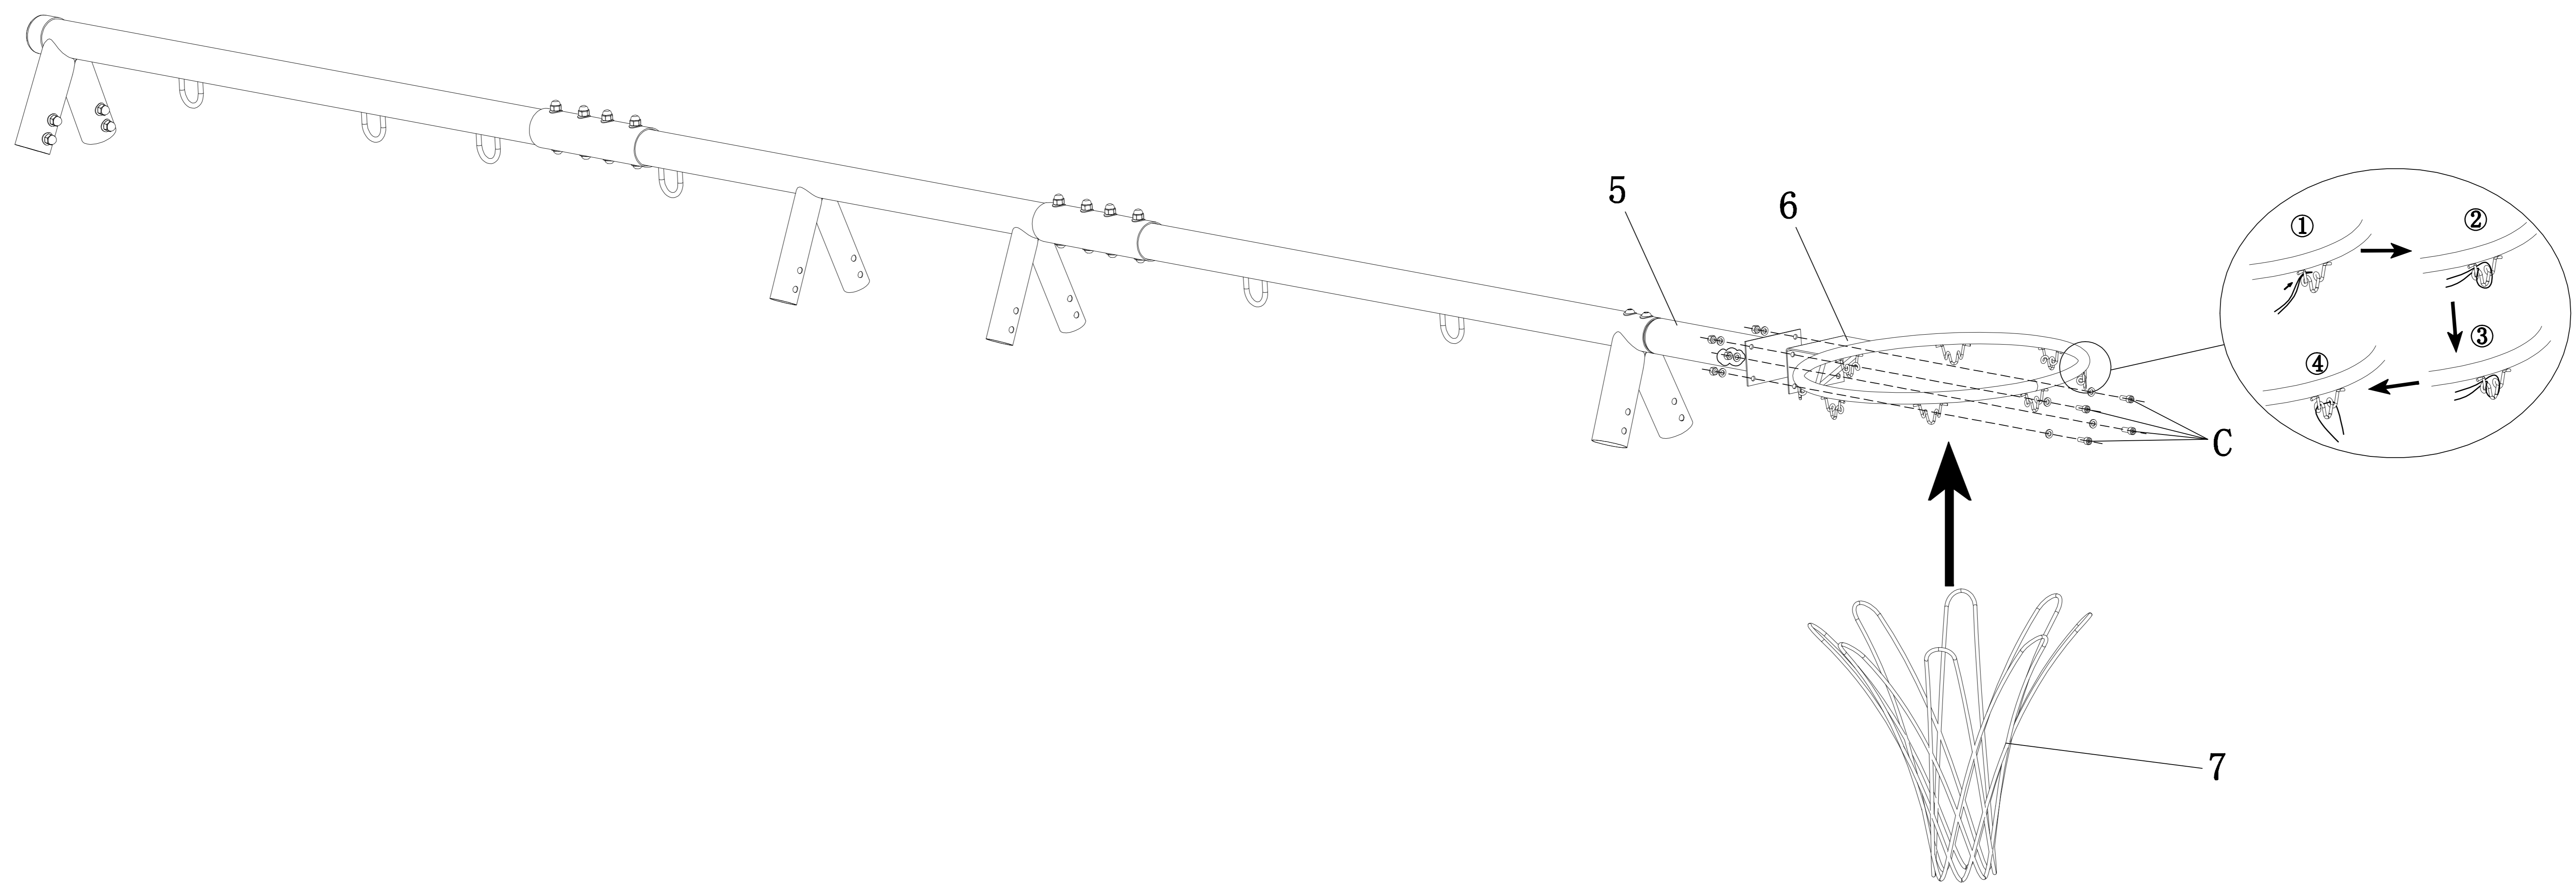


STEP 4



 
STEP 5

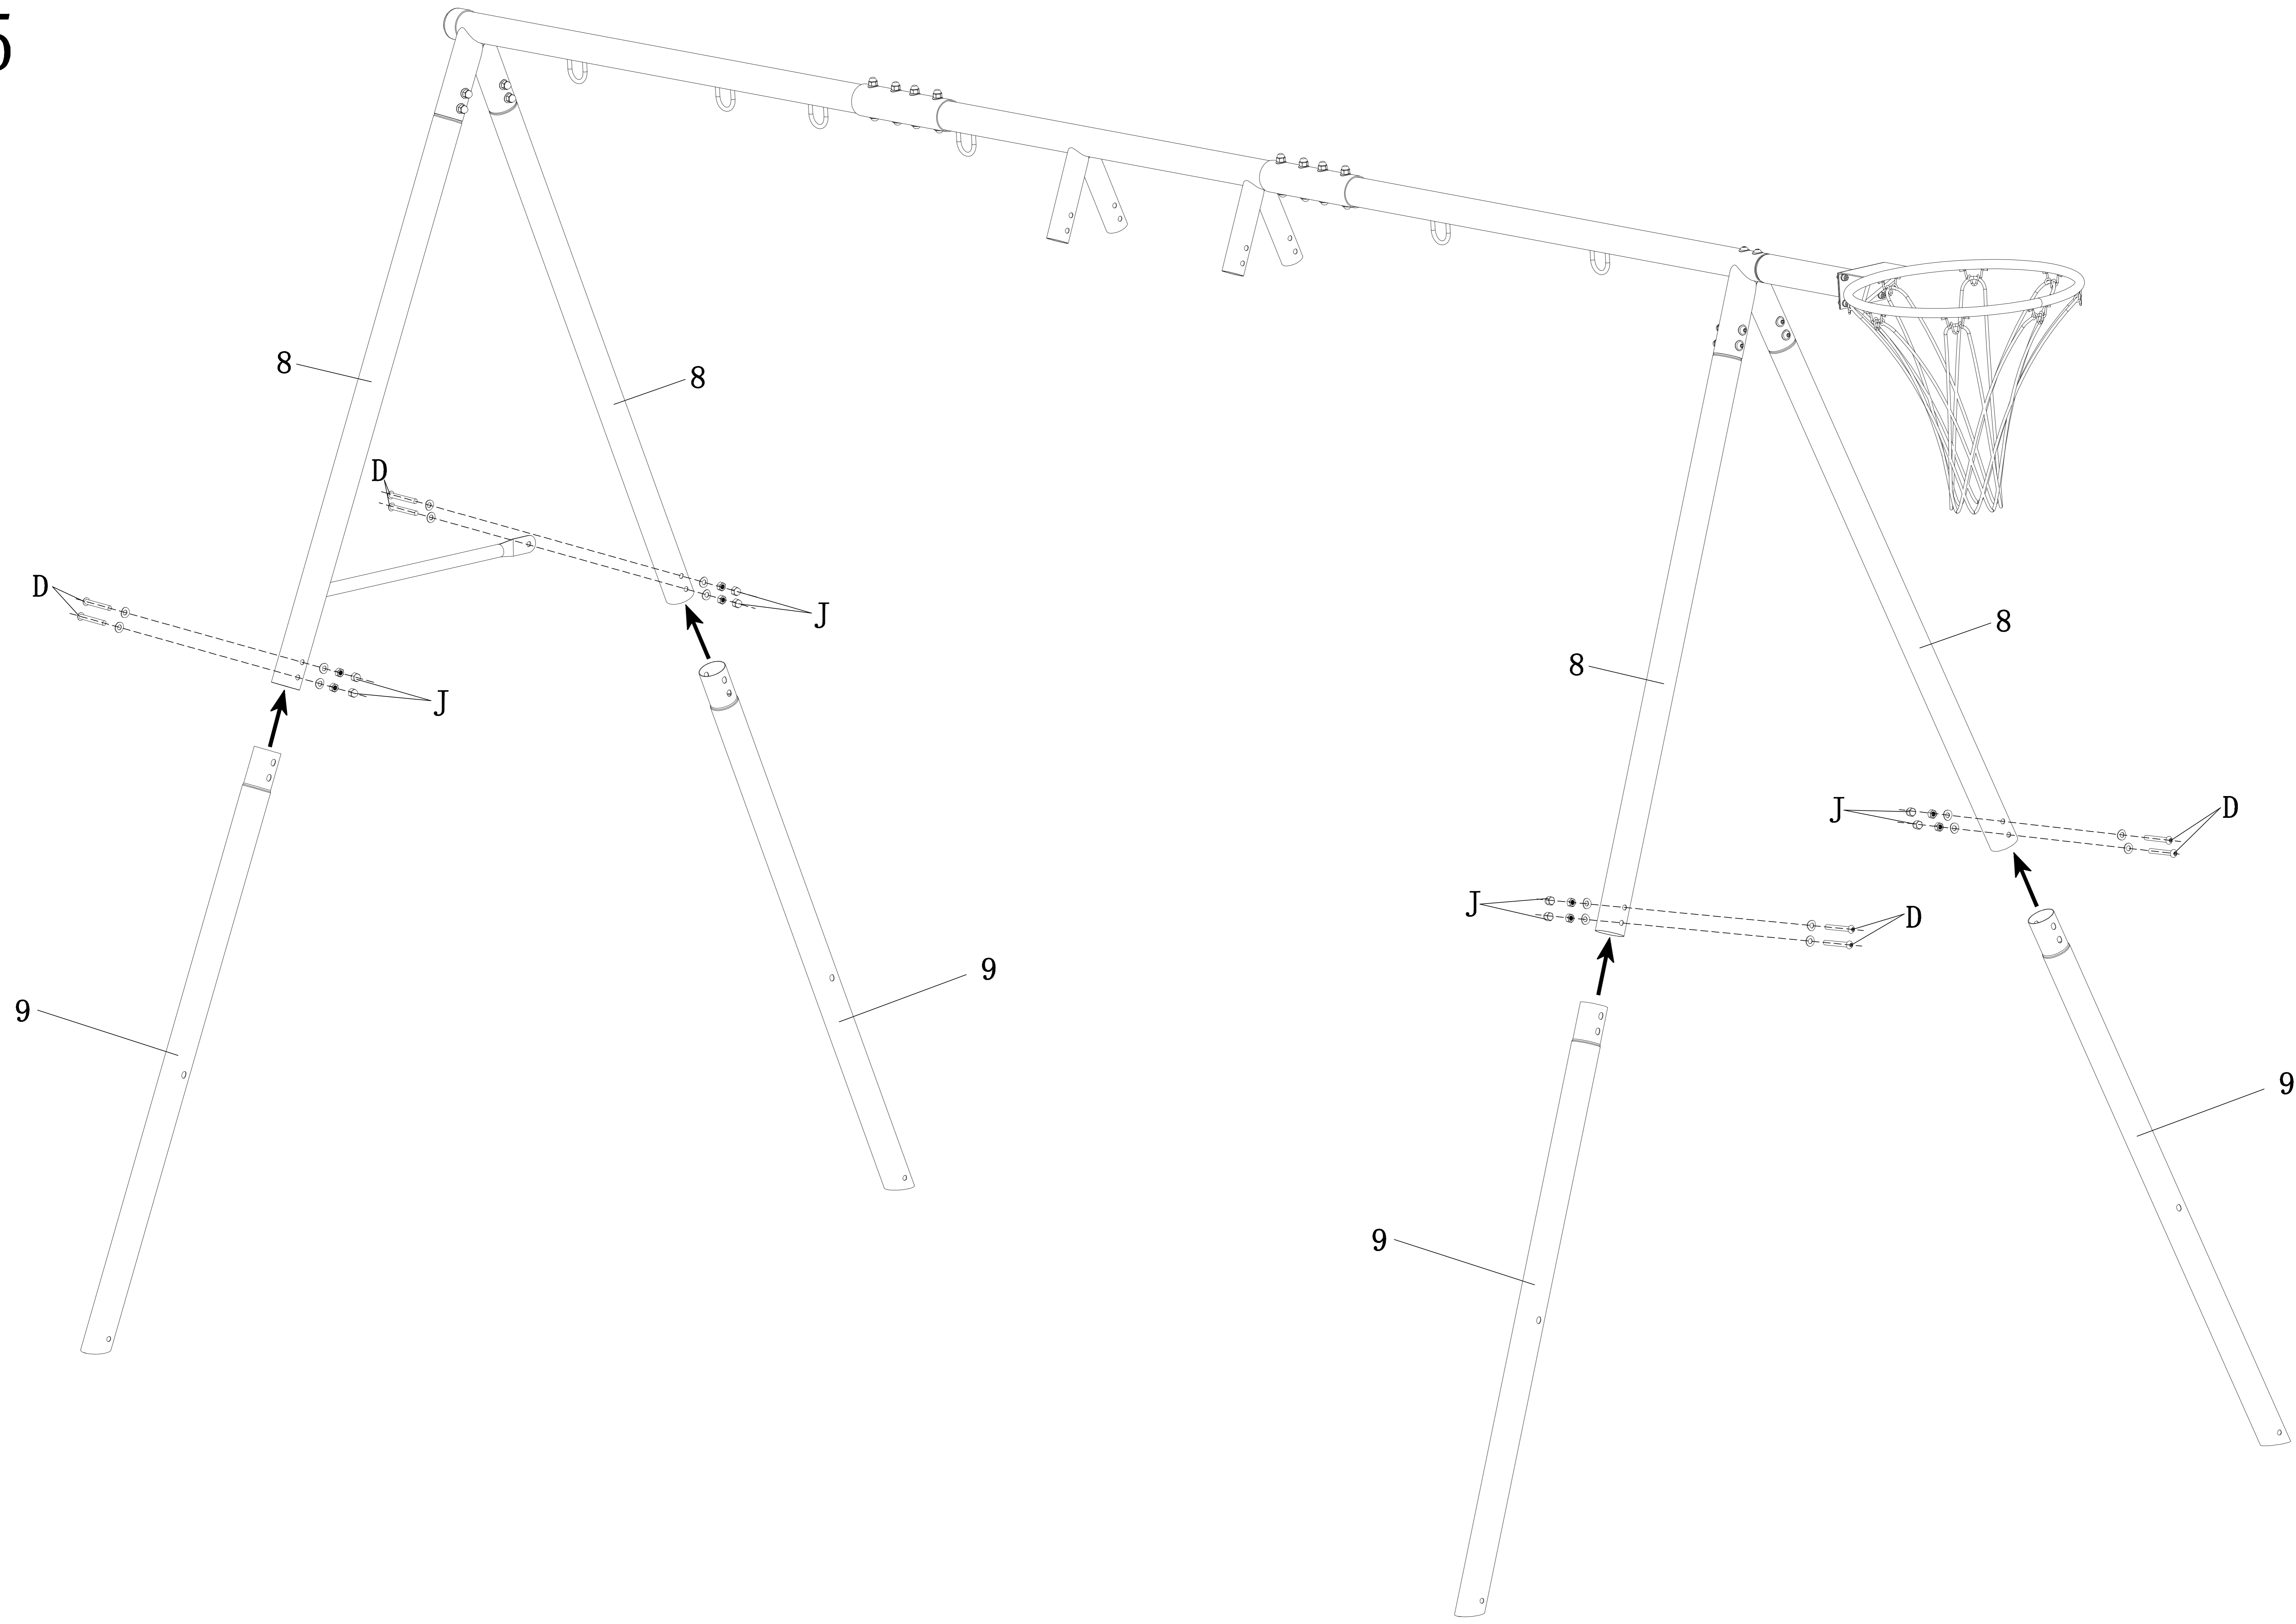

 
STEP 6

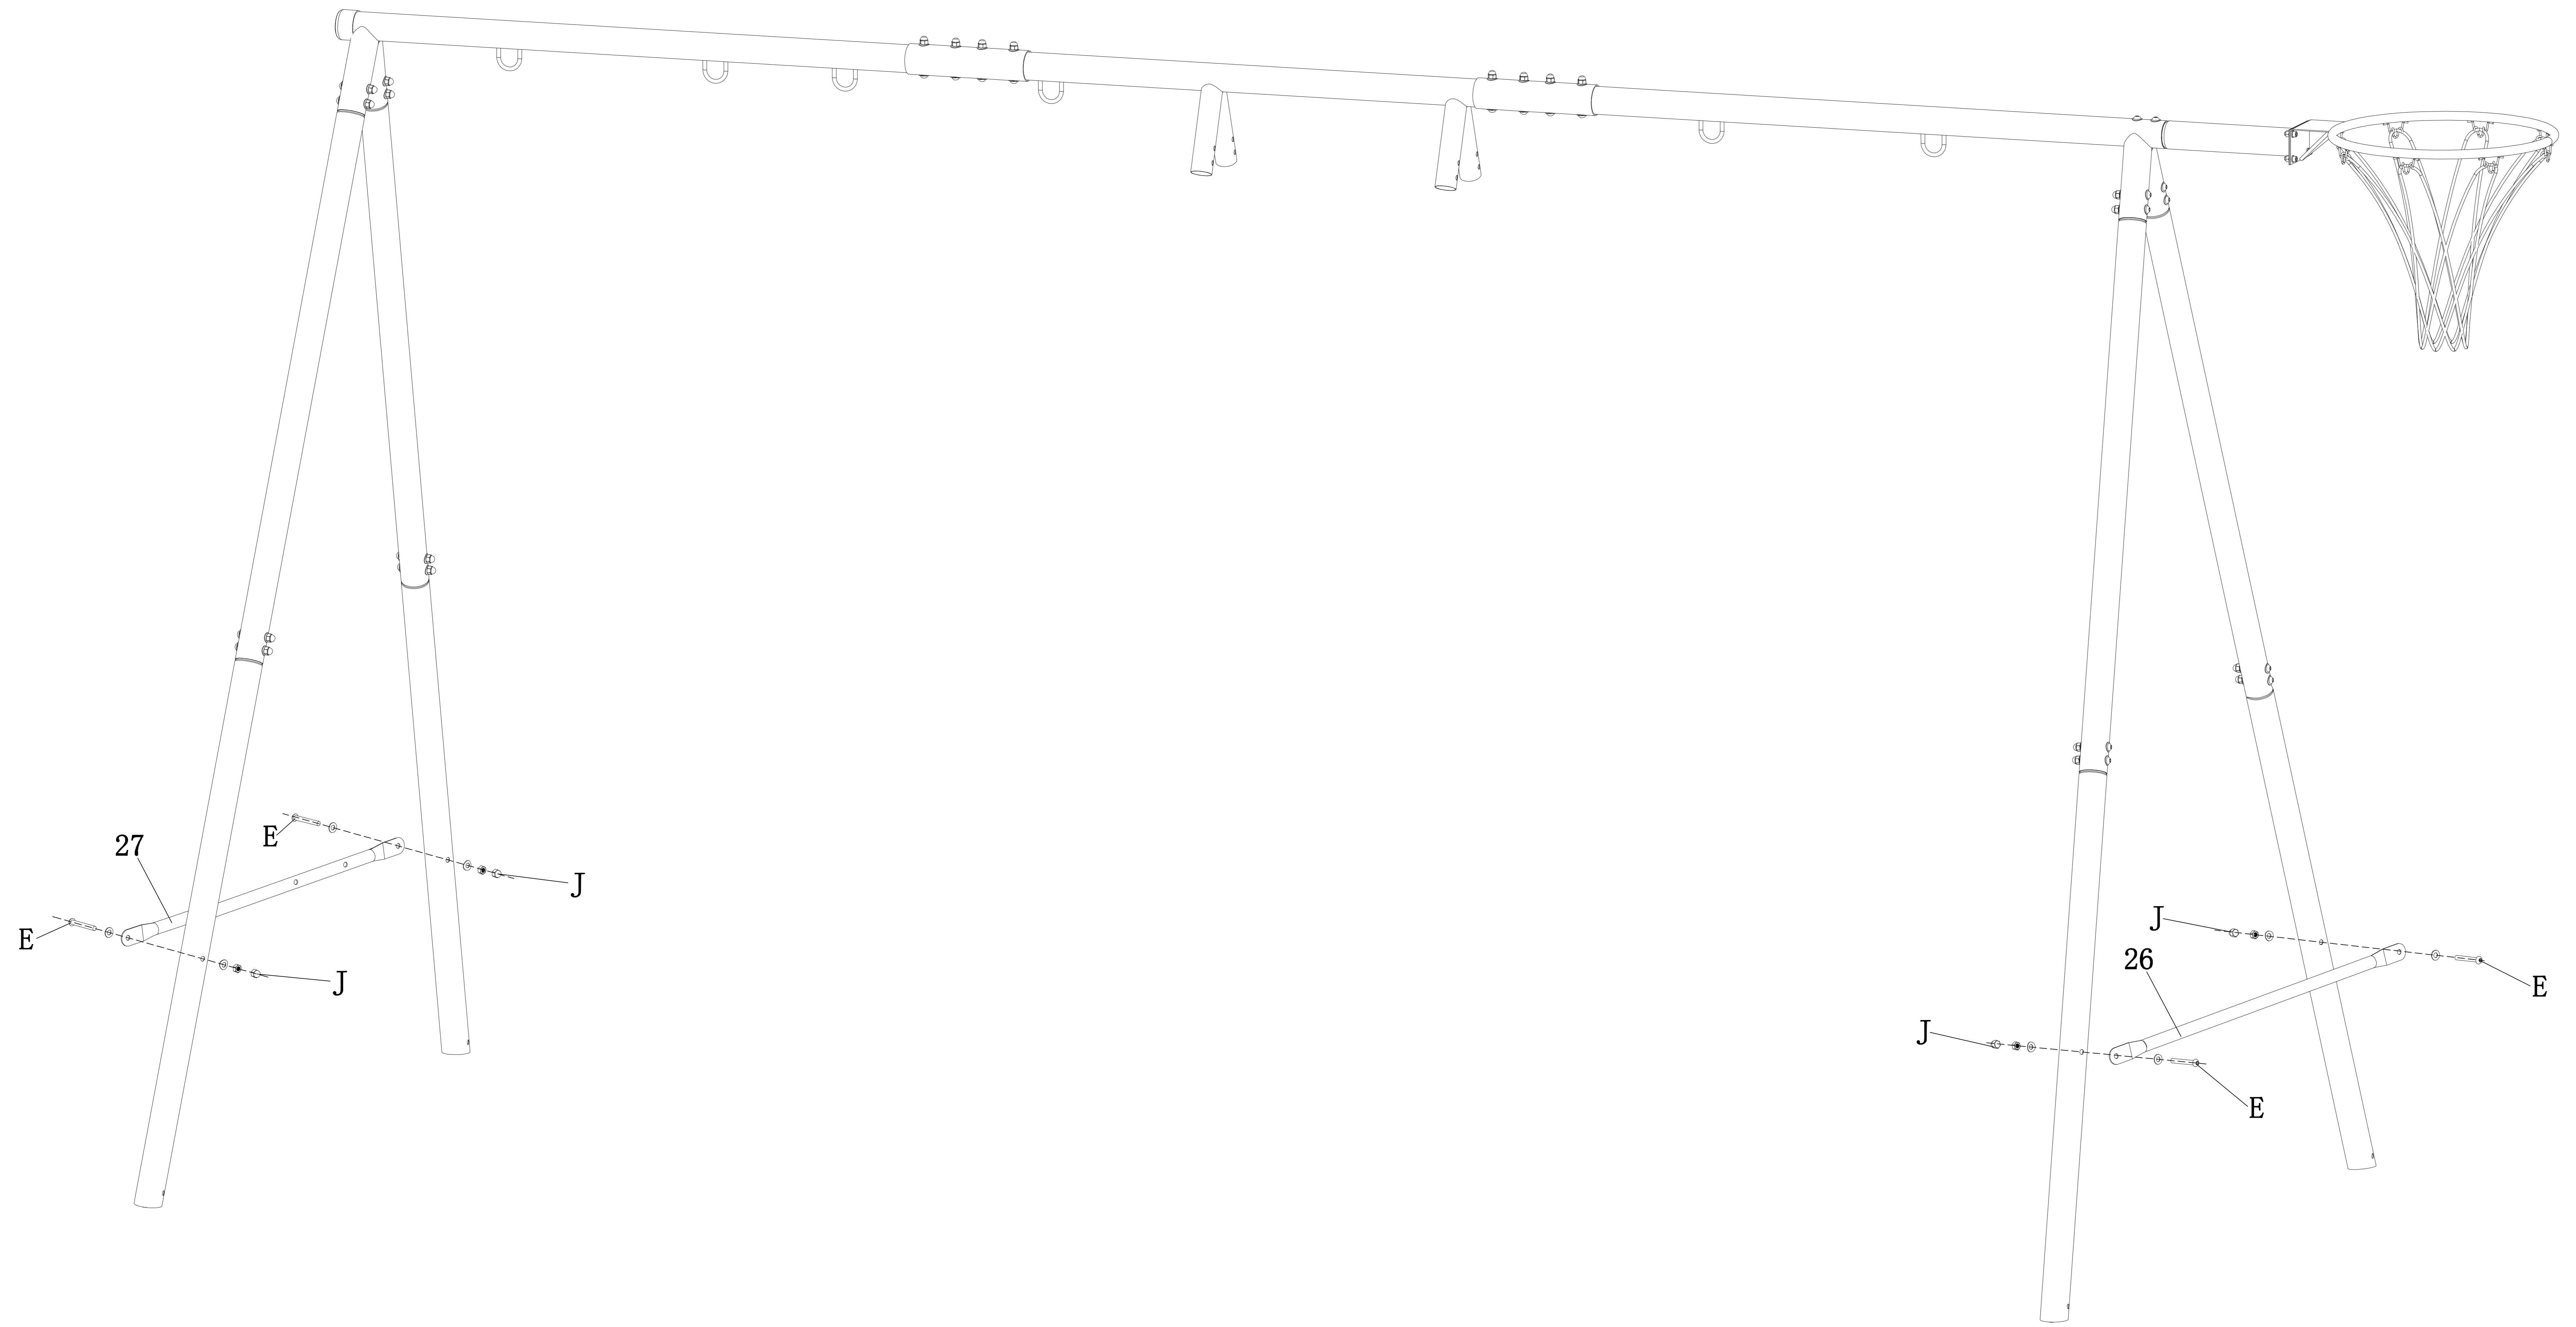

 
STEP 7

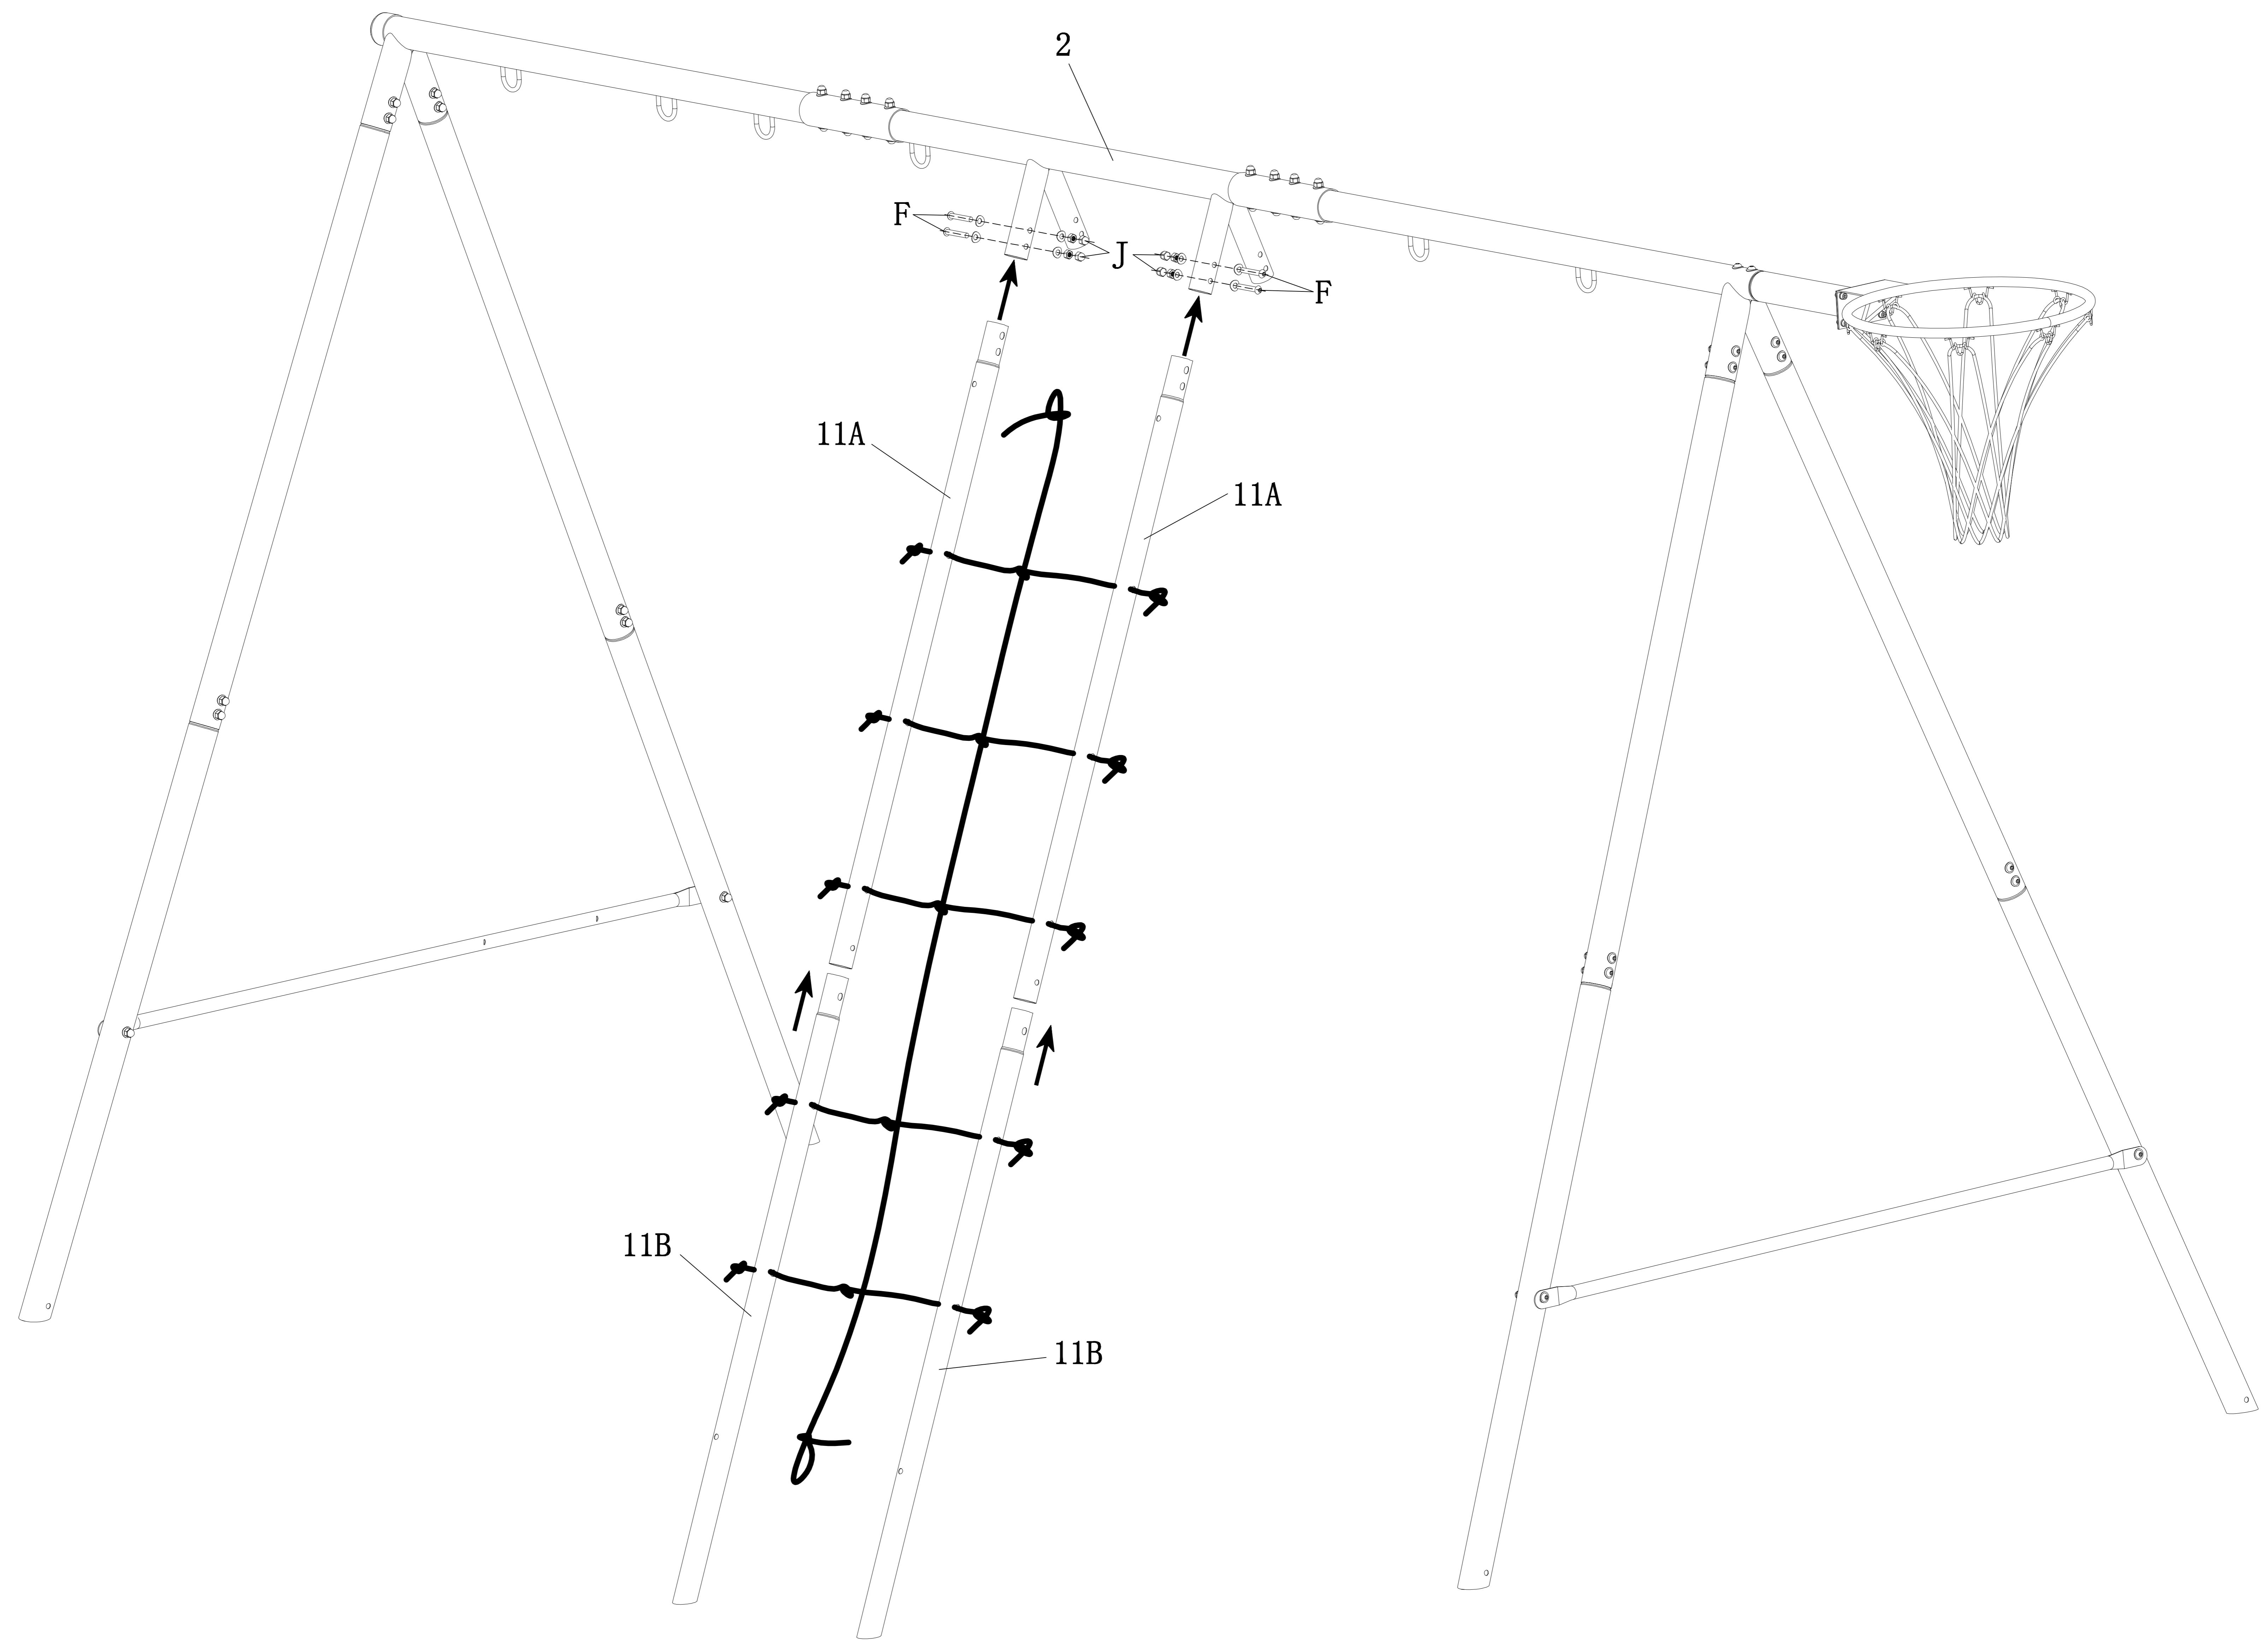

 
STEP 8

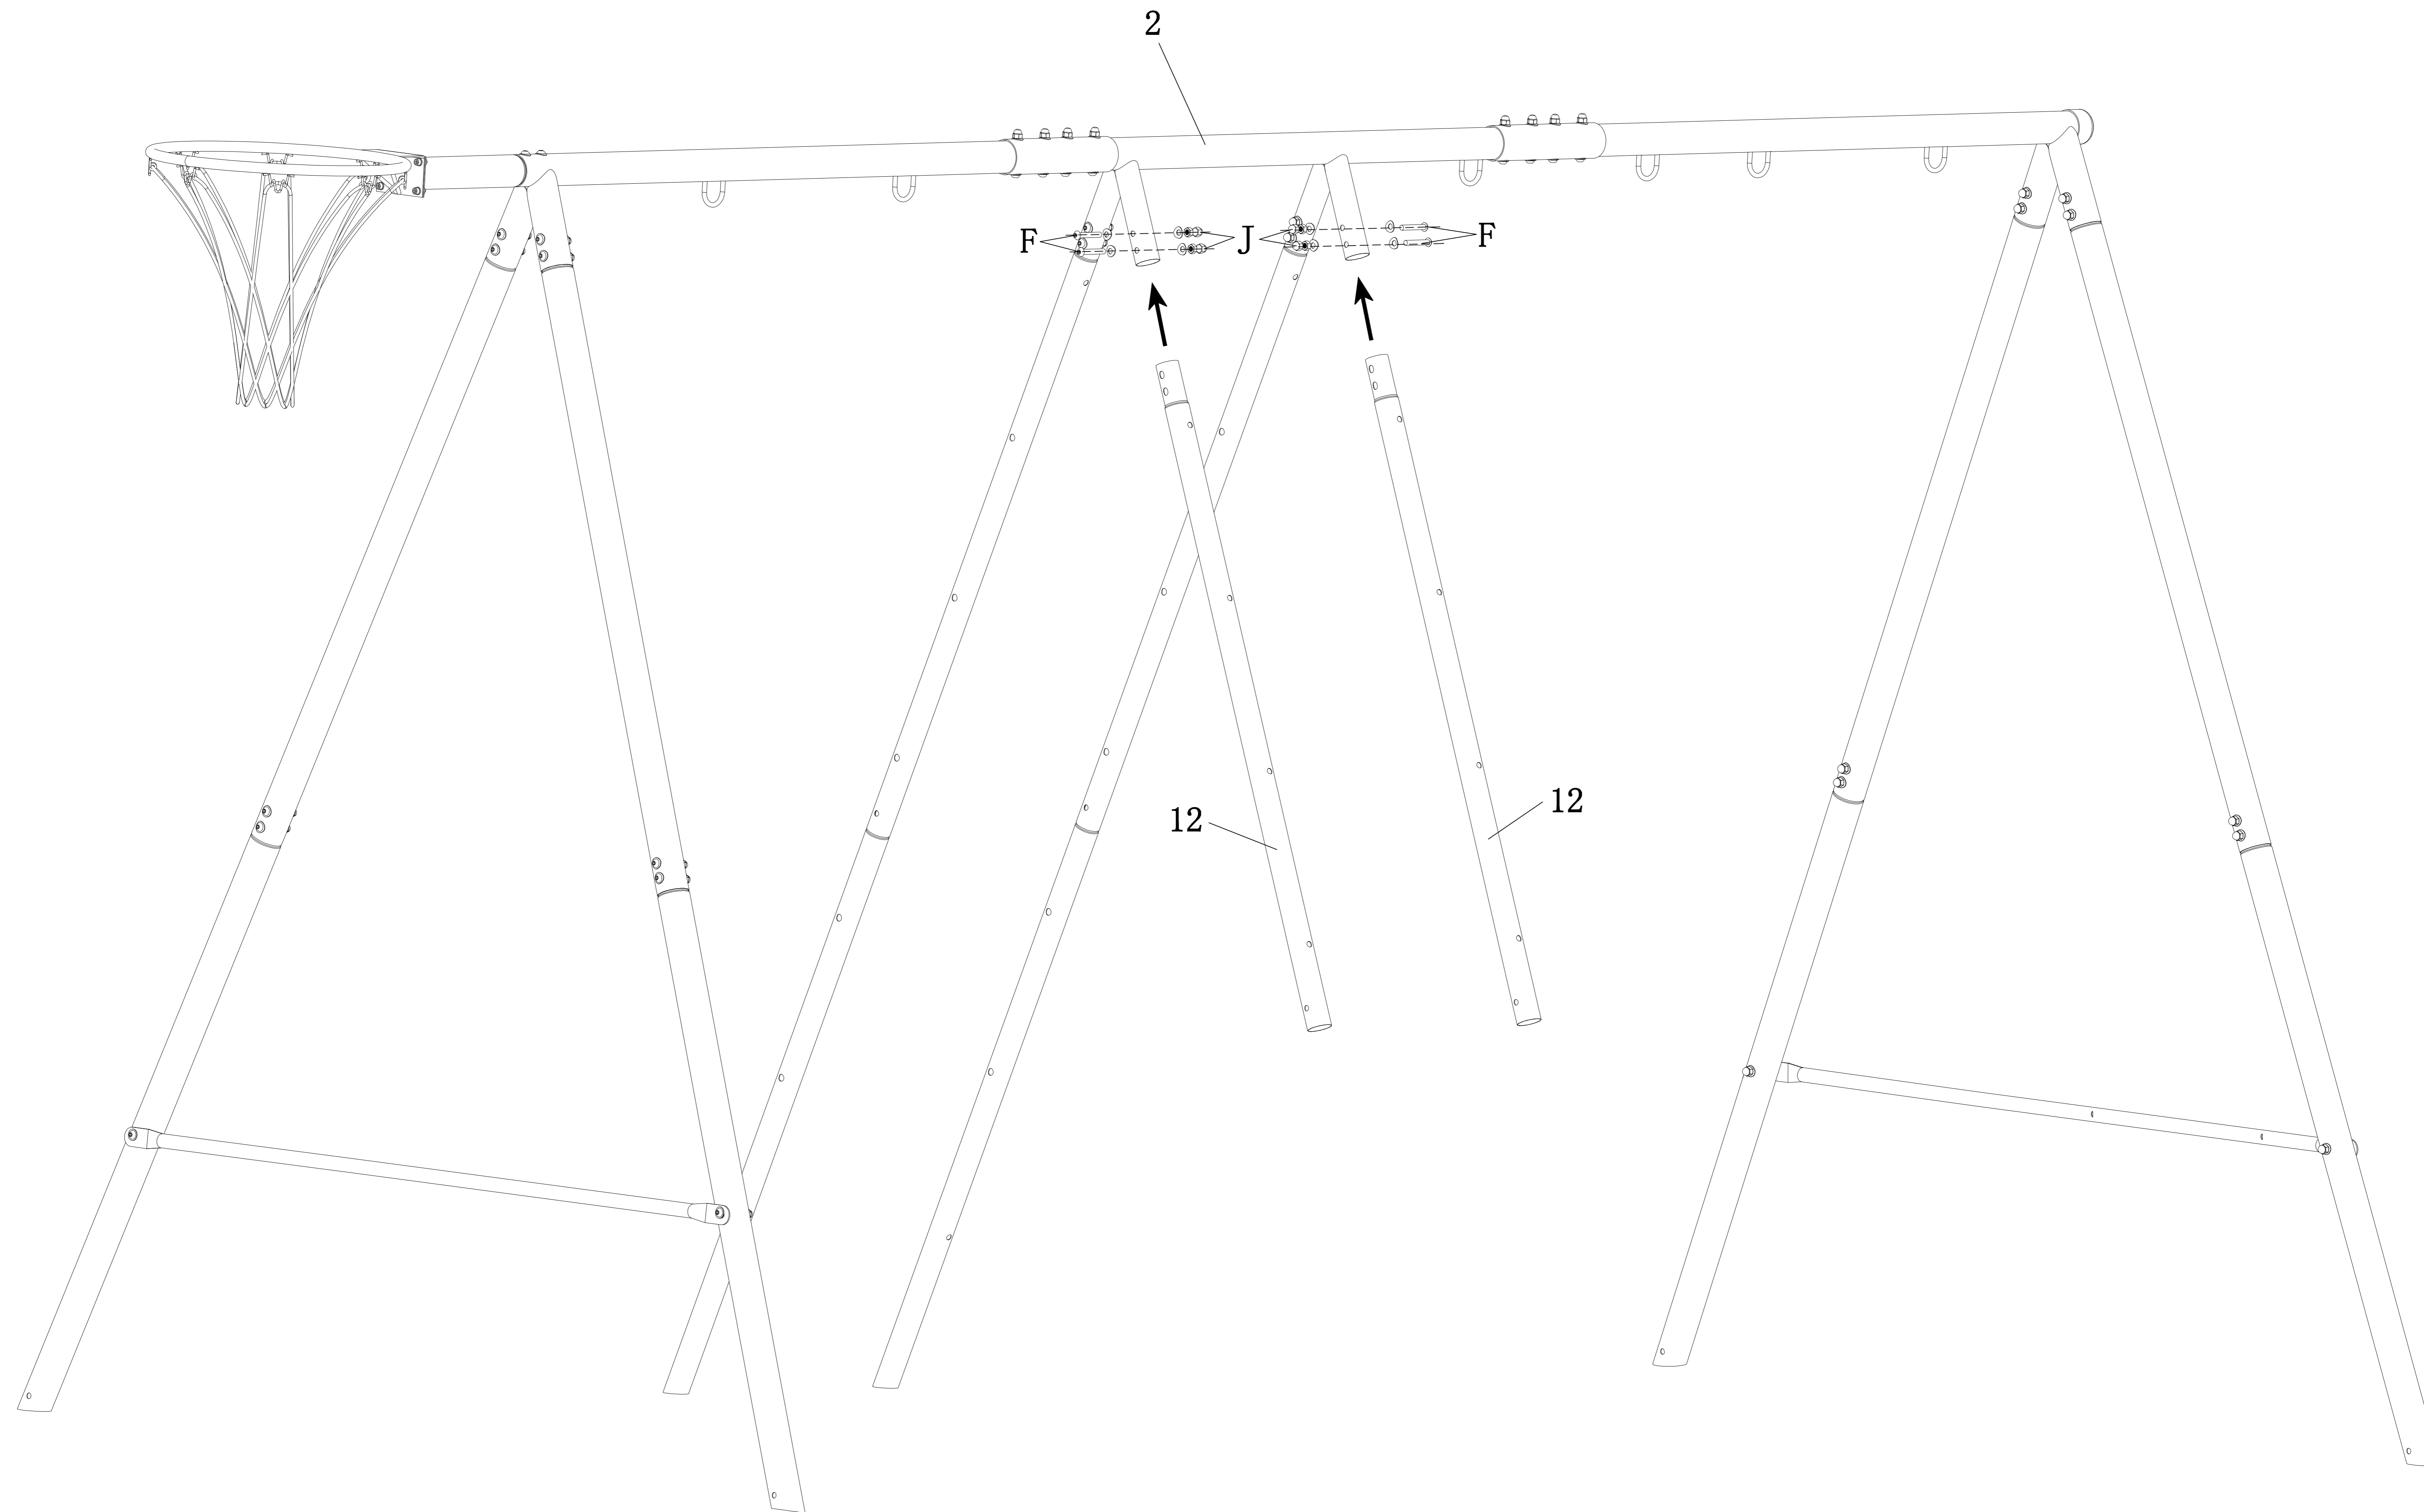

 
STEP 9

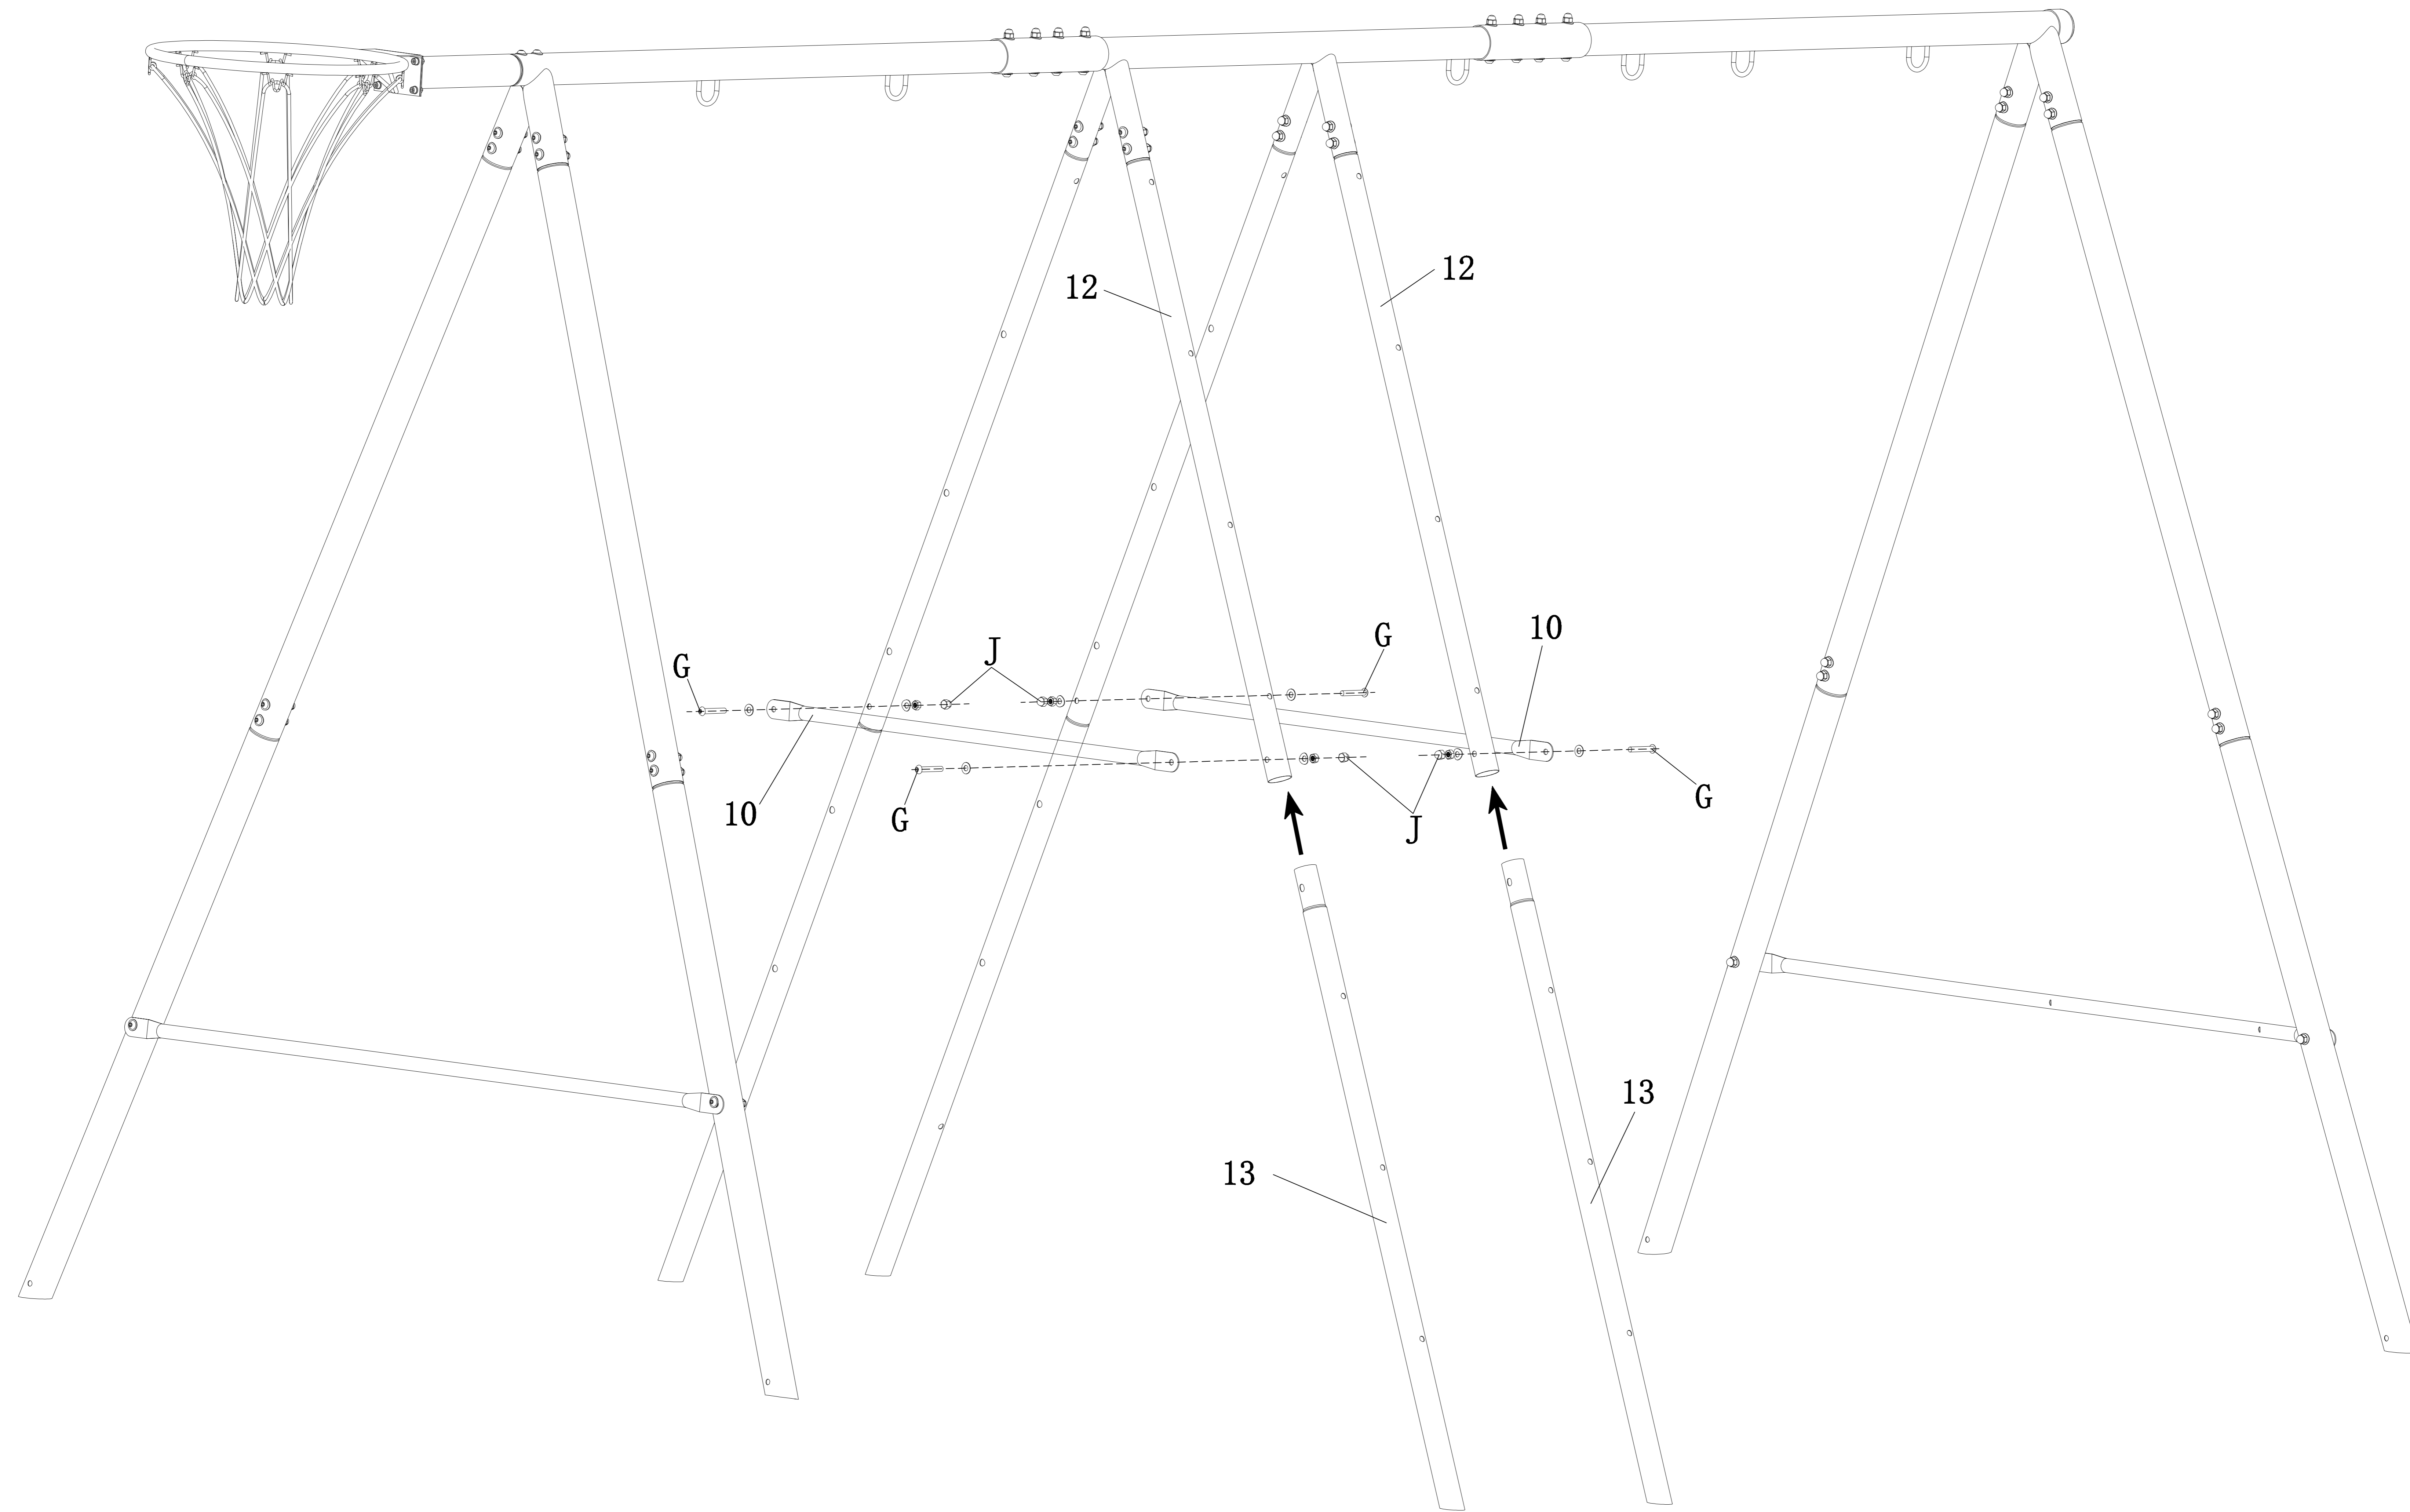

 
STEP 10

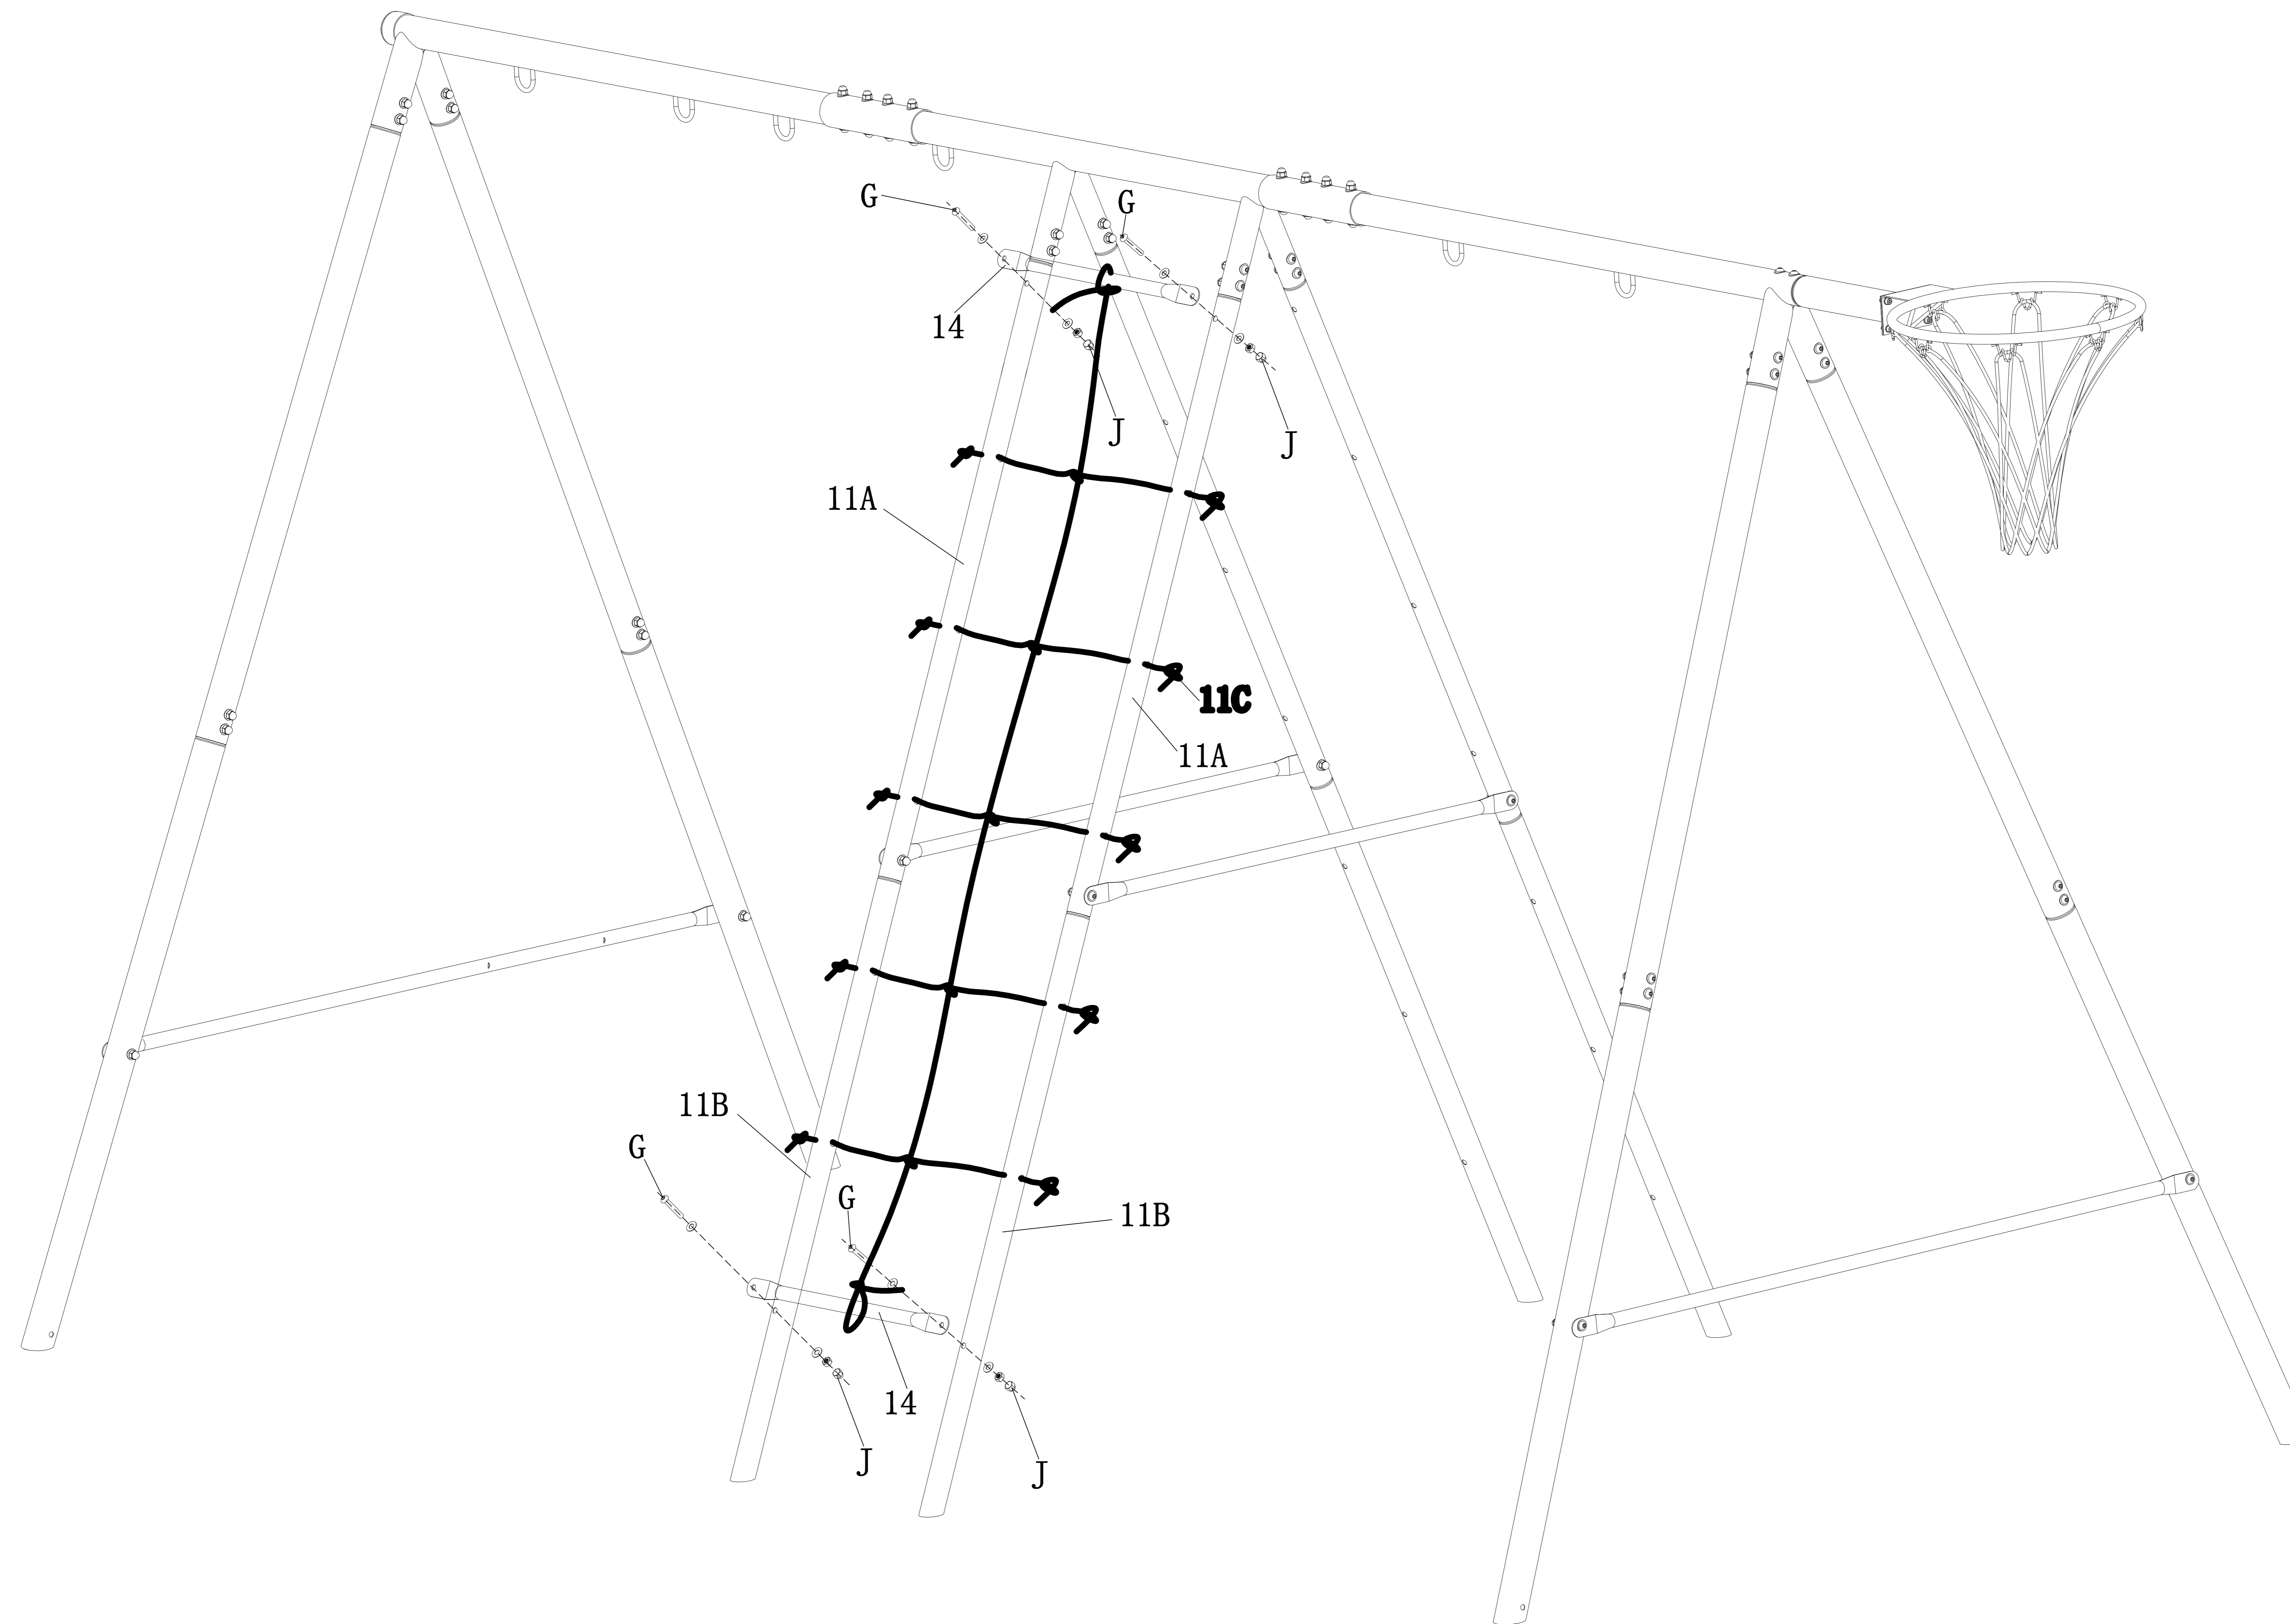

 
STEP 11

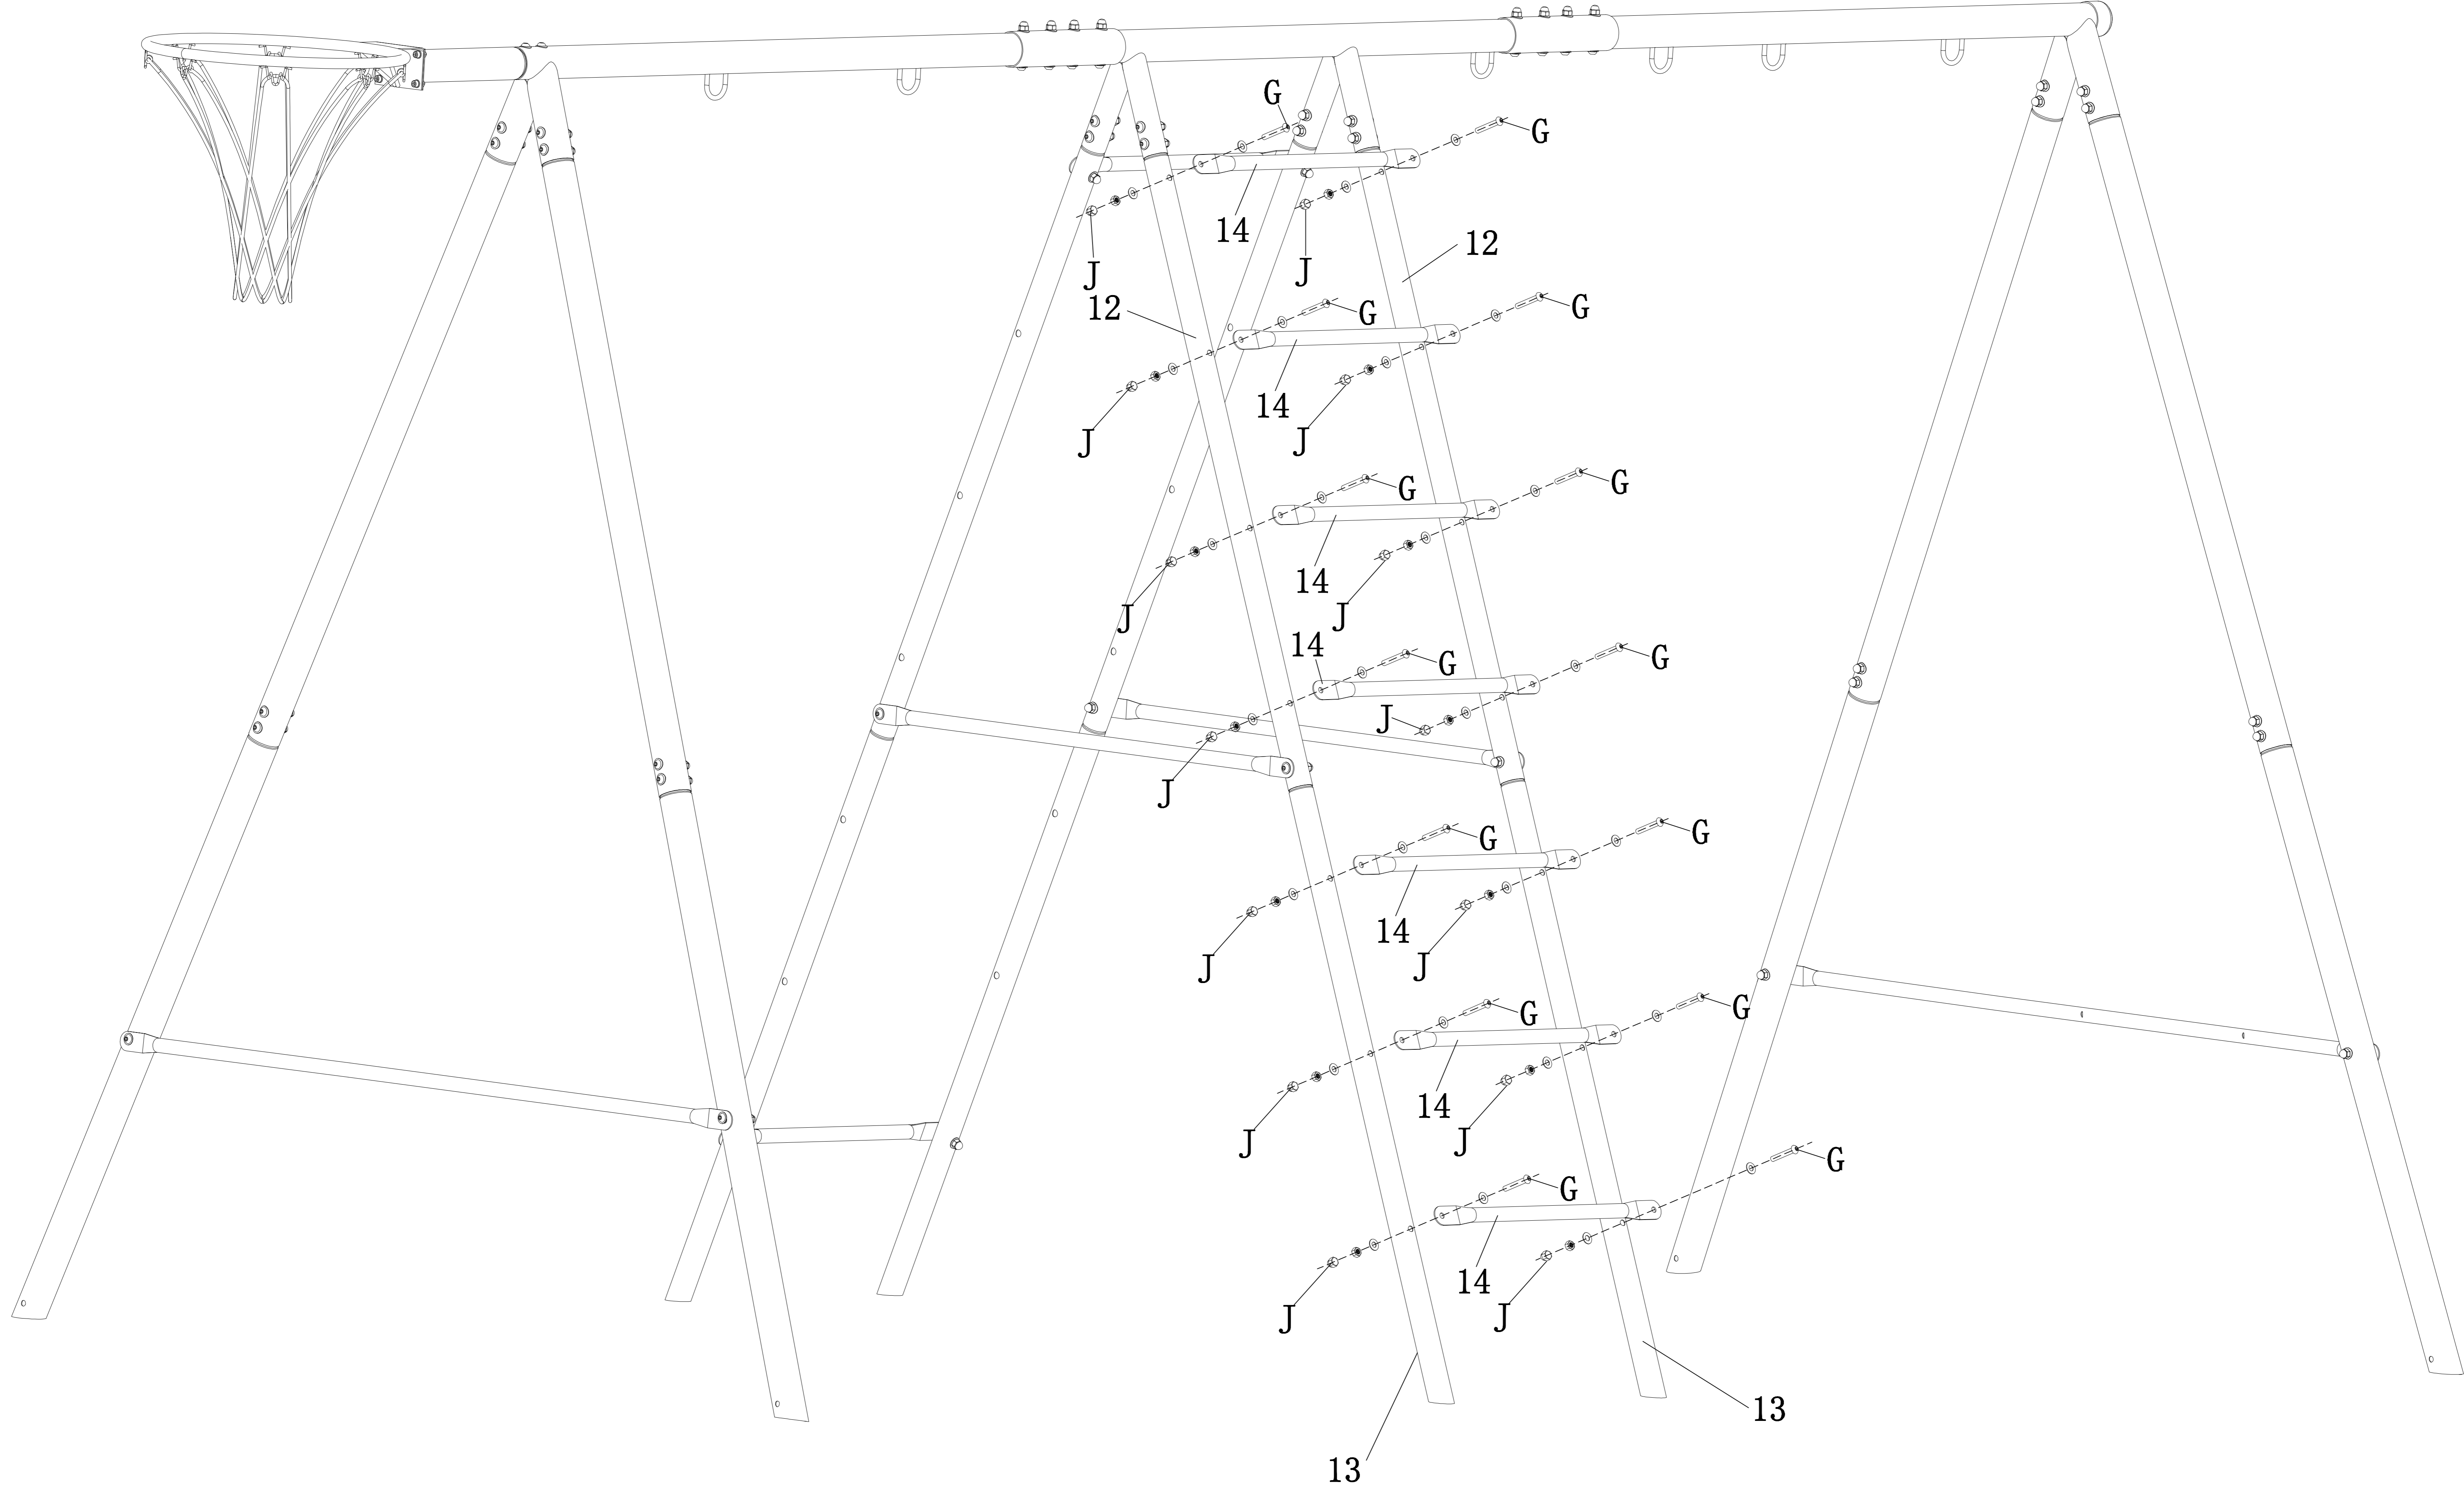

 
STEP 12

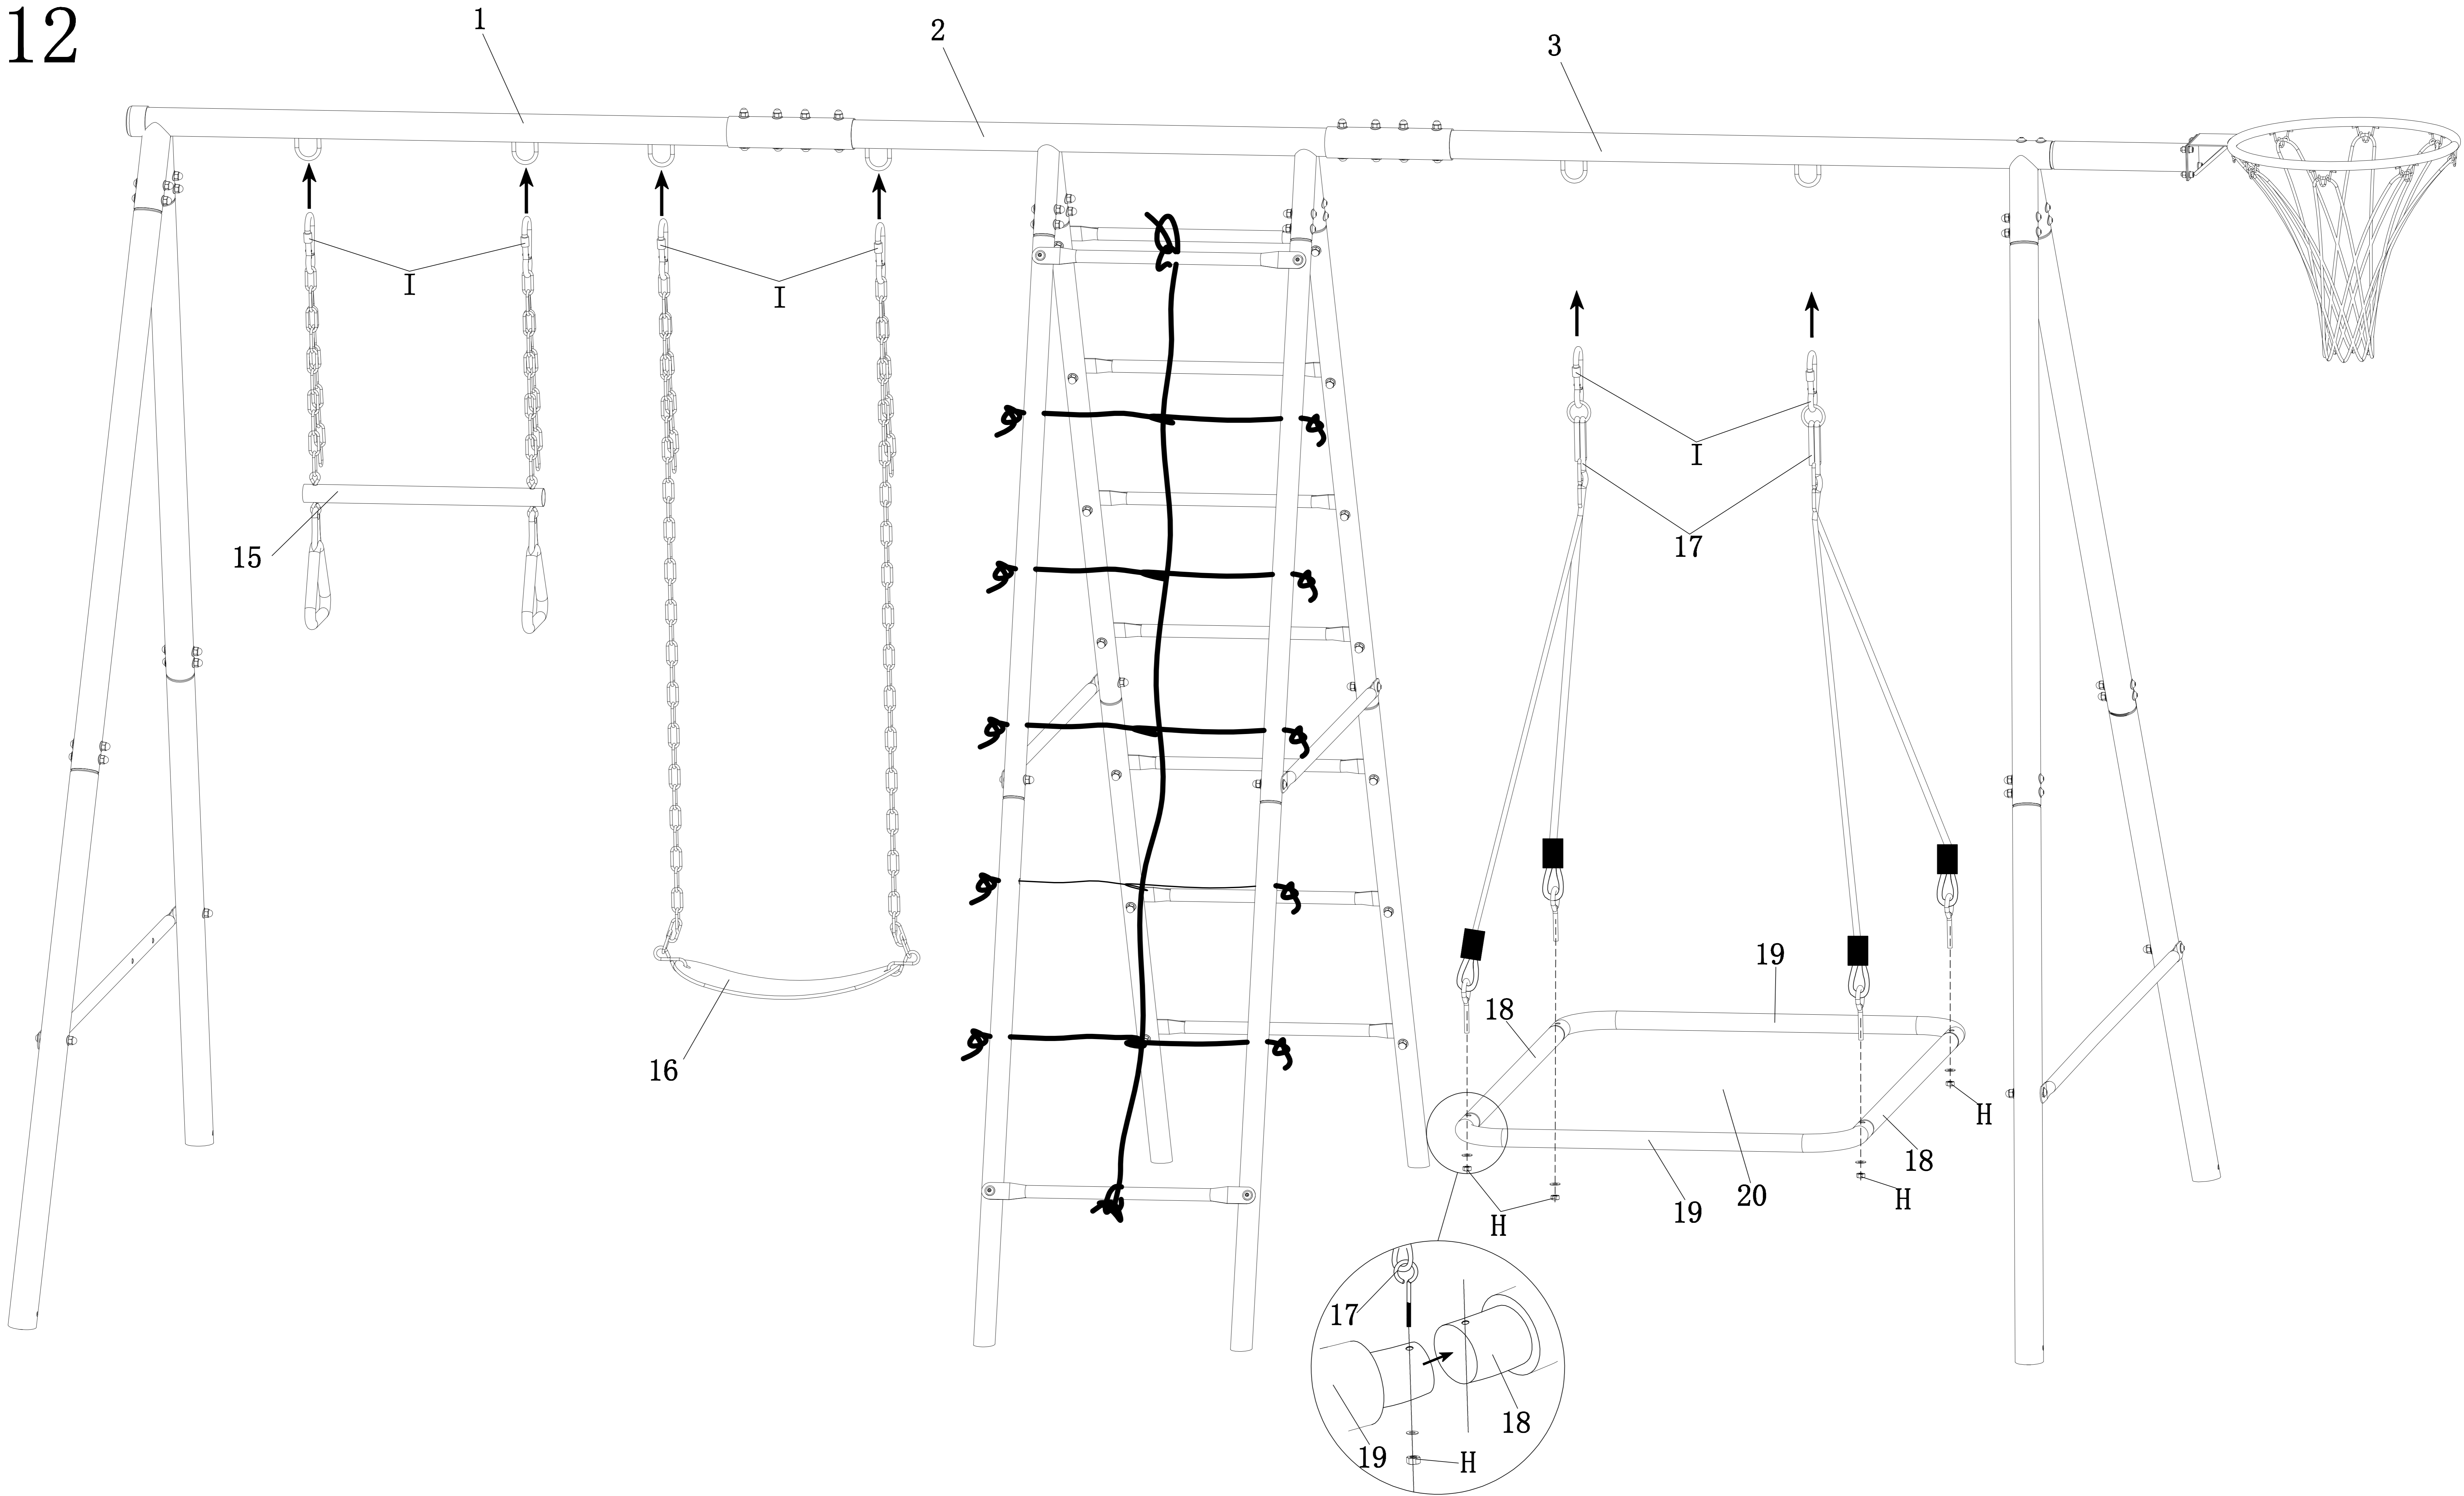

 
STEP 13

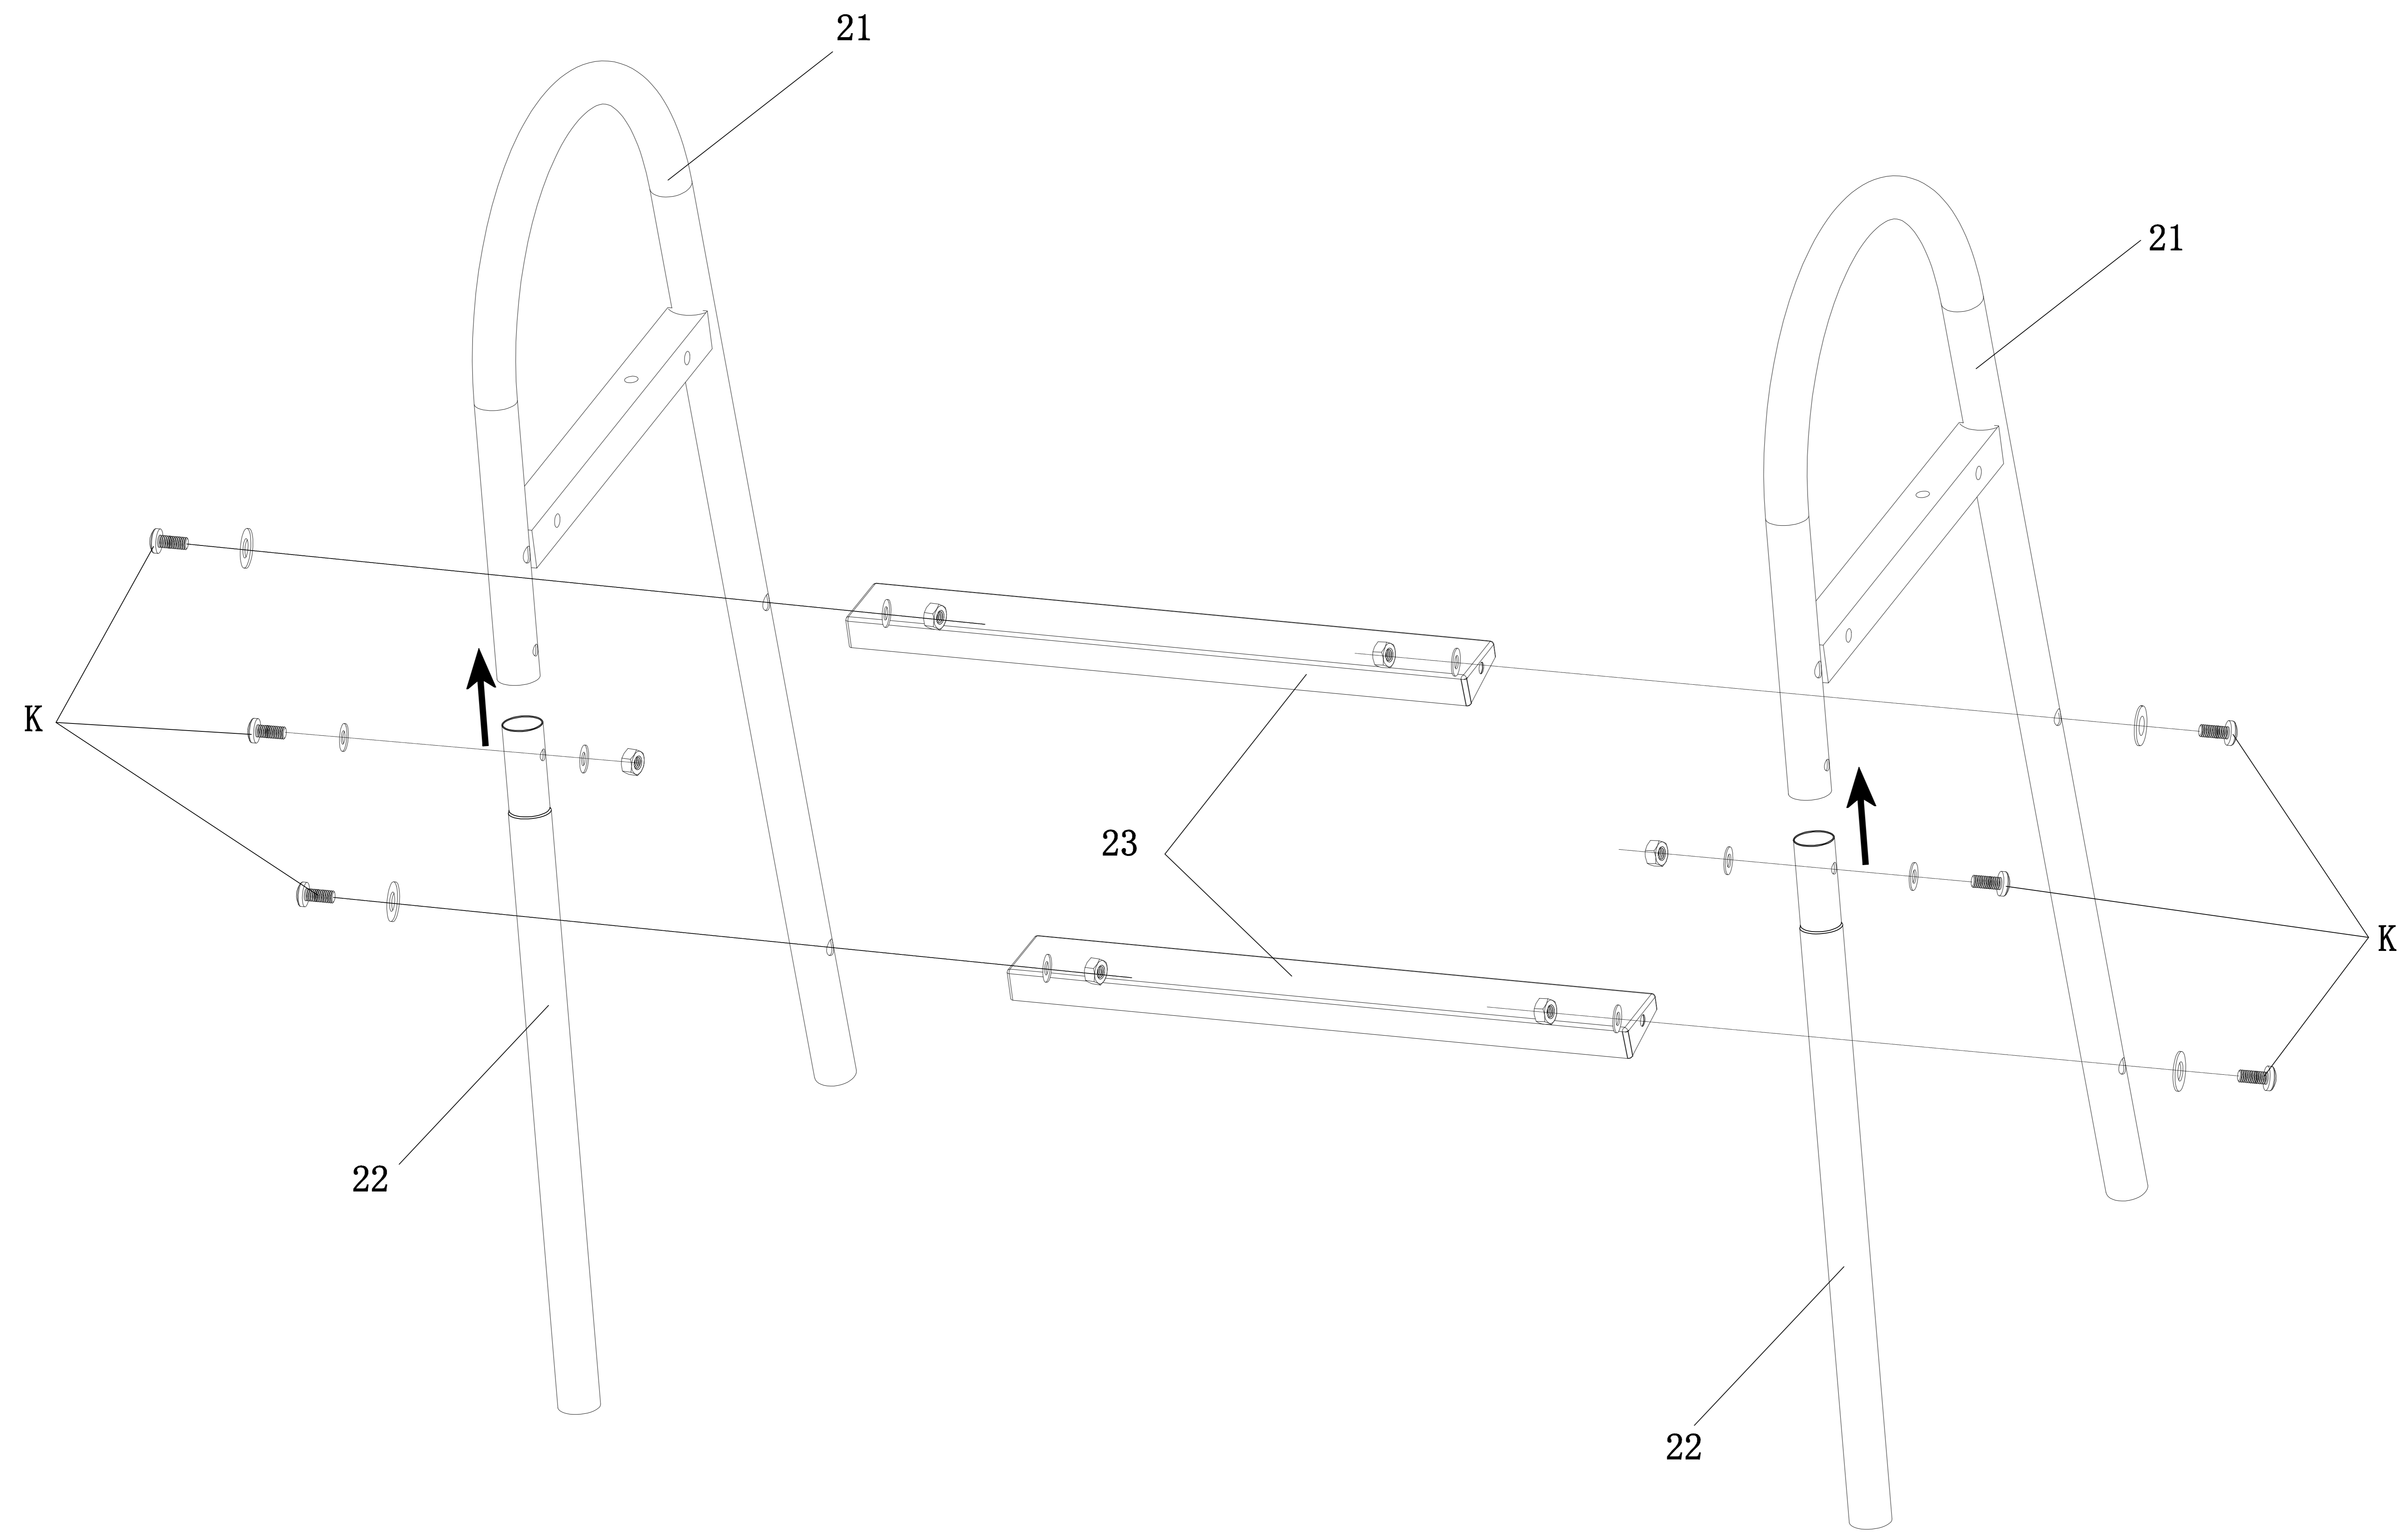

 
STEP 14

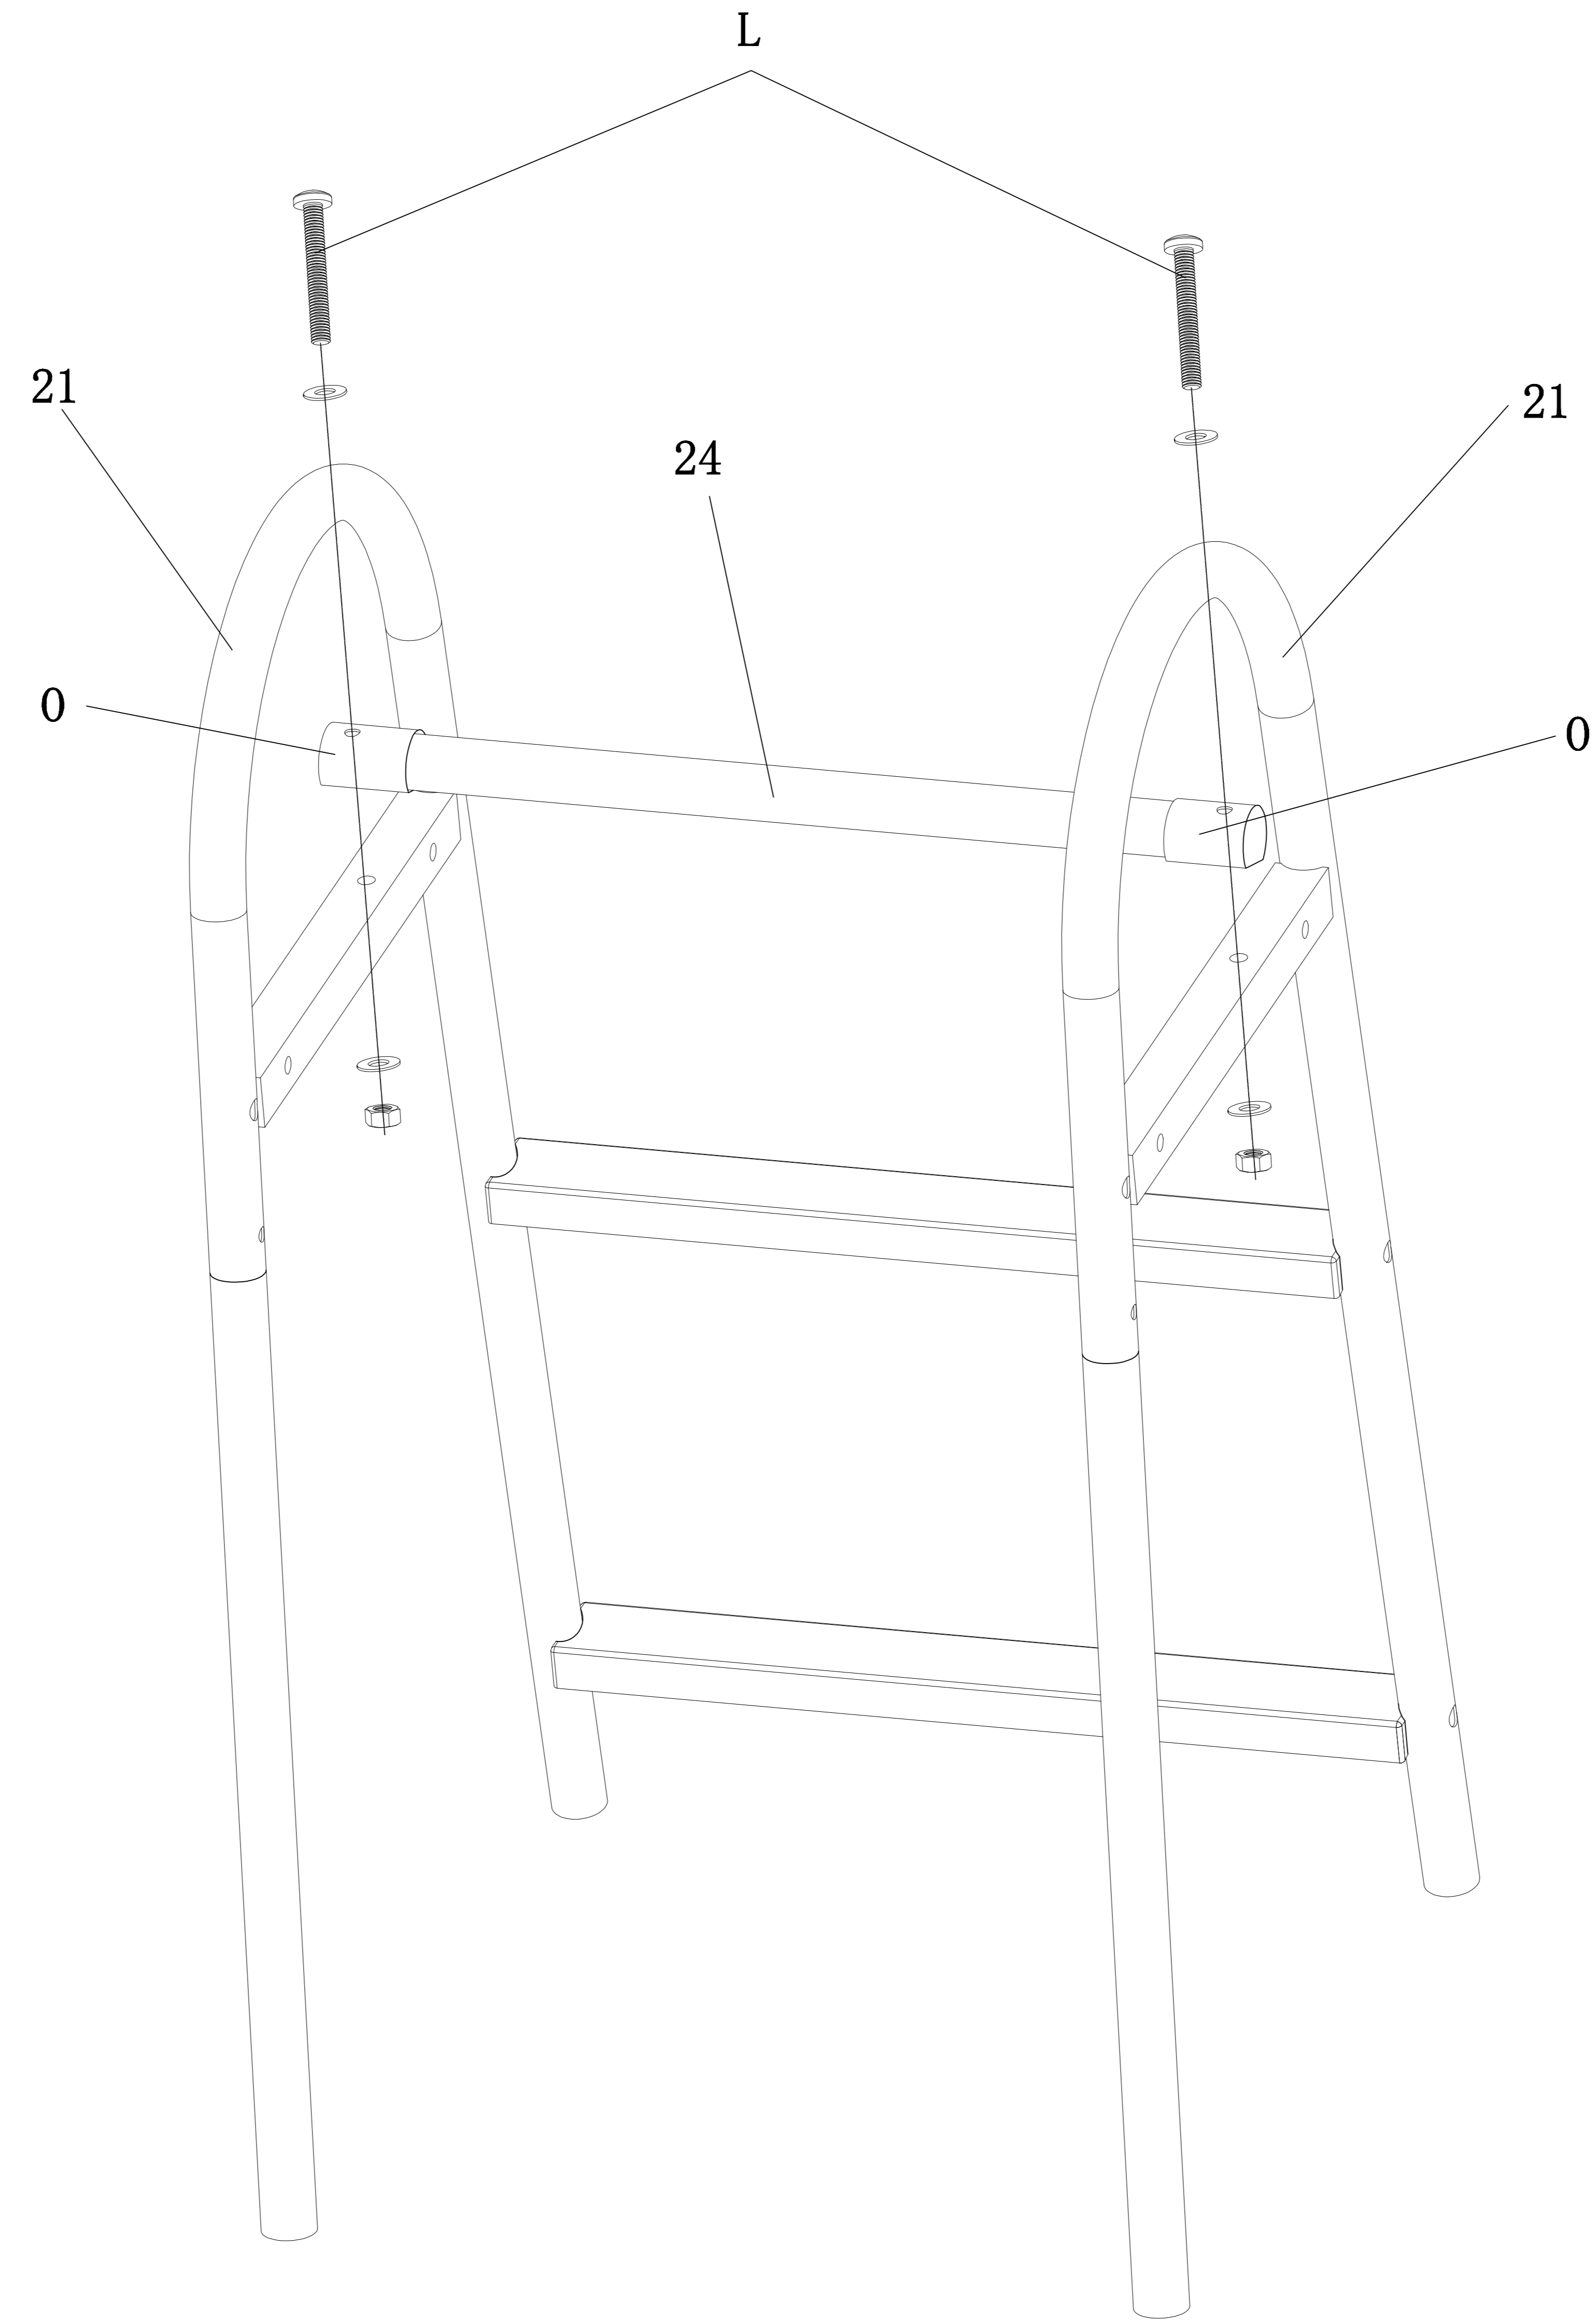

 
STEP13

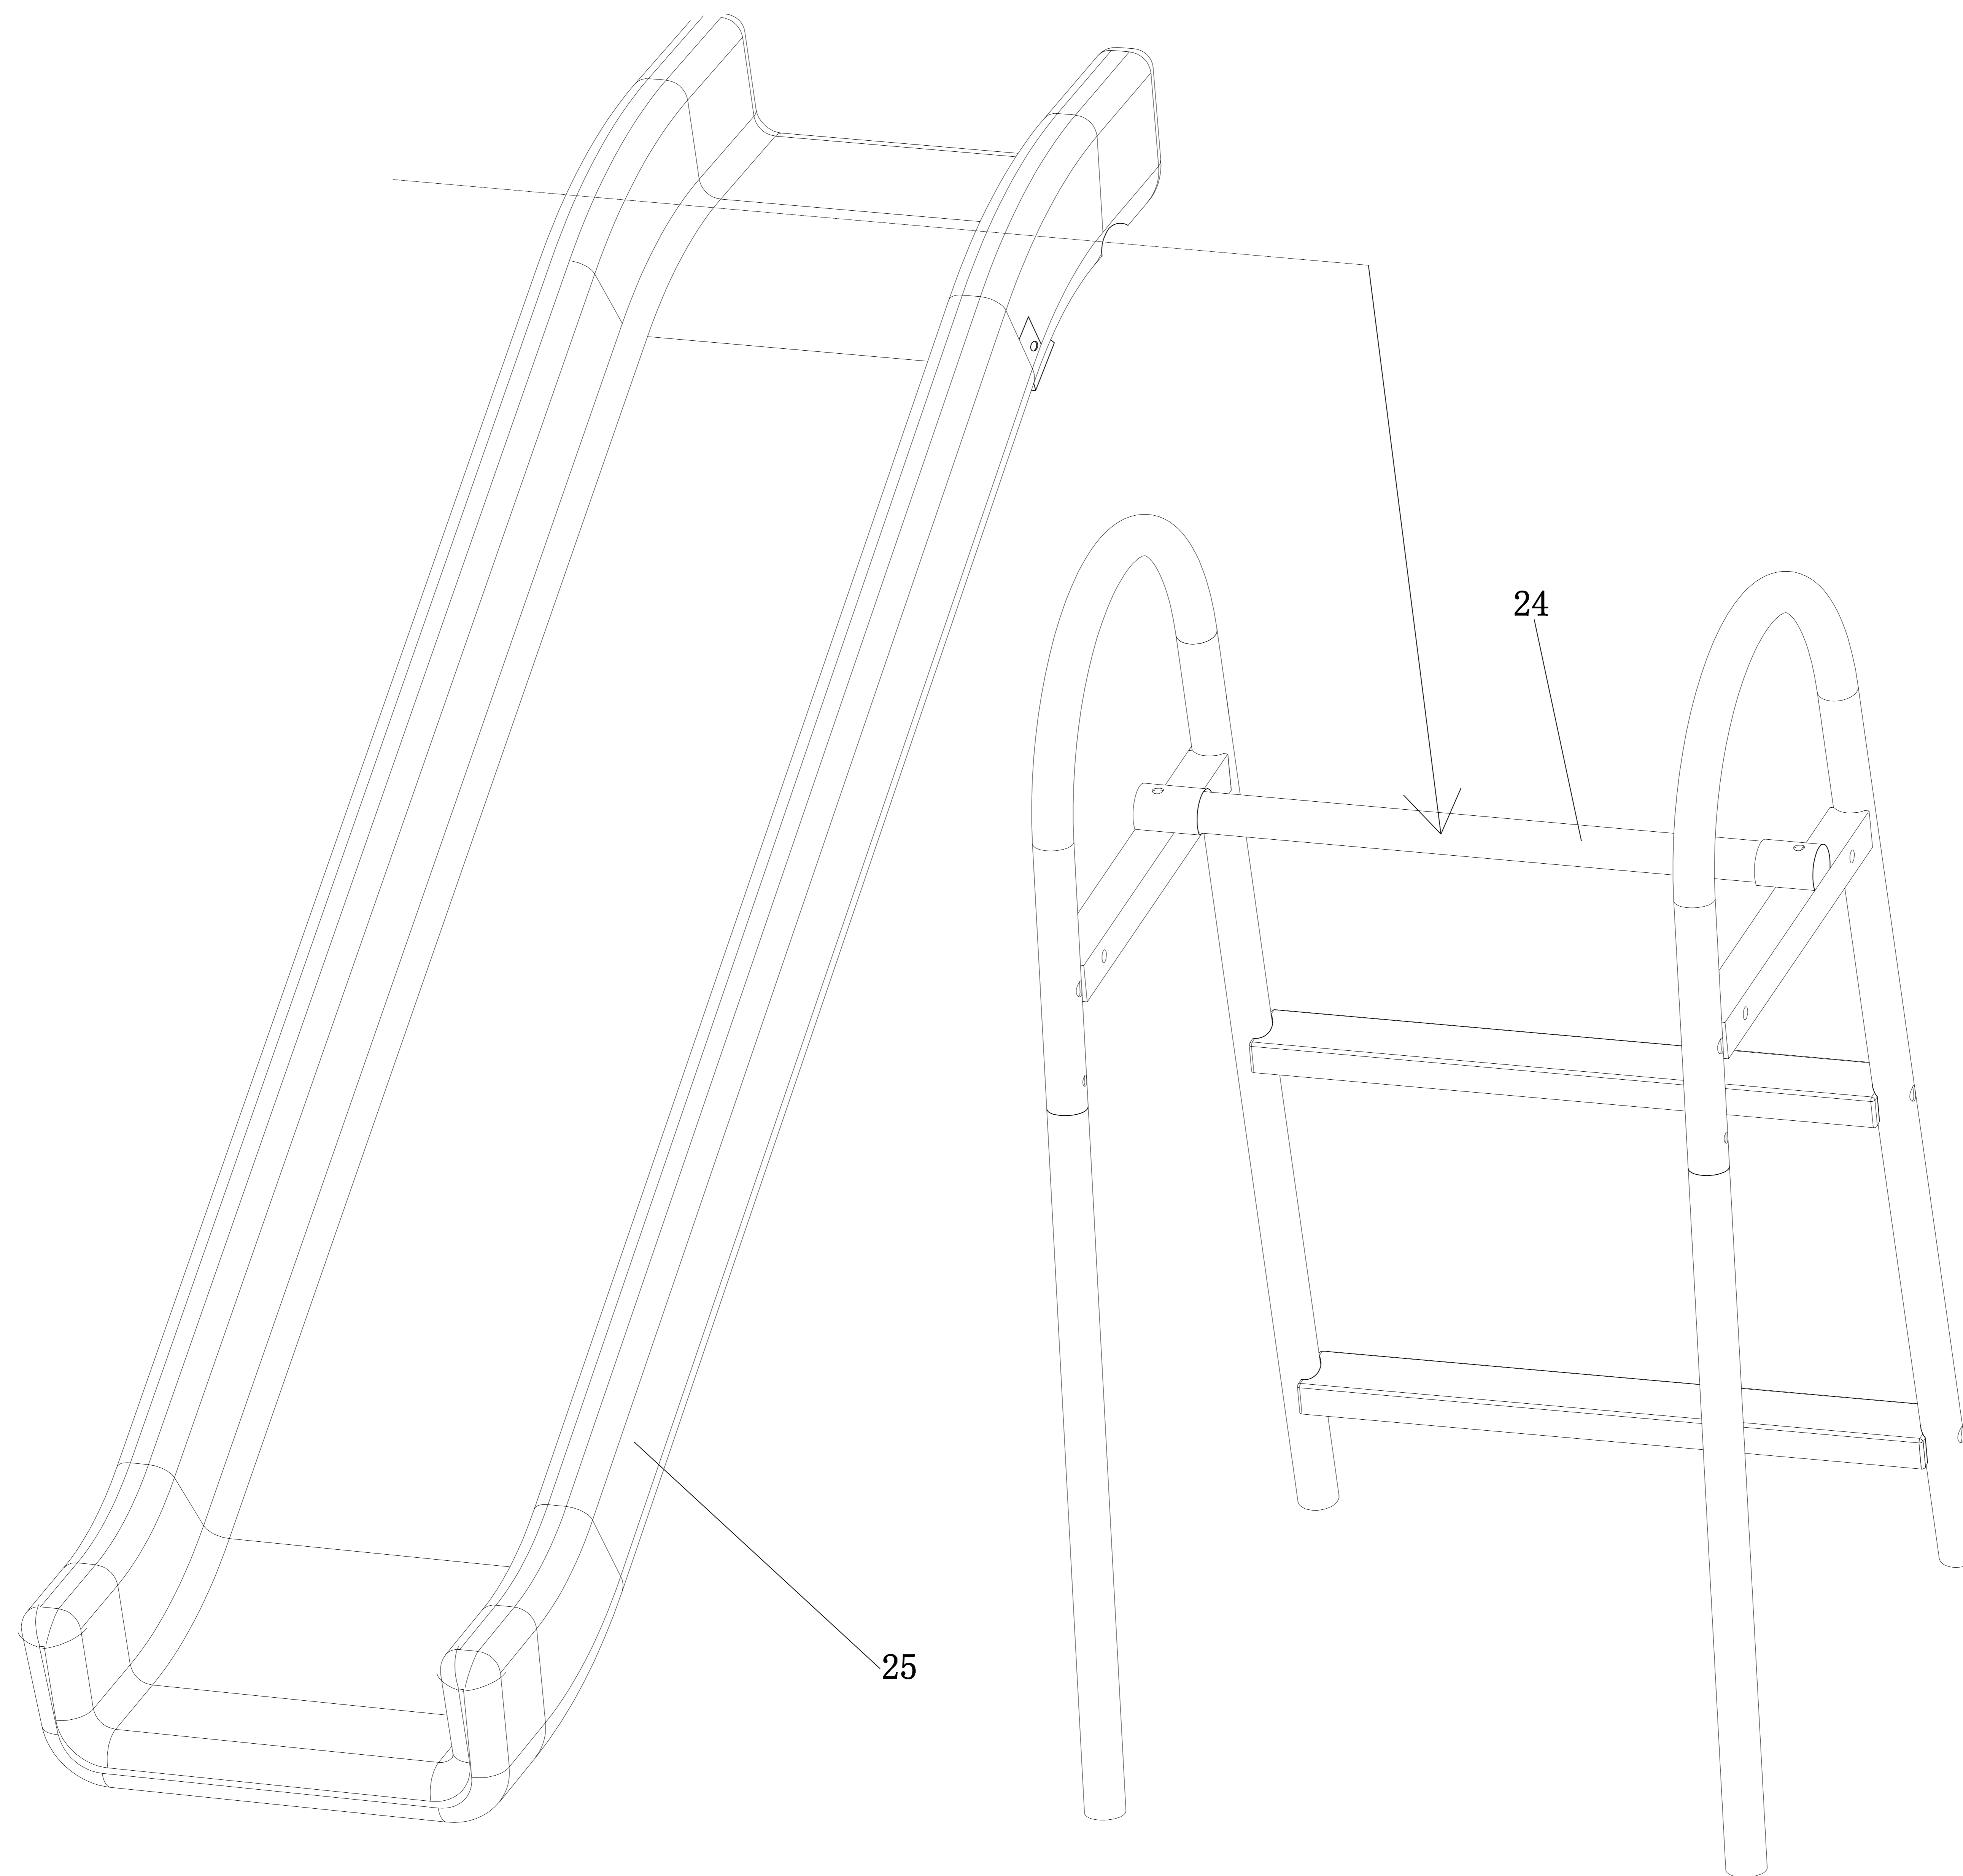

 
STEP 15

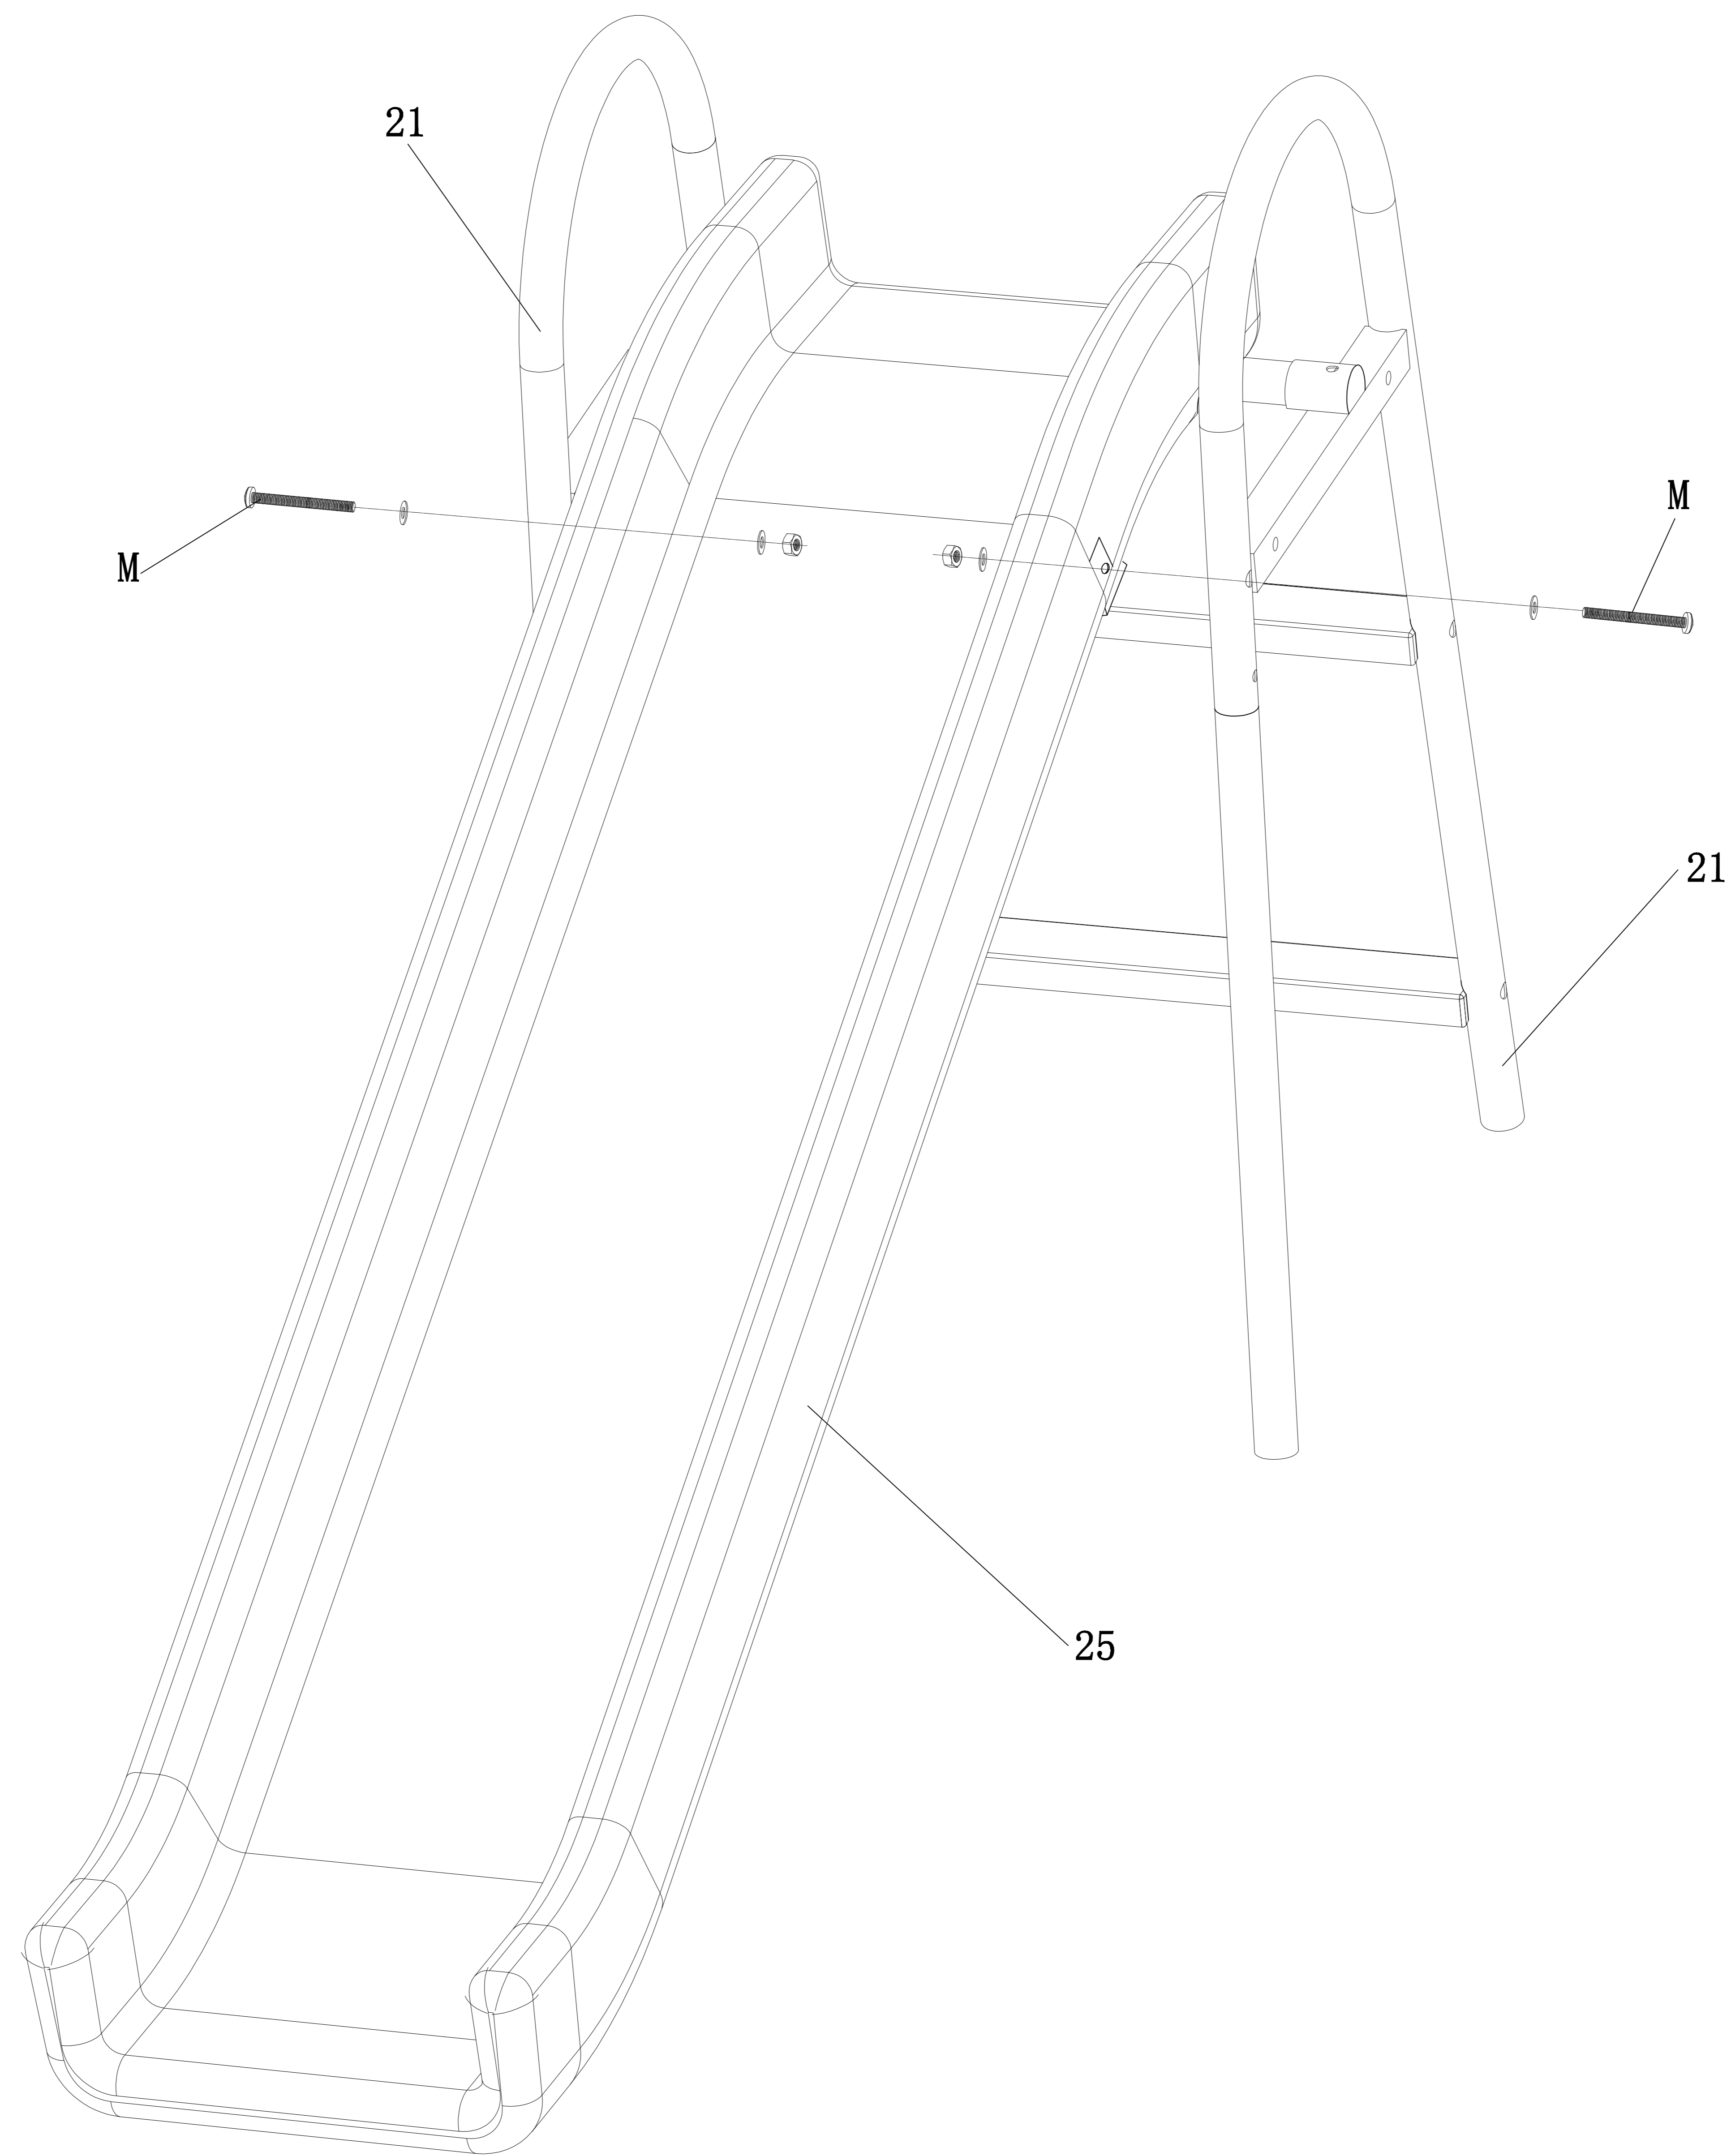

 STEP 16

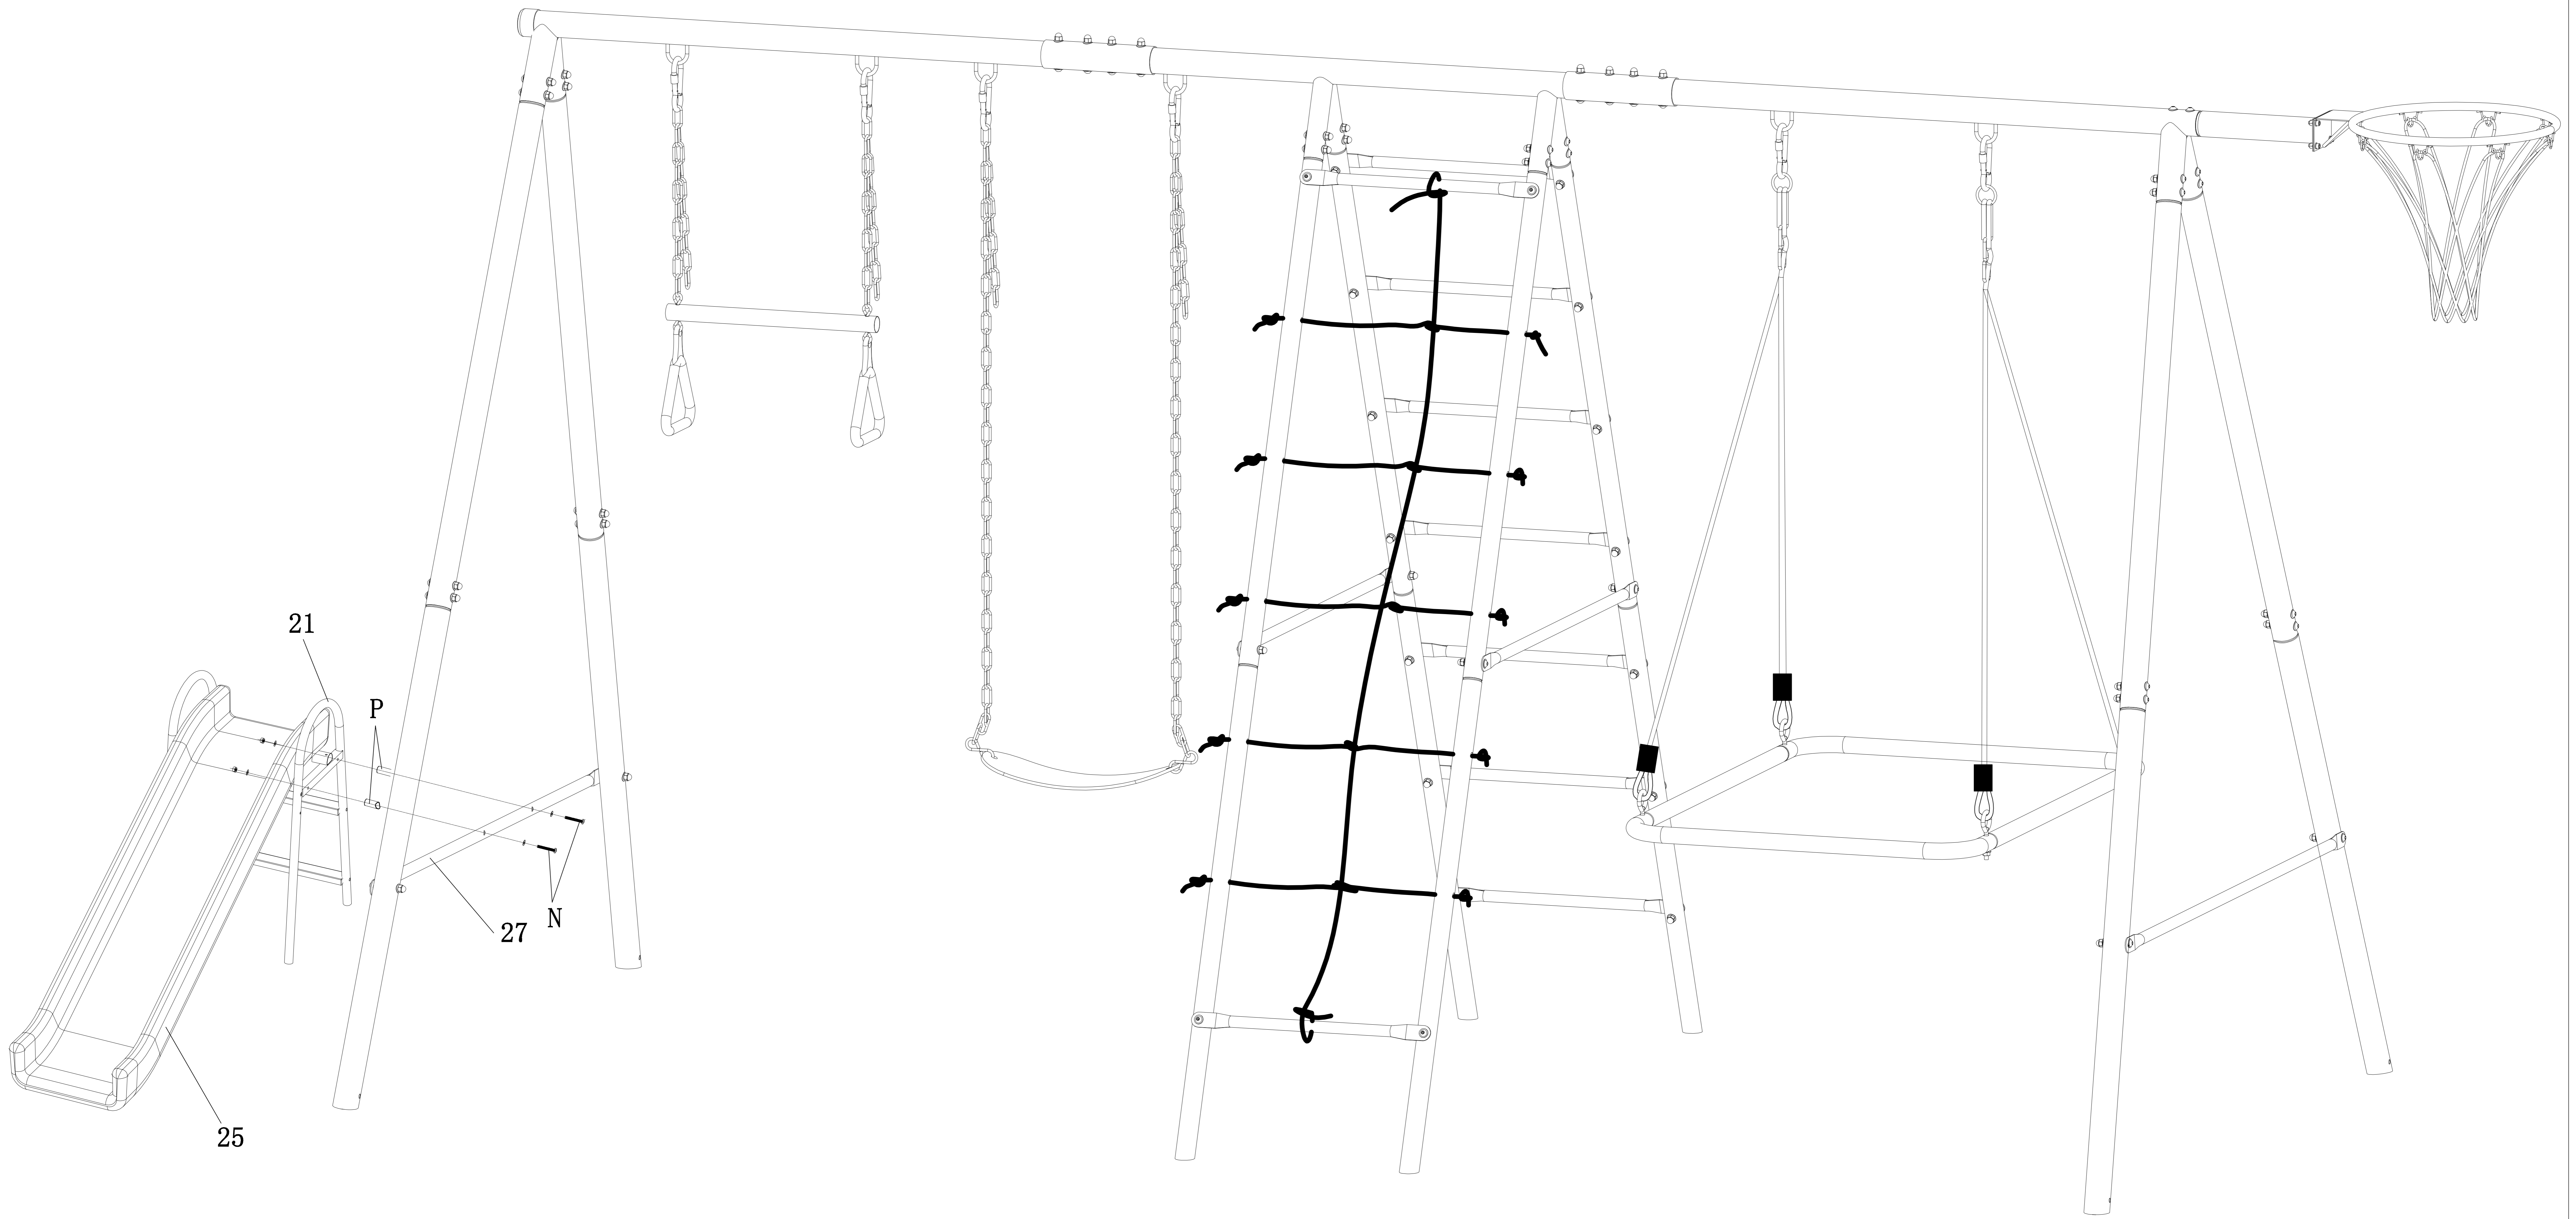

 STEP 17

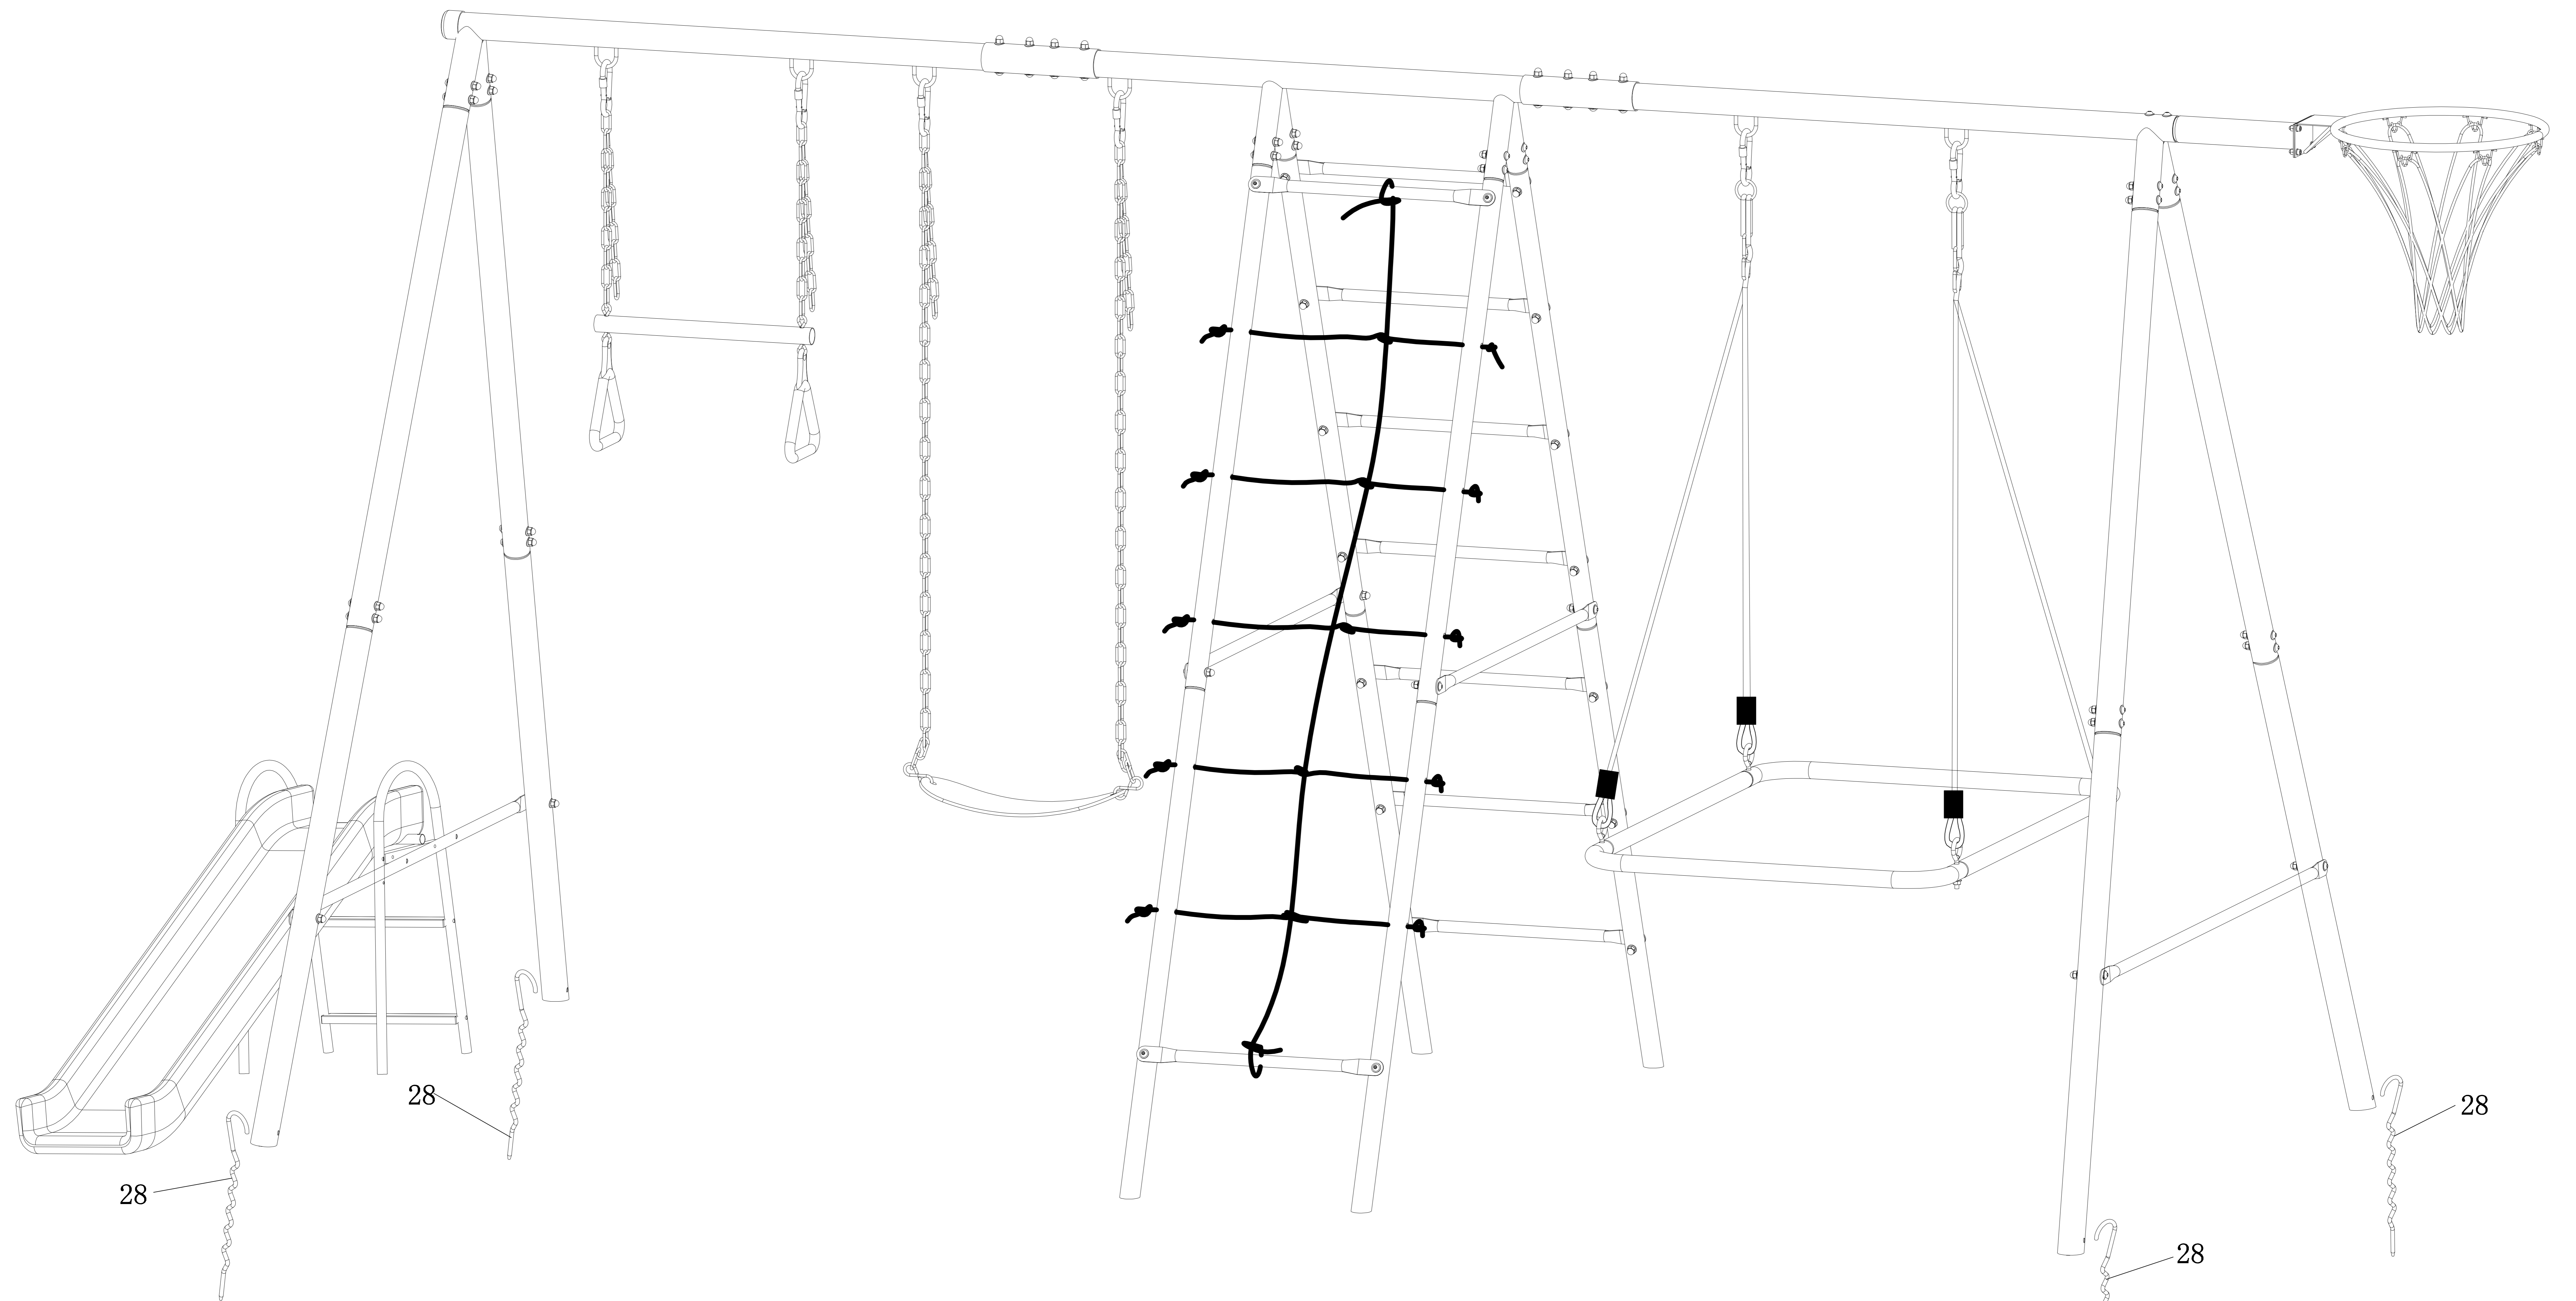

* Remove the protect cover on the ground anchor before use.
Measure and properly locate the anchors before securing into the grass.

 **kanglaibaoxiamen@163.com**

Thank you for choosing Osoeri Multiplayer Swing Set. Any concerns or comments, feel free to contact us via

email: kanglaibaoxiamen@163.com with your order ID.



 **Manufacturer:** Shenzhen Guiyang Network Technology Co., Ltd

 **Address:** 1404K3, East Block, Shengtang Commercial Building, Futian District, Shenzhen, China

MADE IN CHINA