

 
Honeywell

Ceiling Fan & Light Remote Control

User Guide

Item #0899466
Model #42136

PACKAGE CONTENTS

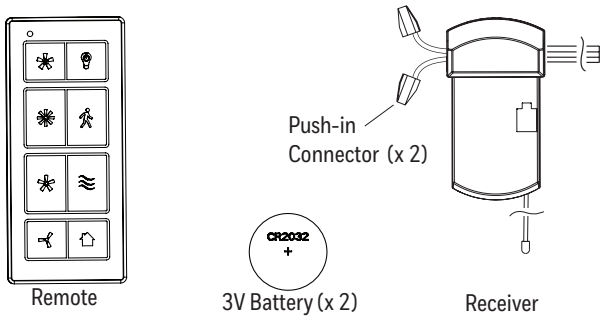

HARDWARE CONTENTS



Note: Some extra hardware may be included. The quantity listed above is the number required for installation.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION:

1. Read and keep this instruction sheet for future reference.
2. Switch off the power at the circuit breaker before working on receiver or ceiling fan.
3. If you are unfamiliar with installing electrical wiring contact a qualified electrician.
4. This unit is to be used for the control of a ceiling fan and its electrical source must be AC 110/120V, 60Hz.
5. Rated for indoor or damp locations. Do not immerse in water.
6. Do not use this remote with fans that have pre-installed remote controls.
7. To reduce the risk of fire or injury, do not use this product in conjunction with any variable (rheostat) wall control.
8. Exhausted batteries should be removed from the remote. Do not mix old and new batteries.
9. Non-rechargeable batteries should not be recharged.

RECEIVER INSTALLATION

For fans mounted to a vaulted ceiling, ensure the ceiling angle is less than 20 degrees. For hugger-style fans, installation is only recommended when its mounting bracket is specifically designed to hold a receiver.

1. Turn power off at the circuit breaker.
2. Remove ceiling fan canopy from the mounting bracket. If necessary, disconnect existing wiring between ceiling fan and supply at electrical junction box. (Tool required for assembly: Phillips screwdriver, not included).
3. Slide the receiver into the mounting bracket (Figure 1), being careful not to pinch the antenna wire.
4. Make wiring connections (Figure 2). **Warning:** Incorrect wire connection can damage this receiver and could cause injury or fire.
5. Push all connected wires back into the junction box and re-install the canopy onto the mounting bracket.
6. Switch power back on at the circuit breaker.
7. Using the pull chains on the fan, set fan speed to high and light to on. **Note:** Once remote is installed, do not use pull chains to change fan or light settings.

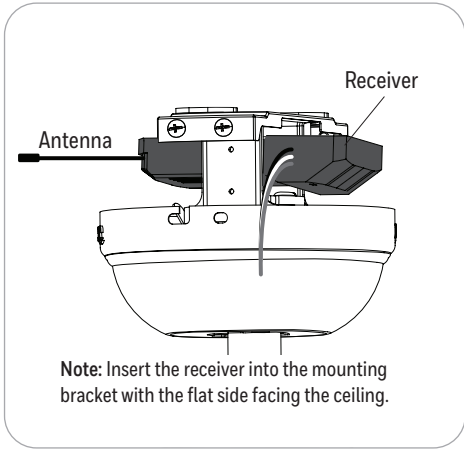 


Figure 1

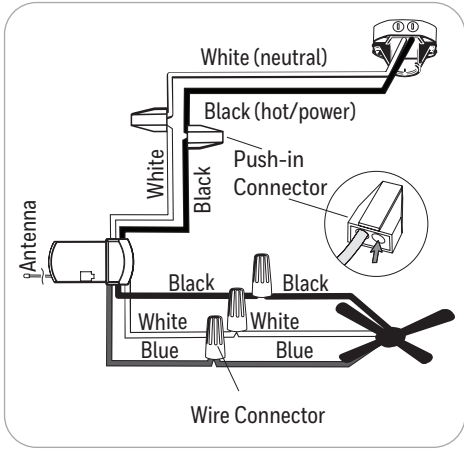 


Figure 2

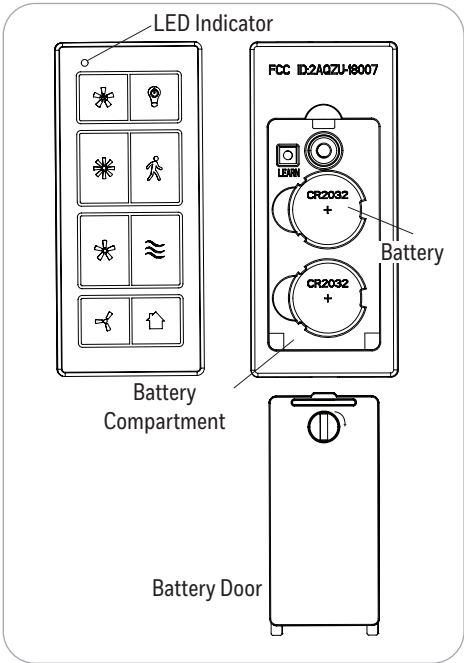 


Figure 3

ACTIVATE THE SYNCING PROCESS (SMART SYNC™)

The remote is synced at the factory and should work right out of the box. Should it become necessary to re-sync the remote, please follow the steps below:

1. After assembly is complete, switch the power on. Within 30 seconds, remove the battery door from the back of the remote using a flat-head screwdriver (not included). Insert the two CR2032 batteries into the remote; ensure the positive pole of the batteries face up (as pictured) and then replace the battery door.
2. Switch the power to the fan off and back on again. Within 30 seconds, press and hold the HIGH SPEED and LOW SPEED buttons (or the "LEARN" button, located in the battery compartment) for 5 seconds. Fan will turn on at low speed and light off. This confirms the syncing process is successful.

It is not necessary to ACTIVATE THE SYNCING PROCESS after replacing the battery.

Note: To control two receivers with one transmitter, turn power on to both receivers simultaneously and ACTIVATE THE SYNCING PROCESS.

TRANSMITTER OPERATION (Figure 4)

1. To operate the fan using the remote, make sure fan pull chain is on high and light is turned on. Then press and release the following buttons:

- Fan Off** - Turns the power to fan off.
- Light Control** - Turns the light on and off. Press and hold to dim or brighten lights (for dimmable bulbs only).
- High Speed** - Turns on fan at high speed.
- Light Delay** - Light stays on for 60 seconds to allow for safe exit from room. Tap Light Delay once to activate. Fan light blinks once to confirm Light Delay is active. Press any button to cancel.
- Medium Speed** - Turns on fan at medium speed.
- Variable Breeze** - Simulates a breeze in nature. Press and hold button to activate. Press any fan speed button to cancel.

Low Speed - Turns on fan at low speed.

Home Shield™ - Simulates occupancy while away from home. Fan remains off and the light randomly turns on for a minimum of five times and a maximum of 20 minutes. The light remains off for 60 minutes between events. Press and hold button to activate. Light will blink twice to confirm Home Shield is active. Press any button to cancel.

LED indicator - should illuminate when any remote button is pressed. If not, replace the DC3V, CR2032 batteries.

TROUBLESHOOTING

- Is the wall switch turned on? Is power turned on at the circuit breaker?
- Is it wired correctly and receiving power? Are the wire connectors tight for each wire connection?
- Is the fan pull chain set to High and light pull chain set to the On position?
- Is the transmitter battery new and fully charged?
- Syncing process between fan and transmitter may not have been successful-- see ACTIVATE THE SYNCING PROCESS.
- Won't operate at a distance – make sure antenna wire is not obstructed.

WARRANTY

This product is warranted to be free from defects in material and workmanship, under normal use and maintenance, for a period of (1) year from the date of purchase. This warranty shall not cover any removal or re-installation costs, and shall not apply to: (i) cosmetic damage, such as scratches, nicks and dents; (ii) any alteration or improper repair, maintenance, handling, or installation; (iii) the combination of the product with other systems or components; (iv) consumable parts, such as batteries, including any deterioration or damage to the product caused by the use of faulty batteries; (v) damage caused by accident, abuse, misuse, water, flood, fire, or other acts of nature or external causes; (vi) damage caused by service performed by anyone who is not an authorized service provider; or (vii) damage to a product that has been modified or altered. Your sole and exclusive remedy for a breach of warranty shall be replacement of the product. Alternatively, you may return your product to the retailer from which you made your purchase in accordance with applicable return policies.

The warranties and remedies contained herein are exclusive and in lieu of all other warranties whether express, implied, or statutory, including any liability arising under any warranty of merchantability or fitness for a particular purpose, statutory or otherwise. This warranty gives you specific legal rights, which may vary from state to state. In no event shall any party be liable for any incidental, special, indirect, or consequential damages, whether resulting from the use, misuse, or inability to use this product or from defects in the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

To obtain warranty service, please call the customer service number below. One of our customer service representatives will assist you in determining whether you have a warranty claim and, if so, how to return your product. If you return your product for a warranty claim, please securely pack your product and include a copy of the original sales receipt, which is required as the proof of purchase for all warranty claims. You shall be responsible for shipment and assume all costs and risks associated with any product return.

The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product. This product is manufactured for **Hong Kong China Electric Appliance, LTD.** 3350 Players Club Parkway, Suite 225 Memphis, TN 38125 1 (877) 361-3883

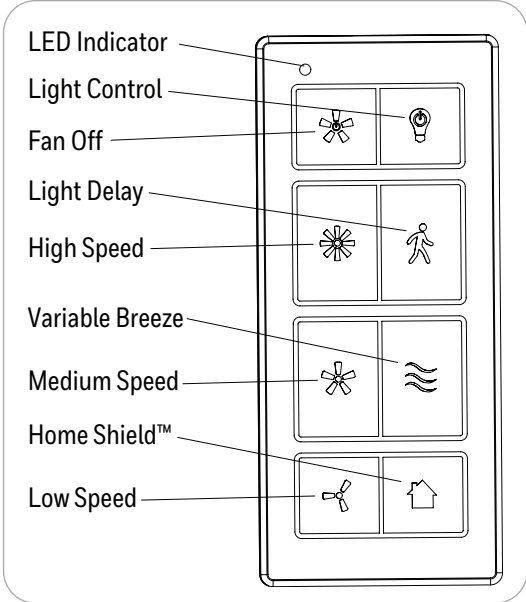 


Figure 4

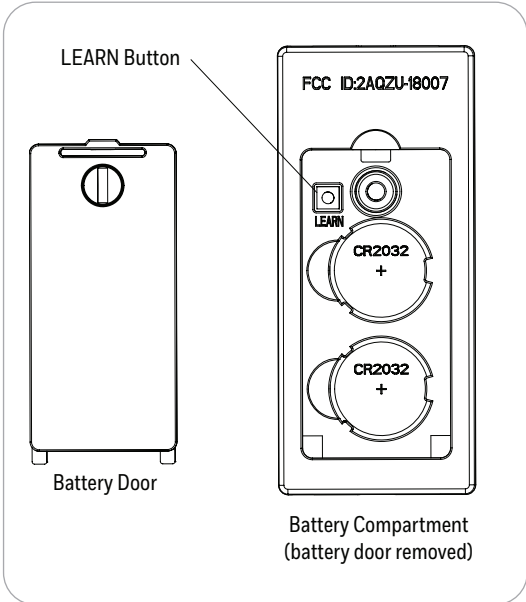 


Figure 5

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. FCC ID 2AQZU-18007