


Gas Pizza Oven

User Manual

Model No.:VMP-12A

Item No.:GPG12A

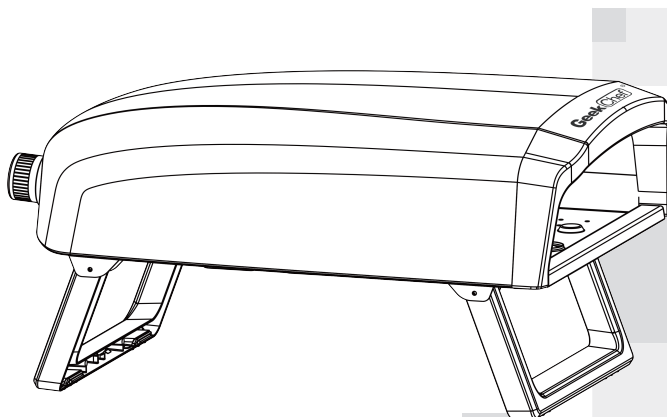

DANGER

**Never operate this appliance unattended. If a fire should occur, keep away from the appliance and immediately call your fire department.
Do not attempt to extinguish an oil or a grease fire with water.**

If you smell gas

- Shut off gas to the appliance.
- Extinguish any open flame.
- If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.
- Failure to follow these instructions could result in fire, explosion or burn hazard which could cause property damage, personal injury or death.

IMPORTANT: Read the instructions carefully before operating the appliance and keep them for future reference.

TABLE OF CONTENTS

Safety Introductions	2
Product Components	4
How To Use	6
Care And Maintenance	10
Troubleshooting	11
Limited Warranty	12



Scan the QR code to download and install the Geek Smart App

SAFETY INTRODUCTIONS



WARNING

- To reduce the risk of fire, burn hazard or other injury, read this safety manual carefully and completely before using this appliance.
- Before cleaning, make sure the gas supply and control knob is in the OFF position and that the burner and oven has cooled.
- **FOR OUTDOOR USE ONLY.** This appliance shall be used only outdoors, and shall not be used in a building, garage, or any other enclosed area.
- a. Keep the fuel supply hose away from any heated surface(s).
- b. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- c. Keep children and pets away from the appliance at all times.
- d. **Do not** move the appliance when in use.
- e. This appliance is not intended for and should never be used as a heater.
- Spiders and insects can nest inside the burner of the appliance and disrupt gas flow. Inspect the burner at least once a year.
- When using a match to light the appliance, make sure to use the included matchstick holder.
- **Do not** store this appliance indoors unless the gas cylinder is disconnected.
- **Do not** store gas cylinder in a building, garage or any other enclosed area and keep out of reach of children at all times.
- This appliance is not intended to be installed in or on recreational vehicles and/or boats.
- Check all gas supply fittings for leaks before each use. **Do not** use the appliance until all connections have been checked and do not leak.
- **Do not** smoke while leak testing. Never leak test with an open flame.
- When lighting, keep your face and hands as faraway from the appliance as possible.
- Minimum clearance from sides of unit to combustible construction is 915mm(36 inches). Minimum clearance from back of unit to combustible construction is 915mm(36 inches).
- This instruction manual contains important information necessary for the proper assembly and safe use of the appliance. Read and follow all warnings and instructions before assembling and using the appliance. Follow all warnings and instructions when using the appliance. Keep this manual for future reference.
- This manual states that a pizza oven shall not be use donor under any apartment or condominium balcony or deck.
- This manual includes a list of required parts necessary for the safe operation of the appliance, directions for proper assembly and for assembly of installed parts and accessories supplied with the appliance, and proper procedures for gas leak testing.
- This appliance shall be used only outdoors, and shall not be used in a building, garage, or any other enclosed area.
- This manual includes an instruction to clean and inspect the hose before each use of the appliance. If there is evidence of abrasion, wear, cuts, or leaks, the hose must be replaced prior to the appliance being put into operation. The replacement hose assembly shall be that specified by the manufacturer.
- This appliance is not intended to be installed in or on a boat. This appliance is not intended to be installed in or on a recreational vehicle.
- Keep the fuel supply hose away from any heated surface(s) .

SAFETY INTRODUCTIONS


- The appliance should not be located or used under overhead unprotected combustible construction materials or surfaces. For a pizza oven, the minimum clearance shall be at least 3m from any structure or combustible material.
- The appliance is not intended for commercial use.

PRODUCT COMPONENTS


1.Pizza oven
4.Pizza baking stone

2.Control knob & igniter
5.Rain cover with handles

3.Regulator & hose
6.Pizza peel

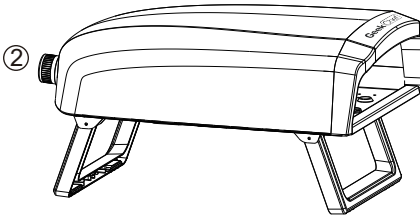


①

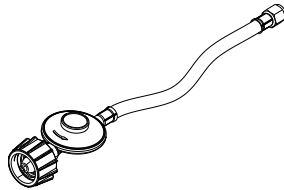


③



④

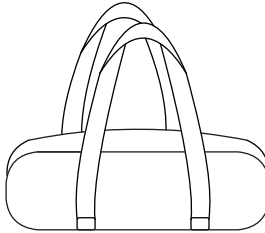

⑤


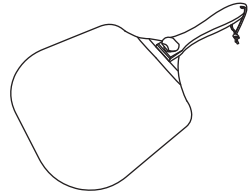


⑥

ASSEMBLY


Before assembly, make sure all parts are present.If any part is missing or damaged, do not attempt to assemble the appliance.Contact customer service for replacement parts.

1.Unfold legs

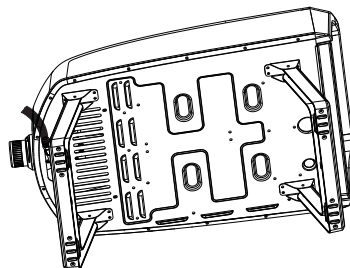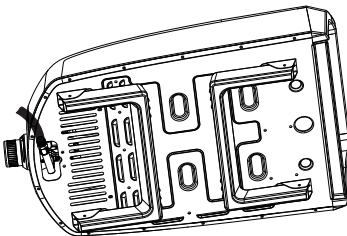


PRODUCT COMPONENTS

2.Insert the pizza baking stone

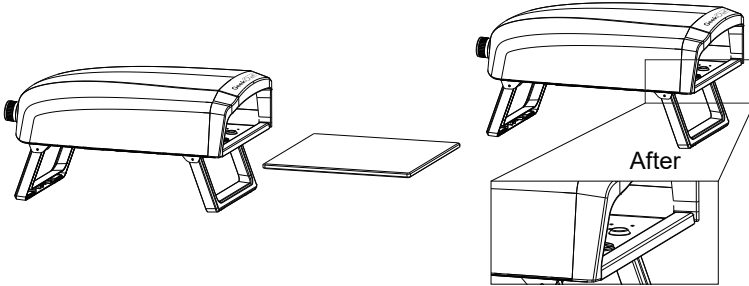

3.Connecting gas hose to Pizza Oven

Please note the factory setting that the hose has been assembled to the Pizza Oven

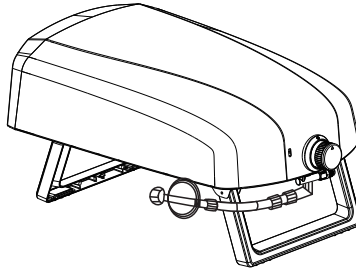


4.Connecting to gas tank



WARNING

- Please always keep the gas bottle in upright position.
- The size for 20 lbs LP gas cylinder is 12.2 inches in diameter and 17.9 inches tall
- If the appliance is not in use, the gas must be turned off at the supply cylinder.
- The cylinder used must include a collar to protect the cylinder valve.
- The minimum distance for the appliance and the 20lb gas tank is 1m apart.

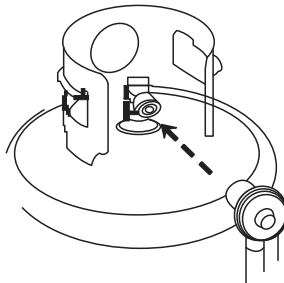

This gas fitting is clockwise. Make sure that the tank is completely switched off and screw the regulator as far as possible into the gas tank valve.

HOW TO USE

BEFORE USE

Inspect the gas supply hose prior to turning on the gas. If there is evidence of cut, wear or abrasion, it must be replaced prior to use.

Screw the regulator on to the gas cylinder. Leak check the hose and regulator connections with a soap and water solution before lighting the appliance.

Only the pressure regulator and gas hose assembly supplied with this appliance should be used.

LP GAS CYLINDER WARNING

1. **Do not** store spare liquid propane gas cylinder under or near this appliance.
2. Never fill the cylinder beyond 80% capacity.
3. Liquid propane cylinder must be fitted with an OVERFILL PROTECTION DEVICE (OPD).
4. If the information above is not followed exactly, a fire resulting in death or serious injury may occur.
5. This manual states that the installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, Storage and Handling of Liquefied Petroleum Gases, ANSI/NFPA 58; or Natural Gas and Propane Installation Code, CSA B149.1; Propane Storage and Handling, CSA B149.2

SAFETY PRACTICES TO AVOID INJURY

When properly cared for, your oven will provide safe, reliable service for many years. However, extreme care must be used as the oven produces intense heat that can increase the risk of accidents.

When using this oven basic practices must be followed, including but not limited to following:

- **Do not** repair or replace any part of the oven unless specifically recommended in this manual. All other service should be referred to a qualified technician.
- Children should not be left alone or unattended in an area where the oven is being used. **Do not** allow children to sit, stand or play around the oven at anytime.
- Never let clothing or other flammables come in contact with or too close to any burner or hot surface until it has cooled. The fabric could ignite, causing serious personal injury.
- For personal safety, wear proper apparel. Loose fitting garments or sleeves should never be worn while using the oven. Some synthetic fabrics are highly flammable and should not be worn while cooking.
- **Do not** heat unopened food containers as a build-up of pressure may cause the containers to burst. When lighting the burner, always pay close attention to what you are doing.
- When using the oven, **do not** touch the outer shell, stone baking board or immediate surroundings as these areas become extremely hot and could cause burns.
- **Do not** use the oven to cook extremely fatty meats or other products which increase flare-up.
- Keep the area surrounding the oven free from combustible material including fluids, trash and vapours such as gasoline or charcoal lighter fluid.
- **Do not** obstruct the flow of combustion and ventilation air.
- Never use the oven in extremely windy conditions.
- The temperature under the oven is high. **Do not** place the oven on a table with flammable tablecloths, plastic or any other inflammable materials.

HOW TO USE

CONNECTING THE LIQUID PROPANE GAS CYLINDER

- 1.To connect the liquid propane gas cylinder.
- 2.The cylinder valve should be in OFF position.
- 3.Make sure the burner valve is in OFF position.
- 4.Inspect the valve connections, port and regulator assembly.Remove debris and inspect the hose for damage.
- 5.When connecting the regulator assembly to the valve, use your hand to tighten the nut clockwise until it stops.
Use of a wrench could damage the quick coupling nut and result in a hazardous situation.
- 6.Open the cylinder valve fully by turning the valve counterclockwise.
- 7.Before lighting the oven, use a soap and water solution to check all connections for leaks.
- 8.If a leak is found, turn the cylinder valve OFF, and **do not** use the oven until local liquid propane dealer can make repairs.

CONNECTING THE LIQUID PROPANE GAS CYLINDER

- 1.Turn the oven burner valve OFF and make sure the oven is cool.
- 2.Turn the liquid propane cylinder valve OFF by turning clockwise until it stops.
- 3.Detach the regulator assembly from the cylinder valve by turning the quick coupling nut counterclockwise.
- 4.Place dust cap for cylinder valve outlet whenever the cylinder is not in use.

NOTE:

- 1.The LP gas supply cylinder to be used must be constructed and marked in accordance with the specifications for LP gas cylinder, U.S.Department of Transportation(DOT) or the standard of cylinders, Spheres and tubes for the Transportation of Dangerous Goods, CAN/CSA-B 339
- 2.The cylinder supply system must be arranged for vapor withdrawal.

HOW TO USE

LEAK TESTING

GENERAL

Although the gas connections of the appliance are leak tested prior packing and shipment, a complete test must be performed at the installation site.

Before each use, check all the gas connections for leak testing using the procedure listed below. If the smell of gas is detected at anytime, you should immediately stop using and check the entire system for leaks.

BEFORE TESTING

Make sure all packing material has been removed from the appliance.

Make a solution of one part liquid detergent and one part water. You will need a spray bottle, brush or rag to apply the solution to the fittings.

TO TEST

1. Turn the burner valve OFF
2. Turn the liquid propane cylinder valve on counterclockwise to open the valve.
3. Apply the soap solution to all gas fittings. Soap bubbles would appear where a leak is present
4. If a leak is present, immediately turn the gas supply OFF and tighten leaky fittings.
5. Turn the gas back ON and recheck.
6. Should the gas continue to leak from any of the fittings, turn the gas supply OFF and contact customer service.

HOW TO USE

OPERATING INSTRUCTIONS

USING THE OVEN


The burner is rated at 14, 500BTU/Hr.

To begin:

1. Make sure the oven has been leak tested and properly placed.
2. Remove any remaining packing material.
3. Light the burner using the **LIGHTING INSTRUCTIONS** below.

LIGHTING AND ADJUST THE FIRE INSTRUCTION

1. Before use please make sure the control knob is in "OFF" position. Then push the control knob and slowly turn the knob anticlockwise to "HI" position for 5 seconds until you hear a click and the burner ignites (A).
2. You can adjust the fire from HI to LOW by slowly turn the control knob clockwise (B).
3. Please turn the control knob to "HI" position, then push the knob and clockwise to "OFF" position to turn off your pizza oven. (C)

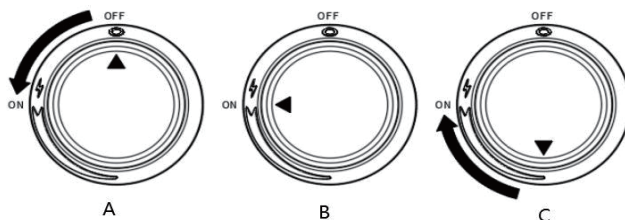

TO LIGHT WITH A MATCH

1. If burner will not light after several attempts using the control knob, the burner maybe lit with a match.
2. If you have already attempted to light the burner using the control knob, wait few minutes for any gas to dissipate.
3. Insert a match into the matchstick holder, ignite the match and insert through the oven opening to the burner.
4. Push and turn the control knob to HI slowly, the burner should ignite immediately.
5. If the burner does not light within seconds, turn the control knob OFF and wait for 5 minutes and try again.

CARE AND MAINTENANCE

Store Pizza oven out of direct sunlight and indoors where possible and when storing for extended periods of time. The pizza oven should not be exposed to harsh weather conditions such as snow, heavy rain and strong winds.

Wait for the pizza oven to cool completely before moving.

Pizza Baking Stone

1. **DO NOT** use the stone over an open flame.
2. Avoid extreme temperature change to the stone. **DO NOT** place frozen foods on a hot stone
3. The stone is fragile and can break if bumped or dropped.
4. The stone is very hot during use and stay hot for a long time after use.
5. **DO NOT** cool the stone with water when the stone is hot.
6. After cleaning the stone with water, please dry the stone before use. This can be done in a conventional oven at 60°C (140°F) for 2 hours.

Maintenance:

1. Keeping appliance area clear and free from combustible materials, gasoline, and other flammable vapors and liquids;
2. Not obstructing the flow of combustion and ventilation air;
3. Keeping the ventilation opening(s) of the cylinder enclosure free and clear from debris;
4. Visually checking burner flames, with pictorial representations;
5. Cleaning appliance, including special surfaces, with recommended cleaning agents, if necessary;
6. Checking and cleaning burner tubes for insects and insect nests. A clogged tube can lead to a fire beneath the appliance;

TROUBLESHOOTING

PROBLEM	SOLUTION
Burner doesn't light	<ol style="list-style-type: none"> 1. Check and to see if your propane tank is empty. 2. Turn the coupling nut out one half to three quarters additional turn until solid stop. Tighten by hand only, please do not use tools. 3. Clean the burner tube 4. Re engage burner and valve 5. Check steps in assembly instructions.
Low flame or gas flow dropped suddenly	<ol style="list-style-type: none"> 1. Check your propane tank 2. Turn off gas control knob, wait for 1min and light oven. If the flame still low, turn off gas control knob and propane tank valve. Disconnect and Reconnect regulator and leak test. Turn on propane tank valve, wait for 30s and then light the oven.
Flames blowout	<ol style="list-style-type: none"> 1. Move oven away from the wind. 2. Refill the propane tank.
Flare-up	<ol style="list-style-type: none"> 1. May grease buildup, please clean oven. 2. May excessive fat in meat, please trim fats from meat before cooking. 3. May excessive temperature, please adjust temperature accordingly. 4. May excess flour on the cooking surface, please clean there off at flour from cooking surface.
Flame back	<ol style="list-style-type: none"> 1. May burner or burner tubes are blocked, clean burner or burner tubes. 2. May pressure drop during ignition, please turn off pizza oven, make sure the tank valve is fully open

LIMITED WARRANTY

GeekChef® Limited Warranty

Geek Technology Ltd. warrants to the original consumer or purchaser this Geek Chef Gas Pizza Oven is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, Geek Technology Ltd. at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States.

For warranty or repair service: Call 1-844-801-8880 and choose the appropriate prompt, or email info@geektechnology.com. Please have your Product's model number, date code (on rating label), your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED. INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW. IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE. INCLUDING WITHOUT LIMITATION. LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE, SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAL PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

THIS LIMITED WARRANTY DOES NOT APPLY TO :

1. Failure of product to perform during power failures and interruptions or inadequate electrical service.
2. Damage caused by transportation or handling.
3. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity.
5. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance as described in the user's manual.
7. Use of accessories or components that are not compatible with this product.

Geek Technology Ltd.
1275 Bloomfield Ave
Fairfield, NJ 07004
Toll Free 1-844-801-8880

Version Update: --2021.5.0

