ASSEMBLY INSTRUCTIONS


PG8018-DS (FL)

- 1.FASTEN FRONT B ONTO THE BASE A, THEN FASTEN FRONT C ONTO FRONT B, FASTEN FRONT D ONTO FRONT C.
- 2.FASTEN SOCKET ASSEMBLY E ONTO FRONT D. BE CAREFULLY NOT TO TWIST POWER CORD AND TIGHTEN SECURELY.
- 3.PLACE HARP ONTO SADDLE.
- 4.PLACE SHADE ONTO HARP AND TIGHTEN WITH FINIAL.
- 5.PLEASE USE ON/OFF100W BULB ON THE LAMP (BUT BULB NOT INCLUDED).

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.



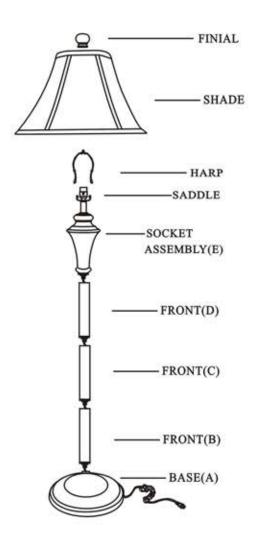

ASSEMBLY INSTRUCTIONS

PG8018-DS (TL)

- 1.FASTEN SOCKET ASSEMBLY ONTO BASE, BE CAREFUL NOT TO TWIST POWER CORD AND TIGHTEN SECURELY.
- 2.PLACE HARP ONTO SADDLE.
- 3.PLACE SHADE ONTO HARP AND TIGHTEN WITH FINIAL.
- 4.PLEASE USE ON/OFF100W BULB ON THE LAMP (BULB NOT INCLUDED).

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

MADE IN CHINA

