


1 Remove pin from hinge.



2 Re-install pin onto hinge with stopper. Turn the cap to adjust stopping position

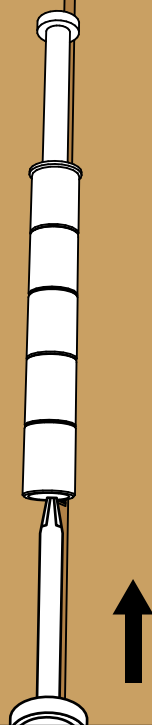