

Have product questions or need technical support?

Contact Us:



Website: www.poulanpro.com



Toll free: 1-888-676-7909 Mon-Fri 8-4 CST



Email: support@poulanpro-power.us



READ AND UNDERSTAND THE OPERATOR'S MANUAL AND ALL SAFETY WARNINGS BEFORE USE

Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury or death.

Manufactured under license from Husqvarna AB
Poulan Pro® is a registered Trademark of Husqvarna AB
Imported by Novus Performance Products
W225N16708 Cedar Park Ct. Jackson, WI




Vol. 2025-01

UNPACKING


- ▶ Carefully remove the snow thrower and all loose components from the carton.
- ▶ Verify all parts listed below are included. If any parts are missing, please contact our customer support team at 1-888-676-7909 for assistance.

SHIP LOOSE ITEMS

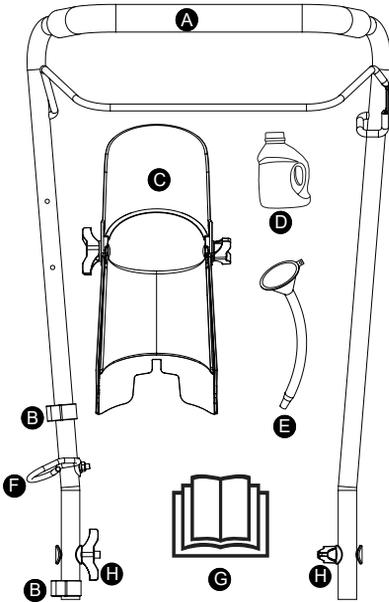

A	1 X Upper Handle Assy
B	2 X Wire / Cable Retaining Clip
C	1 X Discharge Chute Assy
D	5W-30 Engine Oil
E	1 X Oil funnel with Tube
F	1 X Starter Rope Guide
G	1 X Operators Manual
H	2 X Handle Hardware (Bolt, Washer, Wing Nut)

ASSEMBLY HARDWARE

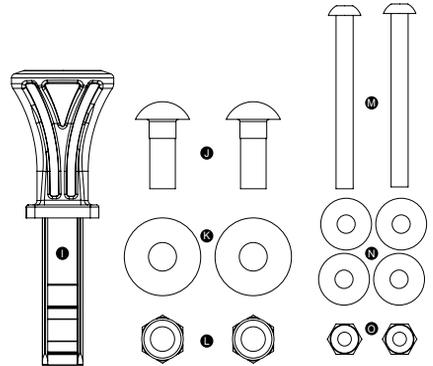

I	1 X Ignition Key - Spare
J	2 X M6 Carriage Bolt
K	2 X M6 Flat Washer
L	2 X M6 Lock Nut
M	2 X M4 Phillips Head Bolt
N	4 X M4 Flat Washer
O	2 X M4 Lock Nut

ASSEMBLY

1. Unwind the Auger Clutch Cable located on the left-hand side of the snow thrower. (Fig 1)
2. Route the z-bend of the cable through the center hole of the Auger Lever. (Fig 2)

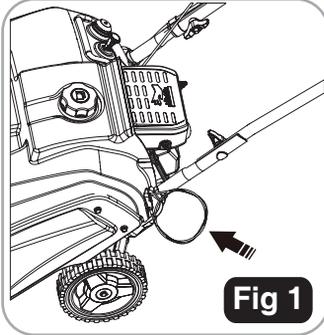


Fig 1

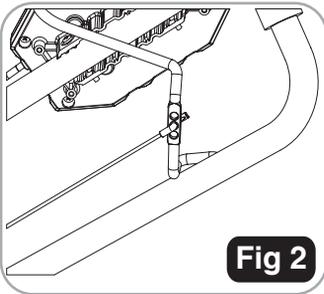


Fig 2

3. Attach the Upper handle to Lower Handle using the curved head handle bolts (A), curved washer (B) and handle knob (C). (Fig 3)
4. Place the recoil start handle into the ring. (Fig 4)

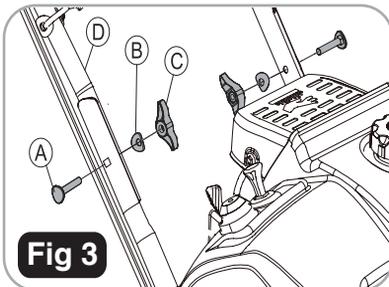


Fig 3

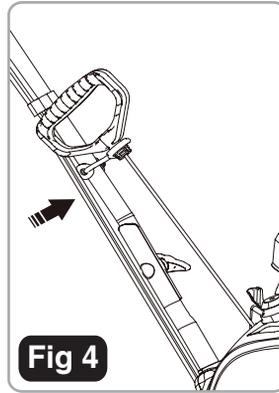


Fig 4

Installing the Discharge Chute and Chute Deflector

1. Place the Discharge Chute Assy (item A) onto the chute base. Note: Align the locating tab on the discharge chute base with the slot on the back of the discharge chute Assy.
2. Install two M6 Carriage bolts (Item B) from the inside of the chute outward, placing the washers and M6 locknuts (items C, D) on the outside. Tighten securely. (Fig 5)


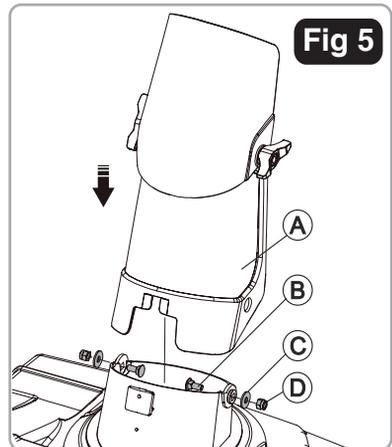


Fig 5

Installing the Discharge Chute and Chute Deflector



1. Install the Chute Control Assembly onto the right side of the upper handle using 2 x M4 Phillips head screws (A), 2 x M4 Flat washers (B) and 2 x M4 Lock Nut (E). Note: Place the M4 Flat Washer on the top side of the Chute Control Assy. (Fig 6)

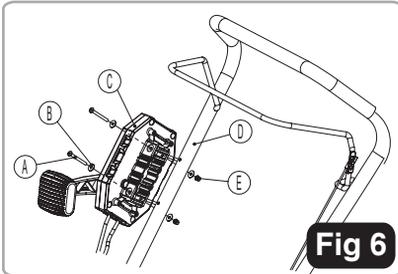

ADD Engine Oil

! Important Note: Engine is shipped from the factory without oil. Engine oil must be added prior to starting the snow thrower.

1. Place the snow thrower on a flat, level surface.
2. Remove the oil fill cap/dipstick to add engine oil.
3. Using the supplied funnel add up to 12. Oz (350 ml) of oil to the engine crankcase. DO NOT OVERFILL.
4. Once the oil has been added, a visual check should show oil about 1-2 threads from the top of the filler neck.
5. When finished, securely tighten the oil fill cap/dipstick.

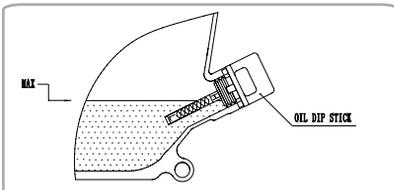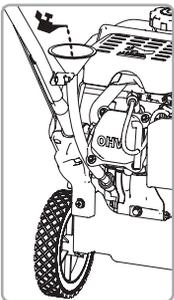

ADD FUEL

! DANGER: Gasoline vapors are highly flammable and extremely explosive.


1. Remove the fuel tank cap.
2. Add fresh, clean unleaded fuel with a minimum of 87 octane and a maximum of 10% ethanol to the fuel tank leaving $\frac{1}{4}$ " of space from the top of the tank. DO NOT OVERFILL.
3. Reinstall the fuel tank cap turning clockwise until it stops.

Operating Procedures


! Warning: Read, understand and follow the safety, operation and maintenance information provided in the Operator's Manual.

STARTING THE ENGINE (Recoil / Pull Start)


1. Insert the On/Off key (Fig 7)

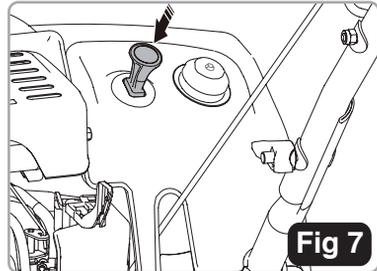


2. Rotate the Choke Lever into the closed position (Fig 8)

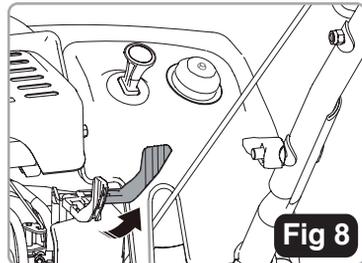

3. Firmly push the primer 3x with your thumb. Hold the primer depressed for one second before releasing it each time. (Fig 9)

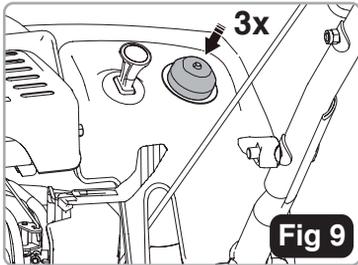


4. Pull the starter handle slowly until resistance felt, then pull rapidly. (Fig 10)
5. Once the engine starts, slowly rotate the choke lever to the open position.

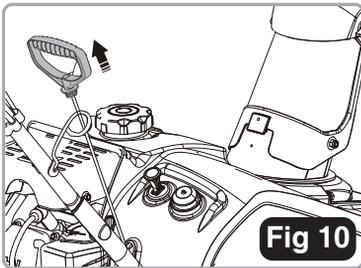


Starting the Engine (Electric Start)

Follow Steps 1, 2, and 3 listed under Recoil / Pull Start above.

4. Plug a 3-wire extension cord into the electric start adapter on the snow thrower. Plug the other end of the power cord into a convenient 120V outlet.

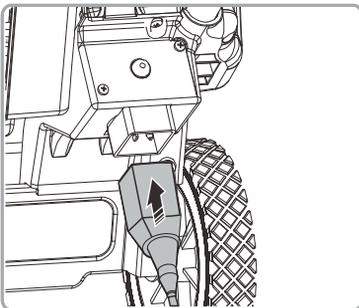


5. Press and hold the start button on the control box for 5 seconds.

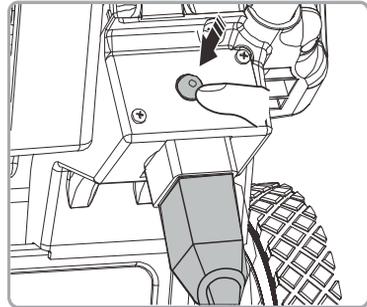

6. If the engine does not start, wait 5 seconds, then push the start button again.
7. Once the engine starts, rotate the choke lever to the OPEN position.
8. Remove the extension cord from the unit and unplug it from the outlet.
9. Allow the engine to run for 30-40 seconds before starting to throw snow.

Auger Operation

1. To Start / Engage the auger blade, hold the Auger Lever against the upper handle.
2. To Stop / Disengage the Auger - Release the Auger Lever. (Fig 11)

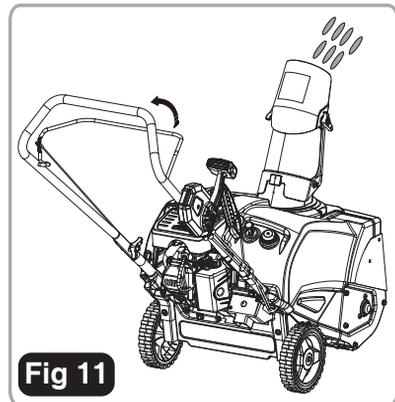

Stopping the Engine

1. Release the Auger Lever.
2. Remove the ON/OFF key by pulling outward.
(Fig 12)

