

WASHING MACHINE PAN

Product ID. 7AV3Z



Scan for Support
support@garvee.com



GARVEE.com

V260402Z0NM

WASHING MACHINE PAN

IMPORTANT SAFEGUARDS




WARNING: Read and understand this manual before

operating or servicing this product. Failure to follow these

warnings and instructions can cause personal injury or damage to valuable property.

- **Avoid children using it. and this product is not a toy. Do not allow children to play with.**
- **Do not operate when tired or when under the influence of alcohol, drugs or medication.**

STYLE DRAWING:

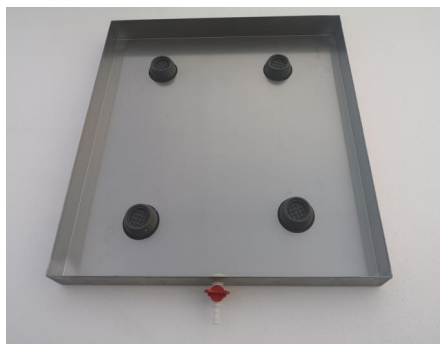

CONTAINING WATER OUTLET



NO WATER OUTLET

PRODUCT SPECIFICATIONS:

SKU/Model	Product images	Attachment	Product size/inch	Detail photos of accessories
PTH_333NANAN		1.Suction cup adjustment foot *4pcs	24*24inch	
PTH_333NYWAY		1.Suction cup adjustment foot * 4pcs	27*25inch	
PTH_333N7CD4		1.Suction cup adjustment foot *4 pcs	28*30inch	
PTH_333NG4C8		1.Suction cup adjustment foot *4 pcs	32*30inch	
PTH_333NCBDH		1.Suction cup adjustment foot *4 pcs	36*36inch	
PTH_333NK6YP		1.Suction cup adjustment foot *4 pcs 2.Plastic outlet with switch*1 3.Rubber Gasket*1 4.Plastic hexagon nuts*1 5.Waterproof Tape*1	27*25inch	
PTH_333NUFDE		1.Suction cup adjustment foot *4 pcs 2.Plastic outlet with switch*1 3.Rubber Gasket*1 4.Plastic hexagon nuts*1 5.Waterproof Tape*1	28*30inch	
PTH_333N955C		1.Suction cup adjustment foot *4 pcs 2.Plastic outlet with switch*1 3.Rubber Gasket*1 4.Plastic hexagon nuts*1 5.Waterproof Tape*1	32*30inch	

Sku/ model :

NO WATER OUTLET

PTH_333NANAN


PTH_333NYWAY

PTH_333N7CD4

PTH_333NG4C8

PTH_333NCBDH

THE SAME ACCESSORIES ARE SHOWN BELOW:

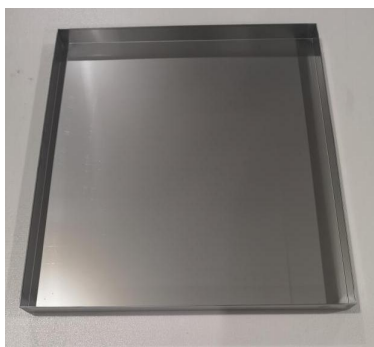



1. Place the water tray on the ground, evenly spread the four suction cups adjusting feet ,and then place them installed in the four corners of the washing machine or refrigerator to play a stability role. as the picture.

Sku/ model :

CONTAINING WATER OUTLET


PTH_333NK6YP

PTH_333NUFDE


PTH_333N955C




1. Place the water tray flat on the ground and locate the Plastic outlet with switch, Rubber Gasket, and Plastic Hexagon nuts in the accessories.as the picture.

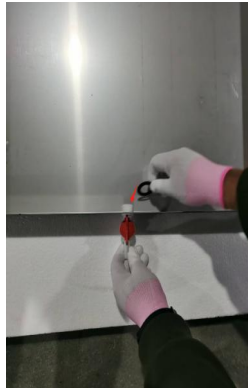

2.Insert the Plastic outlet with switch into the drainage port of the product, insert it into the Rubber Gasket, and secure it with Plastic Hexagon nuts.

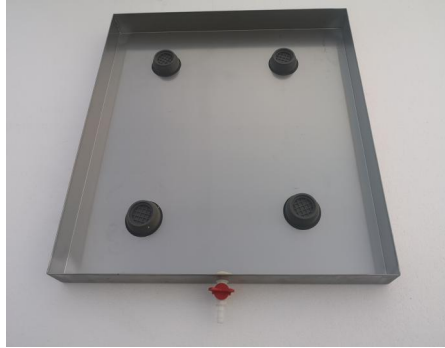

3.Place the water tray on the ground, evenly spread the four suction cups adjusting feet ,and then place them installed in the four corners of the washing machine or refrigerator to play a stability role. as the picture.

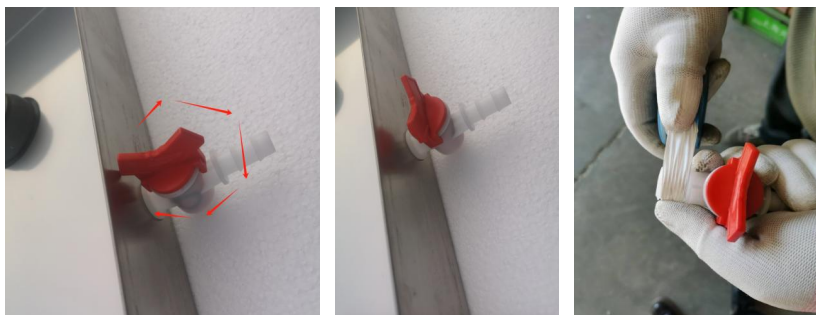

4. Control the flow of accumulated water in the drain pan by turning the drain switch. If there is a water leak, waterproof tape can be used to block the leak; as the picture.

Thank you for buying our products. Please contact us if you have any questions.