



PORTFOLIO® and PORTFOLIO & Design™ are trademarks or registered trademark of LF, LLC. All rights reserved.


ITEM #0321907

VANITY LIGHT FITTER

MODEL #FV09-043-5

Français p. 8

Español p. 15

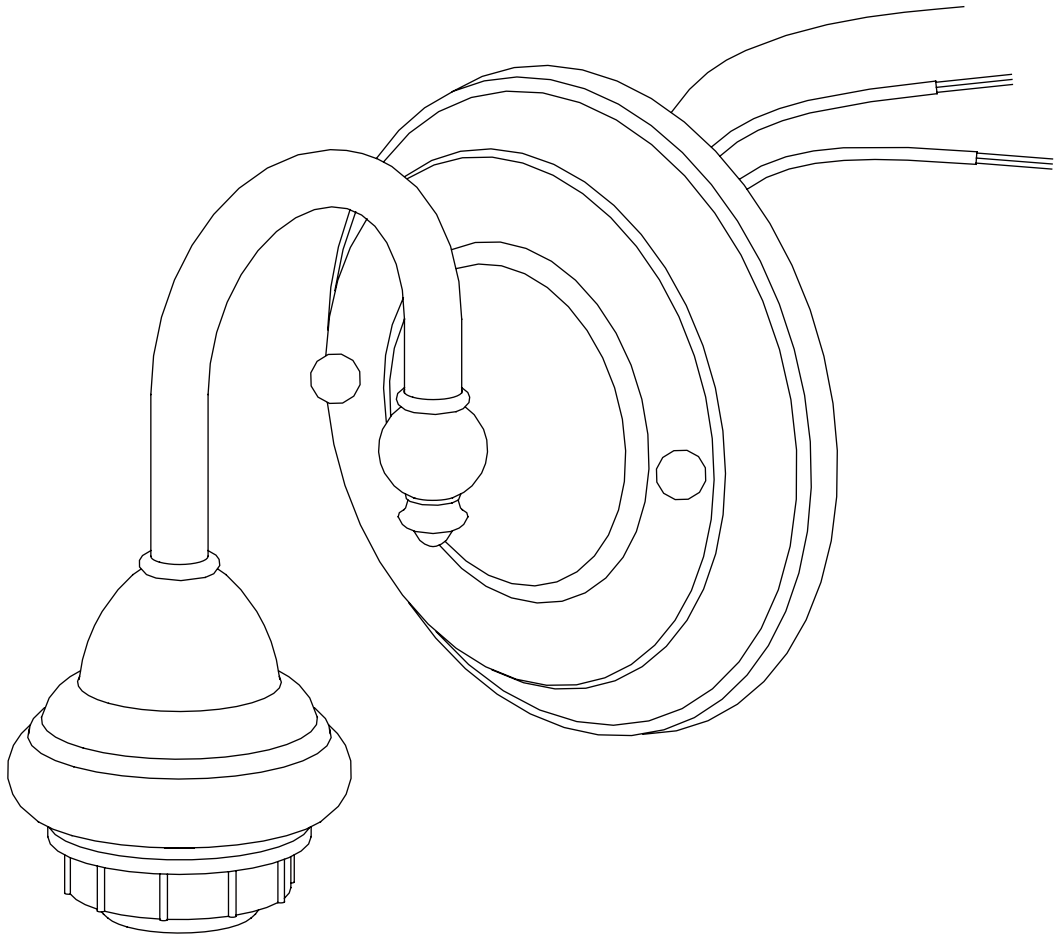

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____




Intertek



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.


PACKAGE CONTENTS

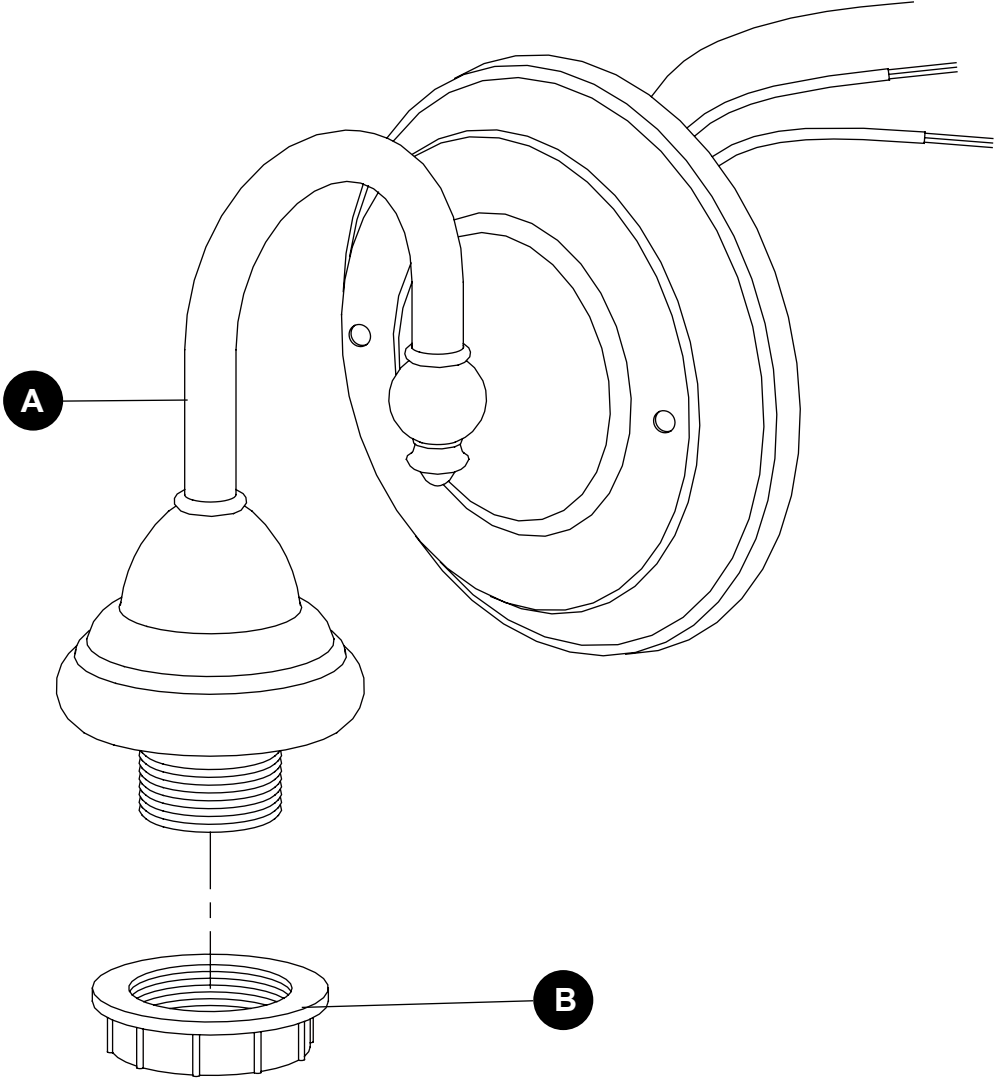

PART	DESCRIPTION	QUANTITY
A	Fixture	1
B	Socket ring (preassembled to Fixture (A))	1


HARDWARE CONTENTS (shown actual size)

 AA




Cap nut
(Preassembled to Mounting screw (DD))
Qty. 2

 BB




Wire nut
Qty. 3

 CC




Long mounting screw
Qty. 2

 DD



Short mounting screw
(Preassembled to Crossbar (EE))
Qty. 2

EE

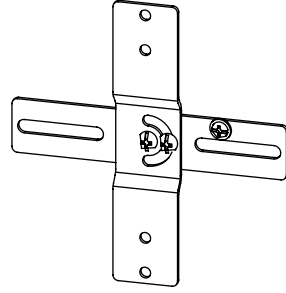

Crossbar
(Not actual size)
Qty. 1

! SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

! WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90°C SUPPLY CONDUCTORS.

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 25 minutes

 



Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.


Helpful Tools (not included): Wire strippers.

ASSEMBLY INSTRUCTIONS


1. Take off cap nuts (AA). Then attach the crossbar (EE) by tightening the long mounting screws (CC) securely into the outlet box. The short mounting screws (DD) should protrude away from the outlet box.

Hardware Used

 AA Cap nut		x 2
CC Long mounting screw		x 2
DD Short mounting screw		x 2
EE Crossbar		x 1

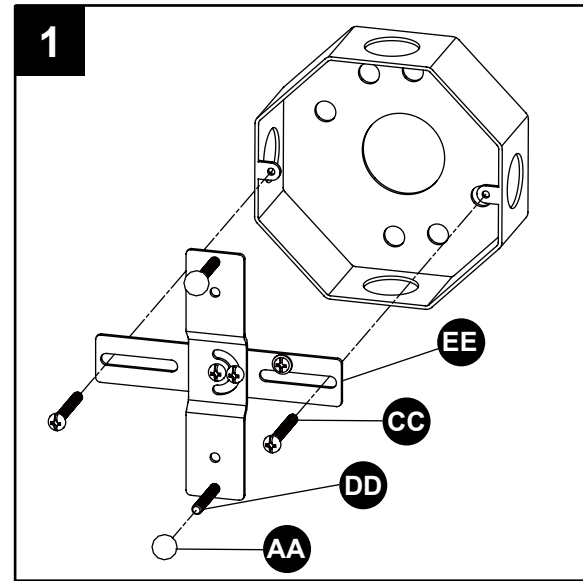


2. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded outlet box.

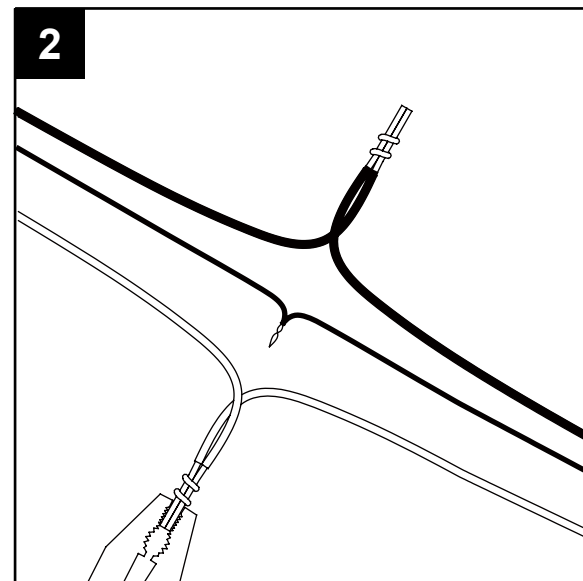

3. Attach wire nuts (BB). Tape wire nuts (BB) and wires together with electrical tape (not included).

Hardware Used



BB Wire nut		x 3
--------------------	---	-----

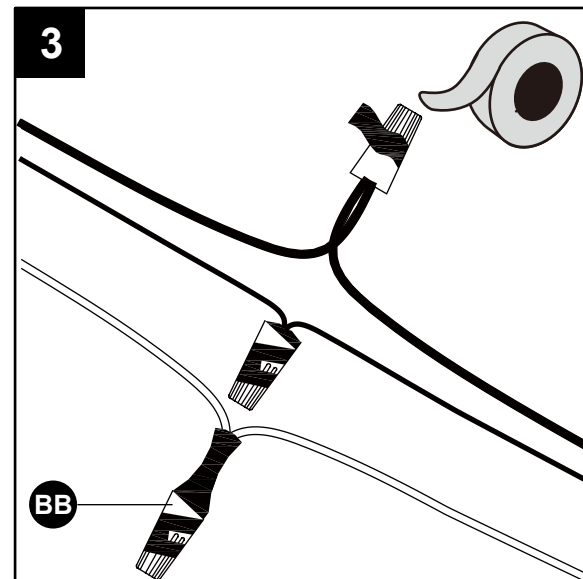


ASSEMBLY INSTRUCTIONS


4. Place fixture (A) onto short mounting screws (DD). Secure with cap nuts (AA). Note: The fixture (A) can be installed with the sockets facing either up or down.

 Hardware Used


AA Cap nut		x 2
DD Short mounting screw		x 2

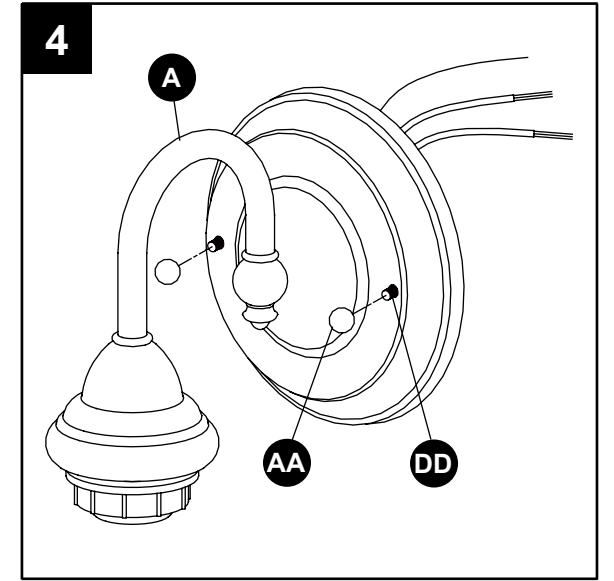

5. Remove socket ring (B). Install glass shade (sold separately) over sockets of fixture (A), then secure with socket ring (B).

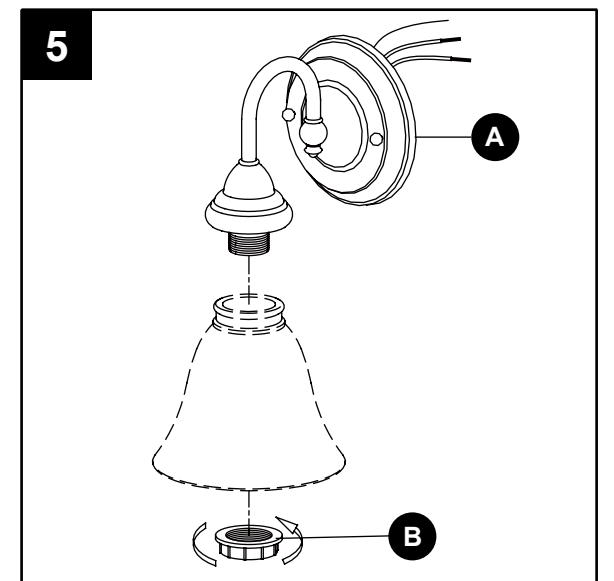

6. Install light bulb (not included). Use 60-watt max. standard-base incandescent bulb or halogen/CFL/LED equivalent.

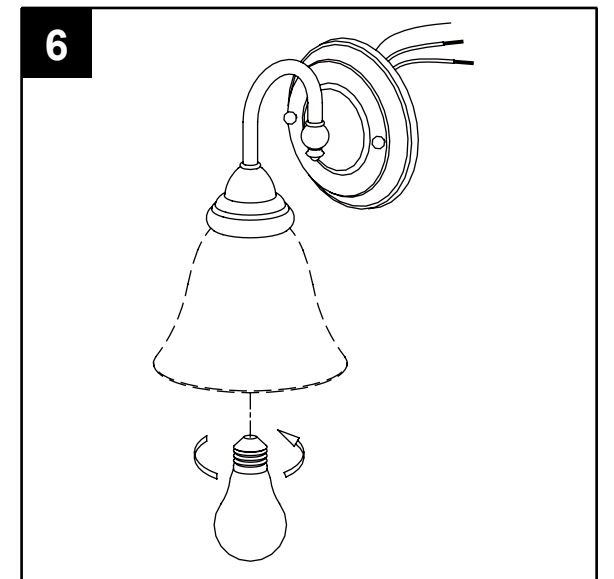

CARE AND MAINTENANCE

- Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Cap nut	110-100900
BB	Wire nut	375-022000
CC	Long mounting screw	109-042600
DD	Short mounting screw	109-042200
EE	Crossbar	152-103000

