
ASSEMBLY INSTRUCTIONS 30 INCH BATH VANITY

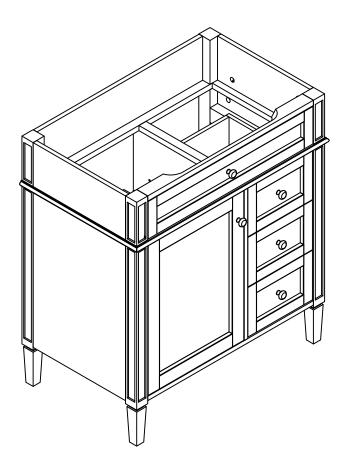

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

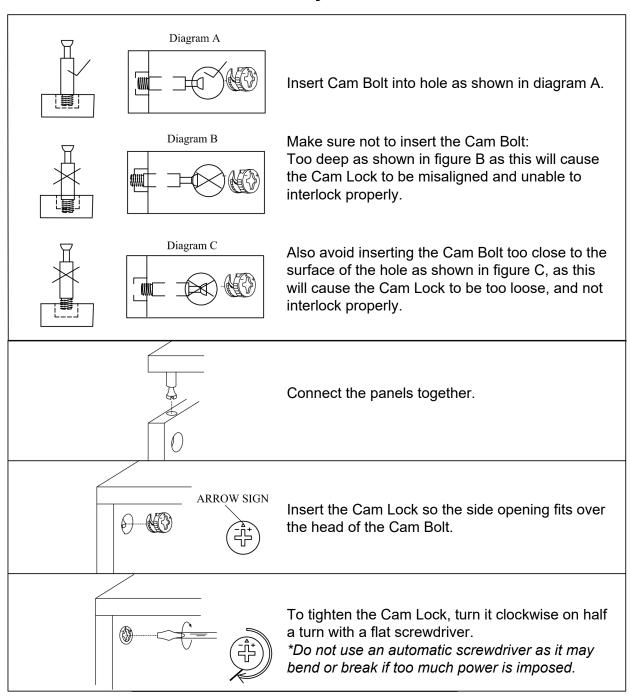

Detail View - CABINET (10) <u>3</u>: (12) <u>(21)</u>) (14)


Identifying the Hardware-Identify the hardware using the illustrations below.


Part List - WF316721 2 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Top Side Panel (L) - 1pc Mid Panel - 1pc 5 6 Top Side Panel (R) - 1pc Top Crossbar Front - 1pc 7 8 Flip Drawer - 1pc Top Panel Rear - 1pc 10 9 Mid Frame - 1pc Flip Drawer Face - 1pc 11 12 Bottom Panel Rear - 1pc Bottom Panel - 1pc 13 14 Cabinet Door - 1pc Adjustable Shelf - 1pc


Part List - WF316721		
15 <u>16</u>		
Left Panel of Door - 1pc Right Panel of Door -	- 1pc	
17		
Mid Panel of Door - 2pcs Round Bar - 2pcs		
19		
Top Drawer Front - 1pc Top Drawer Rear - 1	рс	
21		
Top Drawer Side (L) - 1pc Top Drawer Side (F	R) - 1pc	
23		
Bottom Drawer Panel - 2pcs Bottom Drawer Front - 2	1pc	
Bottom Drawer Rear - 1nc Bottom Drawer Side (I)	1- 1nc	
Bottom Drawer Rear - 1pc Bottom Drawer Side (L)	- Ipc	
Bottom Drawer Side (R) - 1pc		


Hardware List - WF316721


Α	В	С
ø6x35mm	ø14.5x12mm	ø8xø4x25mm
Three in one bolts(35pcs)	Three in one lock(35pcs)	Round head screw(3pcs)
D	E	F
⊘ >	90	{\bar{\bar{\bar{\bar{\bar{\bar{\bar
ø8xø4x32mm		ø5/32"x20mm
Round head screw(24pcs)	Handle(5pcs)	Handle screw(1pc)
	H	
ø5/32"x25mm		<u> </u>
Handle screw(4pcs)	Duo Forte (1pc)	Rotary Hinge(2pcs)
	K	L ⊕>>>>>> ø7xø3.5x15mm
Flat head screw(8pcs)	Damping hinge (2pcs)	Flat head screw(12pcs)
M	N (57////)	0
	Ø8x30mm	
Laminate pad(4pcs)	Wood dowel(36pcs)	Anti fall hardware(1set)

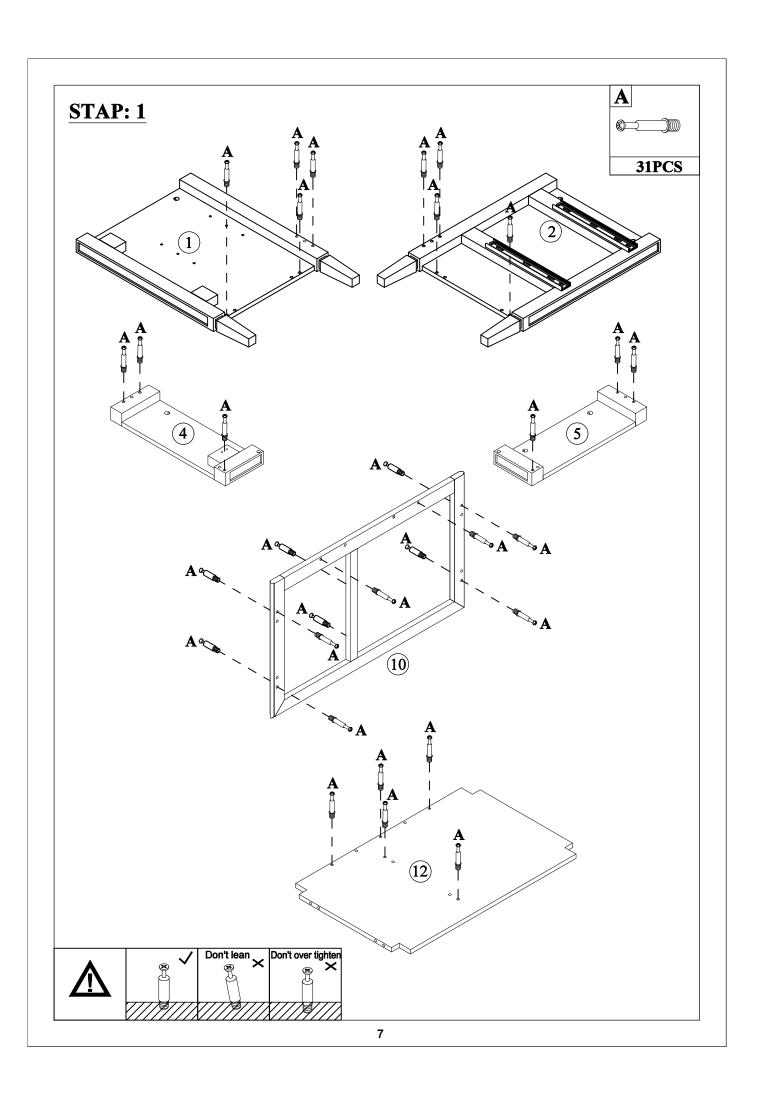


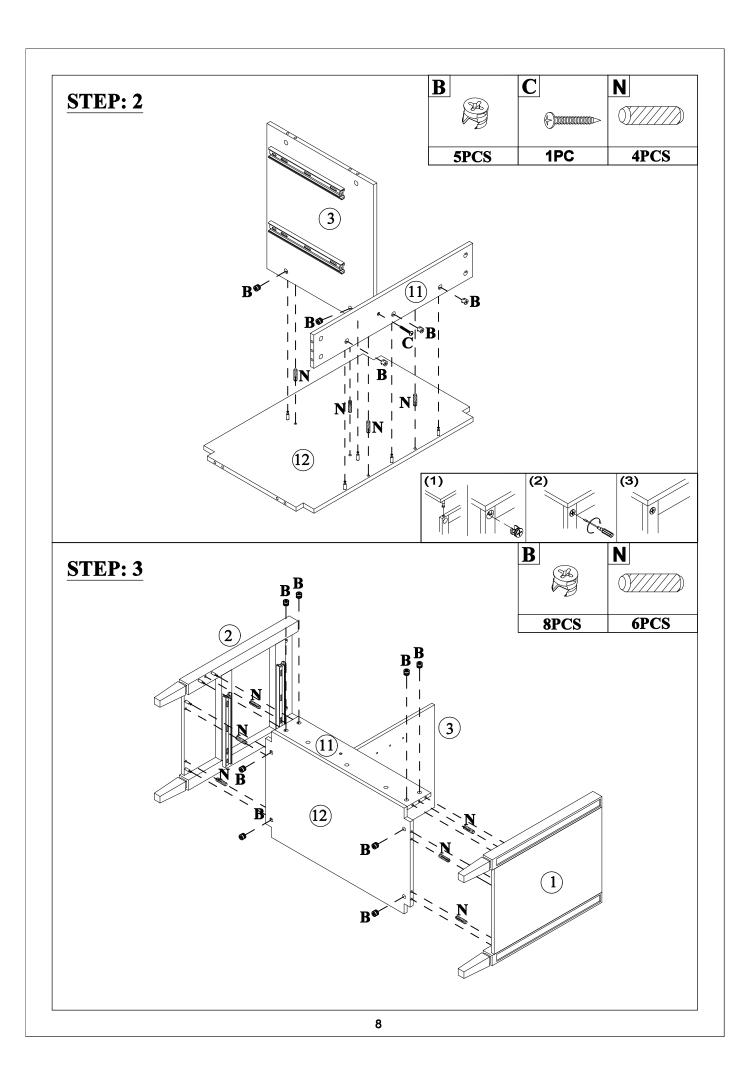


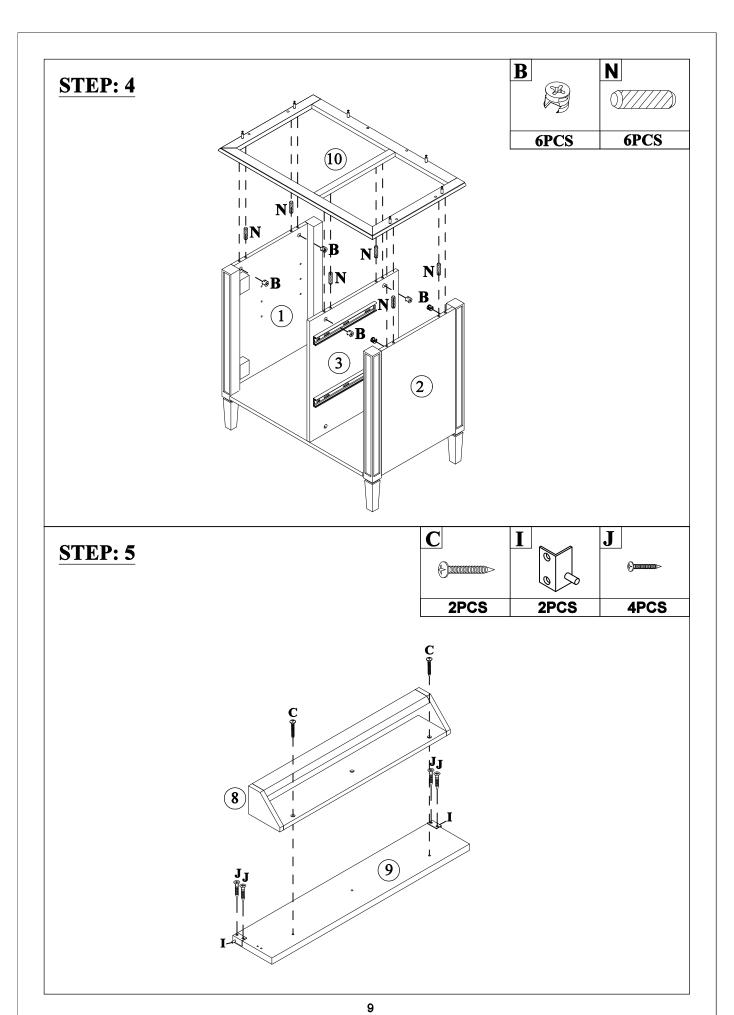


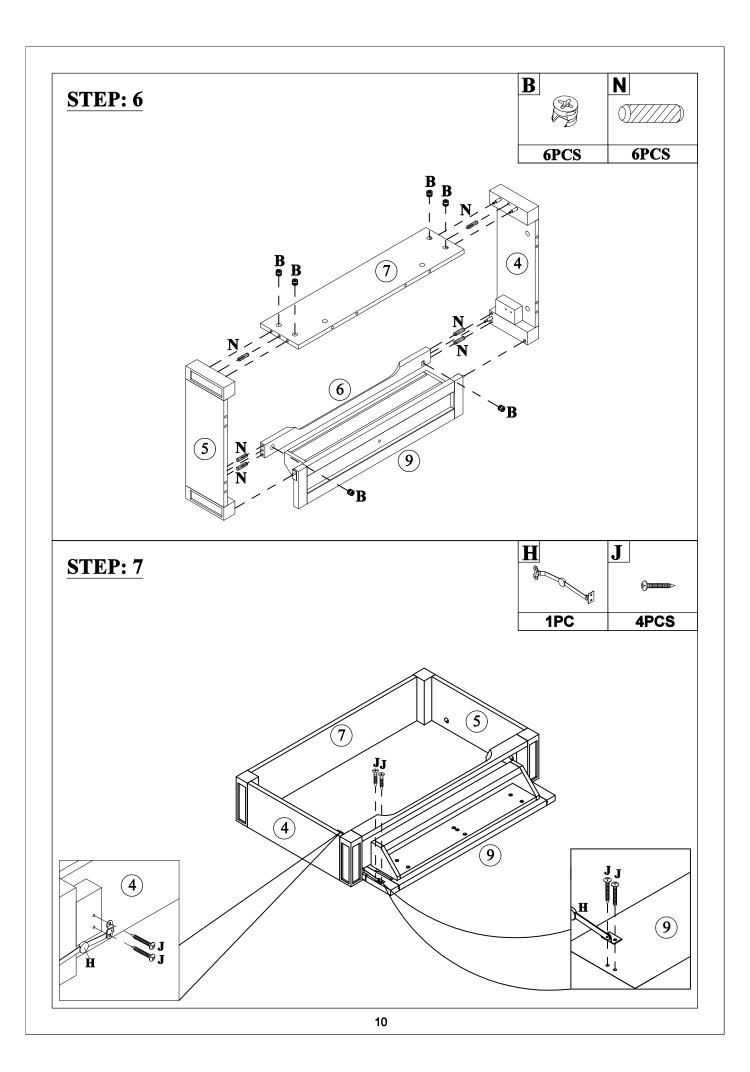


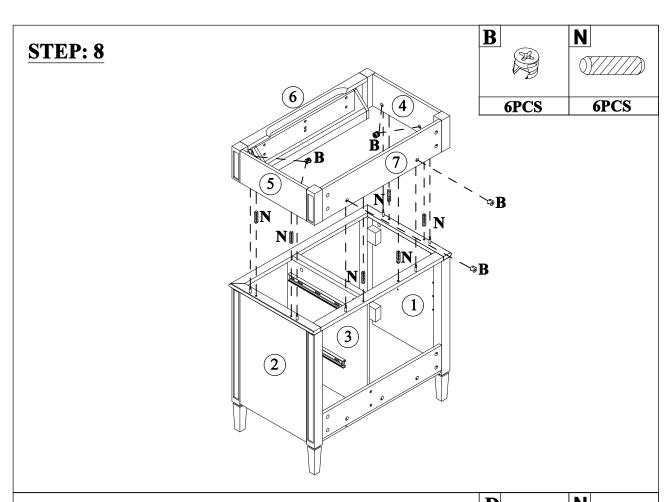


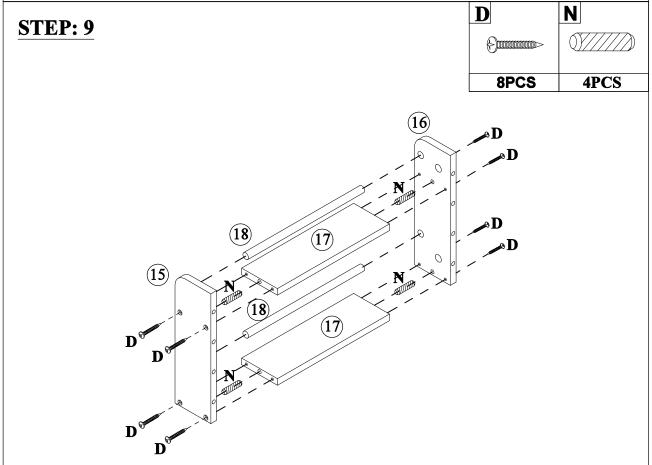


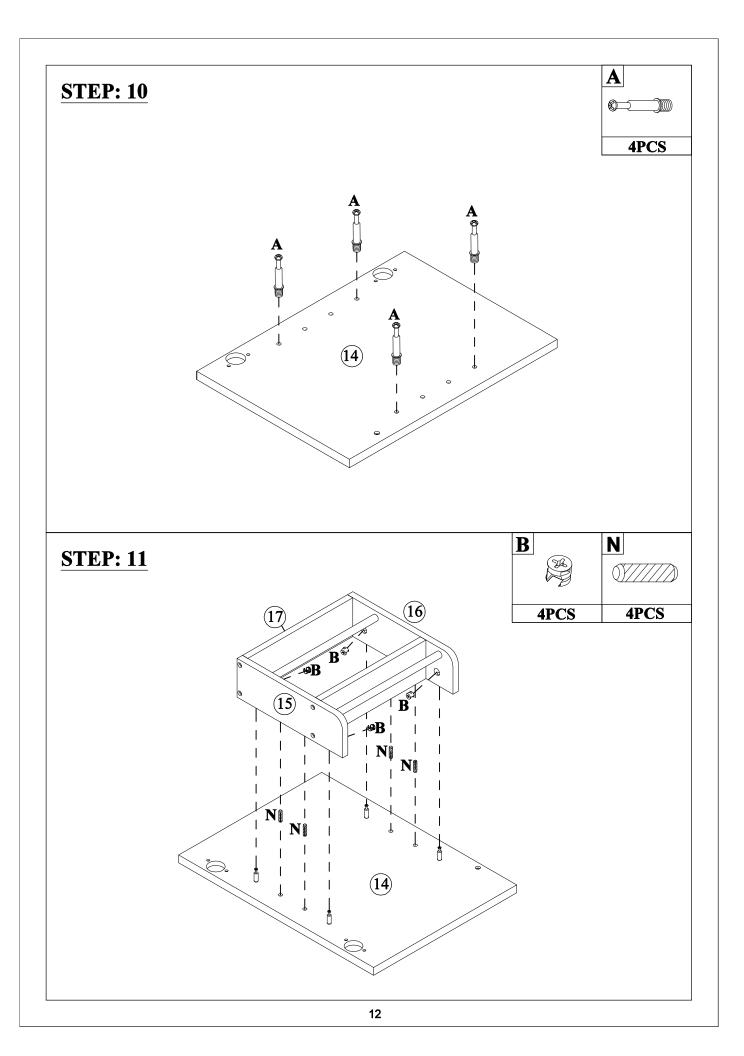

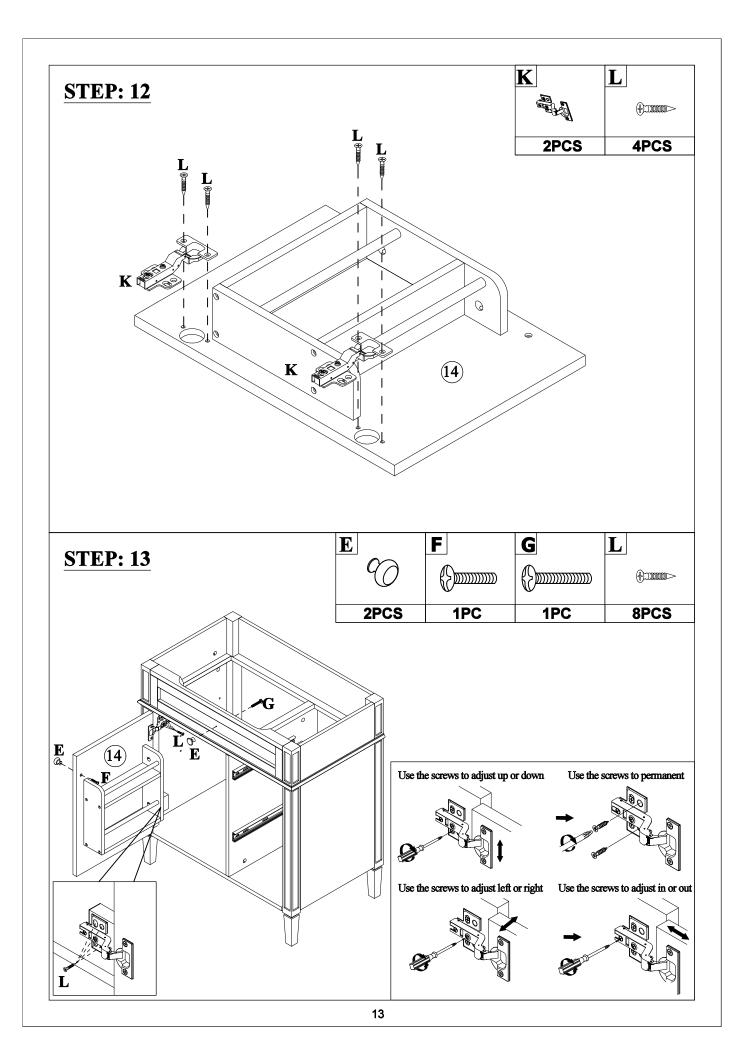


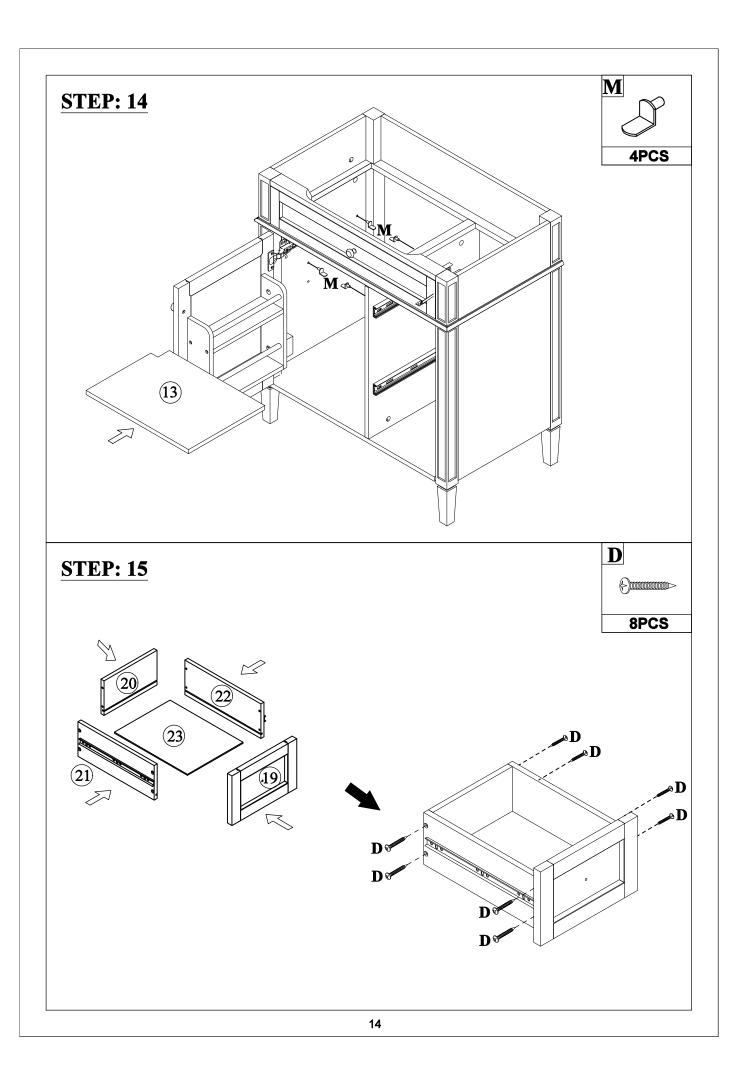


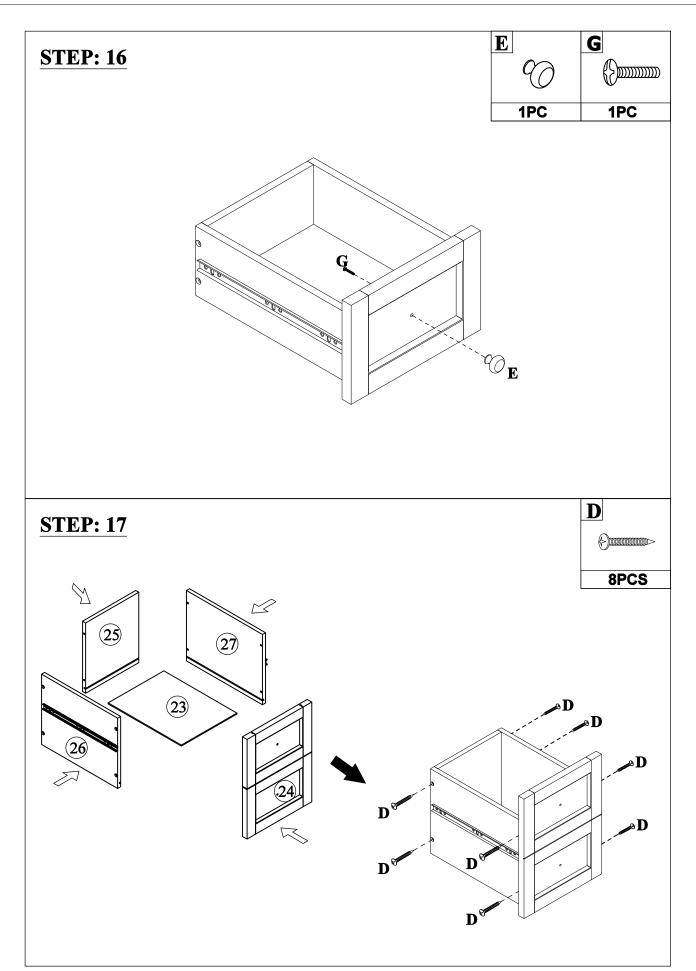

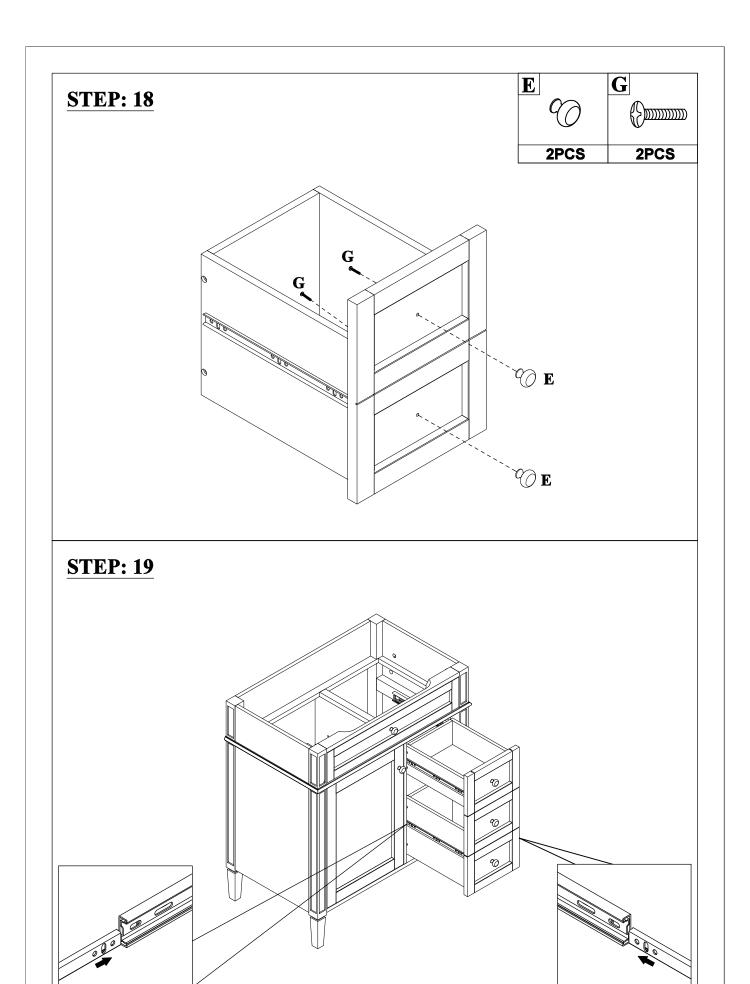




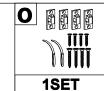


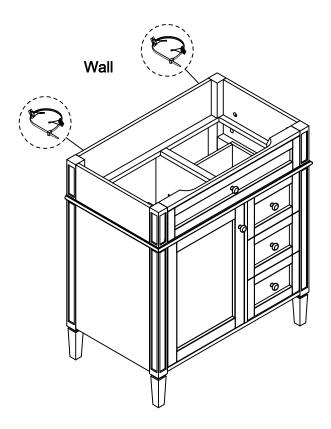

STEP: 21

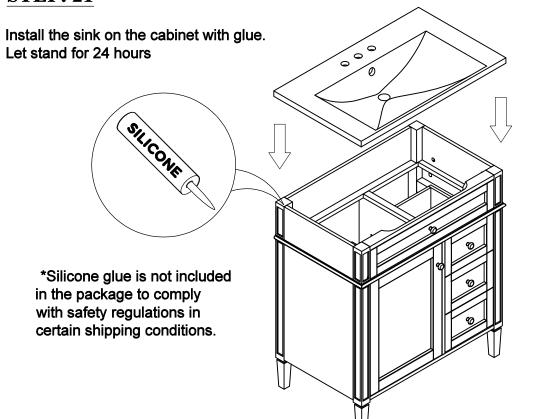


STEP: 22

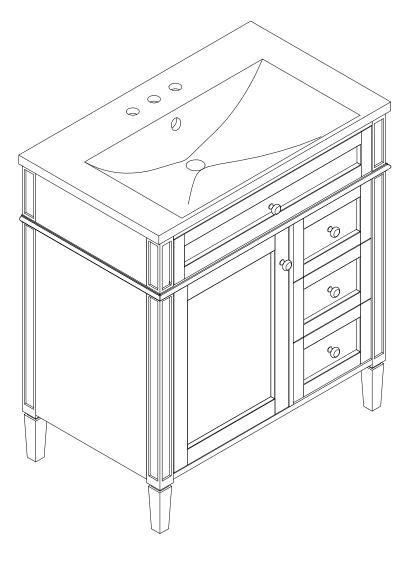




HINGE ADJUSTMENTS

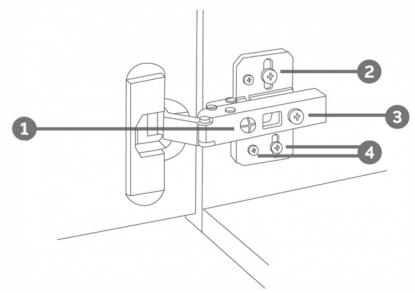

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

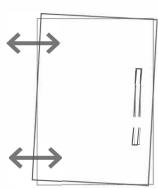

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

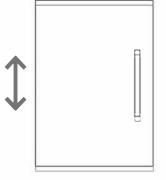

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

