

ASSEMBLY INSTRUCTIONS

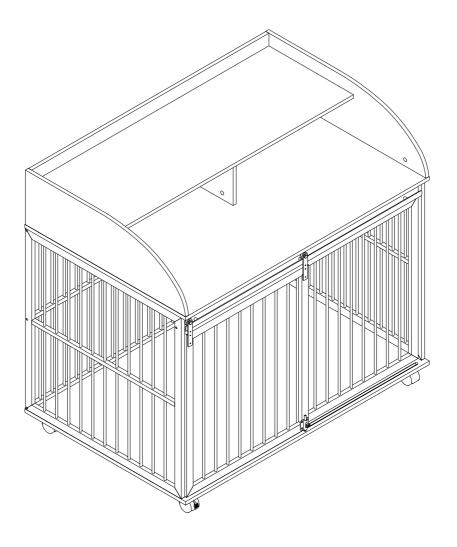


NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS WF323360AAE

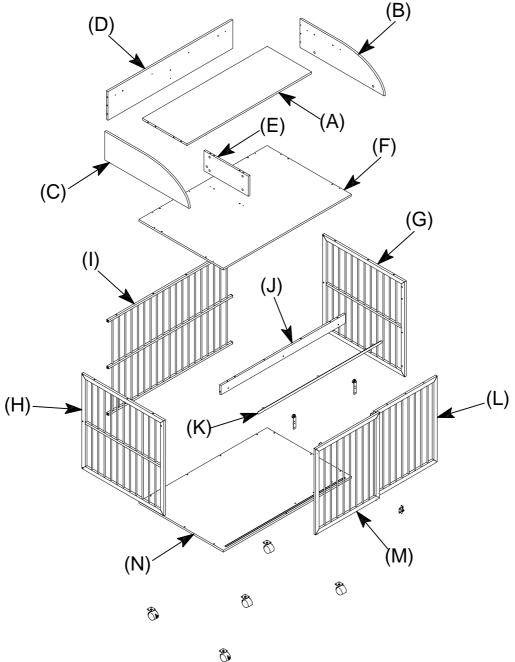

Notice:

- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

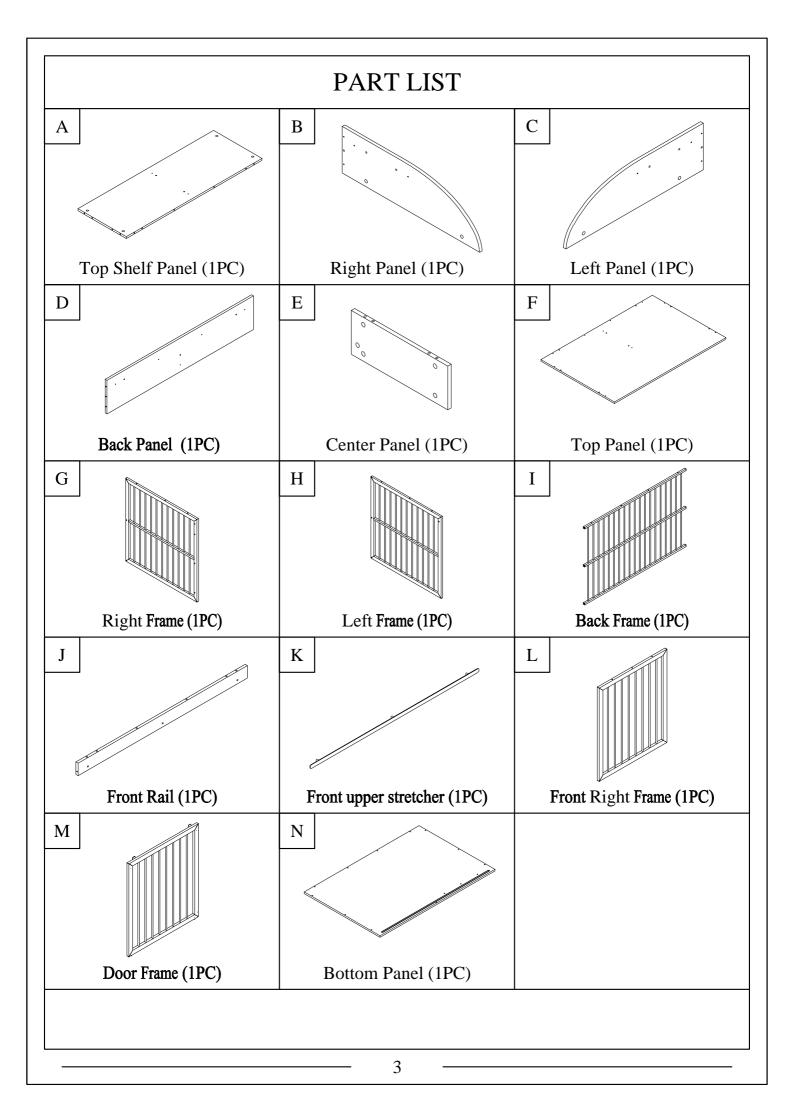


HARDWARE LIST		
1	2	3
Big Cam Lock (32PCS) Extra (2pcs)	Cam Bolt (3PCS)	Cam Bolt (29PCS) Extra (2pcs)
4	5	6
Ø8x30mm Wood Dowel (21PCS) Extra (2pcs)	Ø1/4*45mm Bolt Screw (2PCS)	Bolt 1/4" x 25mm (29PCS)
7	8	9
Bolt 1/4" x 38mm (6PCS)	Lock The Door (1PC)	M3*12mm Flat Head Screw (3PCS)
10	11	12
\bigoplus_{mm}		
M3.5*12mmWood Screw (4PCS)	M4*15mmWood Screw (20PCS) Extra 2pcs	M4x15mm Bolt with Screw Head (2PCS)
13	14	15
Allen Key 4mm (1PC)	Bamn door roller (2PCS)	Locking Caster (2PCS)
4 ———		


HARDWARE LIST		
16		
Swivel Caster (3PCS)		
	5	

<u>CARTON CONTENT:</u>

 
WF323360AAE:





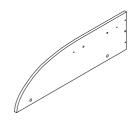

 - A Top Shelf Panel (1PC)
- B Right Panel (1PC)
- C Left Panel (1PC)








- D Back Panel (1PC)
- E Center Panel (1PC)
- F Top Panel (1PC)








- G | Right Frame (1PC)
- H Left Frame (1PC)
- I Back Frame (1PC)

 

 



- J Front Rail (1PC)
- K Front upper stretcher (1PC)
- L Front Right Frame (1PC)



WF323360AAE:



M Door Frame (1PC)



N Bottom Panel (1PC)

