


PY42/PY52/PY60
V20260511

User Manual

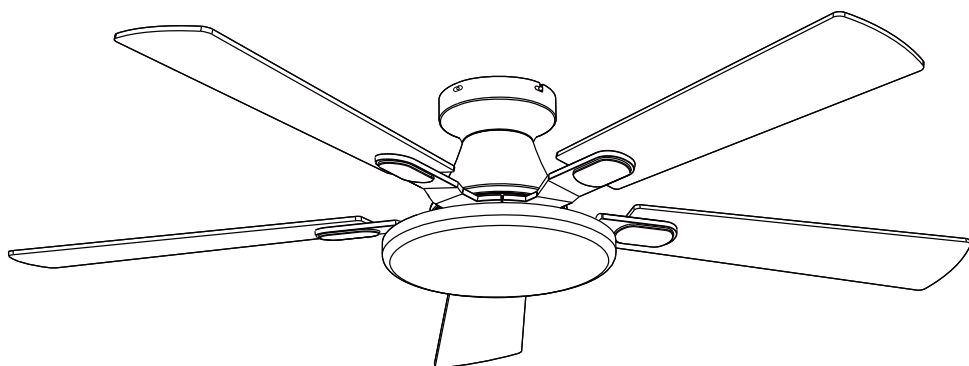

Scan for support or view installation videos

After-sales Email: support@fanlamppro.com

To assist you faster, please share your order confirmation screenshot so we can quickly resolve this.

WARNING!!!

- To avoid fire, shock and serious personal injury, follow these instructions.

1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Be cautious around the fan and blades when clearing, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
4. Do not insert anything into the fan blades while the fan is operating.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.

Before Installation

 
- This manual is designed to make it as easy as possible for you to assemble, install operate and maintain your ceiling fan.

NOTE: Place the parts from the loose parts bags in a small container to keep them from being lost. If any parts are missing contact us.

Tools You May Need



Step ladder



Phillips head
screwdrivers



Protective gloves



Tape

 


Goggles

Accessories

- Check to see that you have received the following parts

Accessories:


 
2 (A)  Expansion screw	2+2 (B)  J-box screw, Washer	4 (C)  Self-tapping screw	4 (D)  Plastic expansion tube
---	---	--	--

 
 
15+1 spare 15+1 spare (E)  Blade screw, red washer	1 spare (F)  Arm screw	3 (G)  Wire nut	2+1 (H)  Balance kit
--	---	--	--

Package Contents

- Check to see that you have received the following parts

Package Contents:

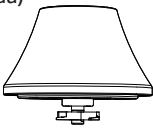1 (aa)  Fan motor host	1 (bb)  Canopy	5 (cc)  Blade arm	5 (dd)  Fan blade
--	--	--	---

1 (ee)  Lamp body	1 (ff)  Receiver	1 (gg)  Remote control
---	---	---

Energy Saving Usage



- Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing The Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls. If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not In The Room



If the room is unoccupied, turn off the ceiling fan to save energy.

Using The Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.



Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

Installation

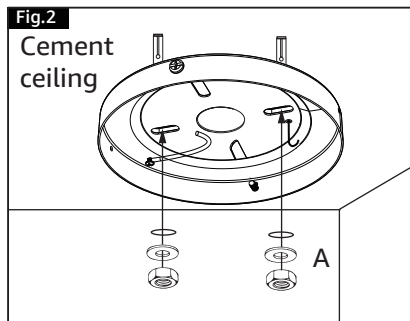
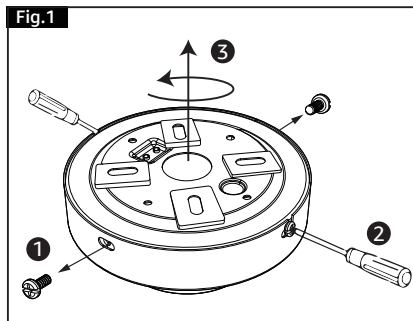


- First, remove the 2 round-holed screws from the canopy. Then, loosen the remaining 2 screws (do not remove them completely). Finally, rotate and remove the bracket.
- Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.

Cement ceiling: Drill holes into the cement ceiling, then use expansion screws for fixation.

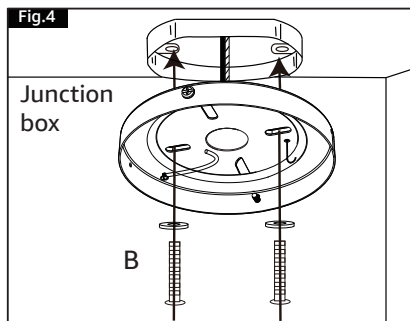
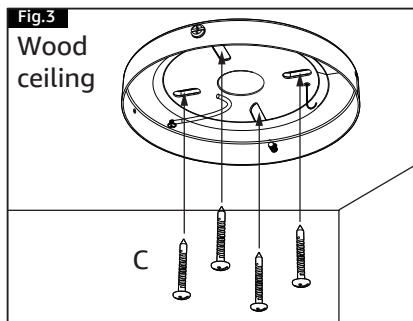


- **Wood ceiling:** Use self-tapping screws to drive into the wooden ceiling.
- **Junction box:** Use j-box screw and washer to fix the bracket to the ceiling.

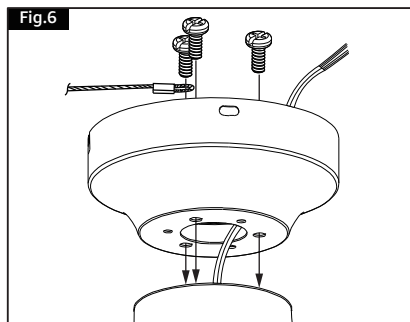
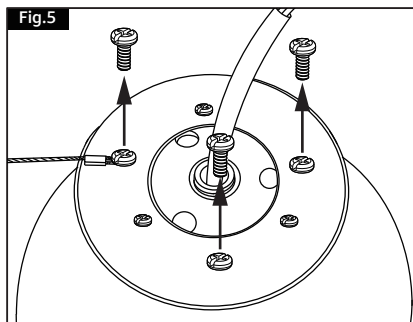


- Remove the 3 pre-installed screws (large screws) on the fan motor main unit.
- Install the canopy onto the fan motor host, aligning it with the holes. Attach the safety rope to one of the screws, then tighten the 3 screws.



Installation

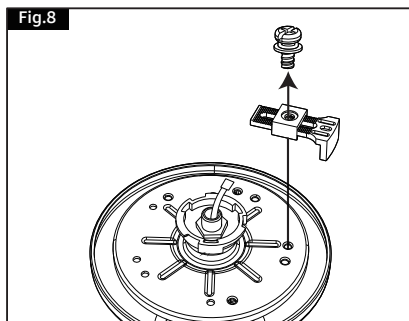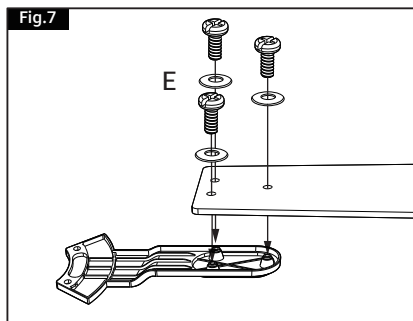

- Attach the fan blades to the blade arms using 3 screws and 3 washers. (Repeat this step for the remaining fan blades installation)
- Remove all the arm screws and retaining clips from the motor host.

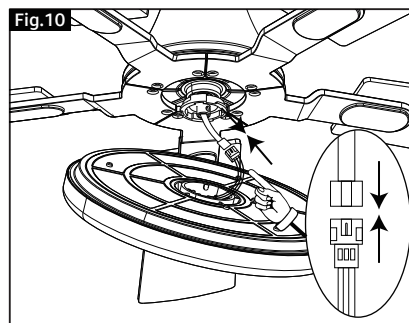
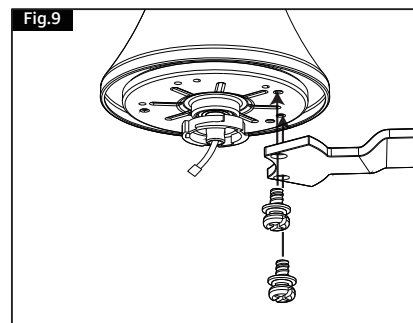


- Secure the blade arm to the motor using the motor screws removed in the previous step (Repeat this step for the remaining blade arms).
- Connect the terminal on the motor to the lamp body.

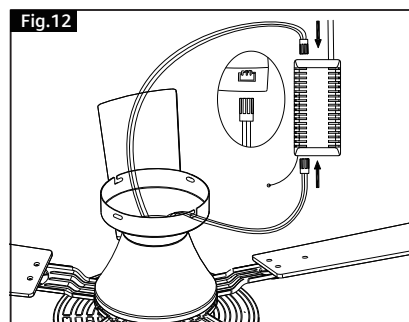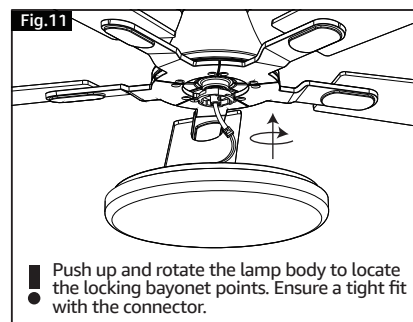


- Push the lamp body upward until it engages with the locking point, then rotate it to lock it in place. **NOTE: Rotate until it no longer moves, ensuring it is locked in place.**
- Connect the wires between the controller and the fan motor: insert the 3-pin wire connector into the port on the receiver.

Installation

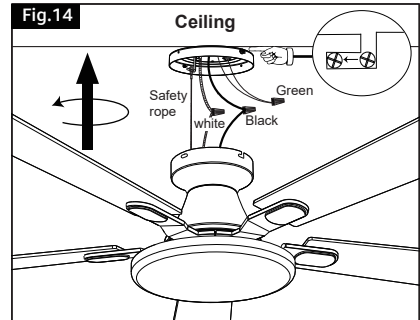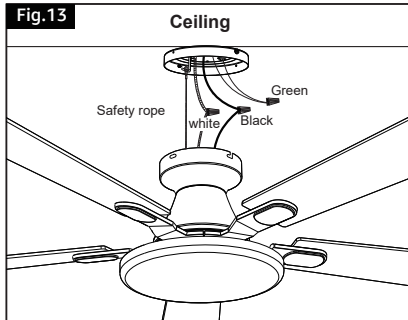


- Hang the safety rope on the bracket hook.
Wiring:
Connect the "Neutral wire" (white wire) from ceiling to the white wire.
Connect the "Live wire" (black wire) from ceiling to the black wire.
Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the bare wire.
- Align the canopy L slot to the bracket screw, rotate to certain position.

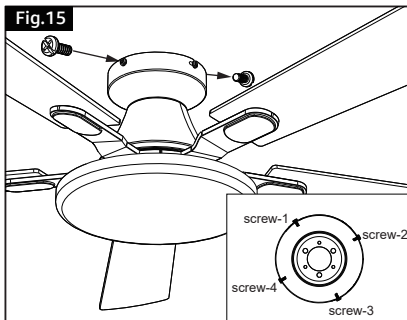


- Lock the other 2 screws and ensure that the 4 screws are tightened.

Remote Control

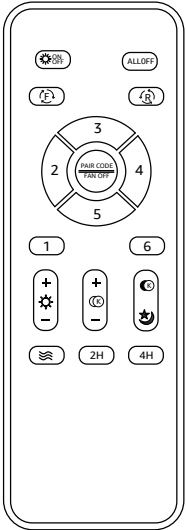	Light on/off	
	All off	
	Forward	
	Reverse	
1-6	Fan speed setting	
	Fan off/ Pair code	
	Brightness +	
	Brightness -	
	CCT + (cooler)	
	CCT - (warmer)	
	CCT change	
	Night light	
	Natural wind	
2H/4H	Quick timer setting (2H/ 4H)	

Attach wall plate using the two screws provided.

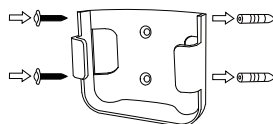

To operate the fan, please install 2 AAA batteries (included) in the handheld remote control. If not used for extended periods of time, remove the batteries to prevent damage to the remote control. Store the remote away from excessive temperatures and humidity.

 
 
 
 
Remote Controller Pairing:

The remote controller can be used to control multiple ceiling fans.

1. For the ceiling fans you want to pair, turn the main power switch off for at least 1 minute.
2. Power on, immediately press and hold the **PAIR CODE** button (light flashes).
3. If pairing is unsuccessful, please repeat the steps above.

APP Control

- **NOTE:** For iPhone users, you can search for "FanLamp Pro" in the AppStore or scan the QR code to download. For Android users, please scan the QR code to download. **(Please enable Bluetooth and pair the fan with app to control it!)**


		Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. When the fan light flashes twice, it indicates that the fan has been successfully paired with the phone and can now be controlled through the phone.
		Slide to change the fan speed
		Slide to change the brightness of the light
1. Ensure Bluetooth is enabled on your mobile device.		Quick switch for "Natural" light color
		Quick switch for "Yellow" light color
2. Make sure you allow this app to access Bluetooth. (For iPhone users, Android users can ignore this step.) Method 1: Click "Allow" when opening the app for the first time. Method 2: Go to your phone's settings, find the app, and enable Bluetooth access.		Quick switch for "White" light color
		N/A for this model
		Timer the fan
		Natural wind: fan speed will change automatically when use this function
3. Enter the app page and click the plus sign below (Add group).		Sleeping wind
4. Enter any name, then click Confirm.		Night light (10% brightness in neutral white)
5. Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. The fan light will flash twice to indicate successful pairing.		N/A for this model
Picture 1		Fan moves forwards
Picture 2		Fan moves reversely
Picture 3		Light off/on
		Fan off/on

Troubleshooting



PROBLEM	SUGGESTED REMEDY
If fan does not start	1. Check main and branch circuit fuses or circuit breakers. 2. Make sure that the wall control is turned "ON" 3. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off. 4. Make sure battery has power, change battery(2*AAA) to try again. 5. The remote controller is not paired, check Page.7 to pair. 6. The motor or receiver or remote controller is fault, contact our customer service. 7. Make sure do not connect to any dimmer or fan speed adjust switch.
If fan sounds noisy	1. Make sure all screws in motor housing are snug. (not over tightened) 2. Make sure the screws which attach the fan blade bracket to the motor are tight. 3. Too close to the wall, make sure the blades at least 3ft to the wall. 4. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off before entering switch housing. 5. DO NOT USE a Solid State variable speed control. 6. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period. 7. Make sure the ceiling bracket is screwed securely.
If fan wobbles	All blades are weighed and grouped by weight. The following procedures should eliminate most of the wobble. Check for wobble after each step. 1. Check that all blades are screwed firmly into motor housing. 2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. 3. Make sure the ball head into the slot. (*downrod installation only) 4. Make sure the downrod is well fixed by screws.(*downrod installation only) 5. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation.

Troubleshooting

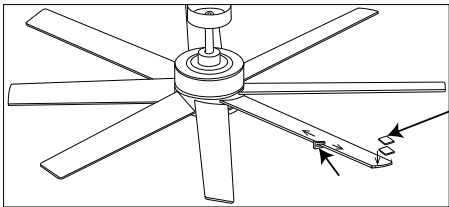PROBLEM	SUGGESTED REMEDY
If fan wobbles	6. The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps: <u>How to use balancing kit:</u> (1) Turn the fan on and set the speed control setting to a speed at which the wobble is the greatest. (2) Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of the blade. (3) Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades, noting the blade on which the greatest improvement is achieved. (4) Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement. (5) Remove the clip and install a balancing weight to the top of the blade along the centerline, near the point where the clip was positioned. (6) If the fan wobble problem has not been corrected, you can try to improve the balancing further by using the balancing clip and additional weights.  The diagram shows a top-down view of a ceiling fan with five blades. One blade is highlighted with a balance clip attached to its trailing edge. An arrow points to the clip with the label 'WEIGHT BALANCING'.
If light does not work or flickering	1. Check for loose or disconnected wires in fan switch housing. 2. Check the wiring of receiver to the light kit. 3. Check for loose or disconnected wires in light kit, make sure connector is correct inserted. 4. Check for faulty light bulbs. (*light bulb version only) 5. There is too many ceiling fans with different control system in the same area, shut down other ceiling fansto check if still flickering. 6. DO NOT USE any dimmer.

Customer Service:

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

Contact Information:



: You can contact us by sending an email to support@fanlamppro.com