



PURE GARDEN

PATIO AND GARDEN ESSENTIALS


SOLAR LIGHT

1. PACKAGED CONTENTS

- 1) Solar panel with umbrella fairy light
- 2) Ground Stake

2. OPERATION

For first time use, turn the switch on the back of the solar panel to position "S" or "F" as per picture below, and allow to charge in full sunlight for at least 8 hours.

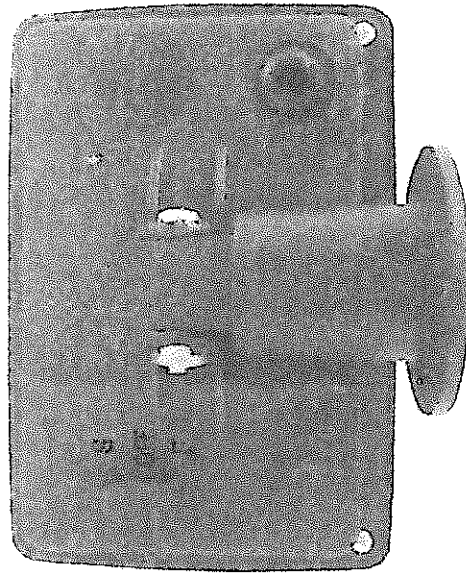

This LED solar light set has two modes of operation.

- 1) STAY ON 2) FLASHING

For "ON" mode move the switch into position "S".
For "FLASHING" move the switch into position "F".

3. BATTERY REPLACEMENT

Should the light source start to dull or stay on for shorter amount of time we recommend that the rechargeable battery be replaced in the following way.

- 1) Remove the 4 screws on the back of the solar panel and open the back cover taking care not to damage any wires.
- 2) Replace the used battery with a new one making sure that the polarity is followed as this could cause serious damage to the unit.

NOTE: This product should only be replaced with a rechargeable AA Ni-CD battery.