 
 
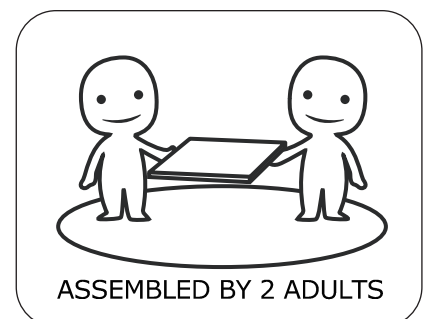 




Sideboard

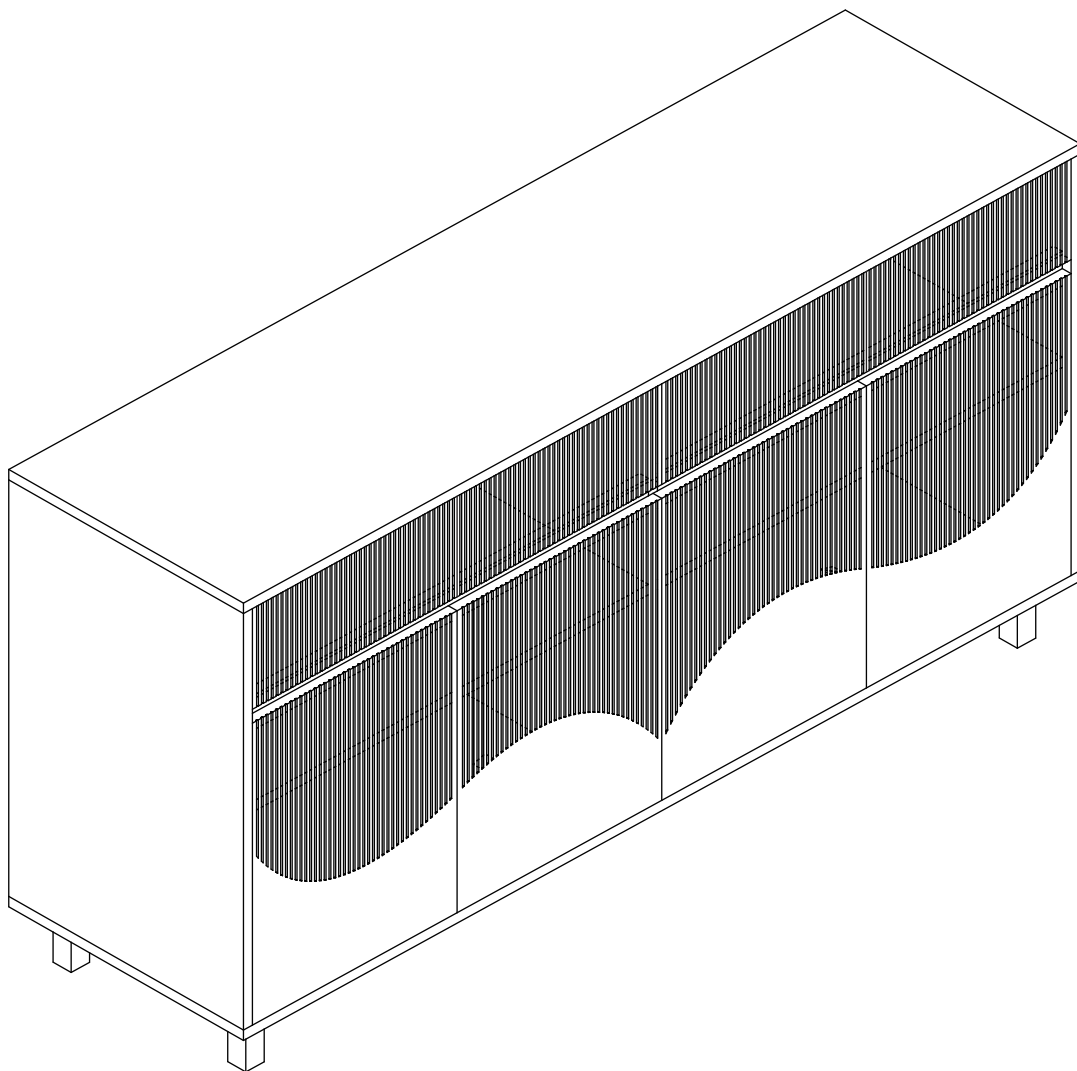

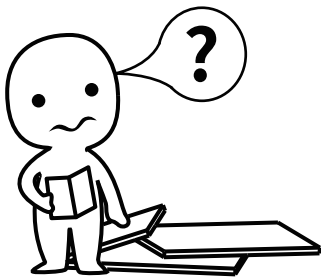


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

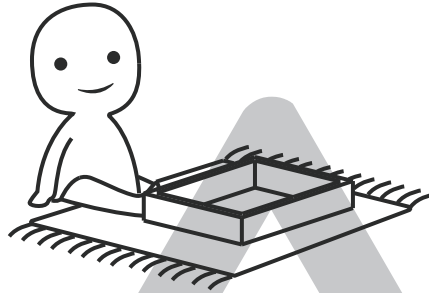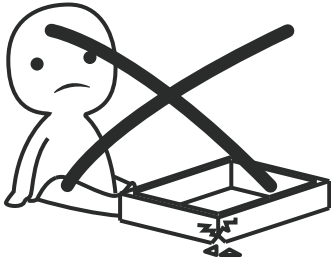



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

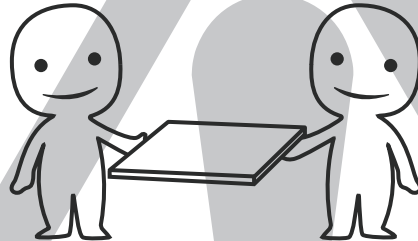

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

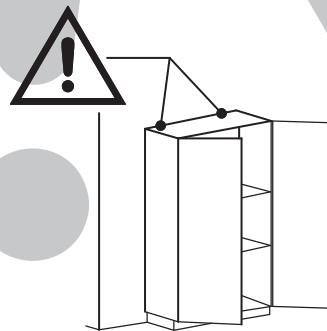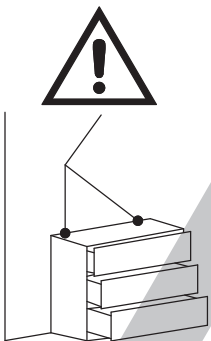

ANTI-TOPPLE WARNING !

 
Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

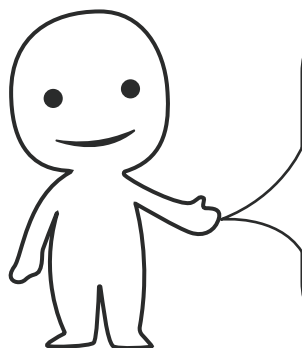


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the Manual, accessories with similar shapes can be distinguished by size

A x 20 Ø 6 x 35 mm	B x 20 Ø 15 x 9.5 mm	C x 16 Ø 6 x 30 mm	D x 26 Ø 4 x 35 mm	E x 5
F x 24 Ø 3 x 12 mm	G x 2 Ø 4 x 12 mm	H x 2 Ø 4 x 40 mm	I x 4	J x 4
CL x 2 300 mm	CR x 2 300 mm	DL x 2 300 mm	DR x 2 300 mm	K x 48 Ø 4 x 12 mm
L x 1	M x 2	N x 2	O x 8	P x 8
Q x 8 Ø 3 x 16 mm	R x 20 Ø 4 x 14 mm			

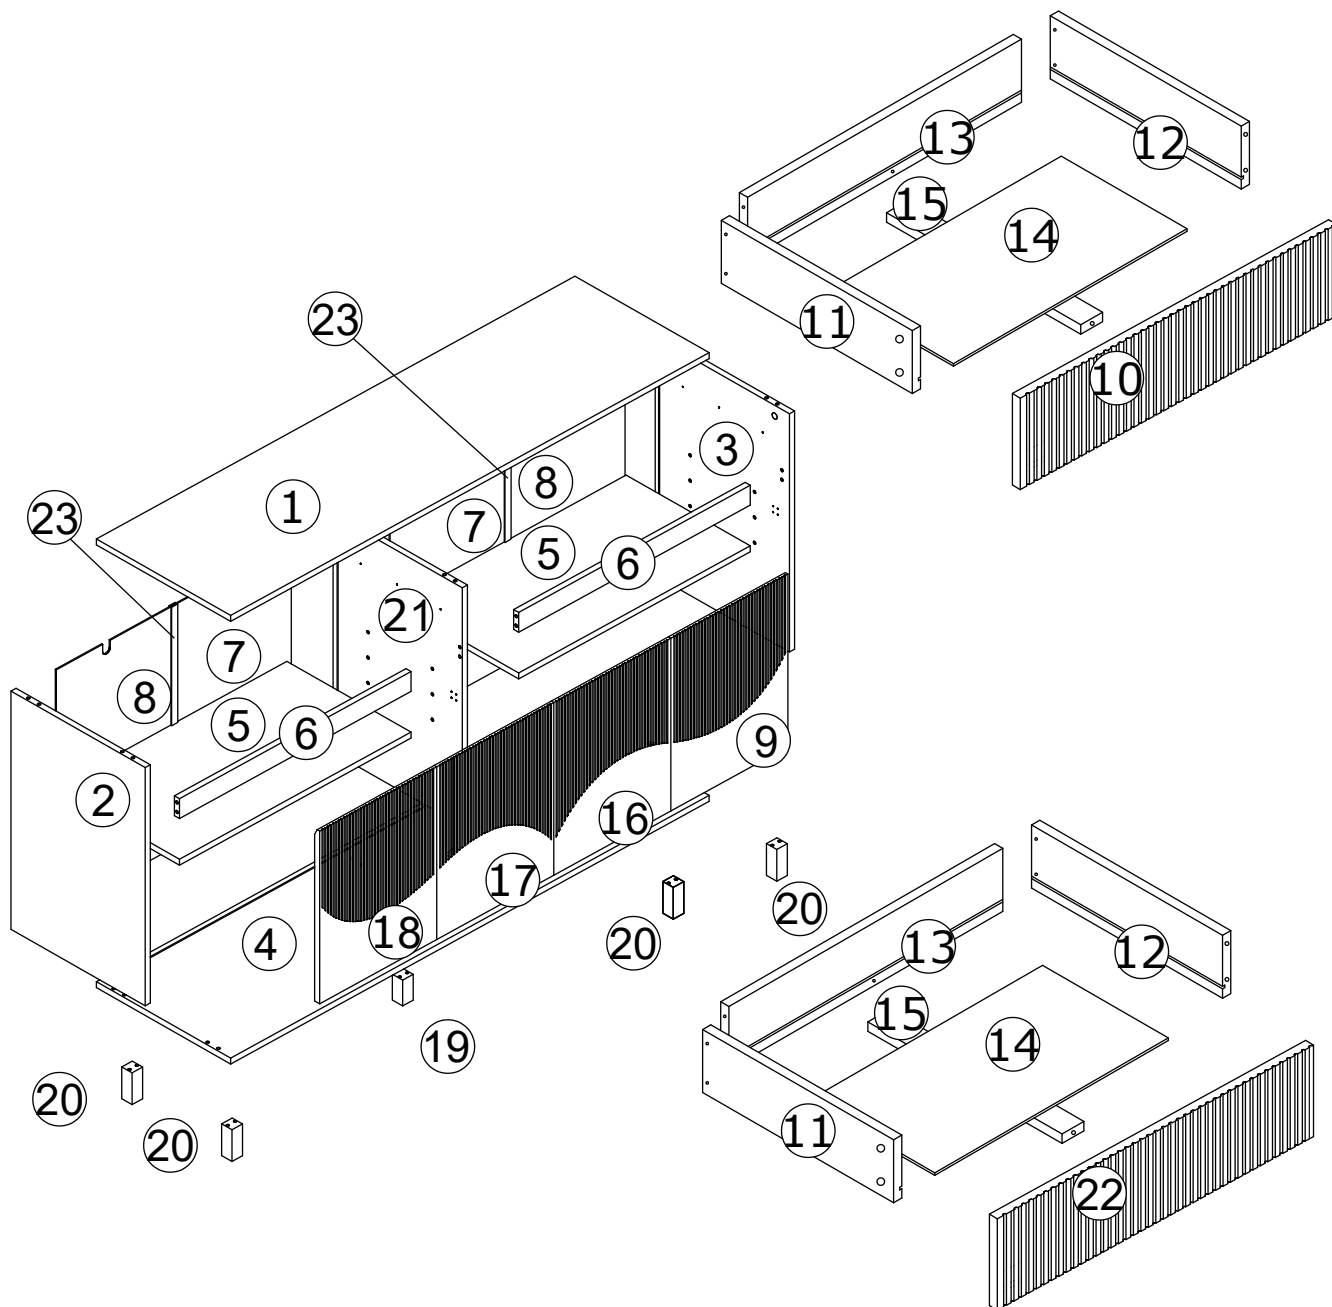 

⚠ WARNING

 
 
 









Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!

1

A x 4  Ø 6 x 35 mm	F x 12  Ø 3 x 12 mm	CL x 2  300 mm	CR x 2  300 mm	
---	--	---	--	---

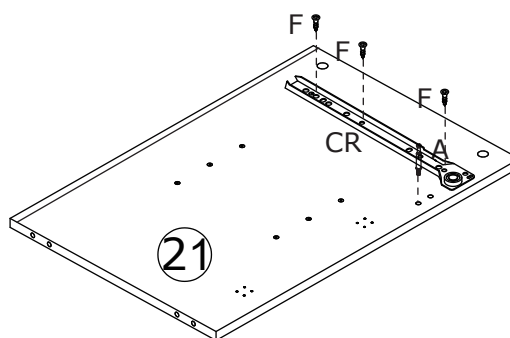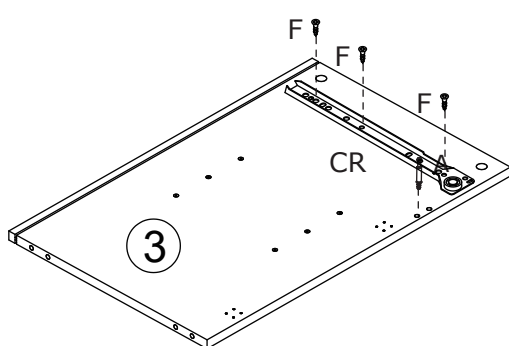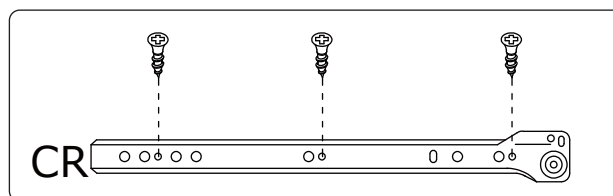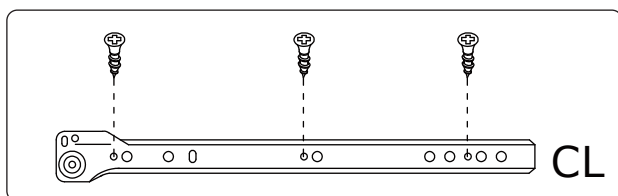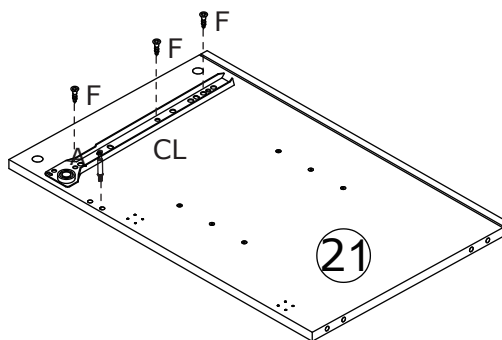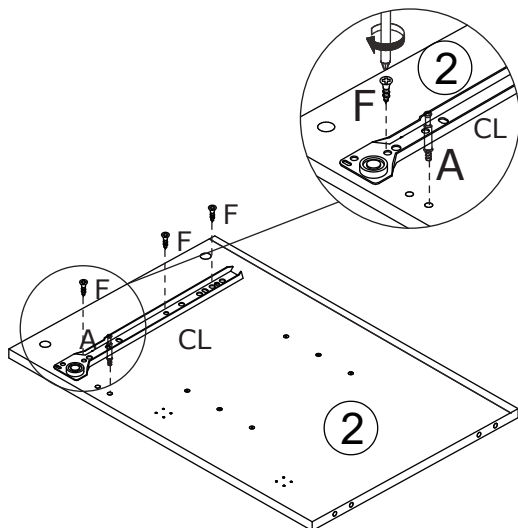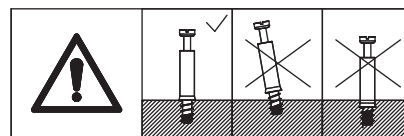       

Fix rail(CL) and (CR) to board 2 and 3 with screw(F), and screw eccentric rod(A) into with a screwdriver as shown.

Fix rail(CL) to board 21 with screw(F), and screw eccentric rod(A) into at first.

Flip board 21 to back, fix rail(CR), and screw eccentric rod(A) into as well.

2

B x 4



Ø 15 x 9.5 mm

C x 10

 


Ø 6 x 30 mm

D x 6






Ø 4 x 35mm





Connect board, 2, 6, 21 and 3 using wooden dowel(C), add cam lock(B) into board 6 and turn clockwise to tighten as shown.

   Attach board 2, 21 and 3 to board 4 using wooden dowel(C), and fix with screw(D) as shown.

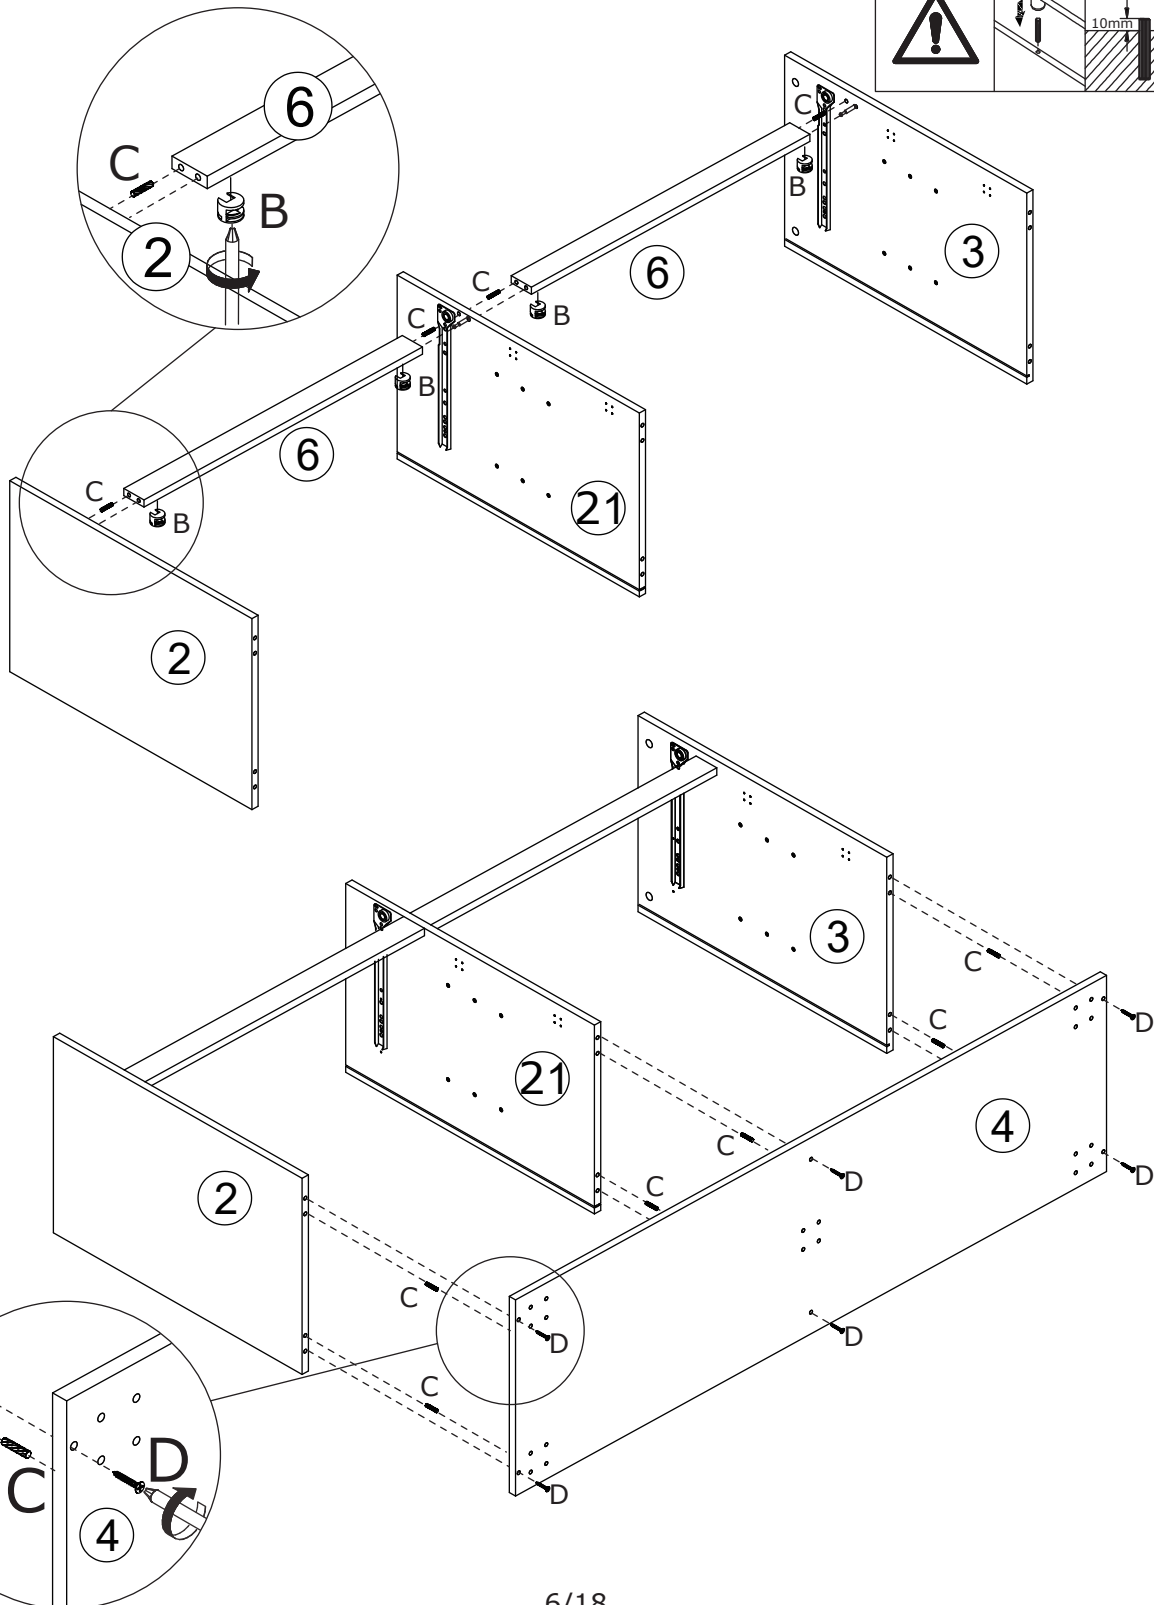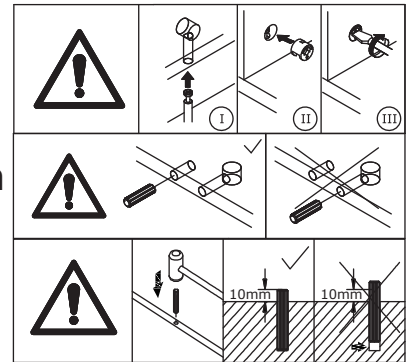


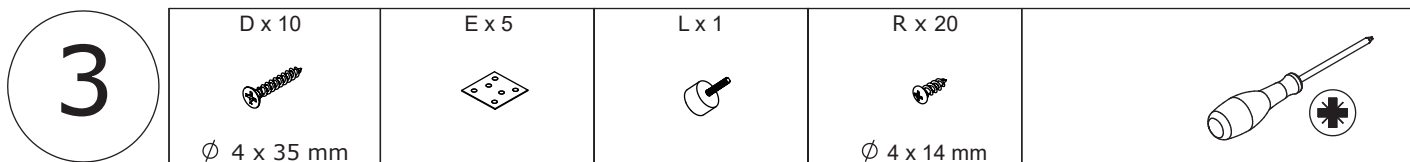

  
Fix iron sheet(E) to leg 20 and leg support 19 with screw(D) at first.
Fix legs to board 4 with screw(R) as shown.
Rotate foot pad(L) into leg support 19 as shown.

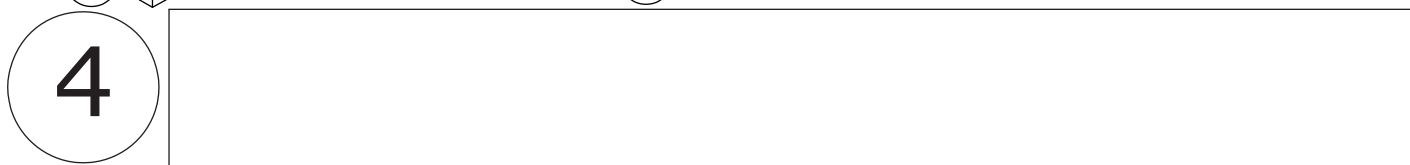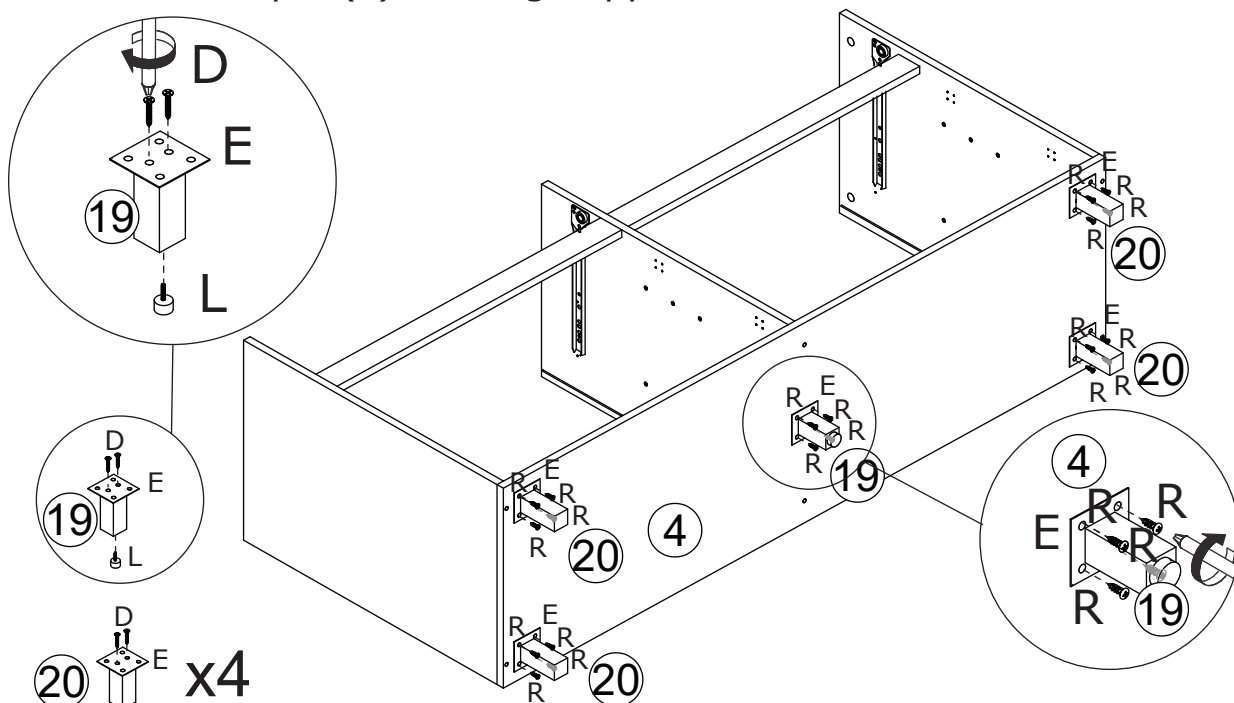

 Connect each board 7 and 8 at first.
Insert back board 7 and 8 along available grooves as shown.


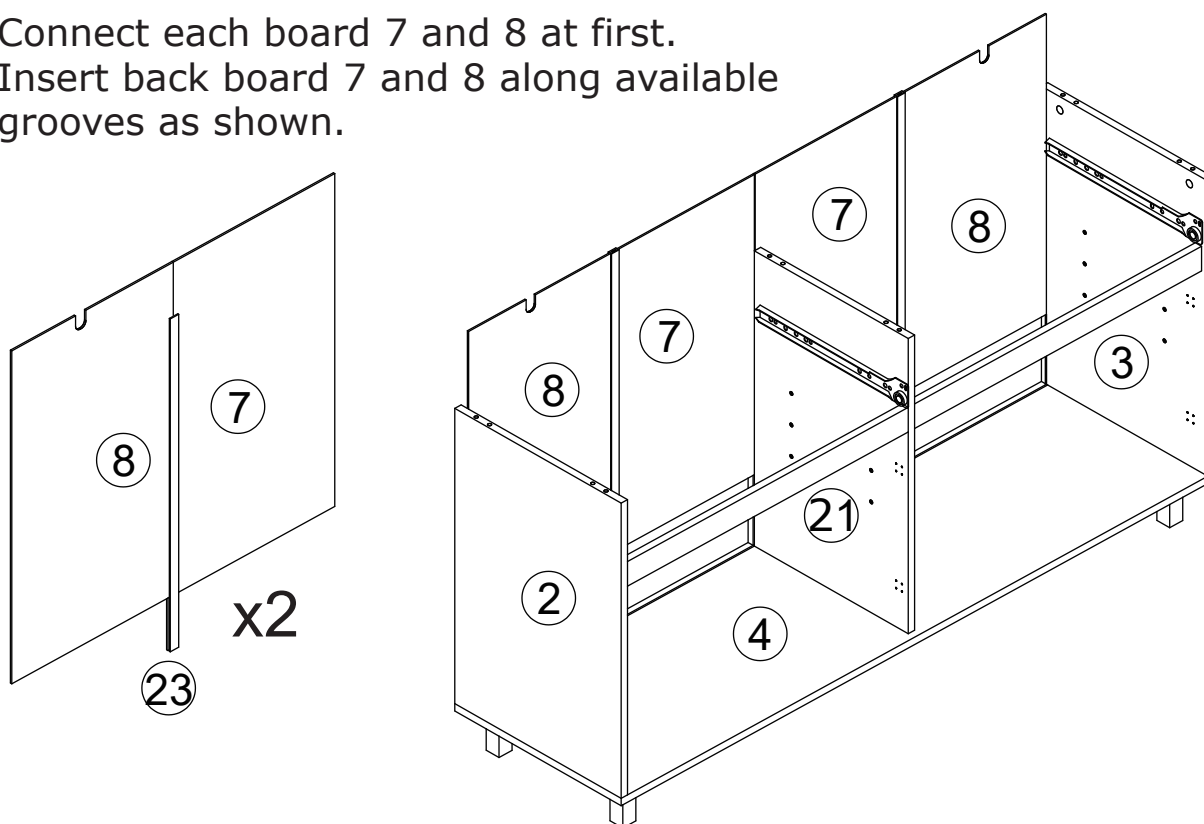


5

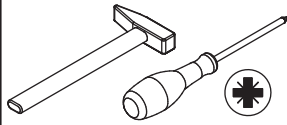 A x 6  $\varnothing 6 \times 35 \text{ mm}$	B x 6  $\varnothing 15 \times 9.5 \text{ mm}$	C x 6  $\varnothing 6 \times 30 \text{ mm}$	G x 2  $\varnothing 4 \times 12 \text{ mm}$	N x 2 	
---	---	---	---	---	---

Screw eccentric rod(A) into board 1 with a screwdriver as shown.

  Fix part(N) to board 1 with screw(G) as shown.
Cover board 1 to the top using wooden dowel(C), add cam lock(B) into board 2,21,3 and turn clockwise to tighten as shown.

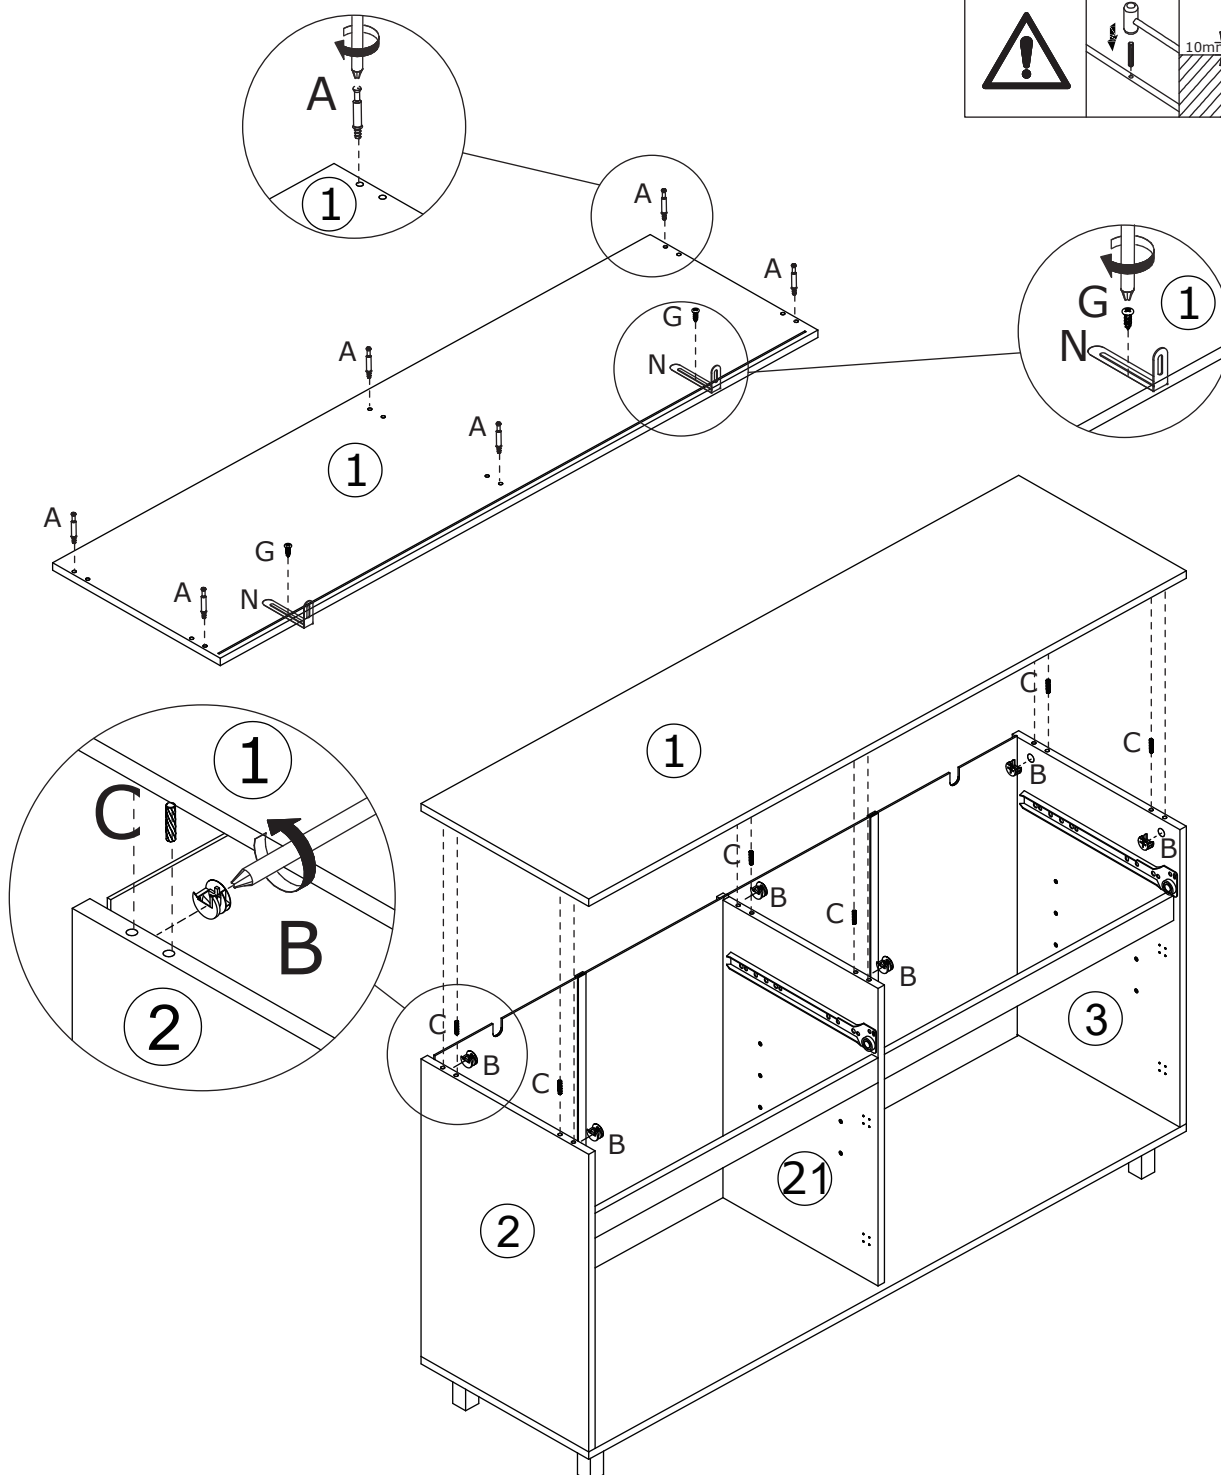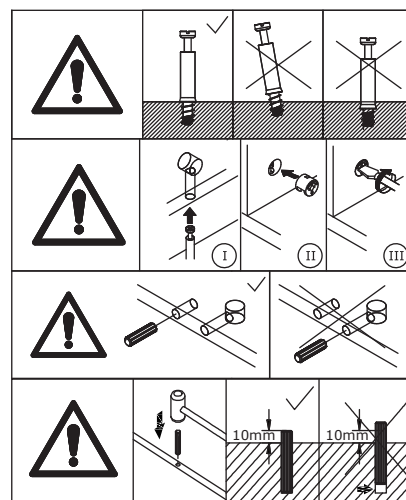


6

O x 8



 
Insert layer pin(O) into board 2, 21 and 3 at first,
place shelf board 5 in as shown.

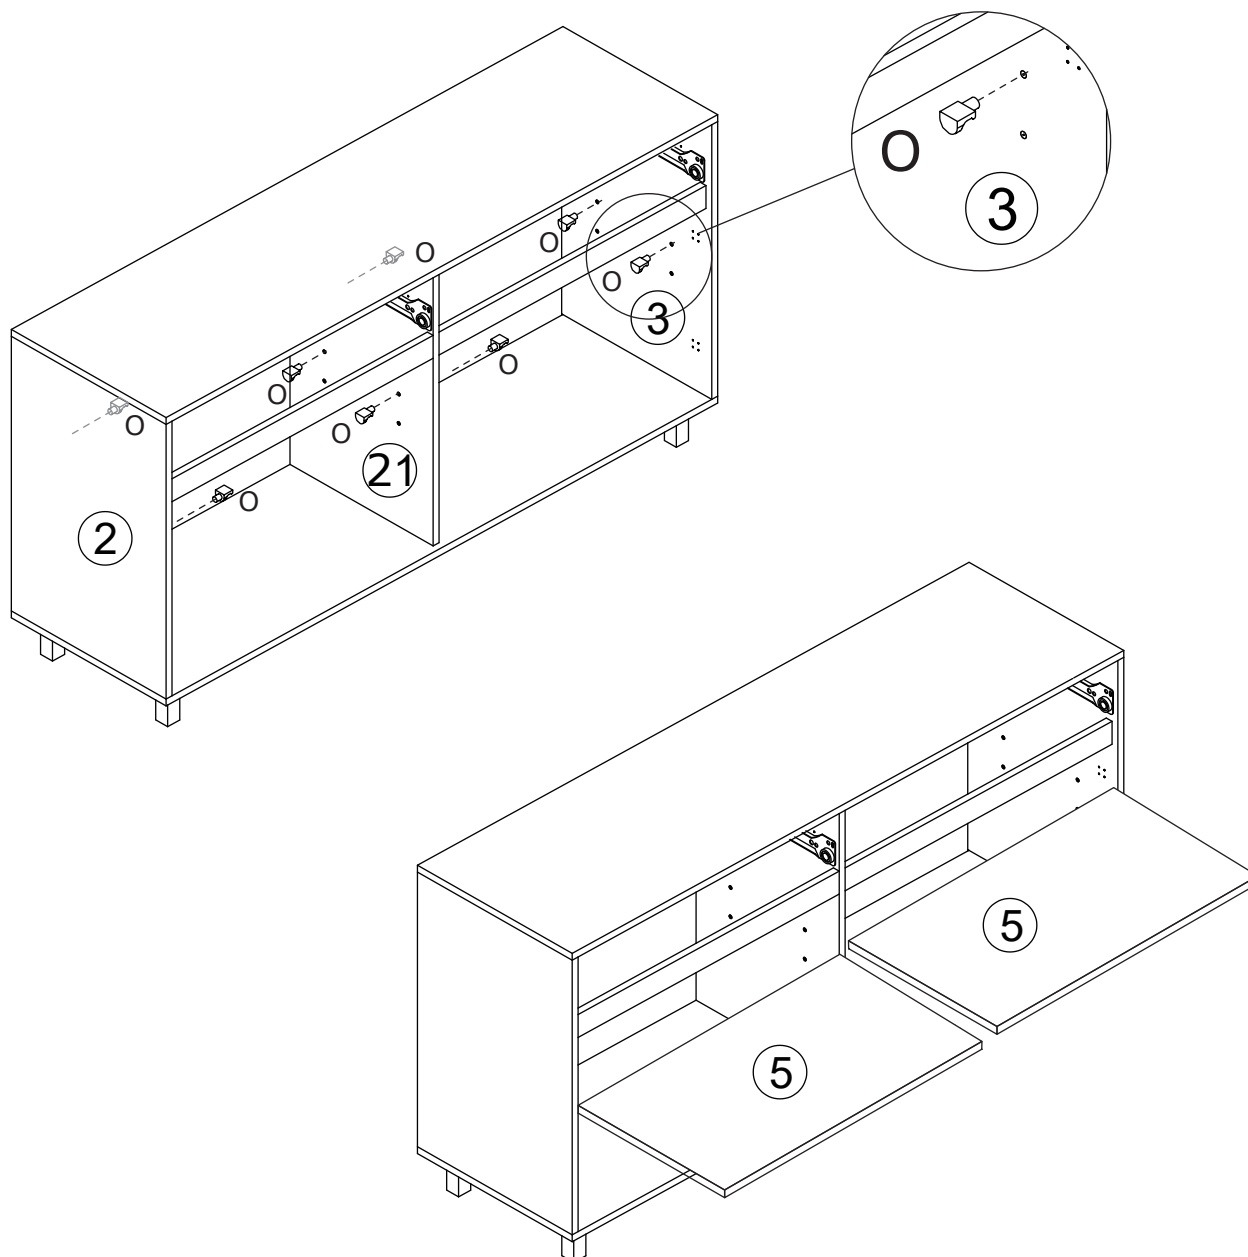




Pay attention to the difference between the middle parts of the two types of door hinges.

 The large curved door hinges(J) are used on the outermost door plates, and the small curved door hinges(I) are used on the door panel in the middle of the cabinet.

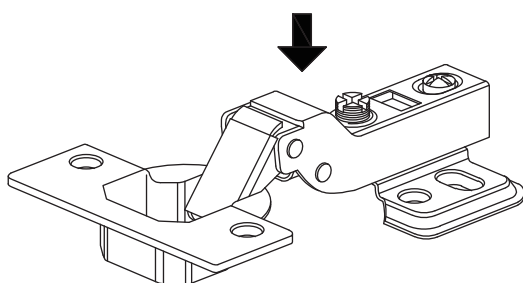

I

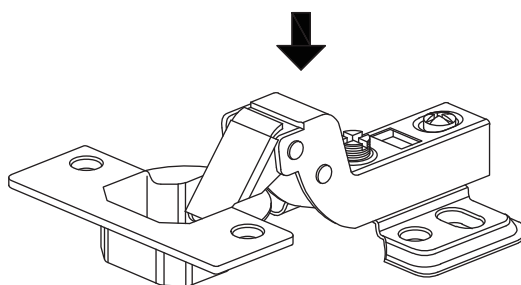 

J

7

 
 
 
 
J x 4



K x 24



Ø 4 x 12 mm

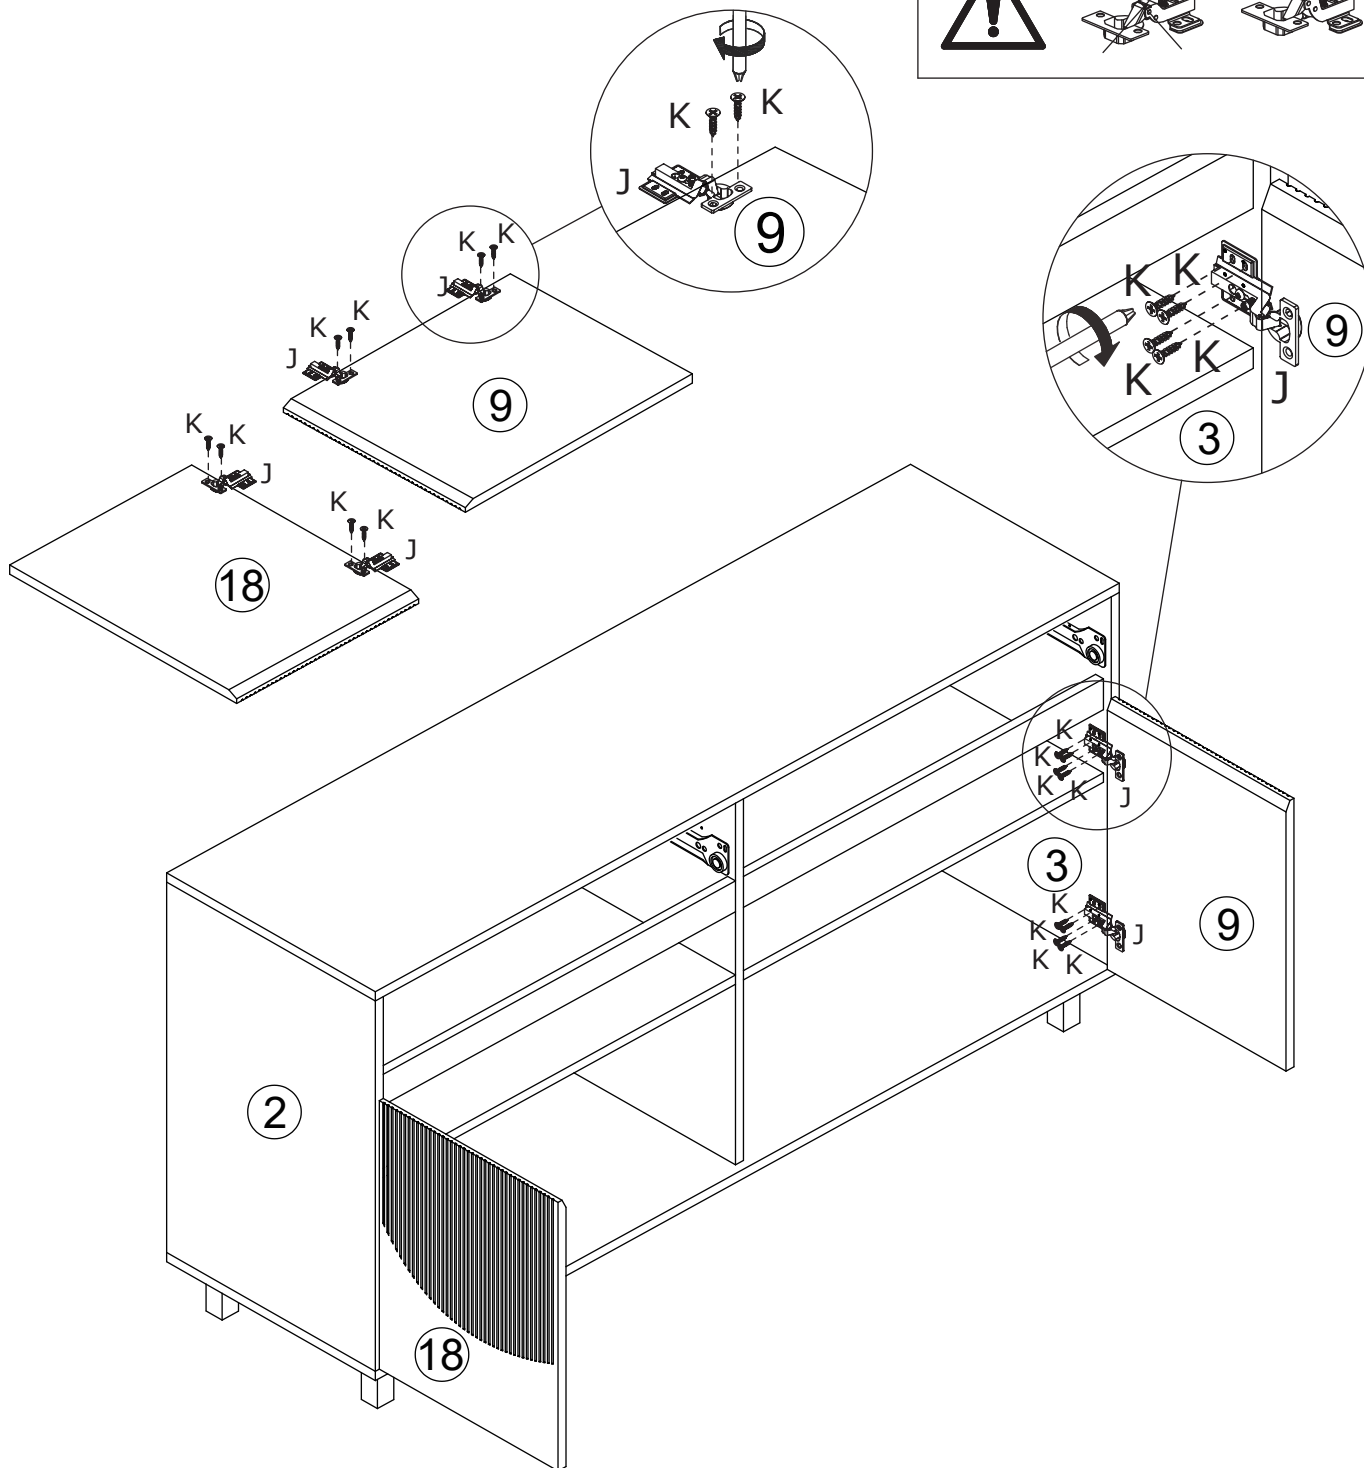

Fix hinge(J) to board 9 and 18 with screw(K) as shown.
Assemble door 18 and 9 to outmost side boards by fixing hinge with screw(K) as shown.

8

 
I x 4



K x 24



Ø 4 x 12 mm



Fix hinge(I) to board 16 and 17 with screw(K) as shown.

 
 
 
 
 
Assemble door 16 and 17 to the middle board 21 by fixing hinge with screw(K) as shown.




I




J

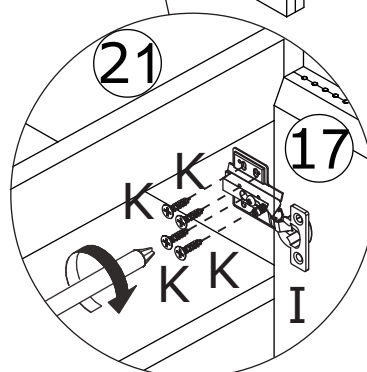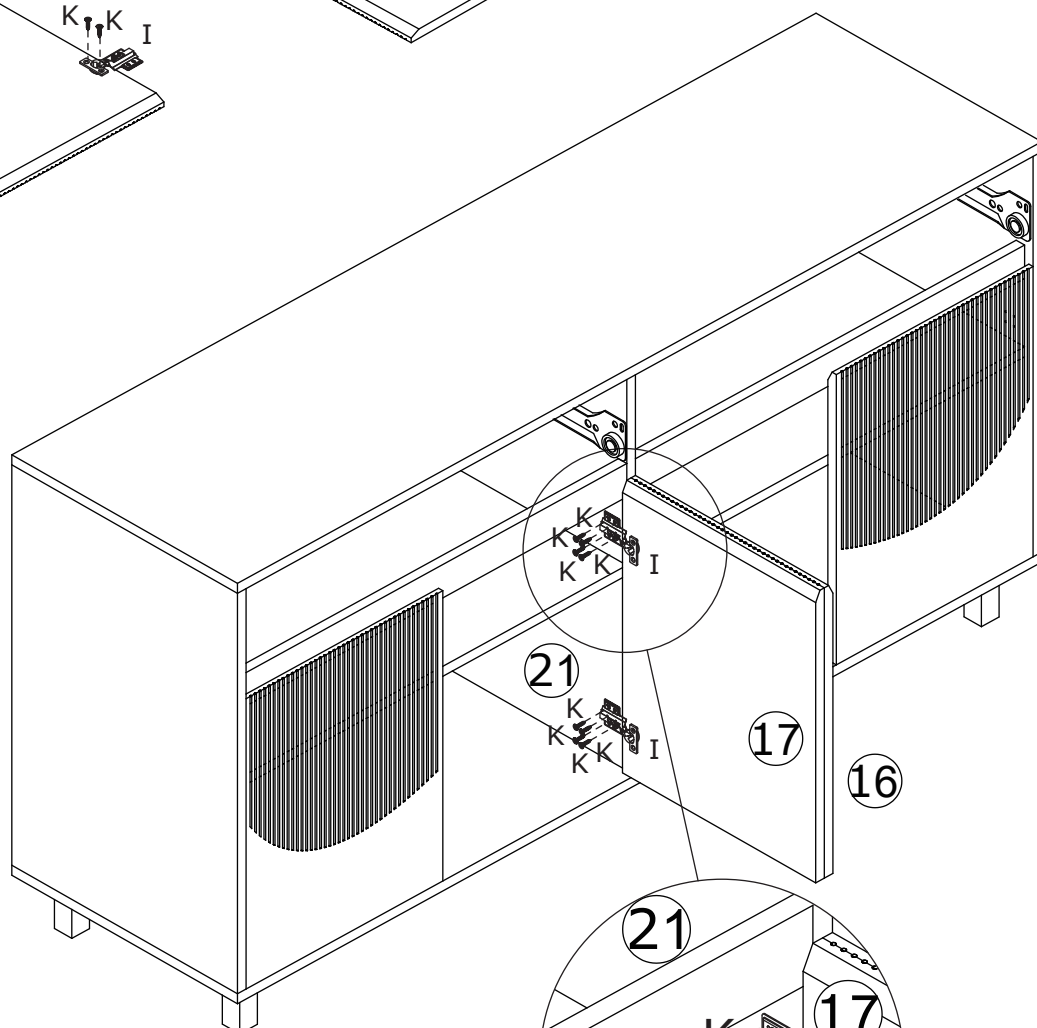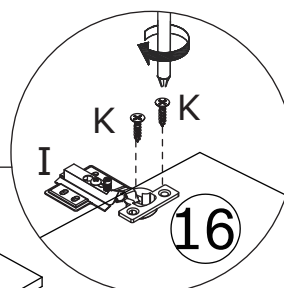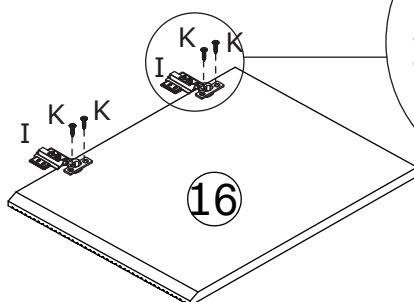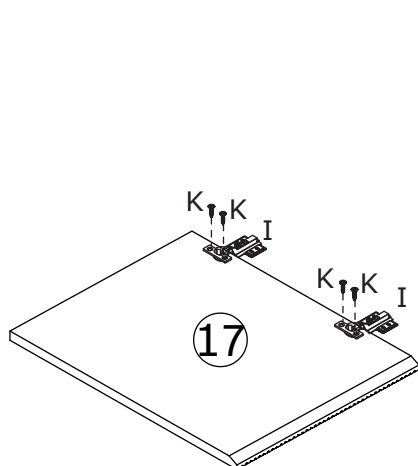



9

 Q x 8  Ø 3 x 16mm	P x 8 	
--	--	---

 
Insert buckle(P) into back slots and fix with screw(Q) as shown.

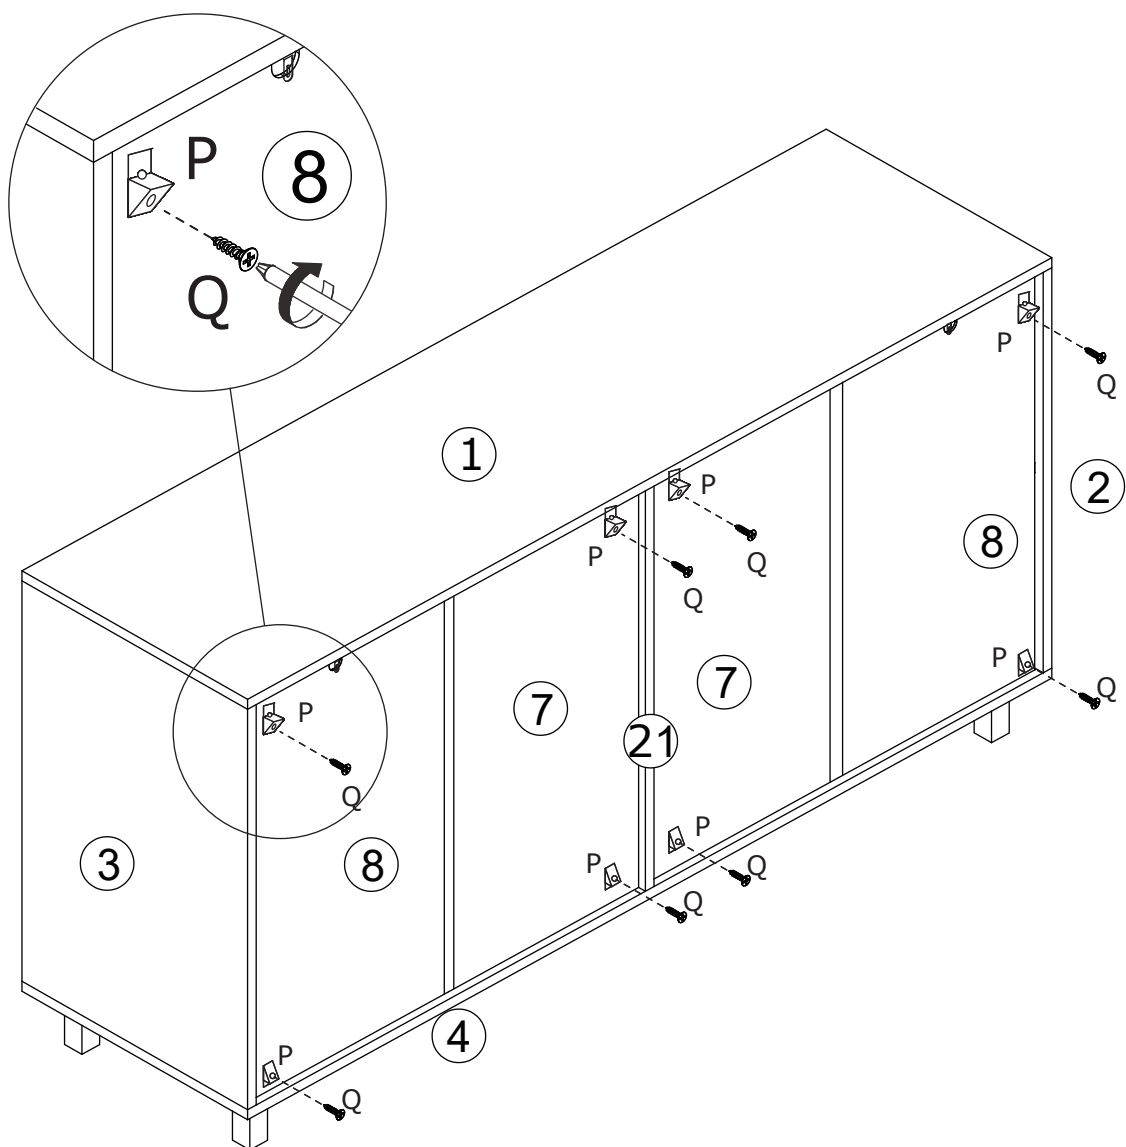





10

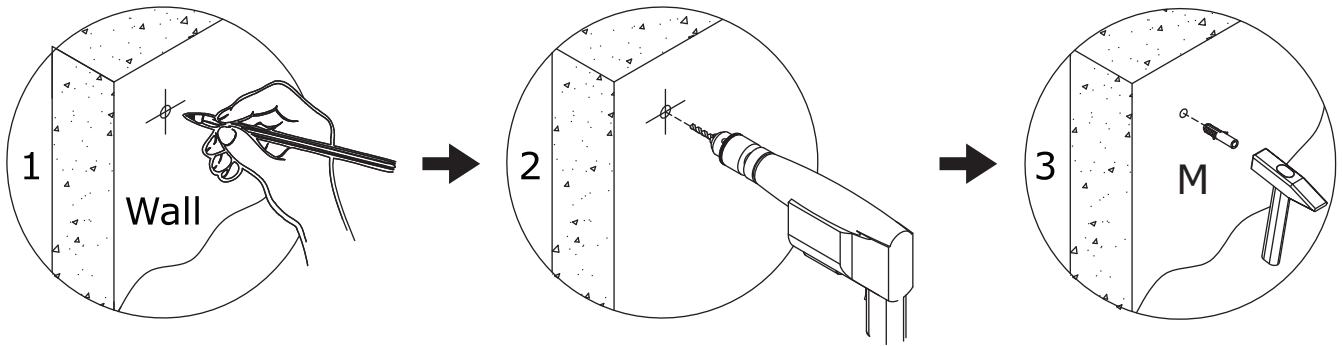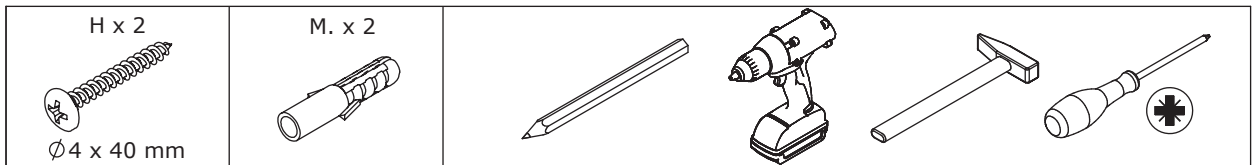  



Install anti-tipping device as shown.

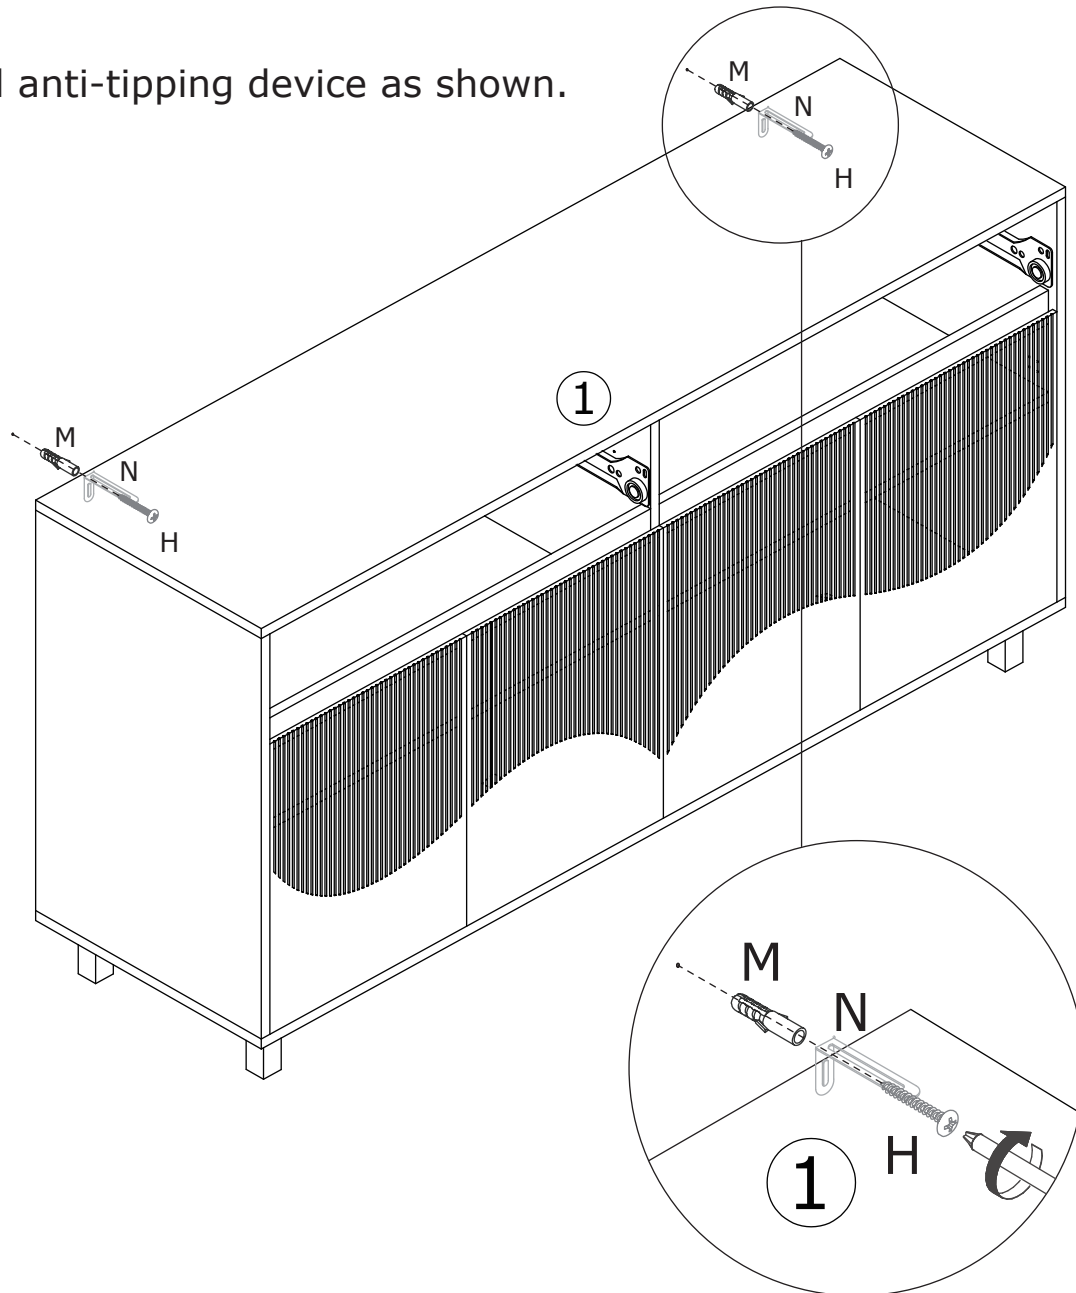 

11

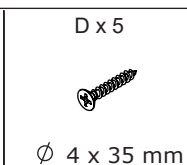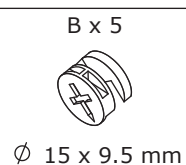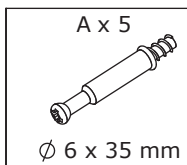    


  Screw eccentric rod(A) into board 10 at first.
Attach board 11, 15 and 12 to board 10, add cam lock(B) into and turn clockwise to tighten as shown.
Insert bottom board 14 along grooves.
Fix board 13 to board 11, 15 and 12 with screw(D) as shown.

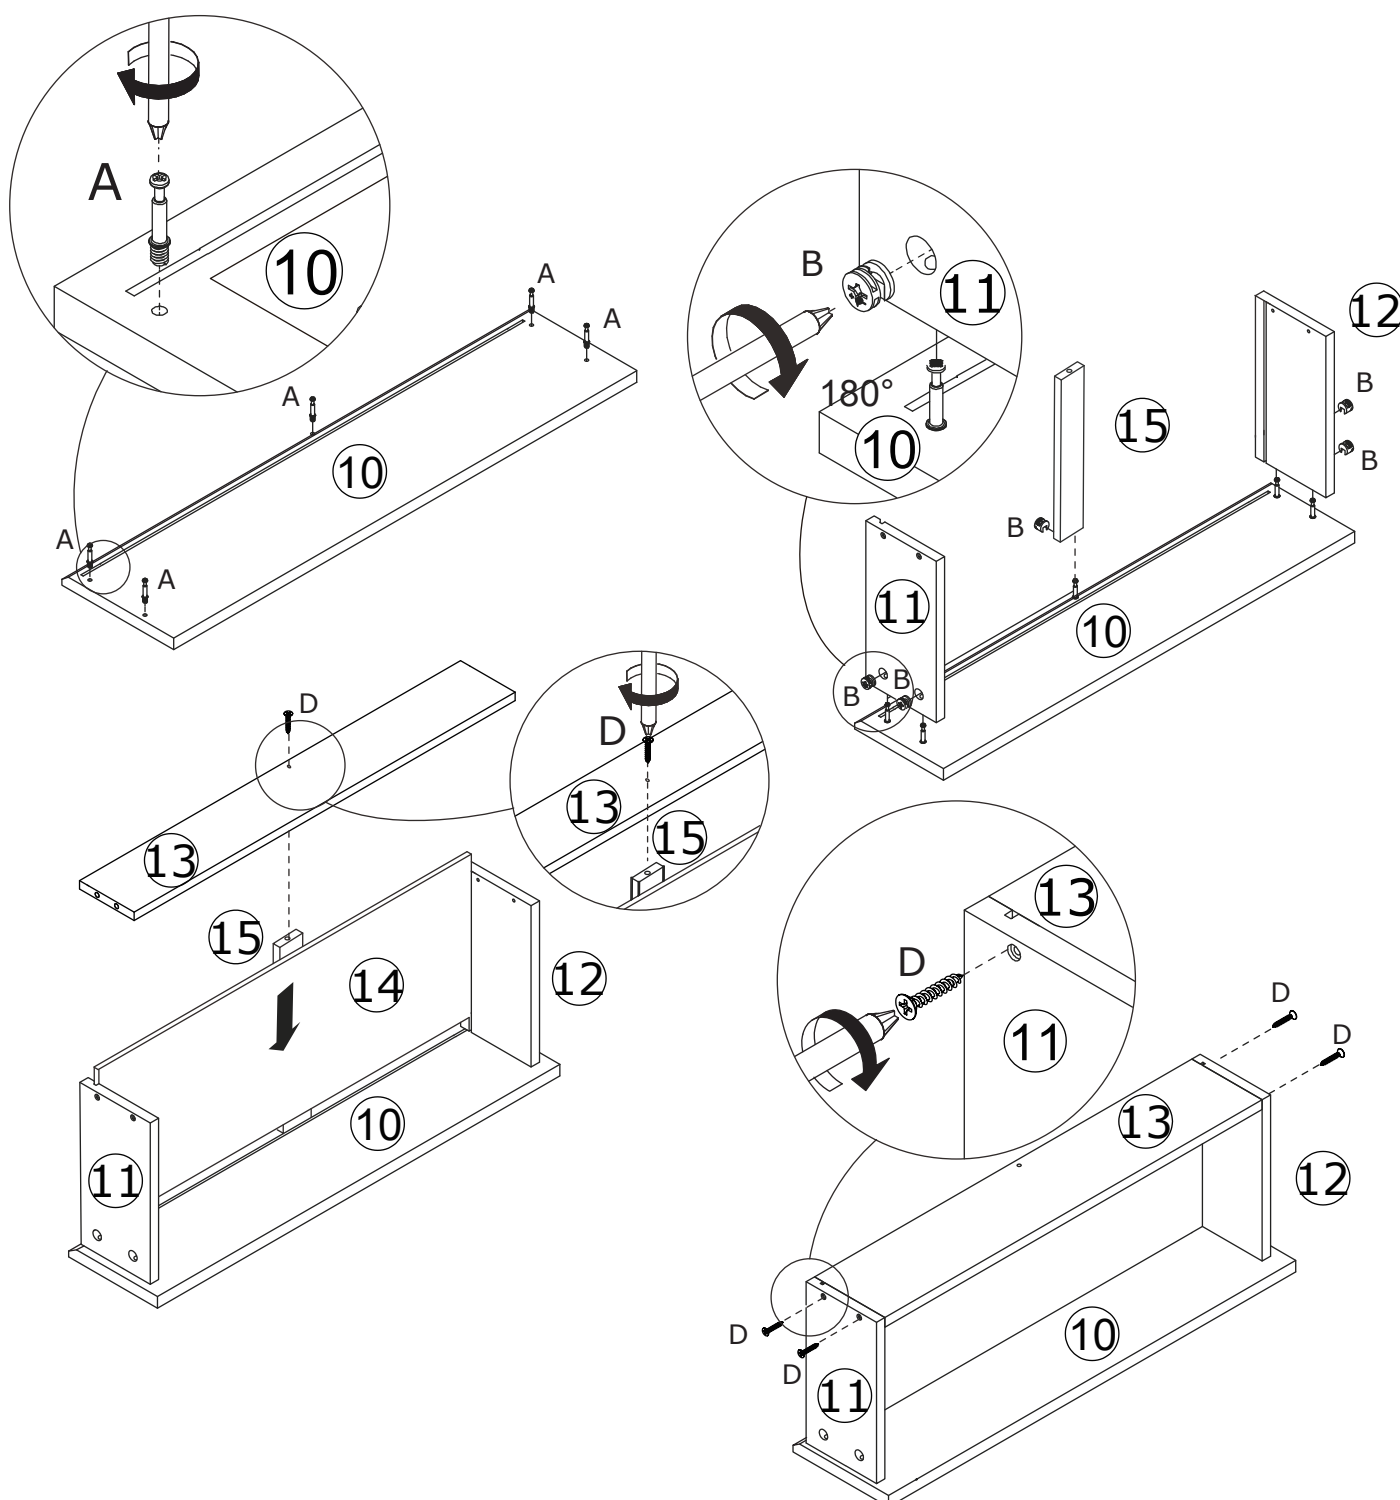
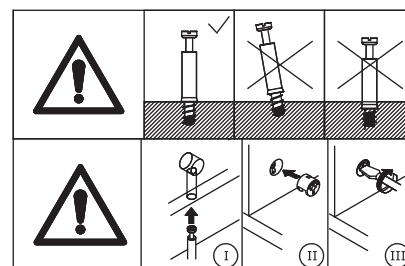


12

A x 5  Ø 6 x 35 mm	B x 5  Ø 15 x 9.5 mm	D x 5  Ø 4 x 35 mm
---	---	---

 

  Screw eccentric rod(A) into board 22 at first.
Attach board 11, 15 and 12 to board 22, add cam lock(B) into and turn clockwise to tighten as shown.
Insert bottom board 14 along grooves.
Fix board 13 to board 11, 15 and 12 with screw(D) as shown.

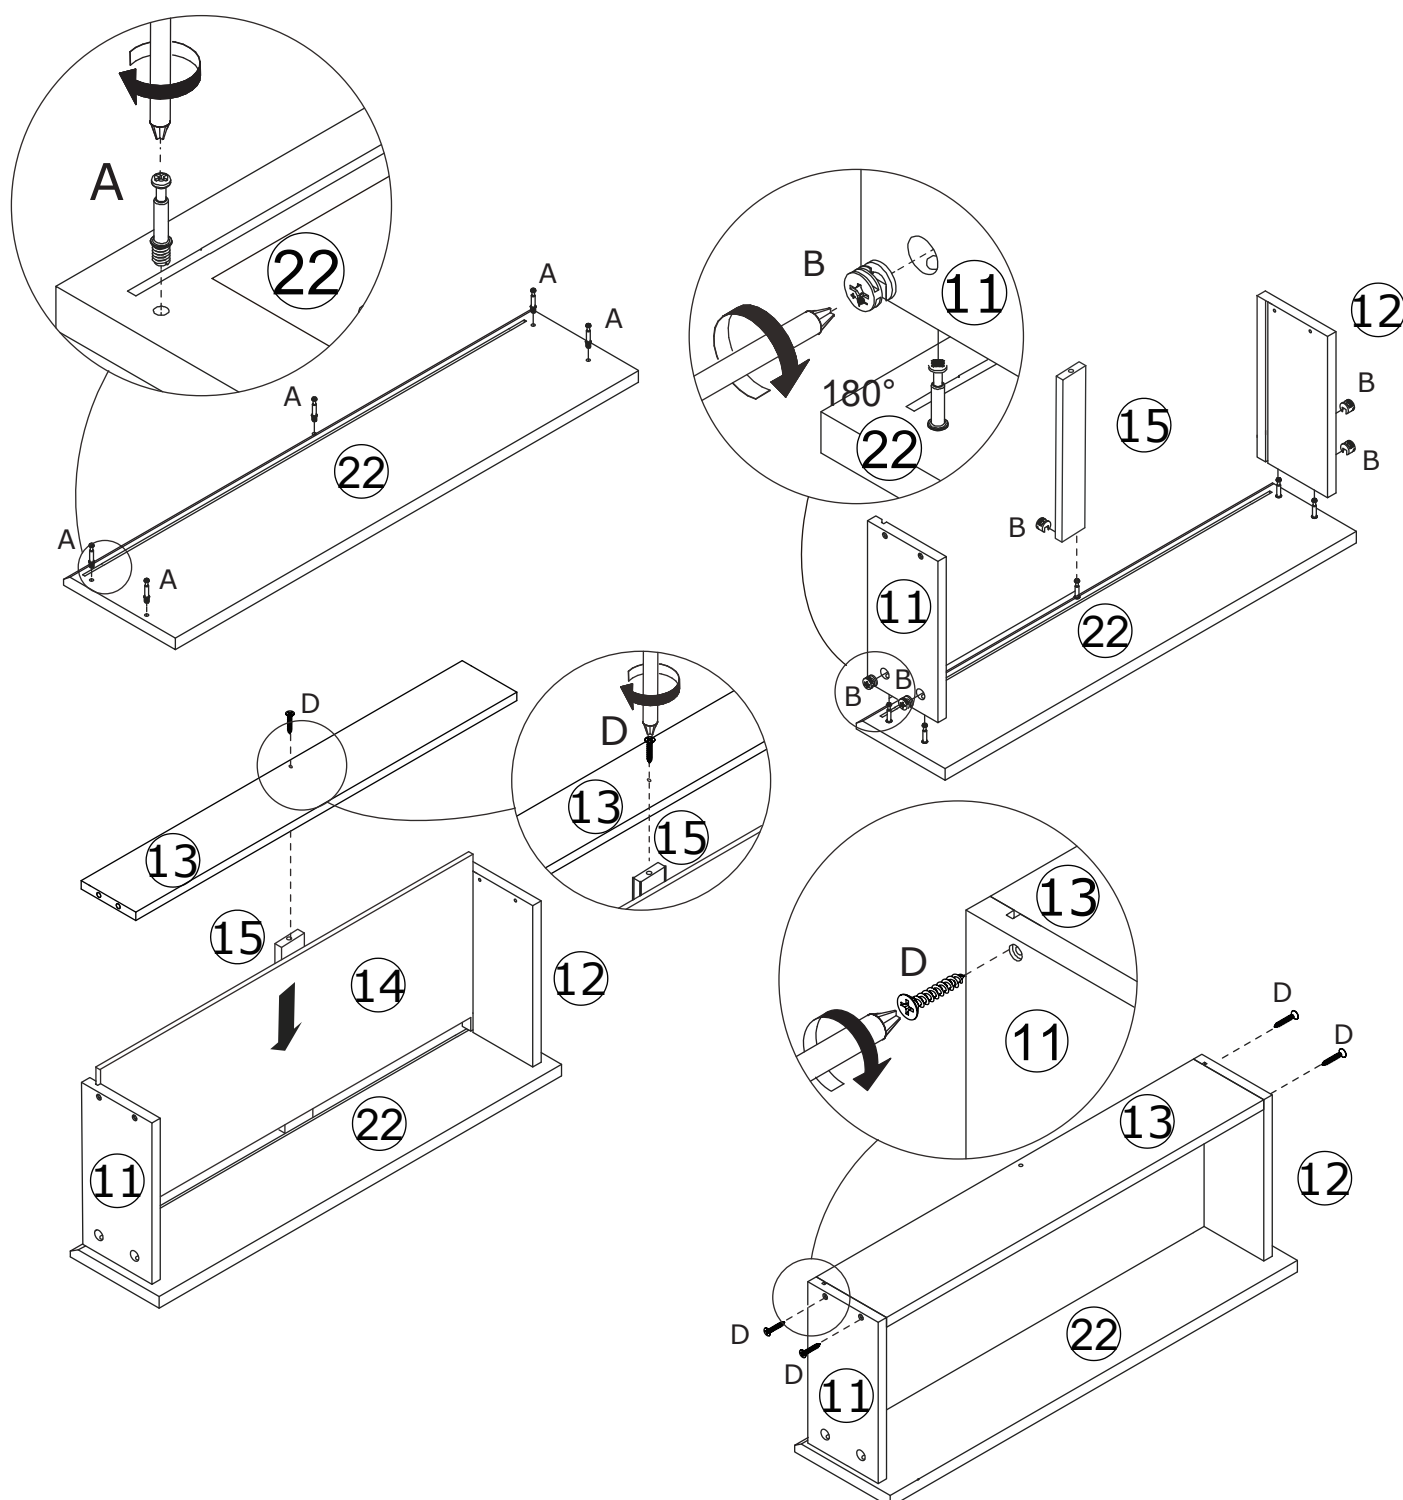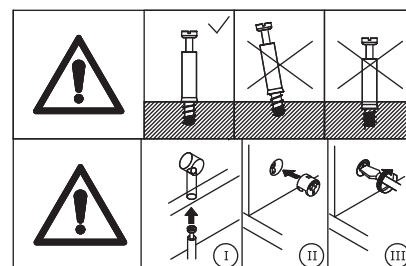


13

F x 12




Ø 3 x 12 mm

 DL x 2




300 mm

 DR x 2



300 mm

 

DL

 
 
 
DR

 
11

12














x2

Fix runner(DL) and (DR) to board 11 and 12 respectively with screw(F) as shown.
Align rails, slide drawers in.

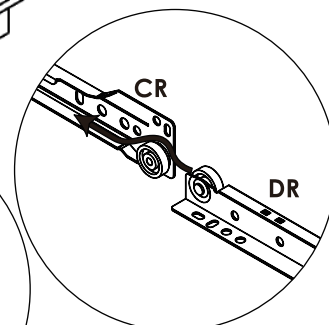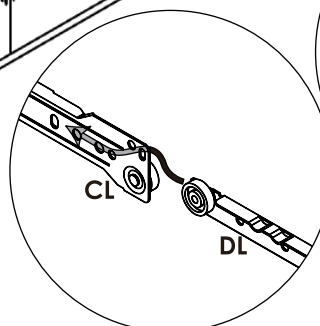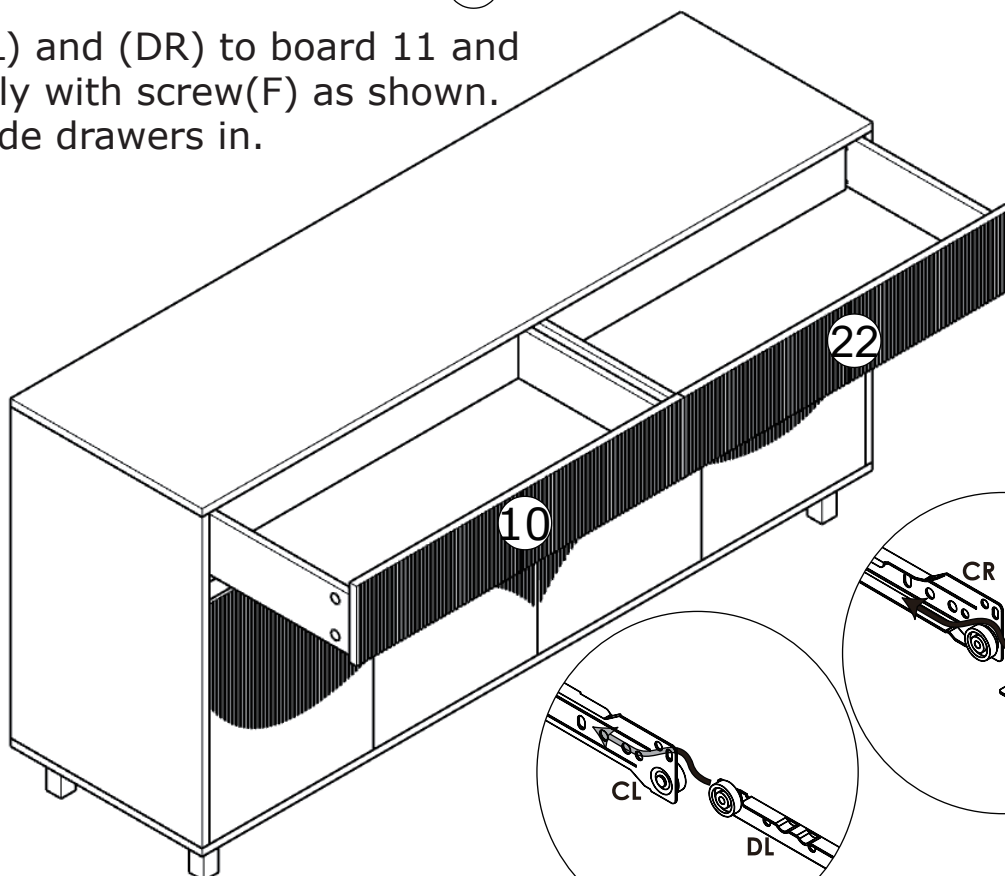



             If doors are still not aligned if the hinges are properly correctly, please watch the video.
<https://youtu.be/n0Lb36SoODM>

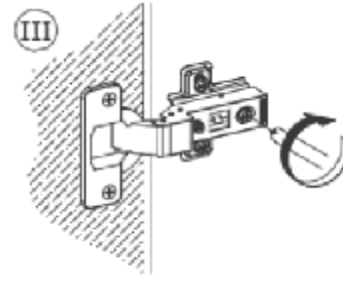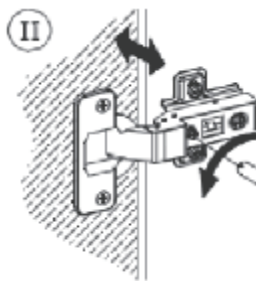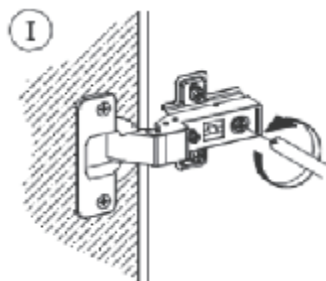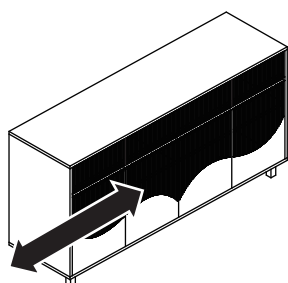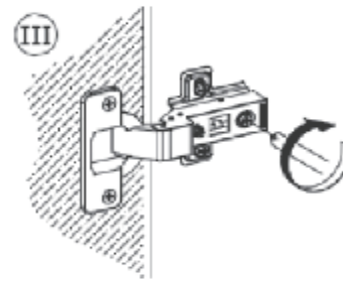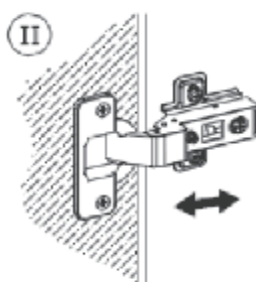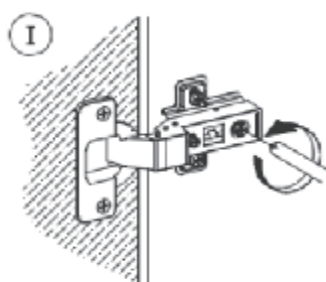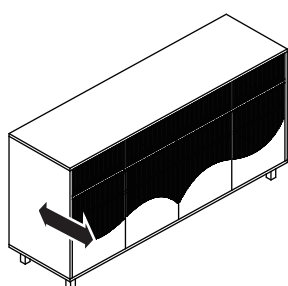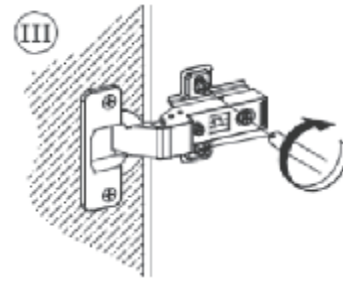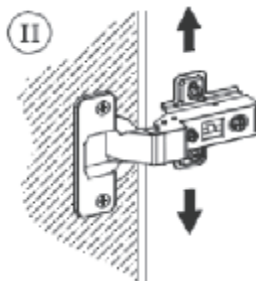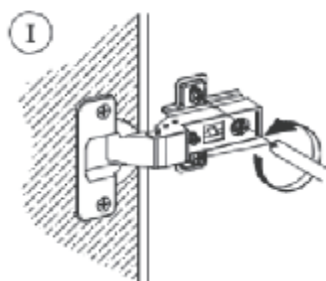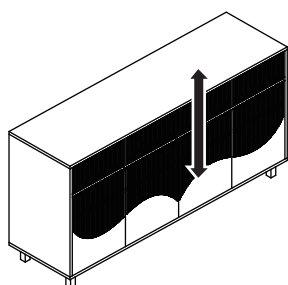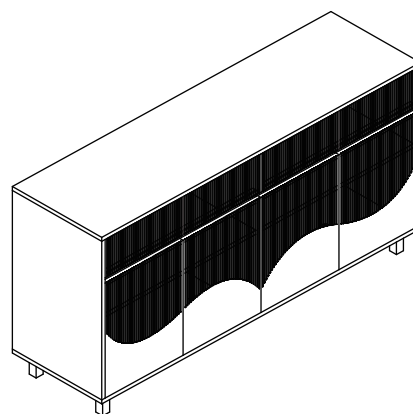

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387