


welcoming • sophisticated • inspiring

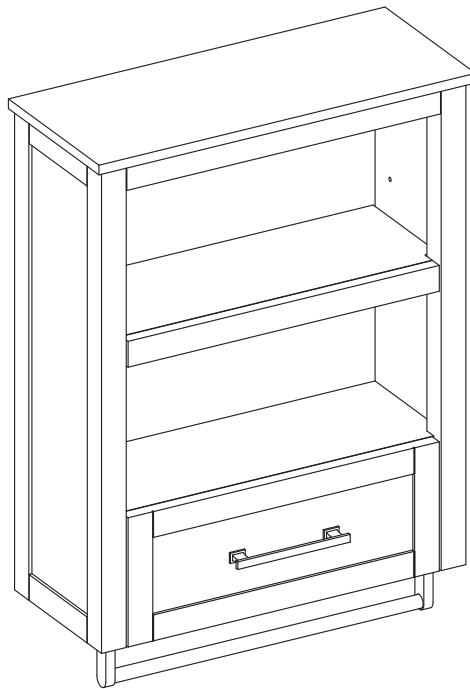

MODEL NUMBER	DESCRIPTION
1815WC-24-201	ROWAN 24" WALL CABINET - WHITE

24-IN WALL CABINET

ITEM #5272878

MODEL #1815WC-24-201

ATTACH YOUR RECEIPT HERE


Serial Number _____ Purchase Date _____

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

TABLE OF CONTENTS

Package Contents.....	3
Hardware Contents.....	3
Safety Instructions.....	3
Preparation.....	4
Assembly or Installation Instructions.....	4
Care and Maintenance.....	6
Warranty.....	6
Replacement Parts List.....	7

PACKAGE CONTENTS

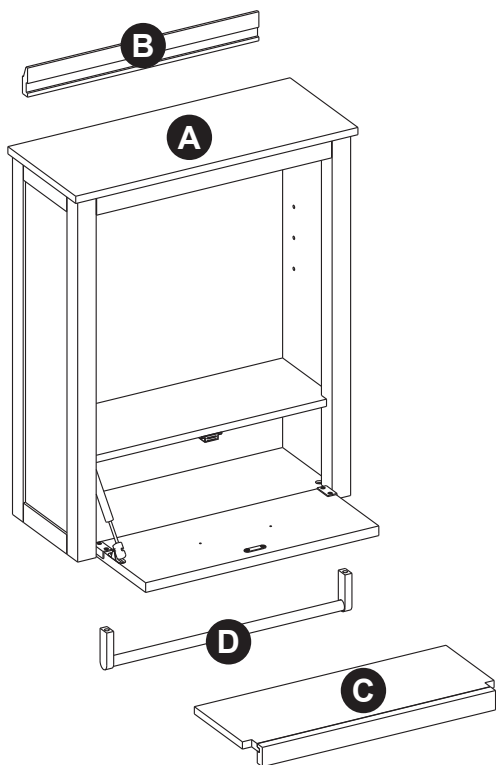

PART	DESCRIPTION	QUANTITY
A	Cabinet	1
B	Wall Bracket	1
C	Shelf	1
D	Towel Bar	1

HARDWARE CONTENTS (NOT SHOWN ACTUAL SIZE)

AA



Touch Up Pen
Qty. 1

BB



Bolt
Qty. 2

SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- There are several assembly steps, including unpacking, that require two adults.

CAUTION

- Before installation, carefully use scissors or utility knife to cut and unwrap all parts. Make sure you DO NOT discard the hardware.
- Follow these instructions closely, take your time, and use care while assembling this wall cabinet.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Installation Time: 20 minutes.

Tools Required for Installation (not included): Phillips screwdriver, utility knife or scissors, power drill with drill bit.

Helpful Tools (not included): Measuring tape, level


INSTALLATION INSTRUCTIONS

1. Locate wall bracket (B) and set aside.


Locate and mark wall stud locations where cabinet (A) will be placed. Center wall bracket (B) in desired level location off the floor and mark locations where wall bracket (B) meets the location of the wall studs. Using hardware appropriate for your wall type (not included), secure the wall bracket (B) to the wall into preferably 2 wall studs. Use hardware such as a cabinet screw or toggle bolt depending on your wall type. Make sure the wall bracket (B) is level and centered well to the desired location of the cabinet (A). Be careful not to disturb any plumbing or electrical lines that may be concealed in the wall.

!IMPORTANT SAFETY STEP!

It is critical to have a strong secure connection to the wall before continuing to the next step.

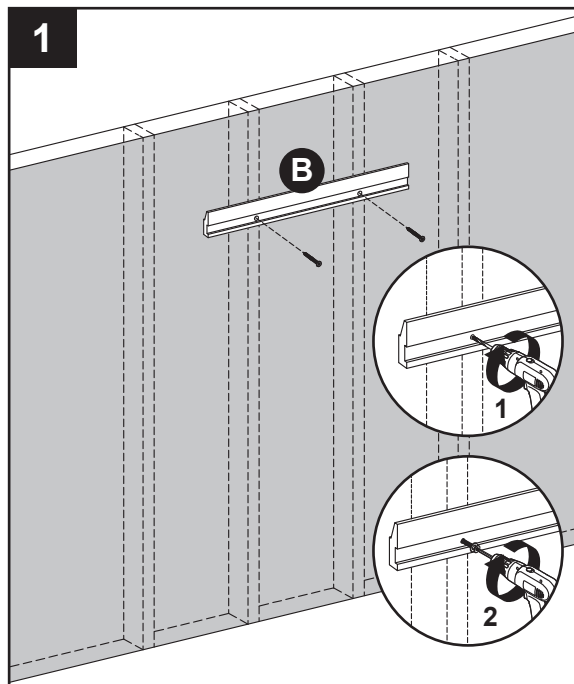

2. With the help of another adult, carefully lower the cabinet (A) down onto the wall bracket (B). Be sure the cabinet (A) is secure to the wall before letting go.

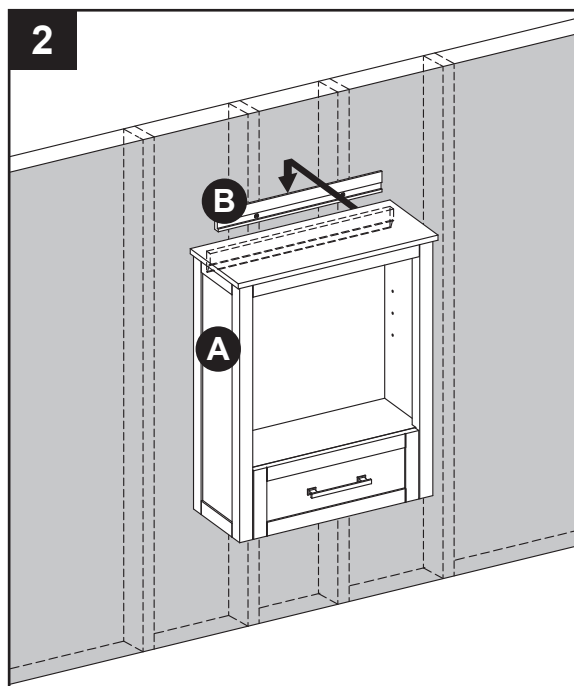


INSTALLATION INSTRUCTIONS

3. Place towel bar (D) into predrilled hole on cabinet (A), securing with two bolts (BB).


Hardware Used

BB

 
Bolt



x 2

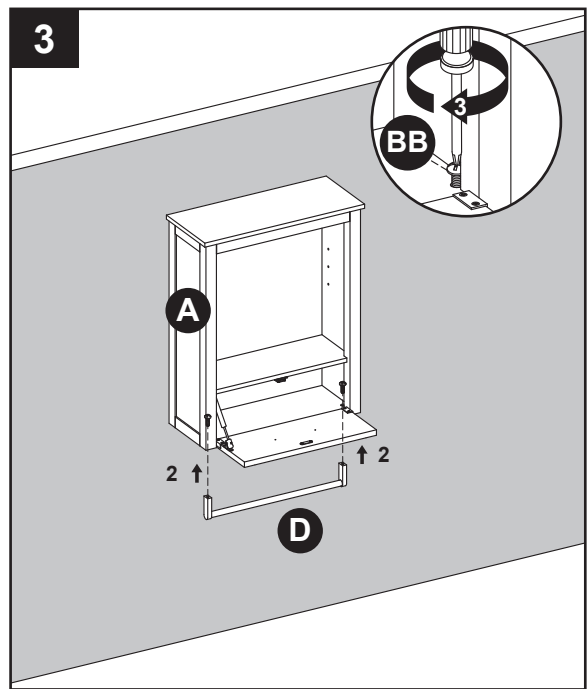

4. Insert shelf pins at desired height, ensuring they are level. Place shelf (C) on top of shelf pins.

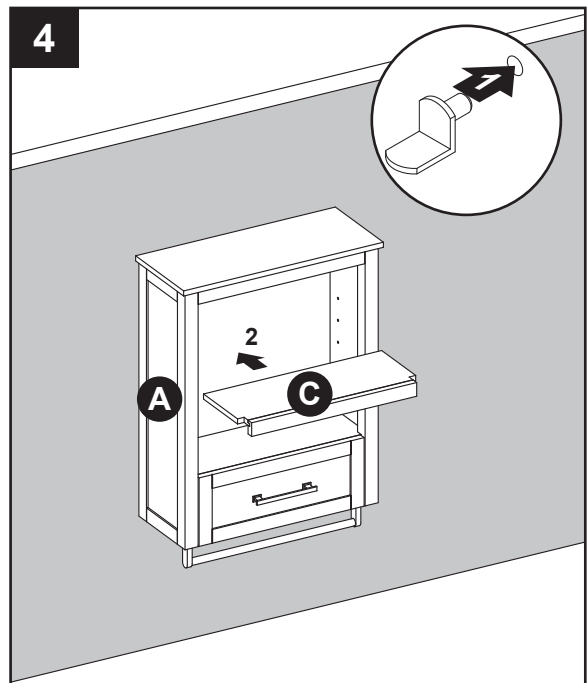

CARE AND MAINTENANCE



- Dust the wall cabinet regularly with a soft, non-lint producing cloth or household dusting product.
- You can clean the wall cabinet with a gentle, non-abrasive household cleaner.
- Make sure to dry the wood immediately with a soft cloth or towel.
- Tips for using touch-up pen (AA): For scratches, stroke in direction of scratch. Rub off excess colorant promptly with a soft cloth.

WARRANTY

The manufacturer warrants this item against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. This warranty applies only to the original purchaser. This warranty does not apply to any damage on the product by accident, misuse, or modified, improper installation or by affixing accessories not produced by the manufacturer. The manufacturer is not accountable whatsoever for product installation during the warranty period. There is no further expressed warranty. The manufacturer shall not be legally responsible for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. The manufacturer disclaims any and all implied warranties.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

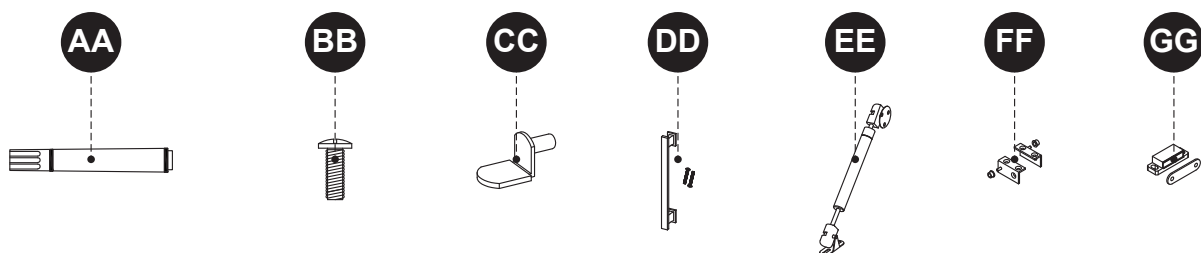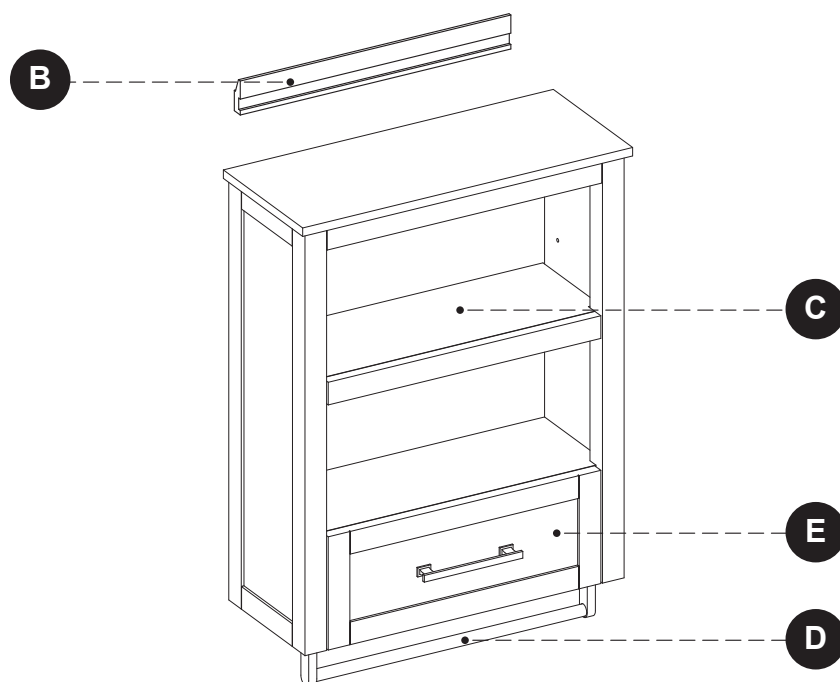

PART	DESCRIPTION	PART #
B	Wall Bracket	WC-WALL BRACKET-201
C	Shelf	1815WC-24-201-SHELF
D	Towel Bar	1815WC-TOWEL BAR
E	Flip Down Door	1815WC-24-201-FLIP DOWN DOOR
AA	Touch-up Pen	OF-0010
BB	Bolt	1815WC-TOWEL BAR BOLT
CC	Shelf Pin	B1044
DD	Handle (With Screw)	1815WC-BN HANDLE
EE	Piston With Screw	PU17-1267FM-II/JJ/LL
FF	Flip Door Hinge	
GG	Door Catch	